





Panigale V4
Tail Tidy


Installation Instructions


Kit Contents PRN013868



- A** 1 x Reflector Kit
- B** 2 x M5 Black Washers
- C** 2 x M5 x 50 Stainless Steel Button Head Bolts
- D** 2 x M5 x 16 Black Caphead Bolts
- E** 2 x M4 x 12 Black Button Head Bolts
- F** 2 x M5 x 12 Black Countersunk Screws
- G** 2 x Indicator Adaptors
- H** 2 x 4mm x 18mm Dowel Pin
- I** 2 x Black Spacers
- J** 2 x Black Caps
- K** 4 x M4 x 10 Stainless Steel Button Head Bolts
- L** 4 x Indicator Clamps

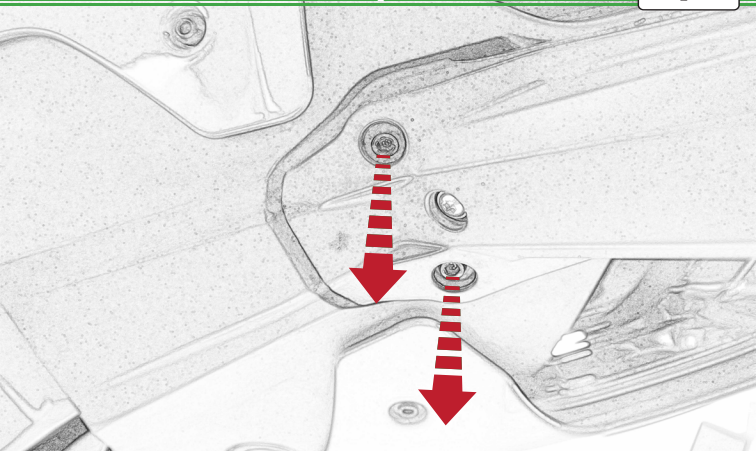


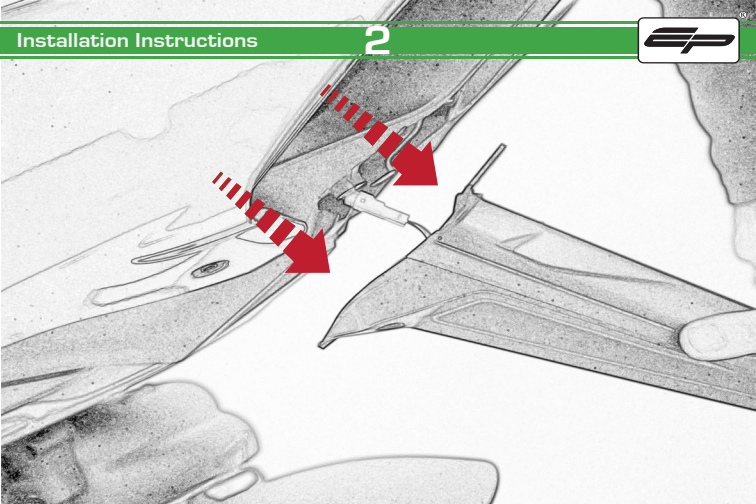


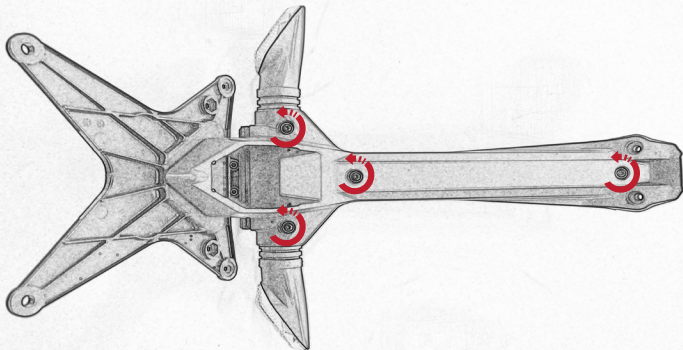


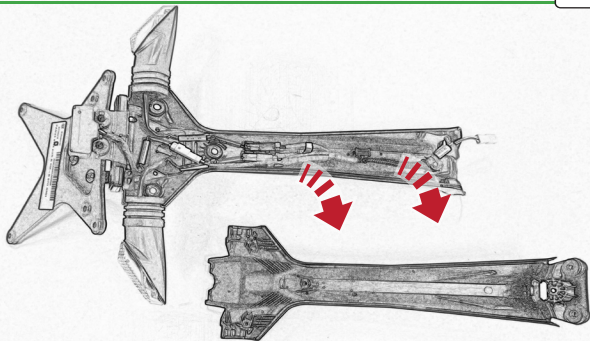

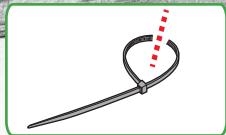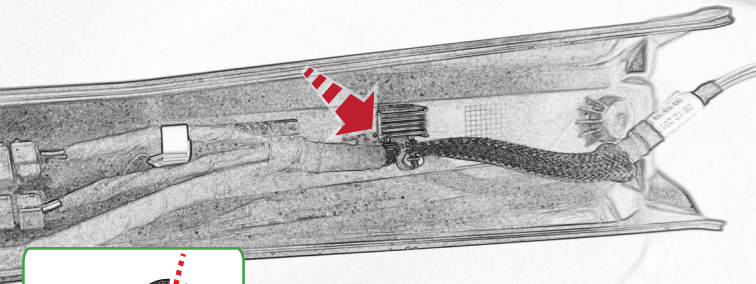

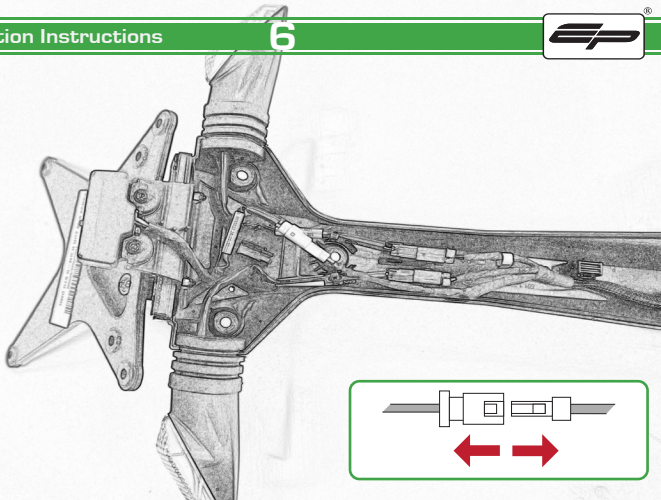

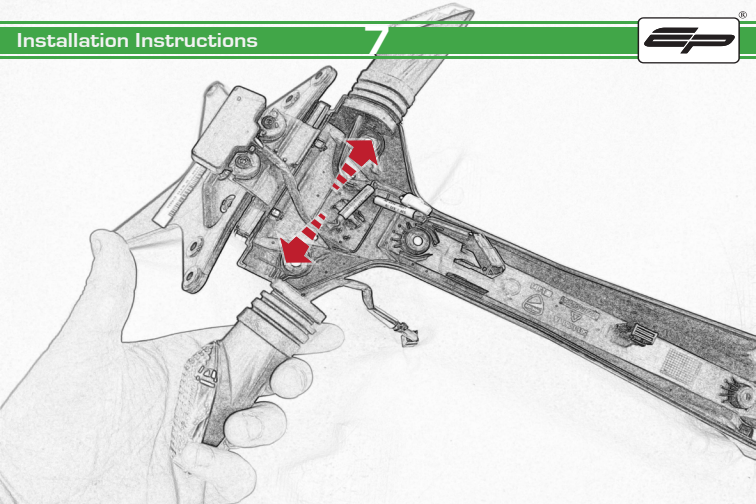


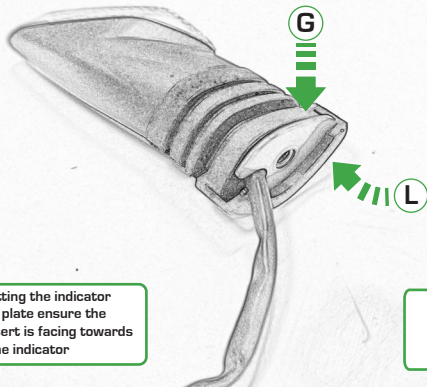


Caution

When fitting the indicator adaptor plate ensure the threaded insert is facing towards the indicator


Repeat
Both Sides

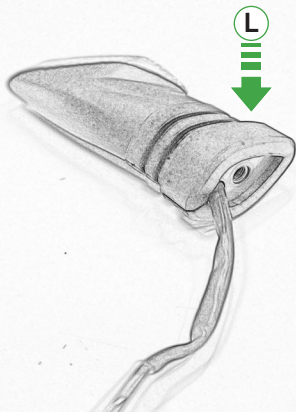


Repeat
Both Sides

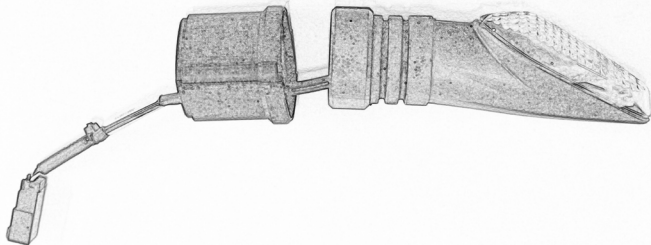


Repeat
Both Sides

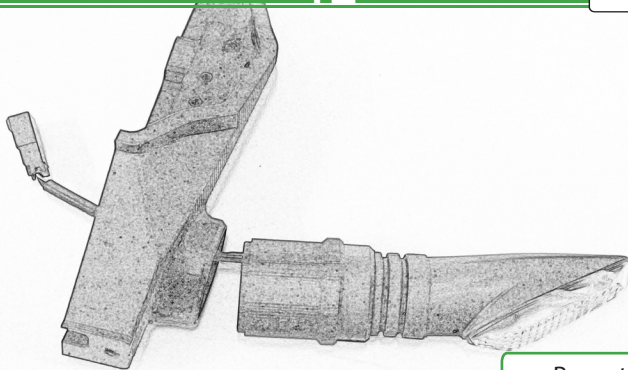



Repeat
Both Sides

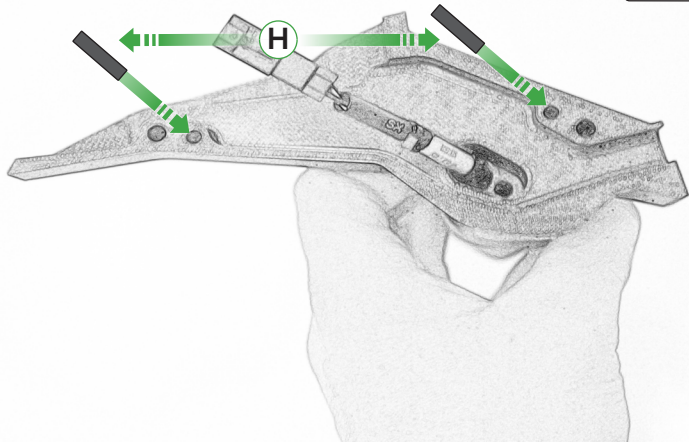


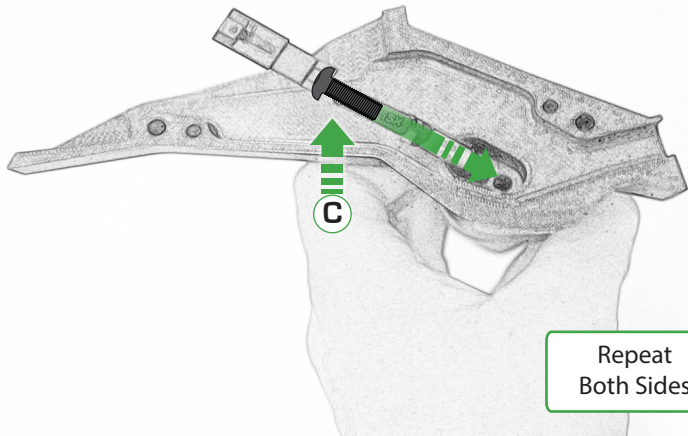


Repeat
Both Sides

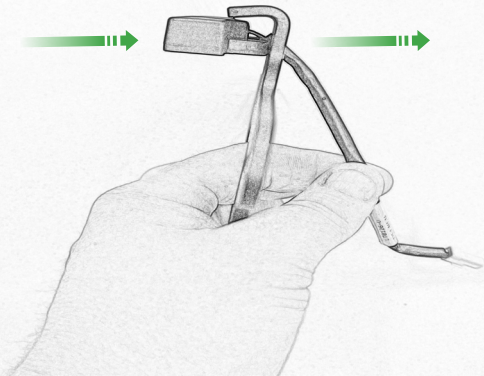

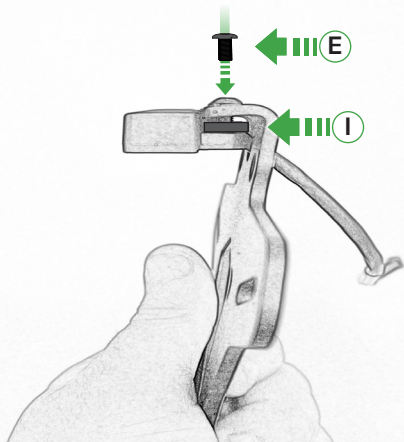



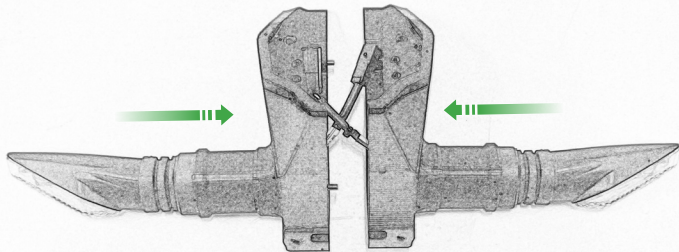


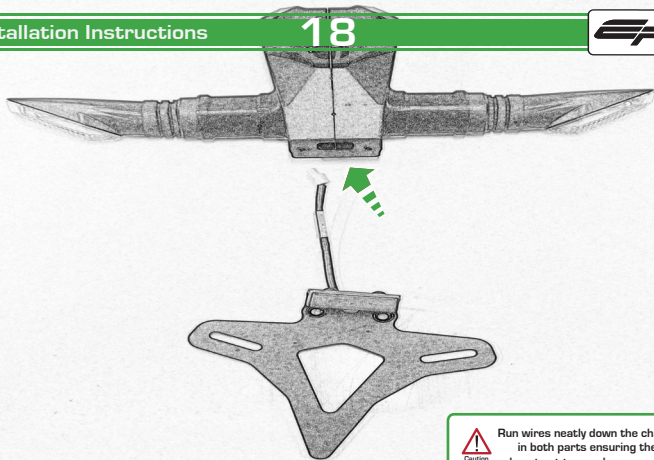


Caution

Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

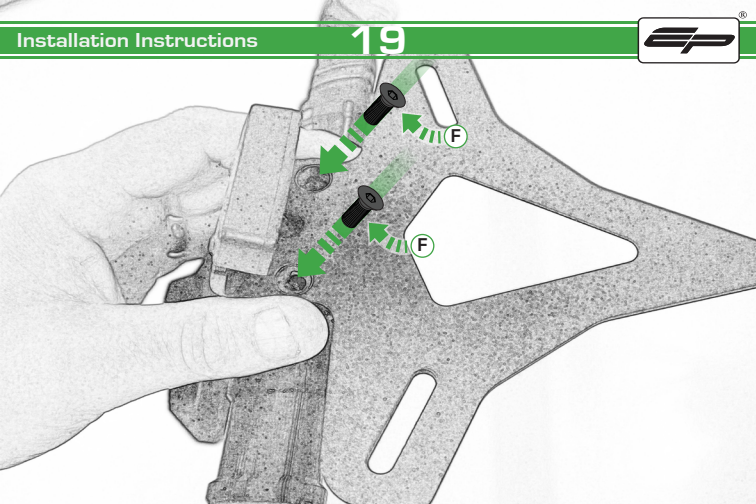


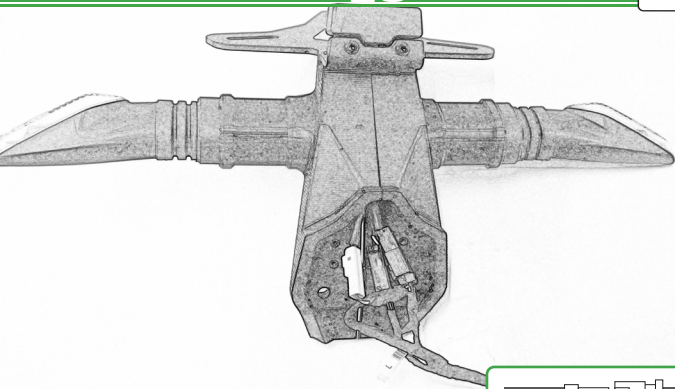


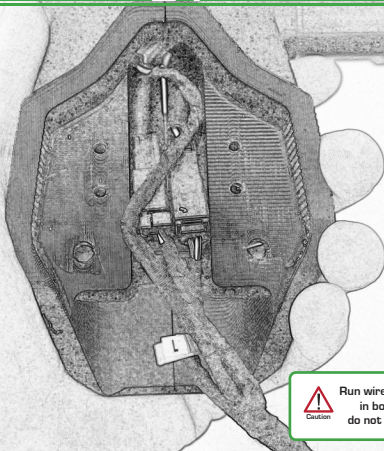


Caution


Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

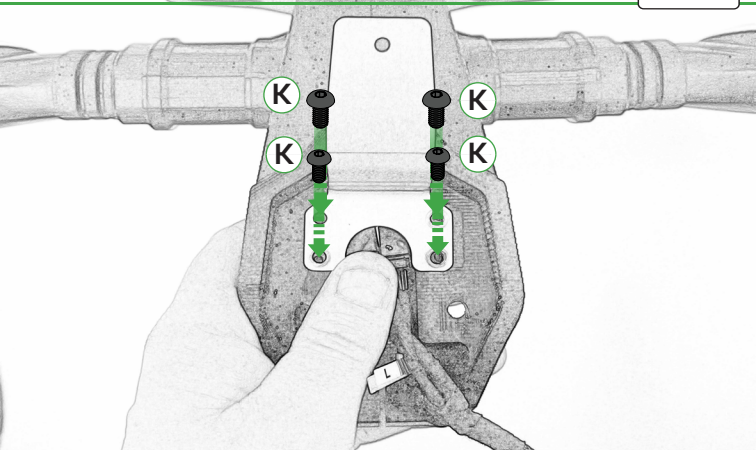


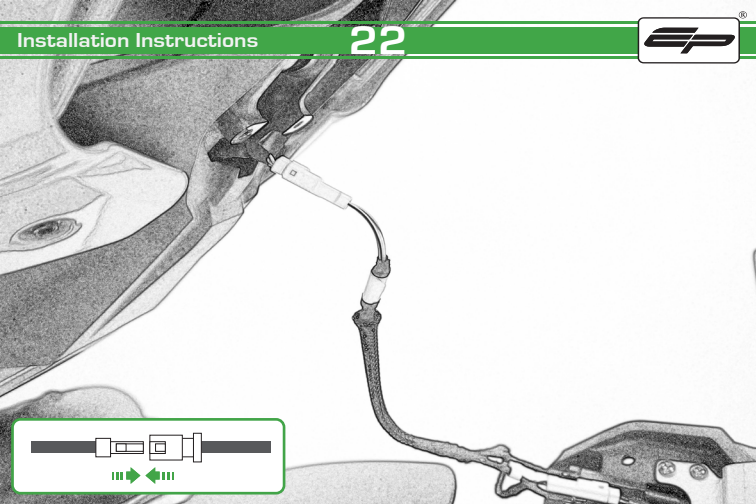


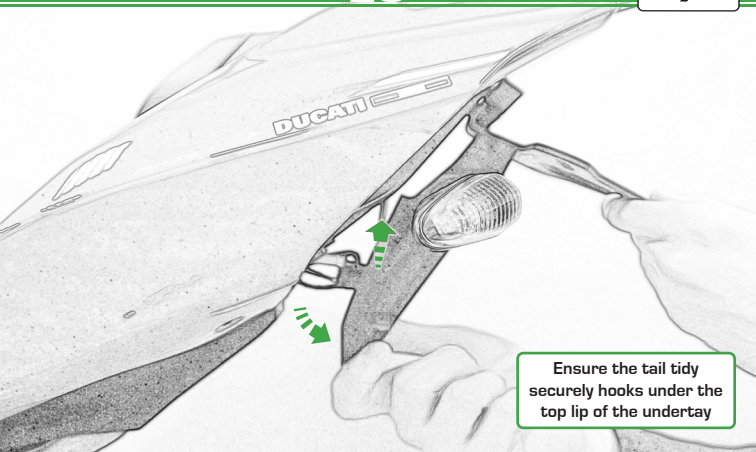

Ensure the tail tidy
securely hooks under the
top lip of the undertay

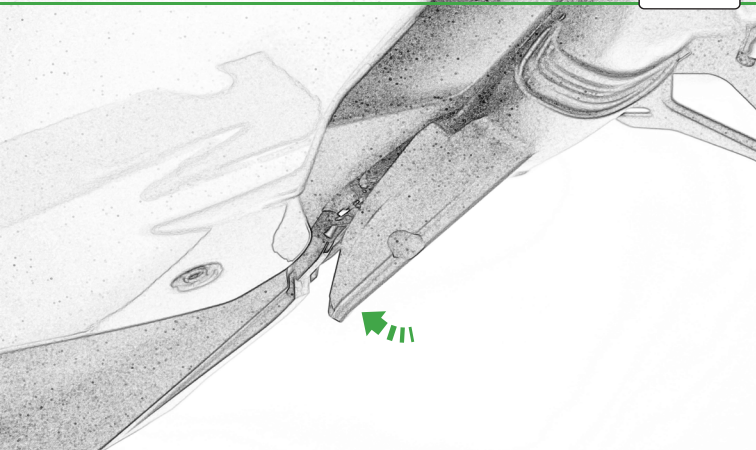

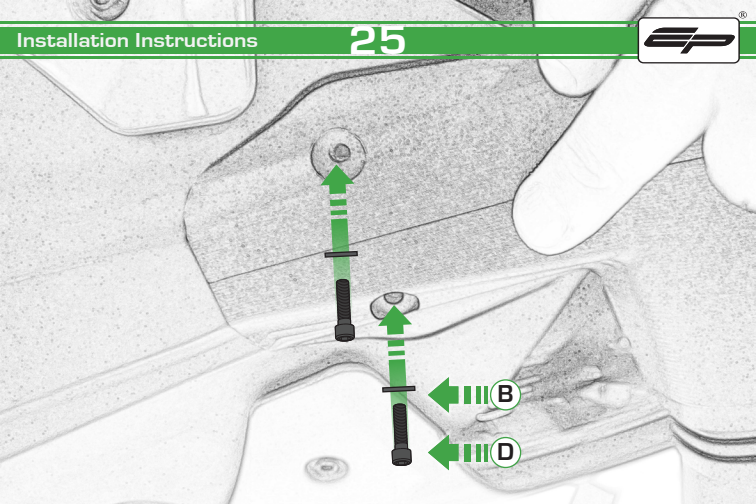

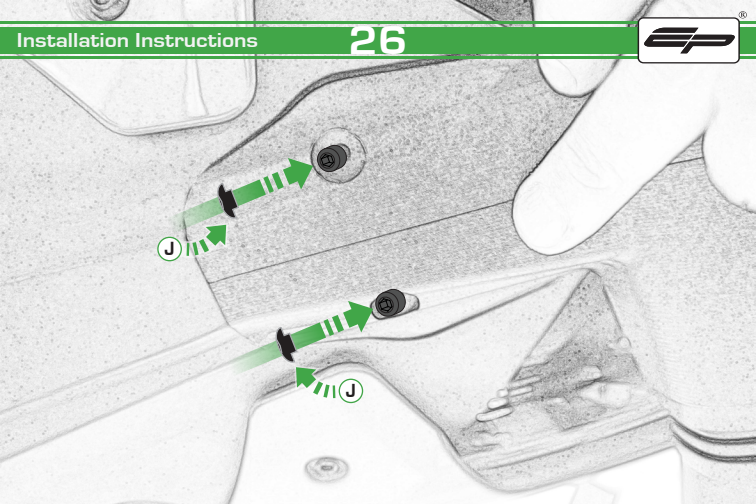




ESSENTIAL CHECKS



After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.

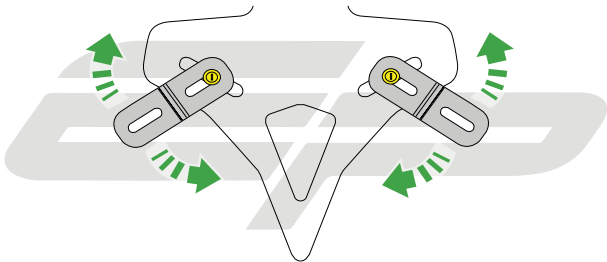





EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com