

EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Ducati Multistrada
SP Connect Mount




- (A) 1 x M5 x 16 Countersunk Screw
- (B) 1 x Pivot Plate
- (C) 1 x SP Connect Plate
- (D) 1 x Spanner
- (E) 2 x P-clips (No.1)
- (F) 2 x P-clips (No.2)
- (G) 2 x P-clips (No.3)
- (H) 2 x P-clips (No.4)
- (I) 2 x Lobe Screw
- (J) 2 x Locking Washer
- (K) 2 x M5 Black Washer
- (L) 2 x M4 x 5mm Button Head Bolts
- (M) 2 x M5 x 10mm Button Head Bolts

Sub Kit

- (AA) 1 x Rubber Pad
- (BB) 1 x Screen Mounting Bracket
- (CC) 1 x Main Plate
- (DD) 1 x M5 Nyloc Nut
- (EE) 2 x M5 x 12mm Button head Bolts

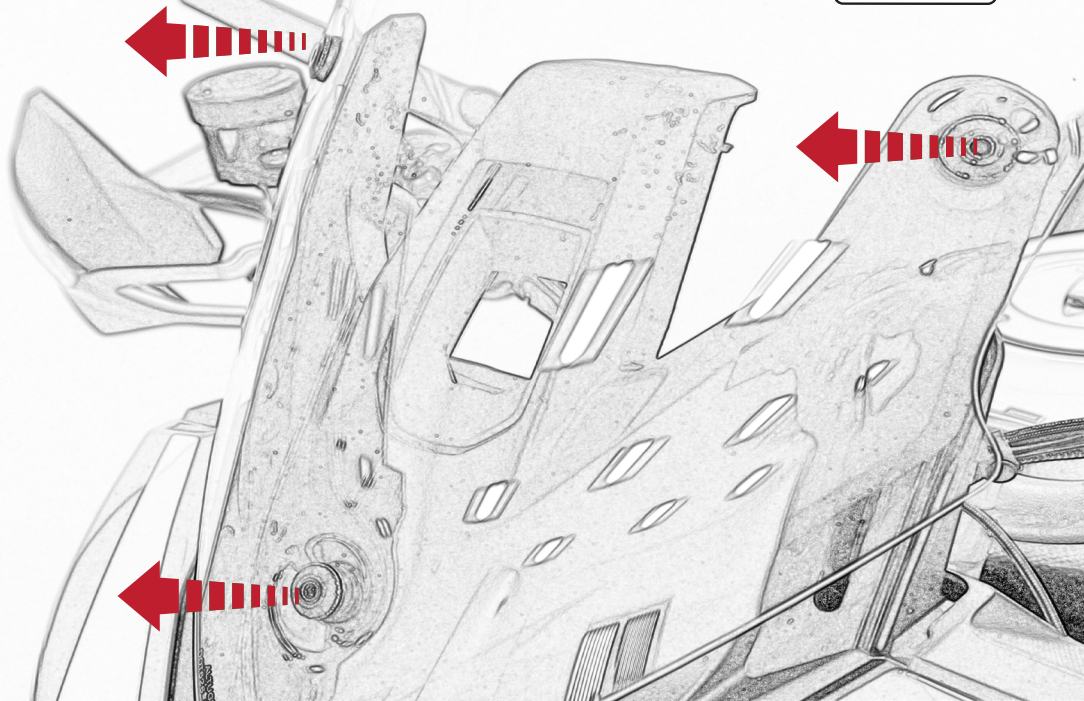

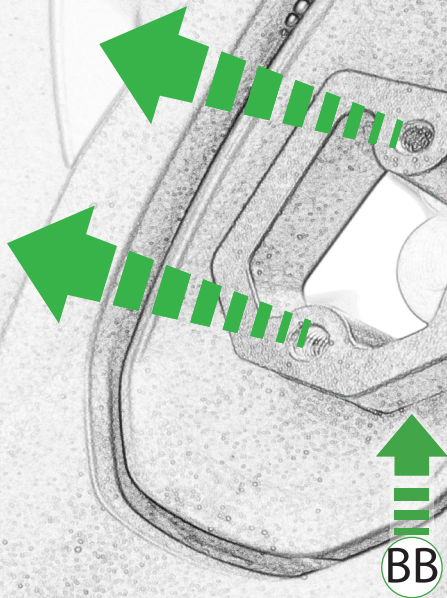





Q





EVOTECH[®]
P E R F O R M A N C E




SP Connect
Standard Mount






SP Connect
Anti Vibration Mount





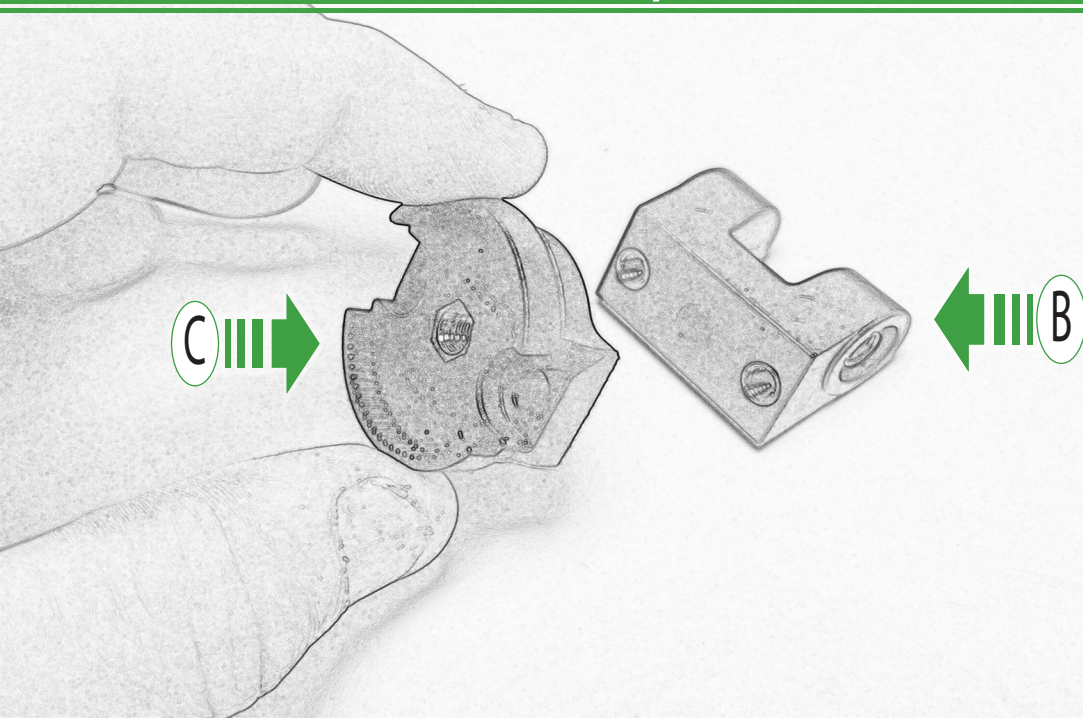




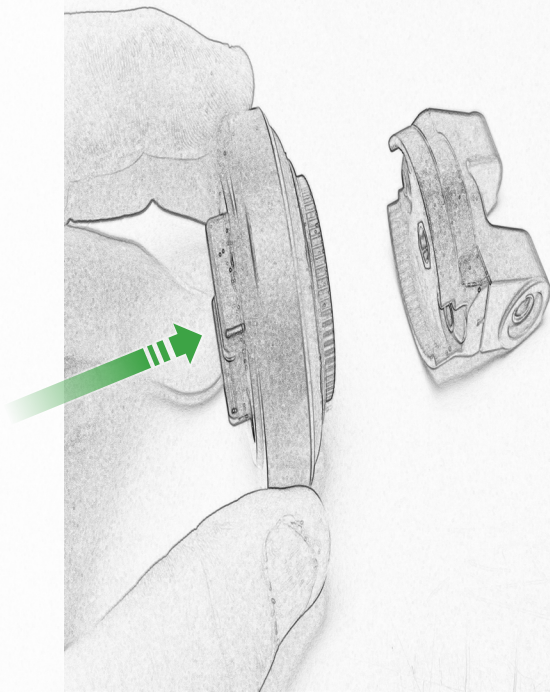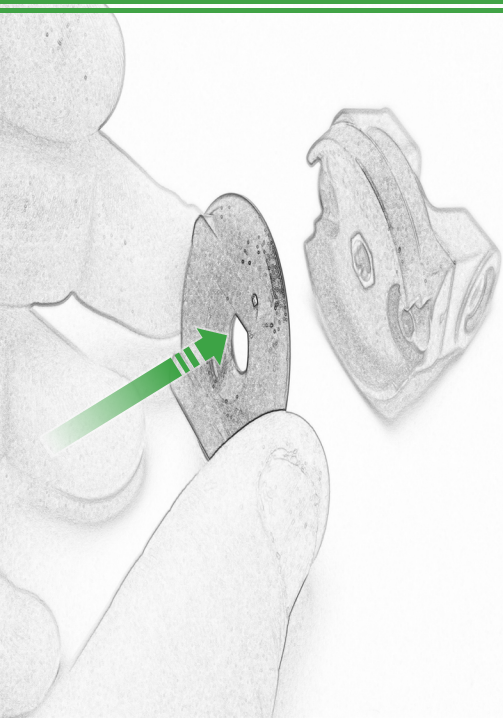

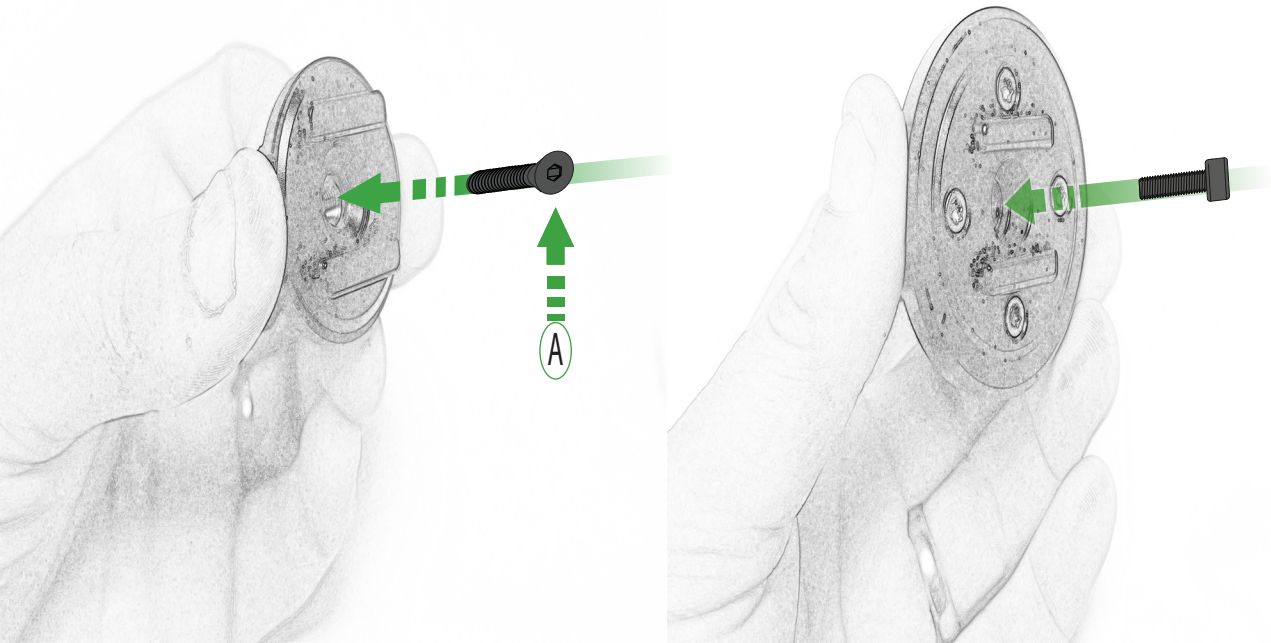

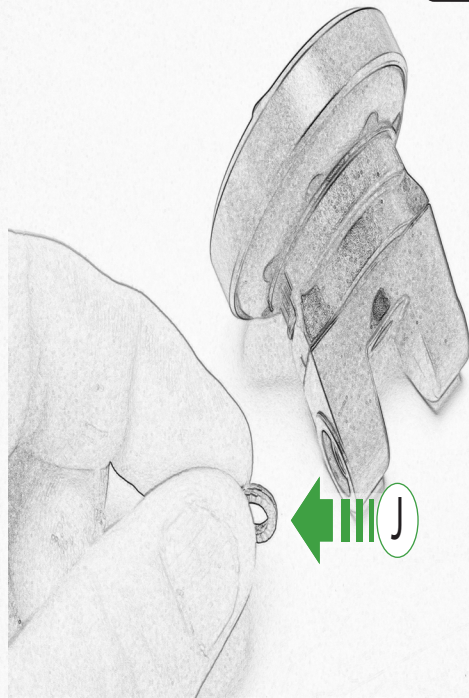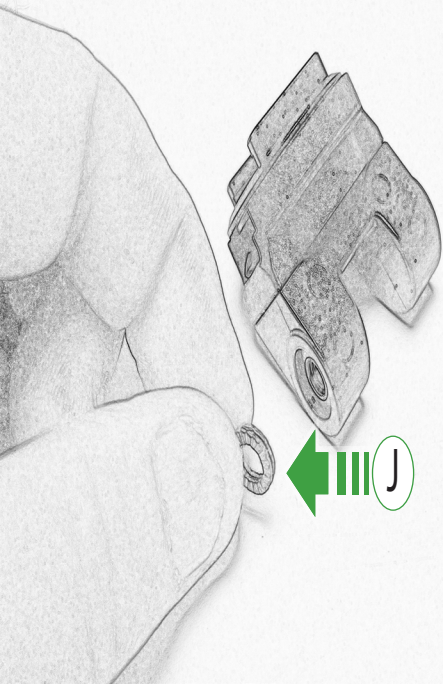


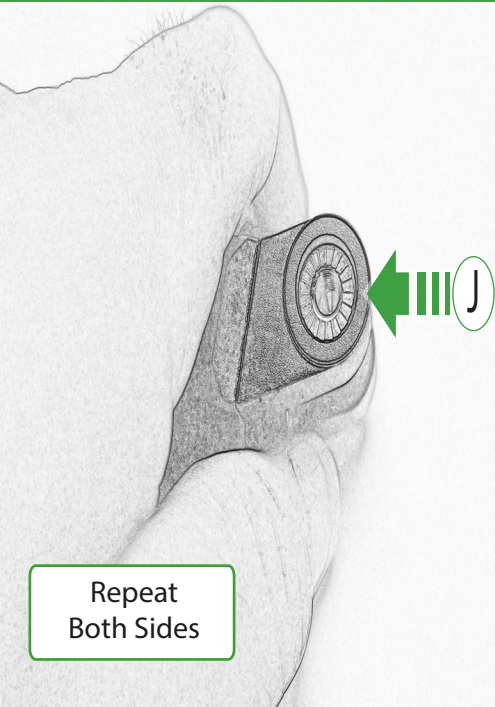


Repeat
Both Sides





Repeat
Both Sides

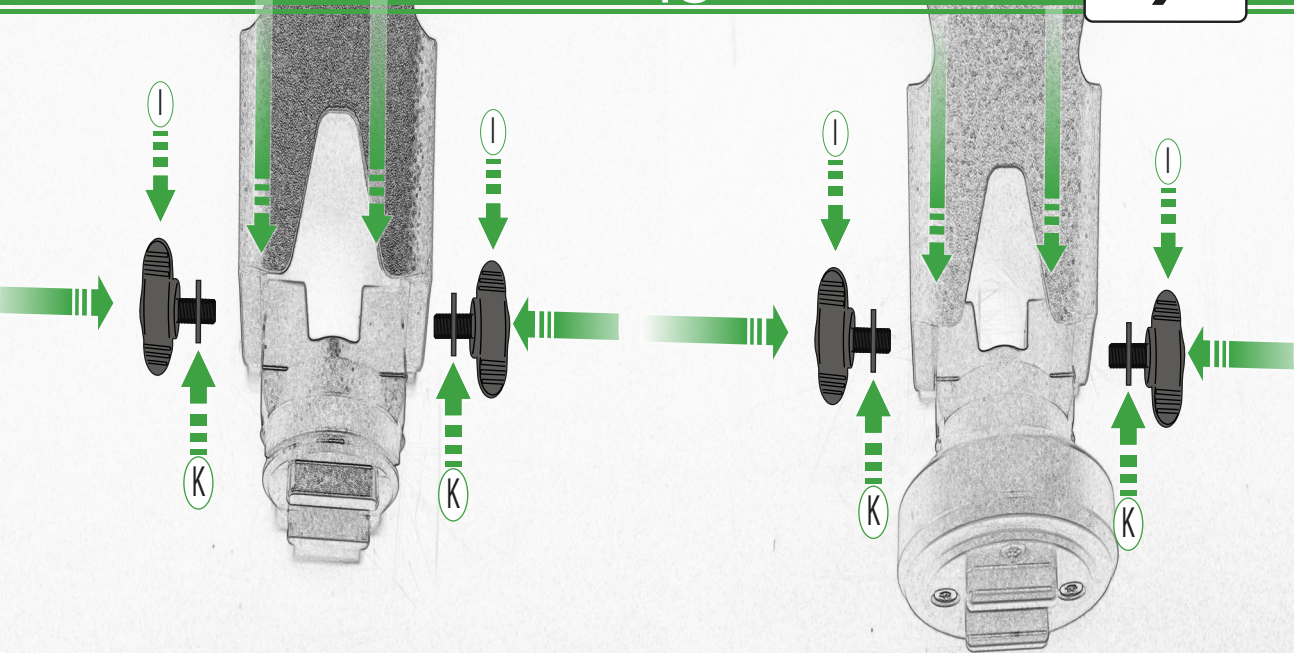

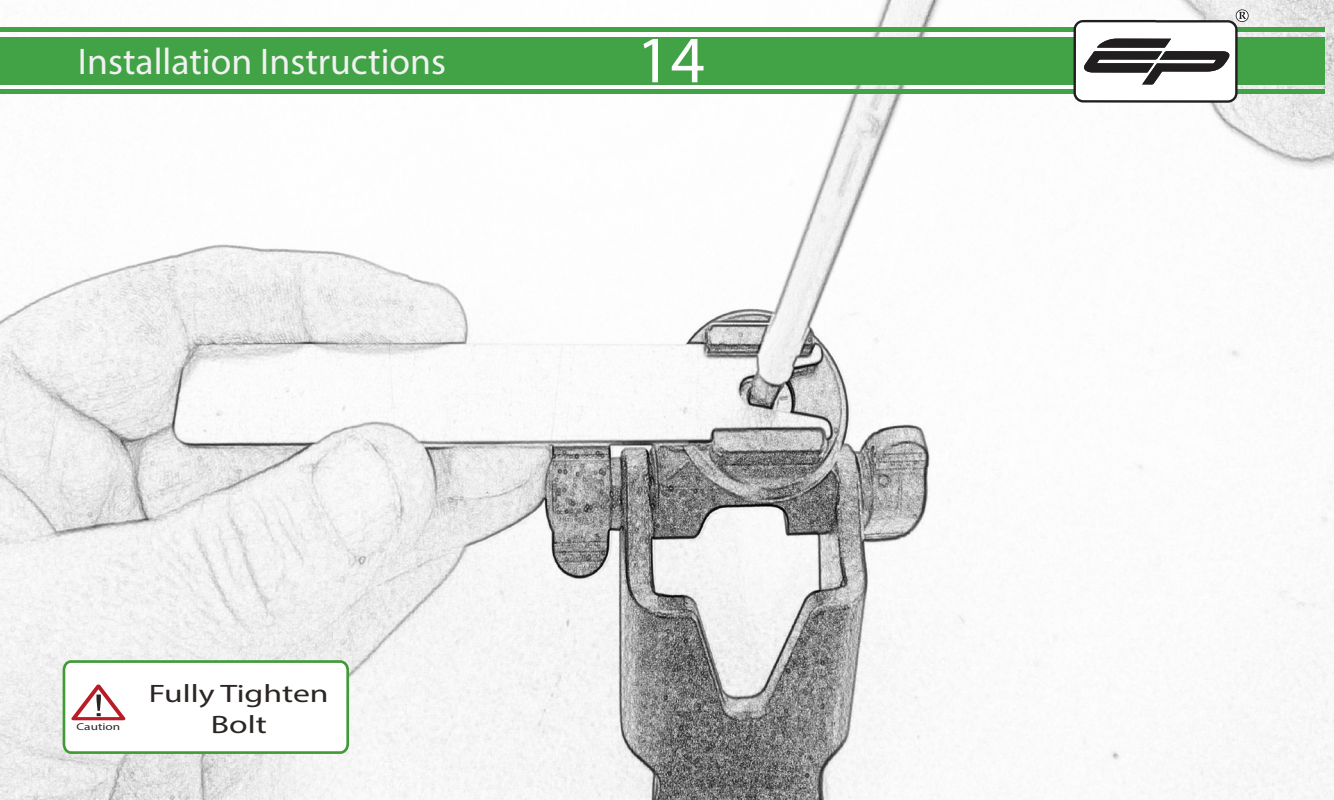

**Fully Tighten
Bolt**

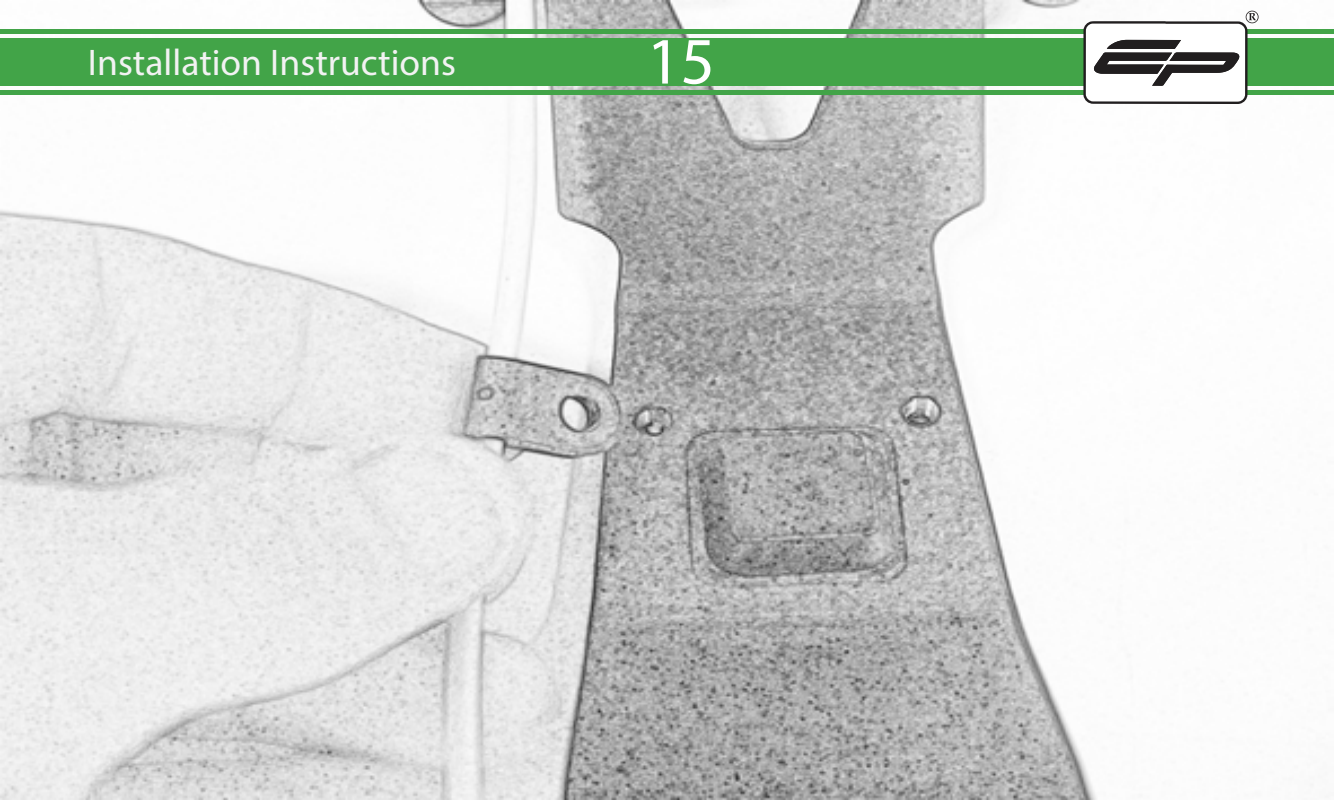

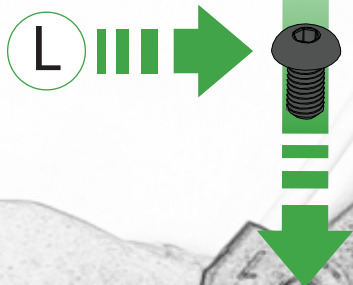




ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

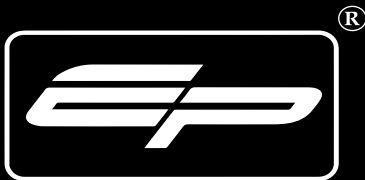

EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com