

Kawasaki Z400 Tom Tom Sat Nav Mount


Installation Instructions





Kit Contents PRN014440-014535


- A 1 x Main Bracket
- **B** 1 x Adaptor Plate
- © 1 x P-clips (No.1)
- D 1 x P-clips (No.2)E 1 x P-clips (No.3)
- © 1 x P-clips (No.4)
- © 2 x M4 x 6mm Black Button Head Bolts
- (H) 7 x M5 x 12mm Black Button head Bolts



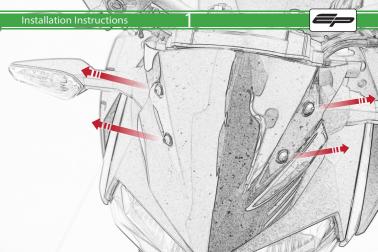

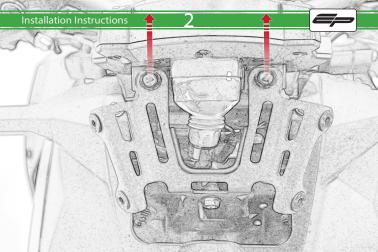

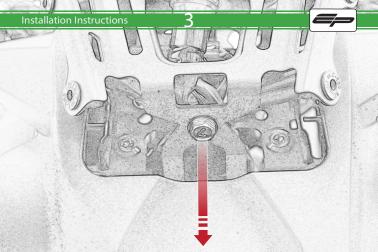


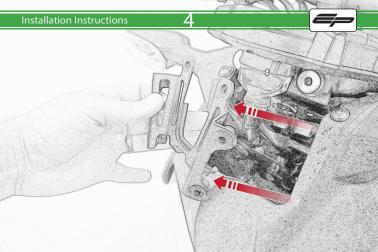









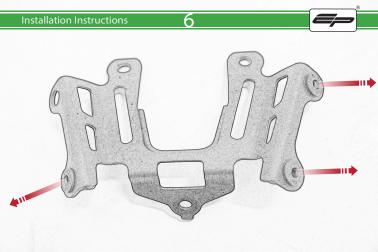


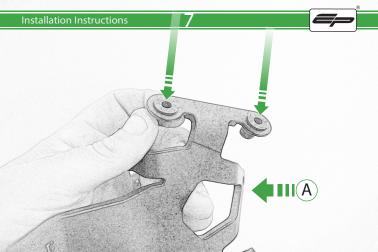


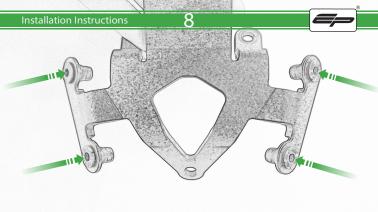








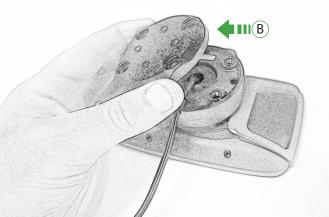


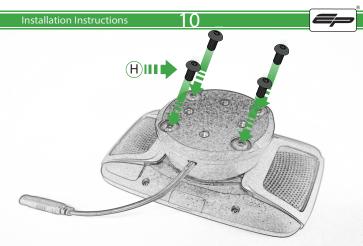


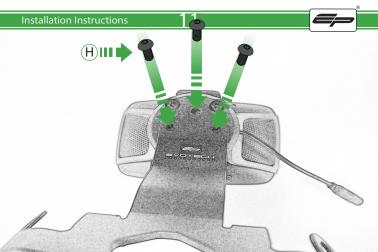


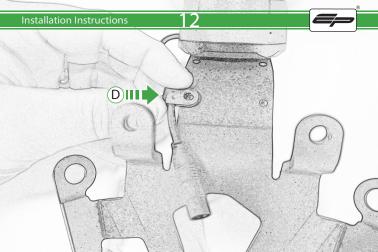


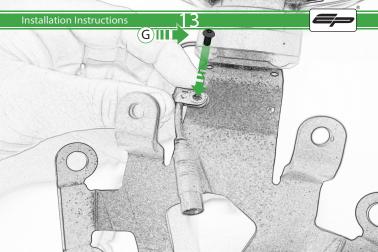


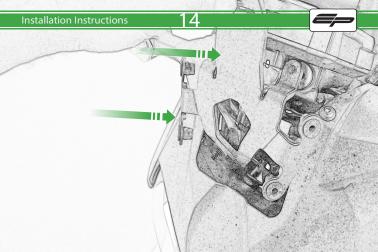

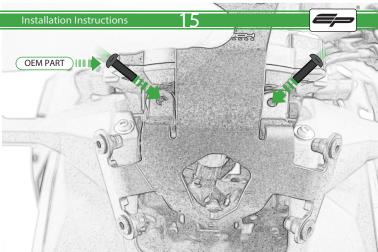

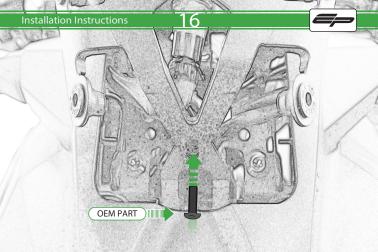

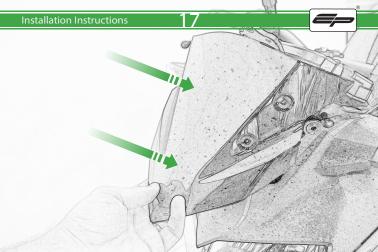

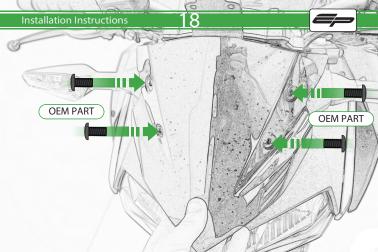





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





www.evotech-performance.com