




Triumph Tiger 800
SP Connect Sat Nav Mount


Installation Instructions



Kit Contents PRN014503-014677

- | | |
|-----------------------------------|-------------------------------------|
| (A) 1 x M6 x 16 Countersunk Screw | (L) 2 x M4 x 5mm Button Head Bolts |
| (B) 1 x Pivot Plate | |
| (C) 1 x SP Connect Plate | Sub Kit |
| (D) 2 x M5 x 10mm Button Bolts | (M) 1 x Main Bracket |
| (E) 2 x P-clips (No.1) | (N) 2 x M5 x 25mm Button head Bolts |
| (F) 2 x P-clips (No.2) | (O) 2 x Plastic Spacer |
| (G) 2 x P-clips (No.3) | (P) 1 x Spanner |
| (H) 2 x P-clips (No.4) | (Q) 1 x M5 Nylock |
| (I) 2 x Lobe Screw | |
| (J) 2 x Locking Washer | |
| (K) 2 x M5 Black Washer | |

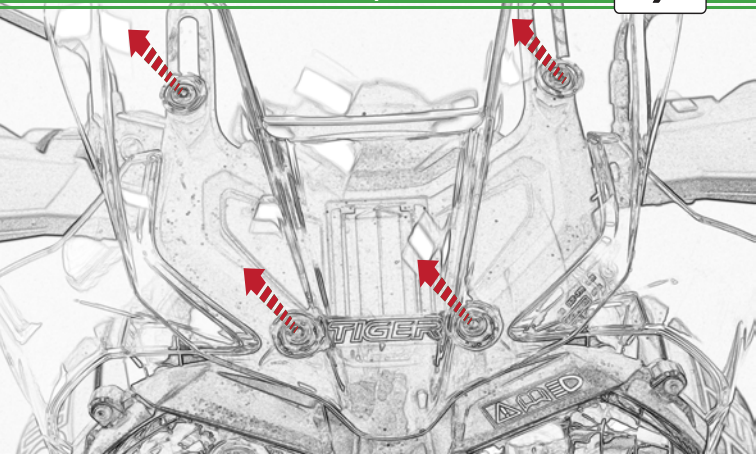

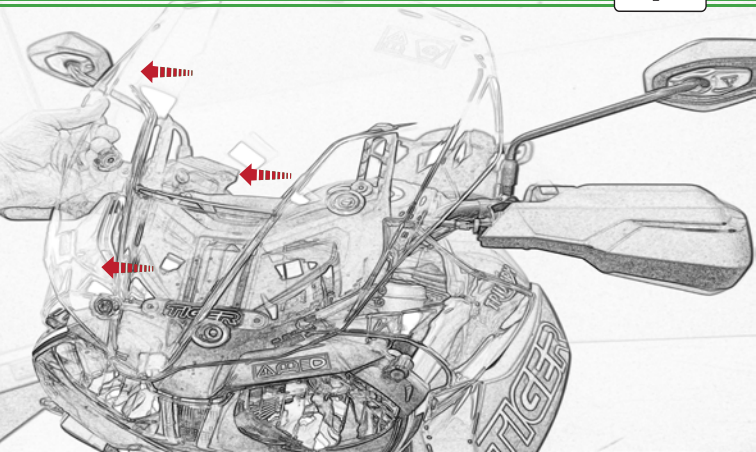




SP Connect
Standard Mount






SP Connect
Anti Vibration Mount





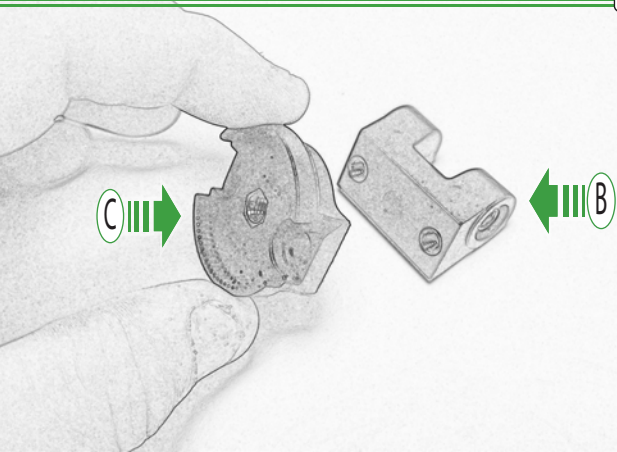




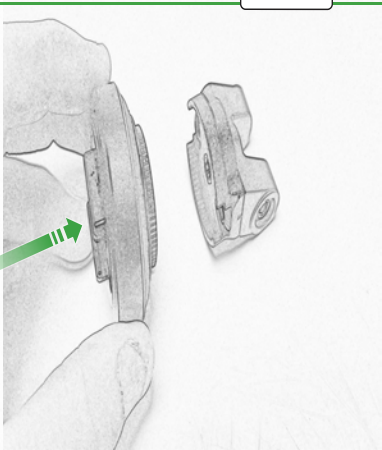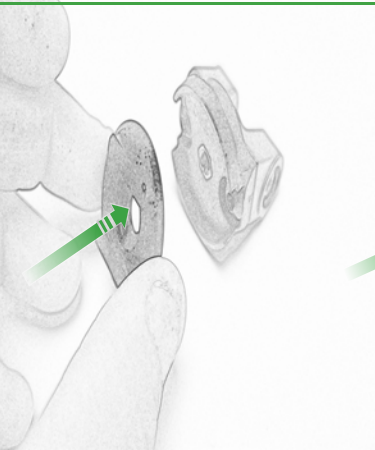


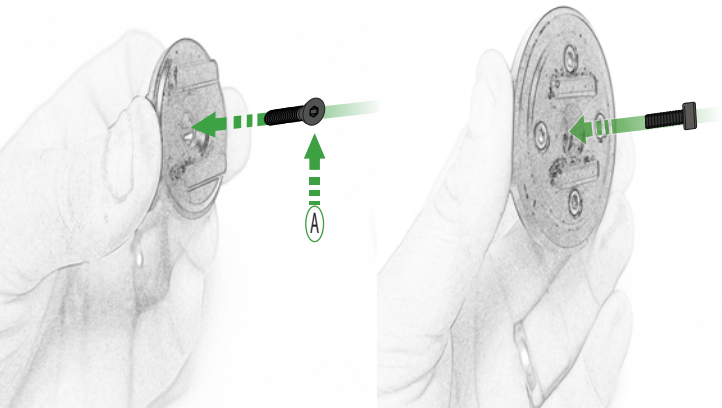

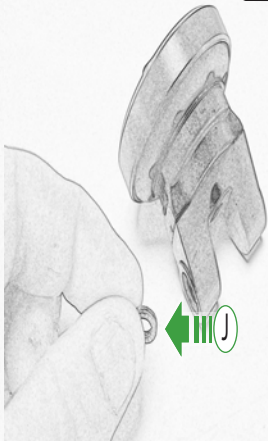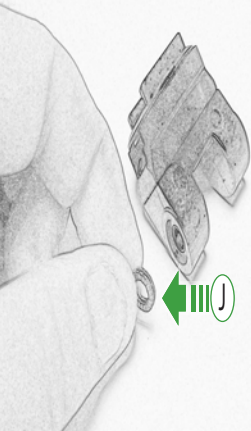


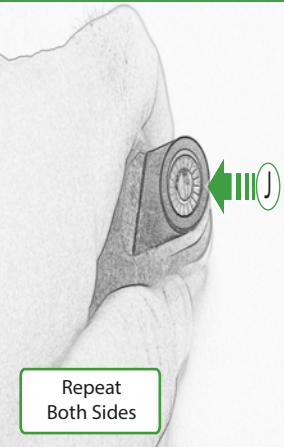


Repeat
Both Sides

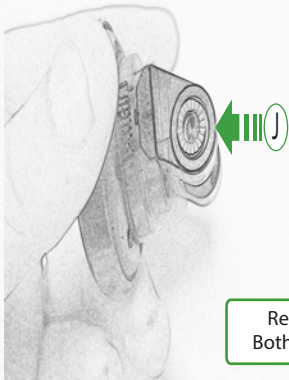


Repeat
Both Sides

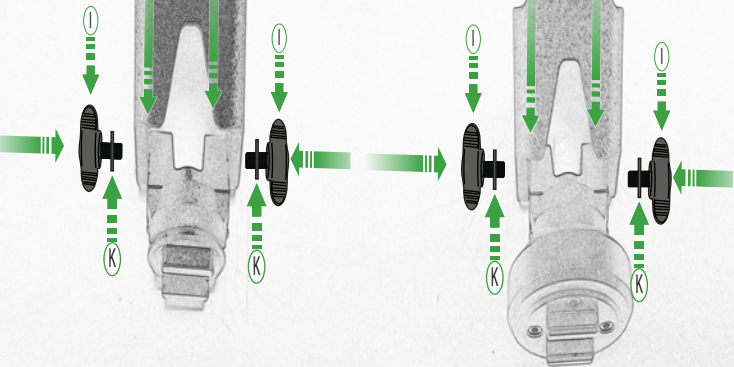

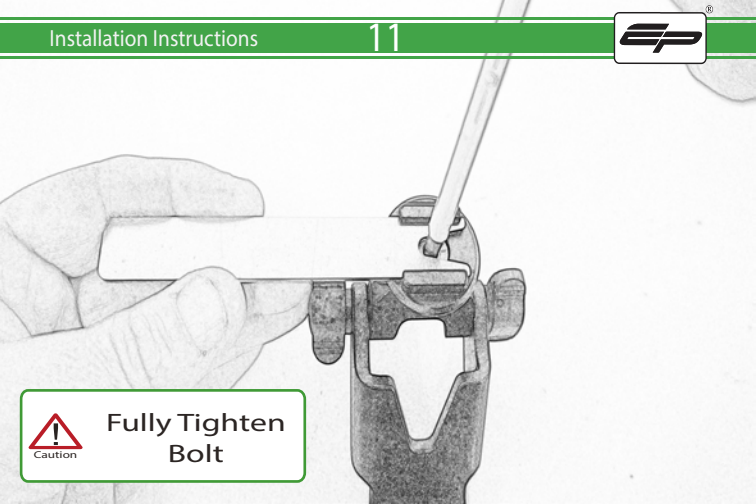

Caution


**Fully Tighten
Bolt**

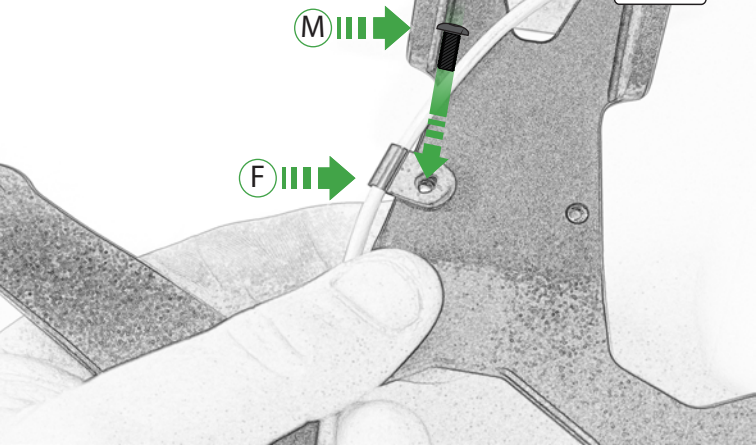





Caution


Locate Item In
Recess

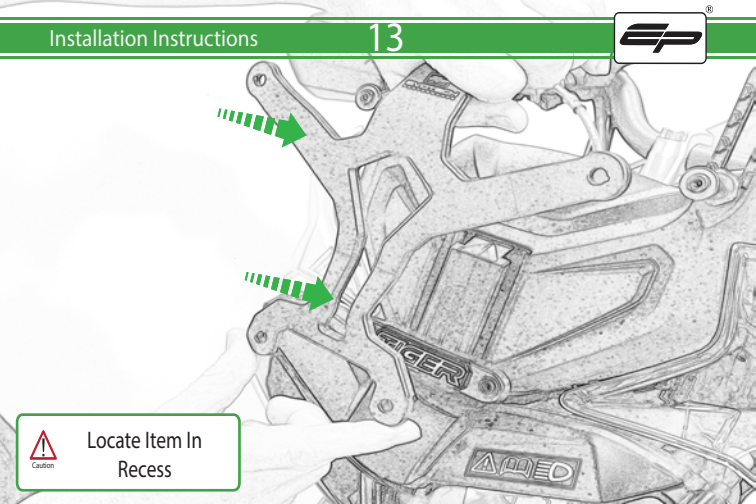

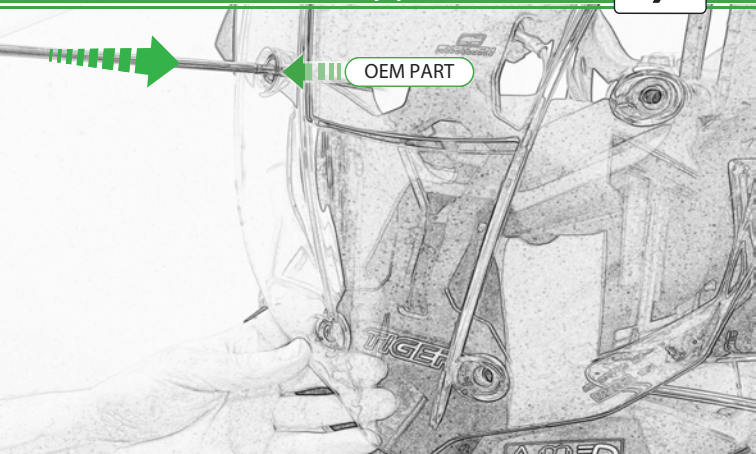

OEM PART

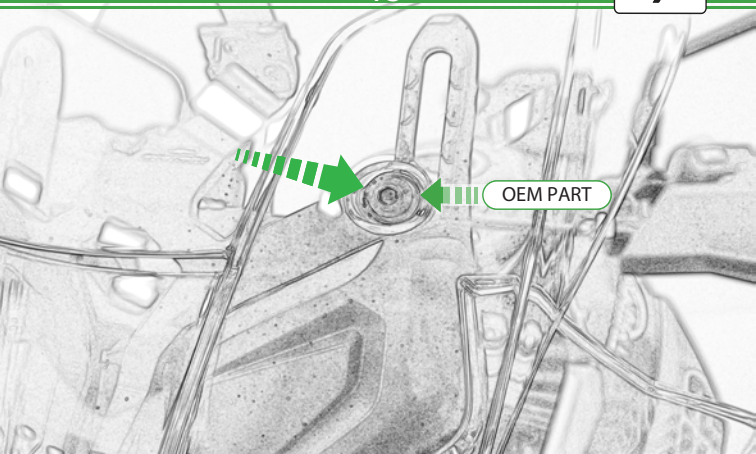

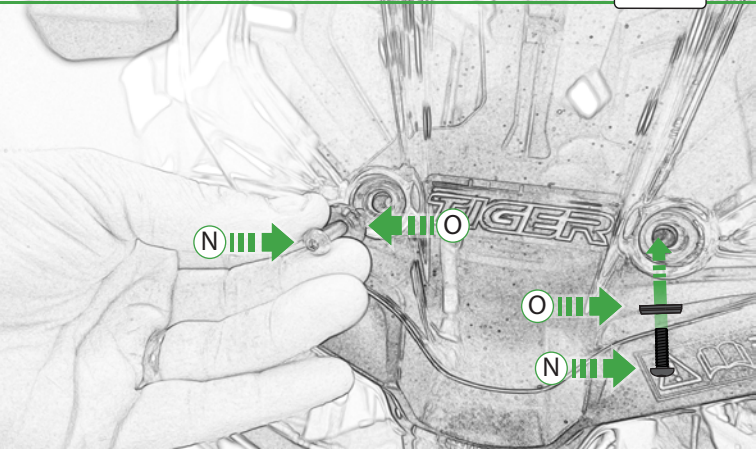





ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com