



Triumph Tiger 1200
SP Connect Sat Nav Mount


Installation Instructions

Kit Contents PRN014516-014677

- (A) 1 x M6 x 16 Countersunk Screw
- (B) 1 x Pivot Plate
- (C) 1 x SP Connect Plate
- (D) 2 x M5 x 10mm Button Head Bolts
- (E) 2 x P-clips (No.1)
- (F) 2 x P-clips (No.2)
- (G) 2 x P-clips (No.3)
- (H) 2 x P-clips (No.4)
- (I) 2 x Lobe Screw
- (J) 2 x Locking Washer
- (K) 2 x M5 Black Washer
- (L) 2 x M4 x 5mm Button Head Bolts
- (N) 4 x Spacer

Sub Kit



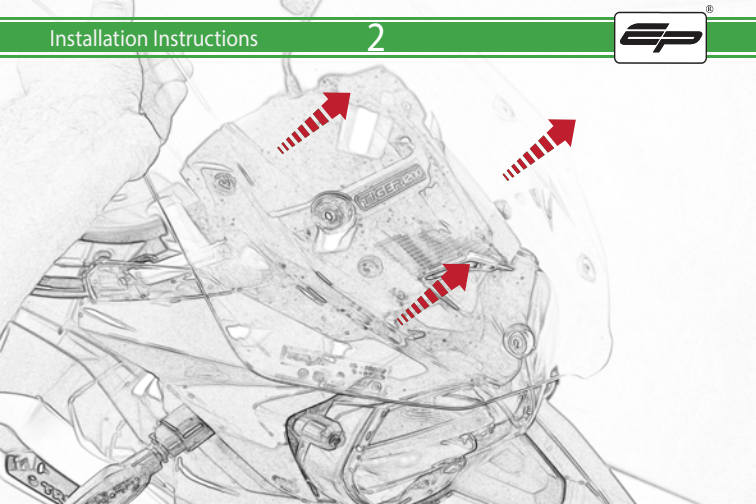




SP Connect
Standard Mount






SP Connect
Anti Vibration Mount



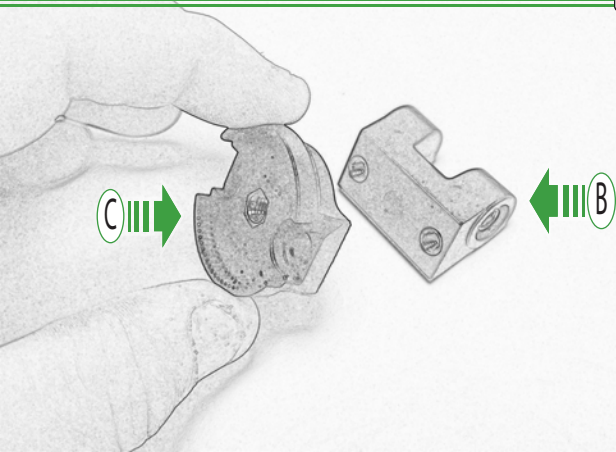



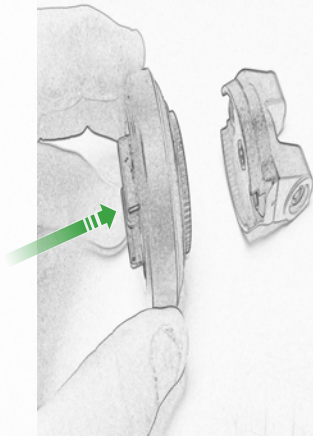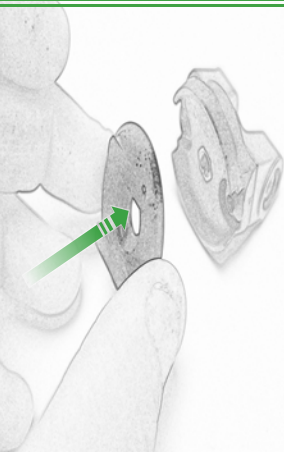


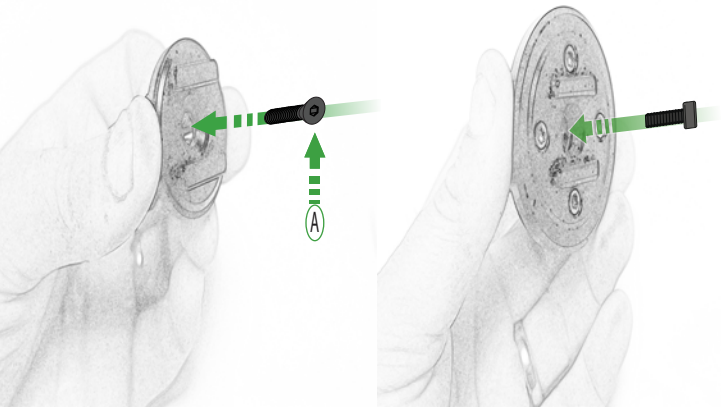







Repeat
Both Sides

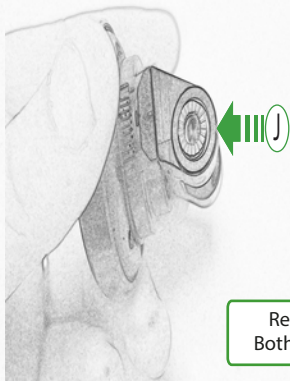


Repeat
Both Sides

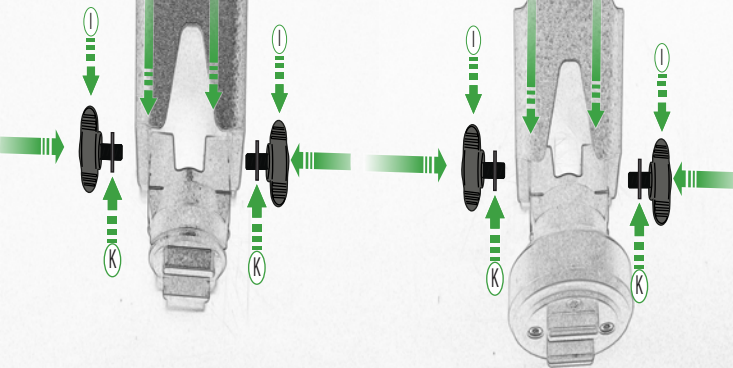


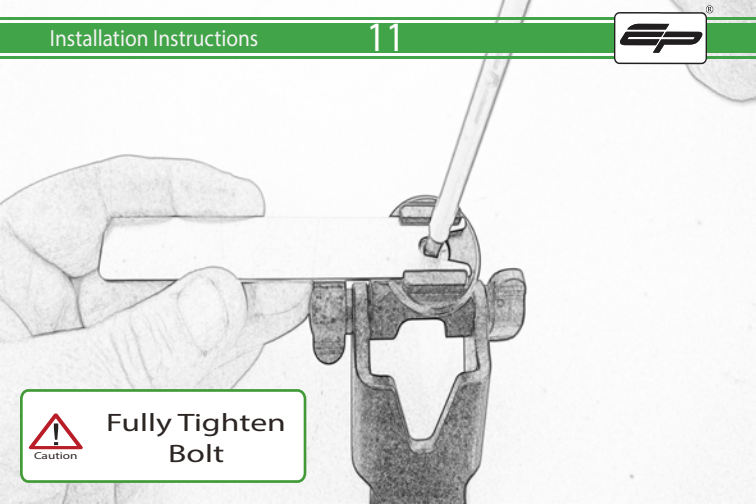

Caution

**Fully Tighten
Bolt**

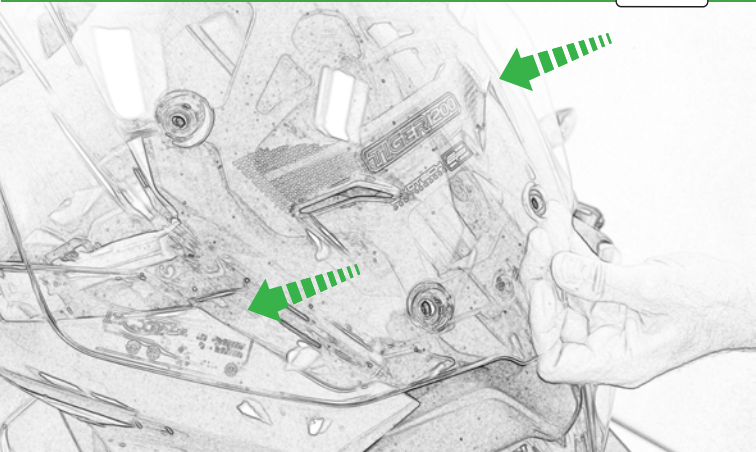

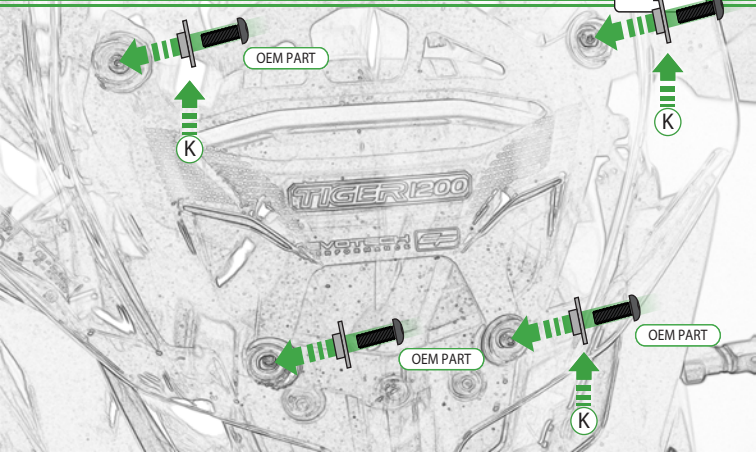

OEM PART

K

K

OEM PART

K

OEM PART



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com