



EVOTECH[®]
P E R F O R M A N C E


www.evotech-performance.com


**Kawasaki Z650 Tom Tom Sat Nav Mount
Installation Instructions**




Kit Contents PRN014567-015638

- A** 1 x Pivot Plate
- B** 1 x Main Bracket
- C** 1 x Tom Tom Plate
- D** 2 x Nord Lock Washers
- E** 2 x M5 x 12 Caphead Bolt
- F** 2 x M5 x 8mm Black Button Head Bolt
- G** 4 x M5 x 12mm Black Button Head Bolts

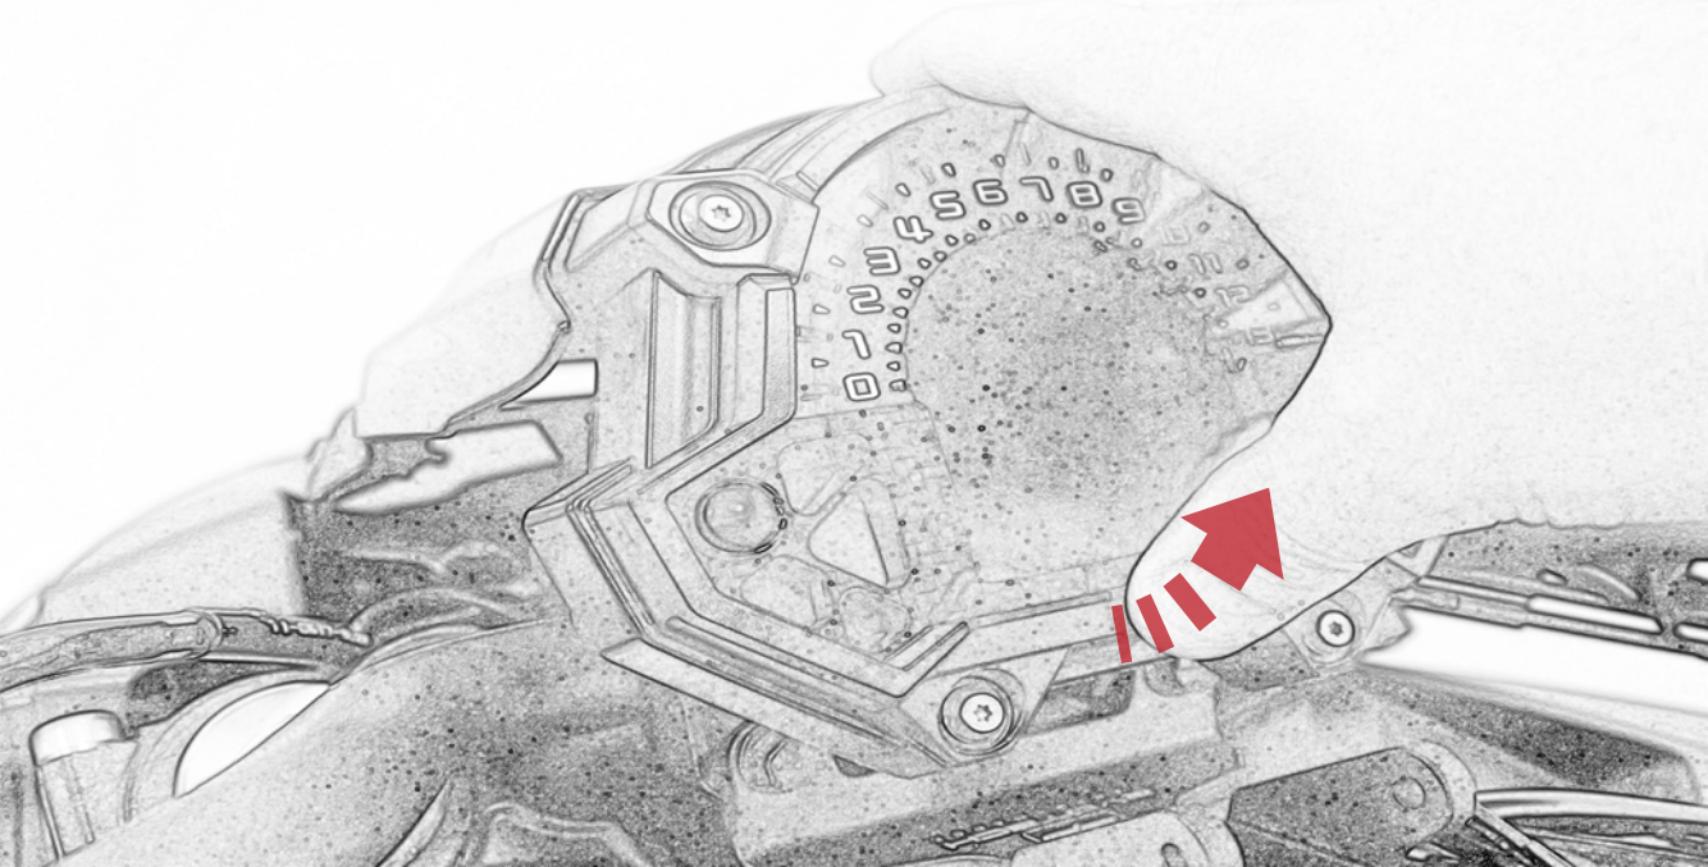


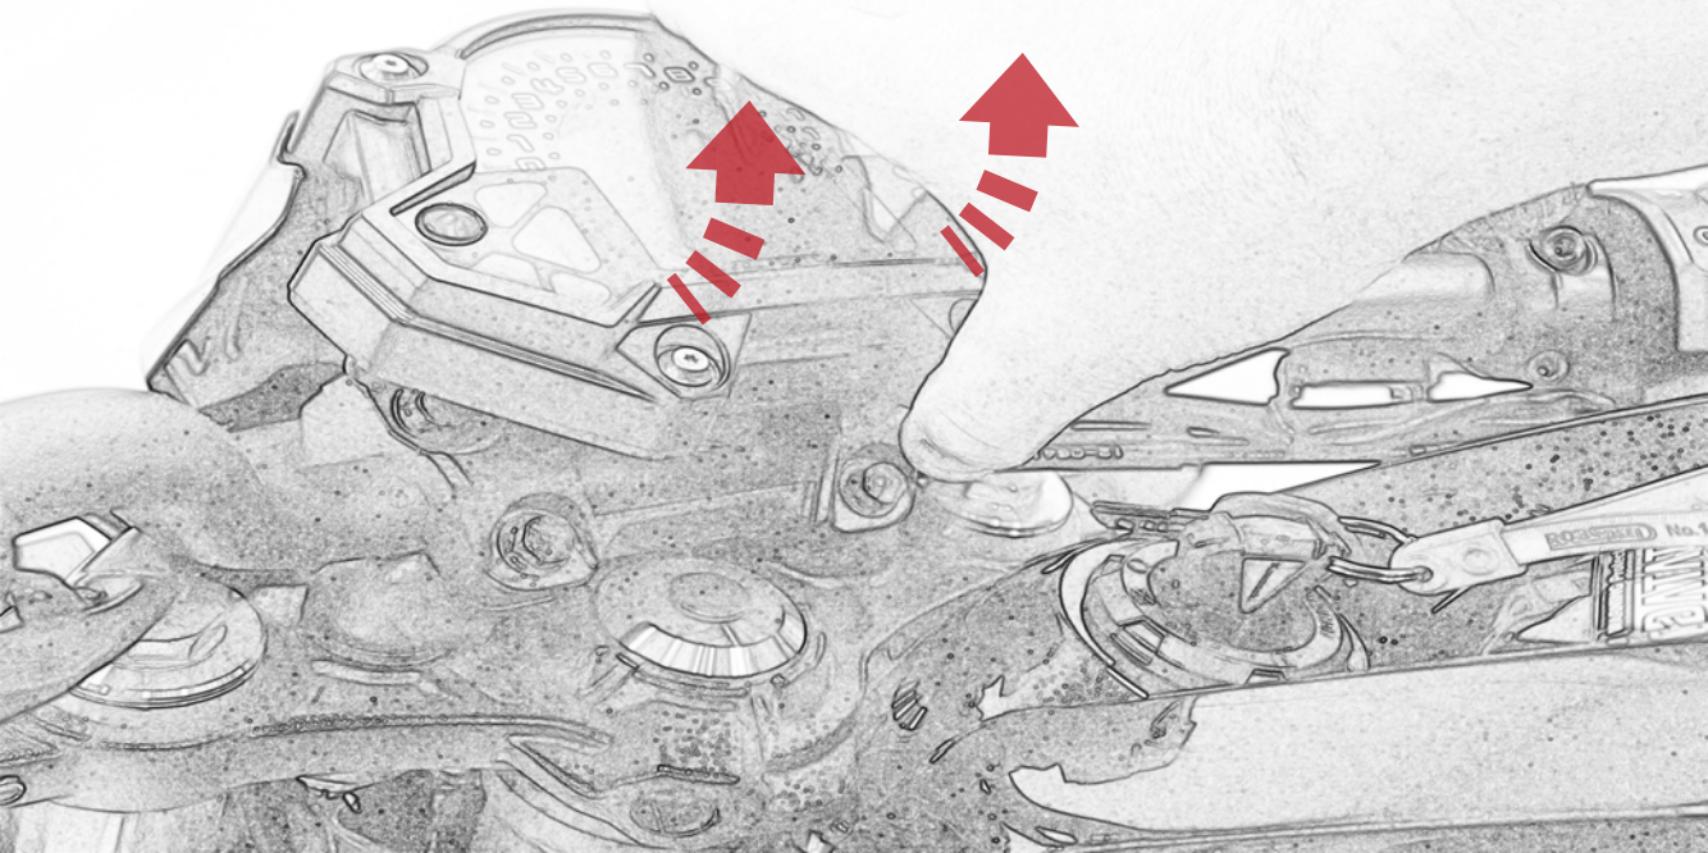




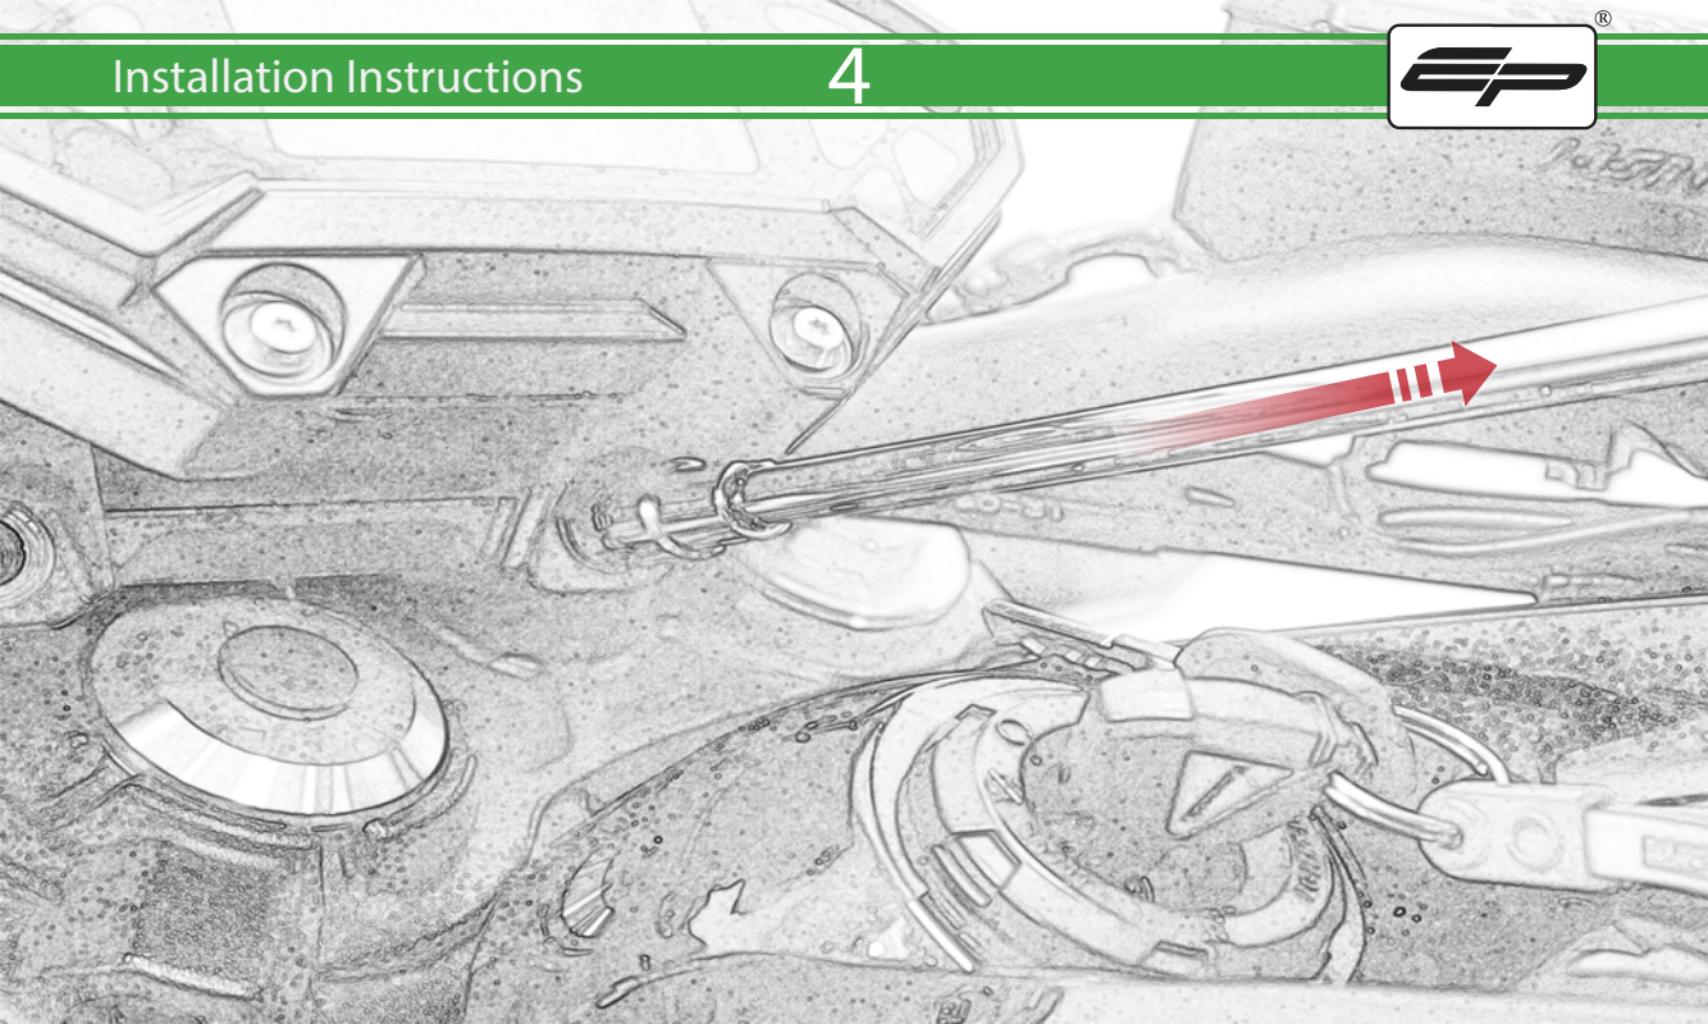



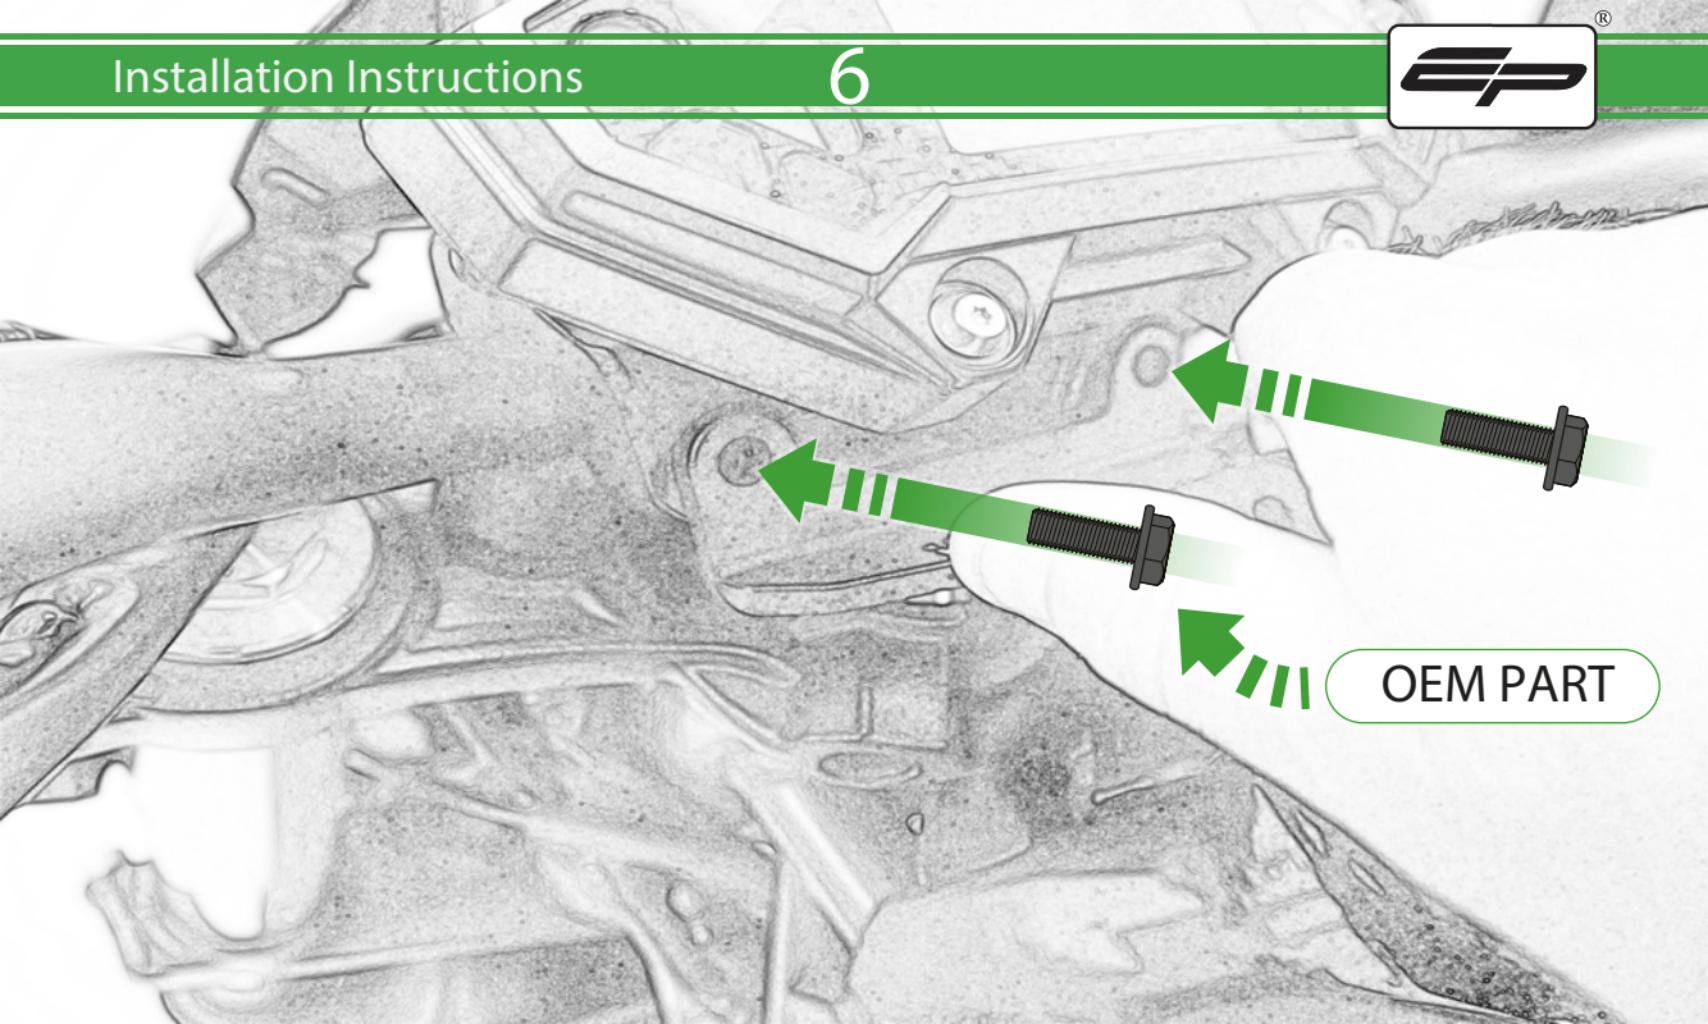



OEM PART

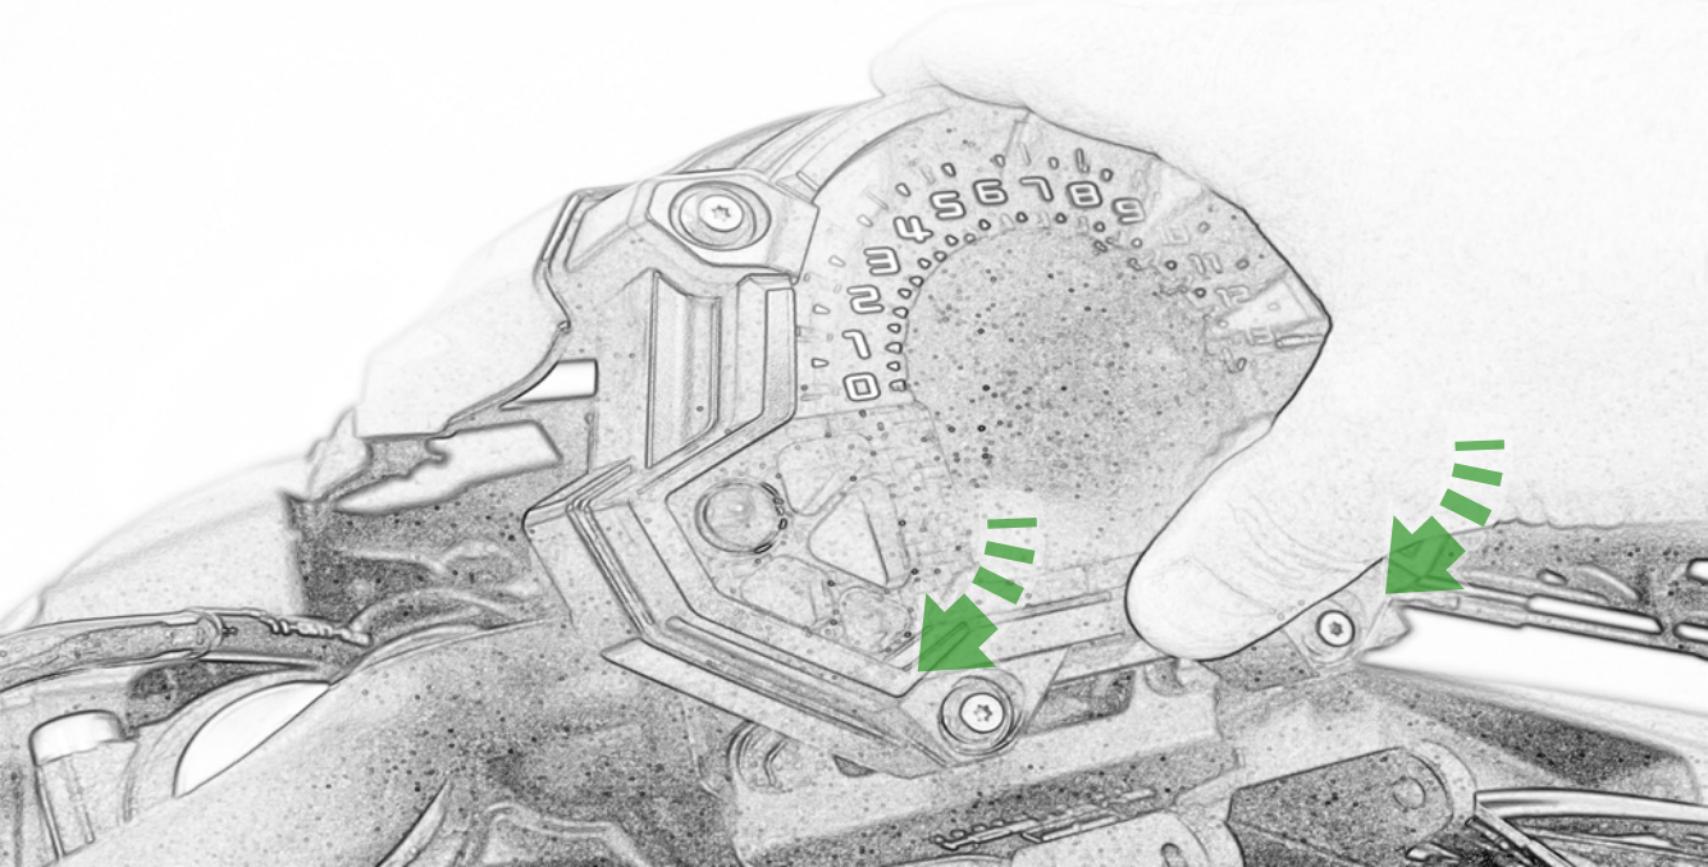



A 

 C

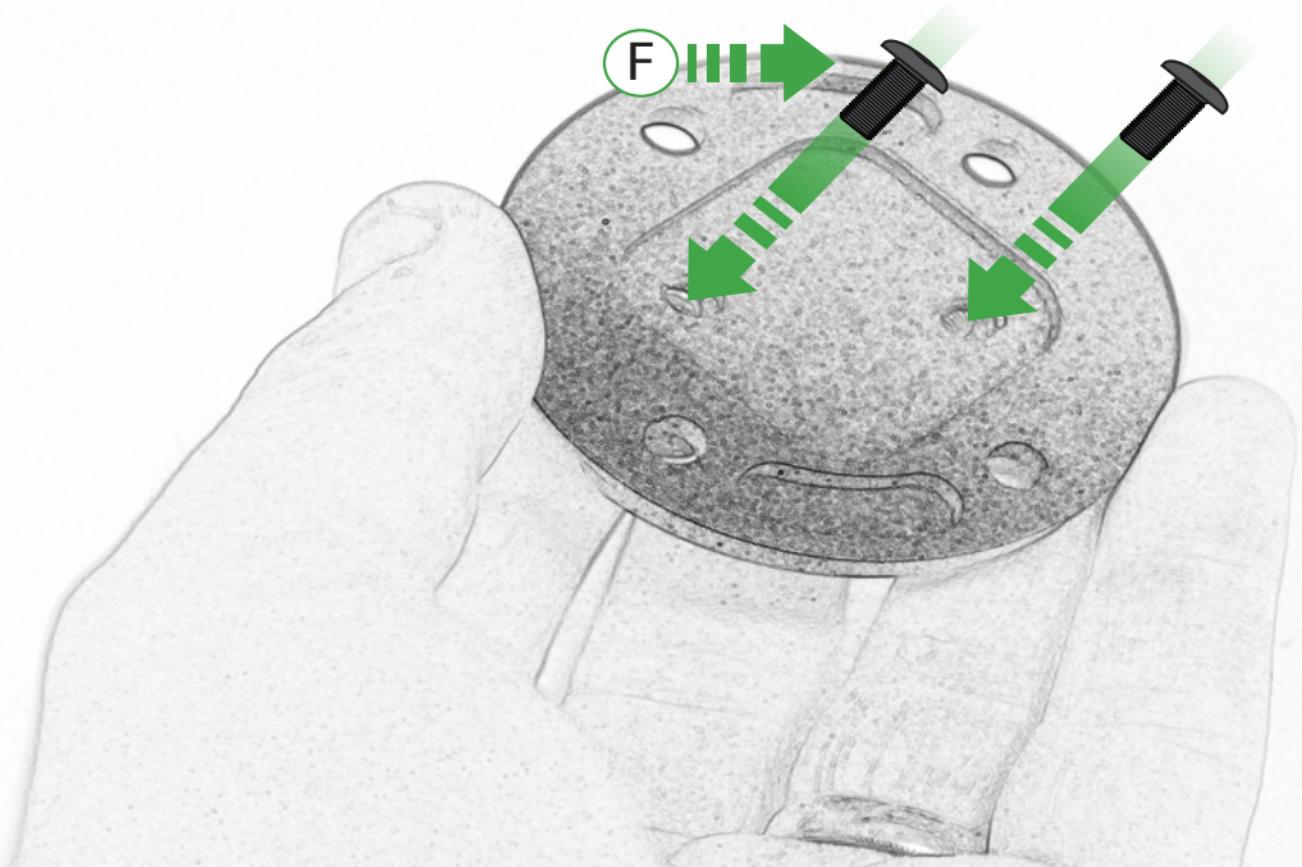

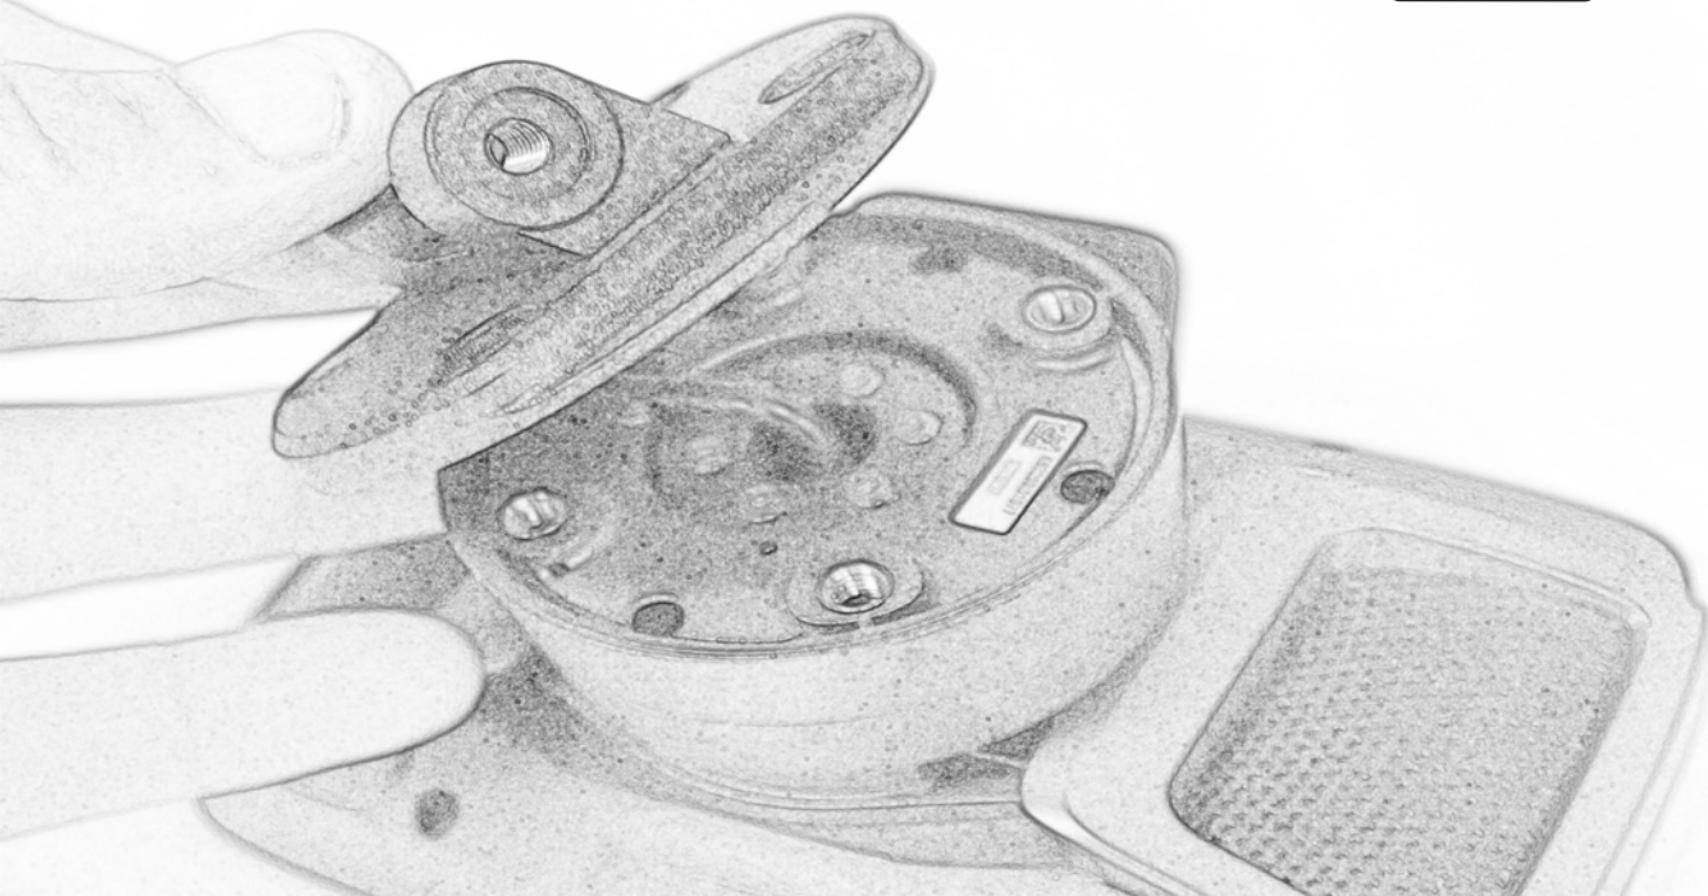

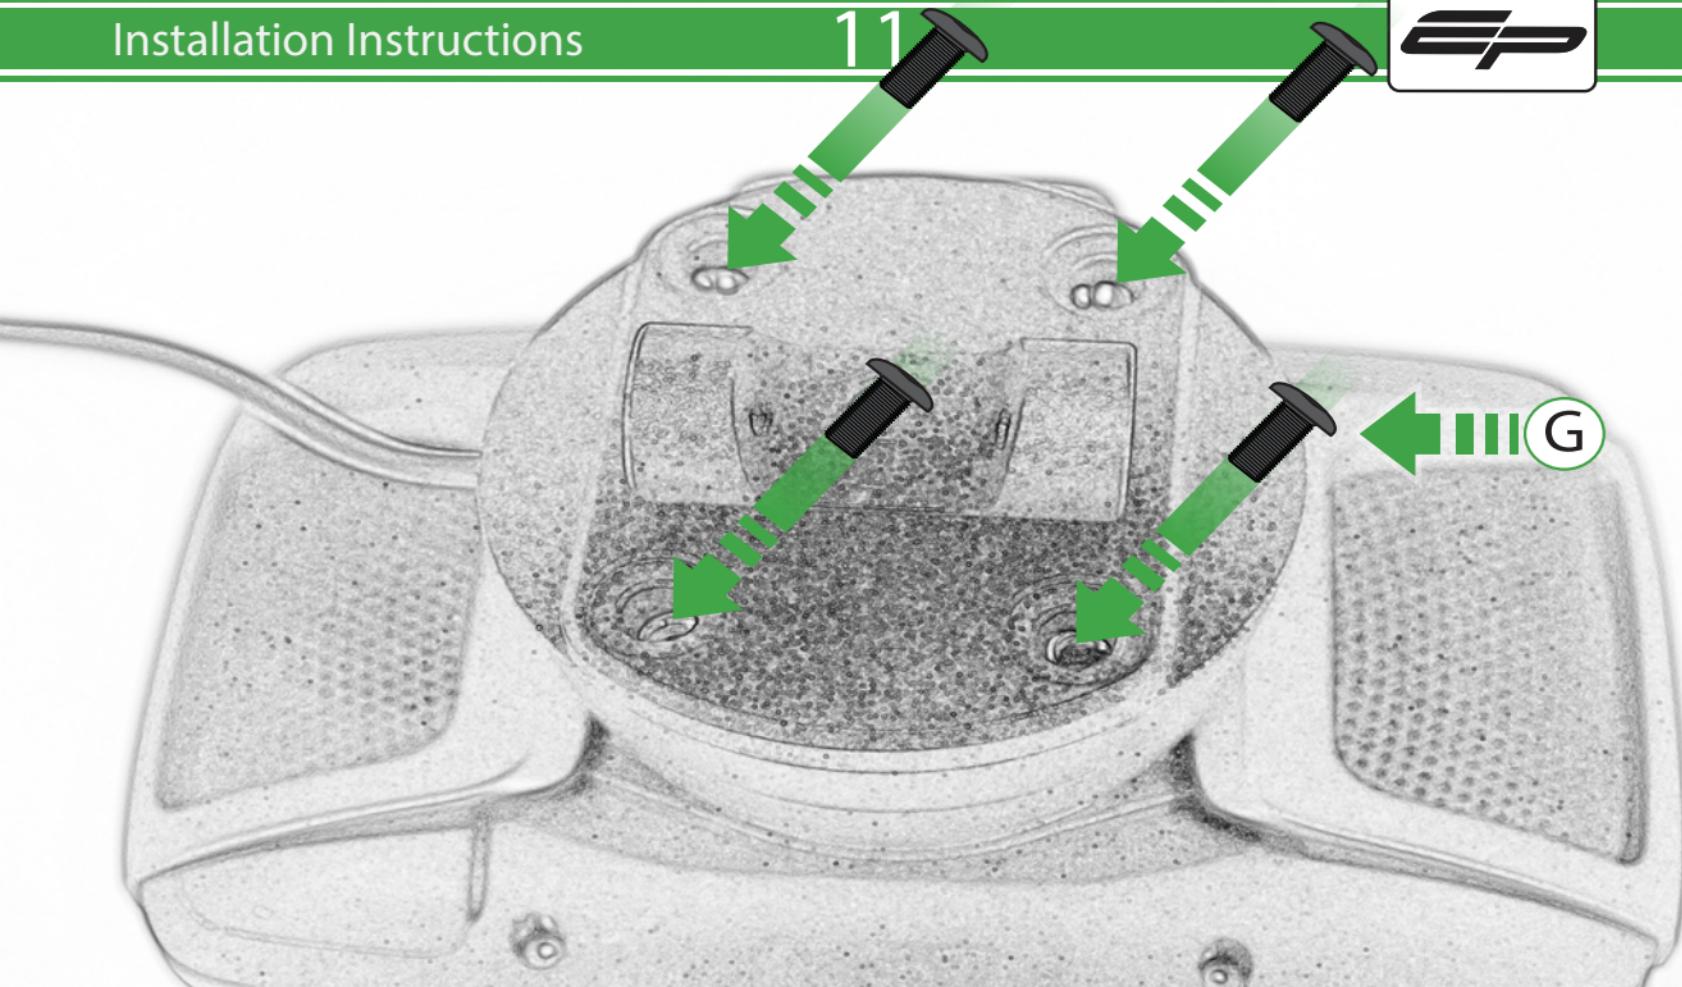


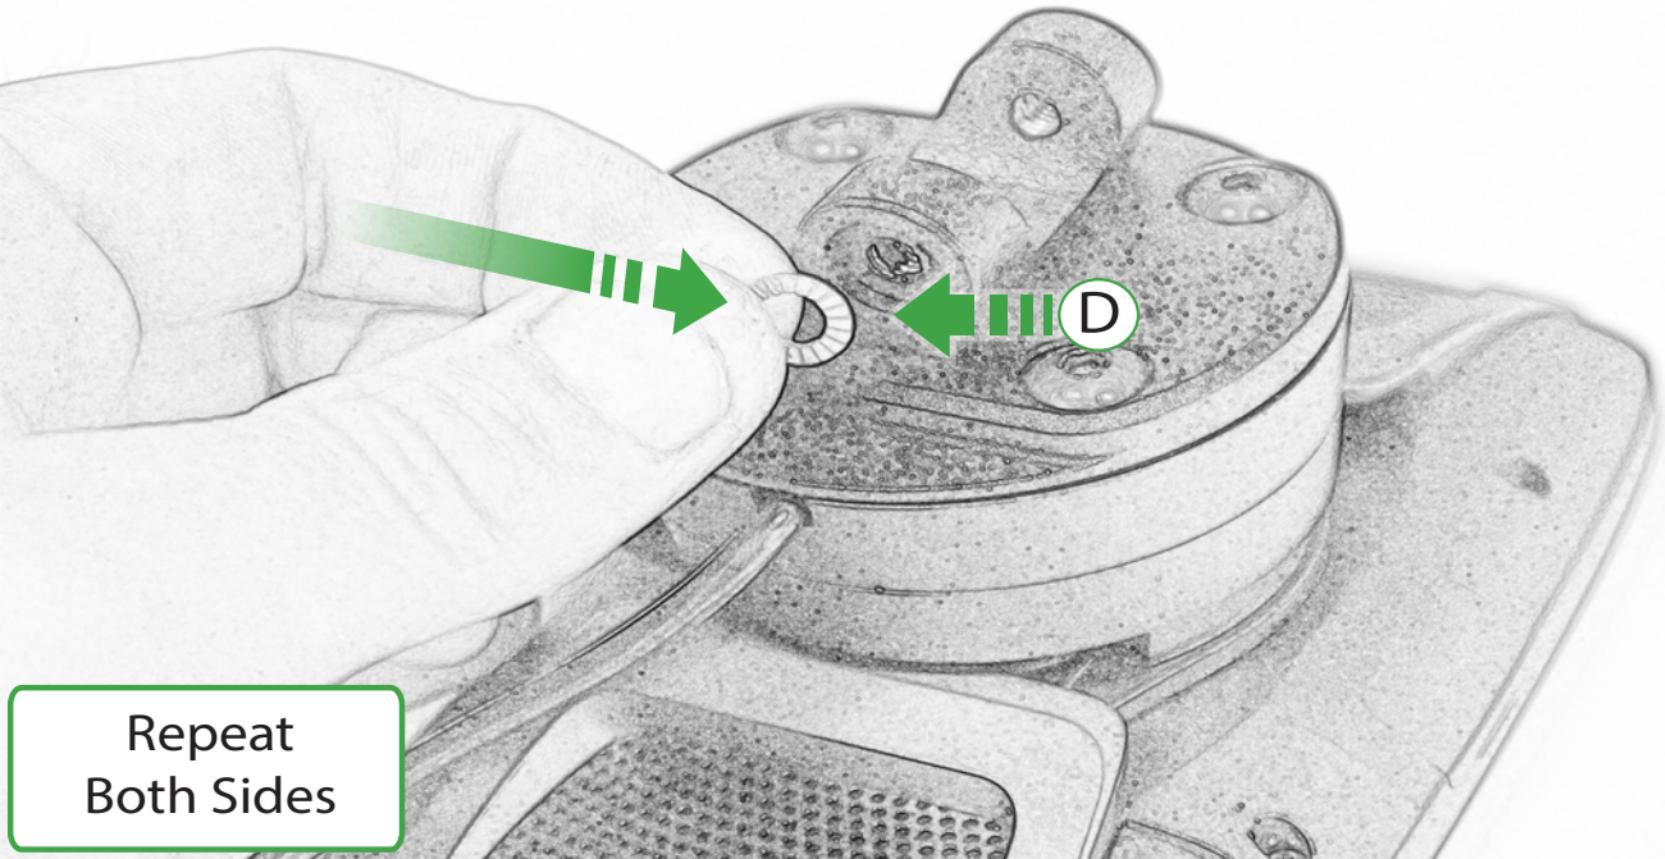

Repeat
Both Sides



Repeat
Both Sides

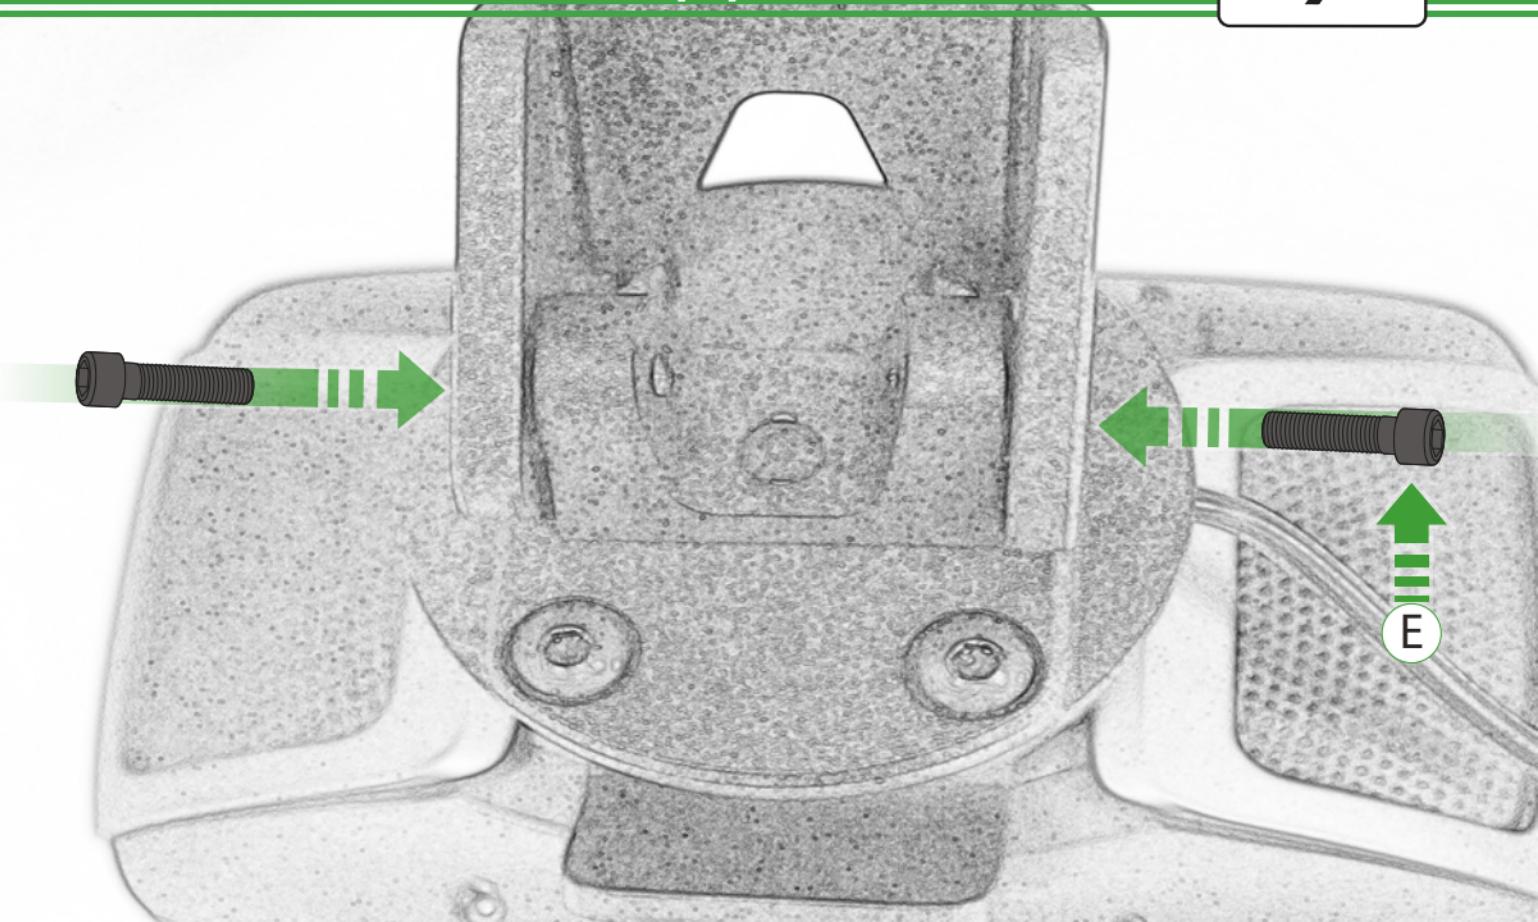



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH[®]
P E R F O R M A N C E

www.evotech-performance.com