




www.evotech-performance.com


KTM 1290 Super Duke TomTom Sat Nav Installation Instructions





Kit Contents PRN014567-015584


- Ⓐ 1 x Pivot Plate
- Ⓑ 1 x Main Bracket
- Ⓒ 1 x TomTom Plate
- Ⓓ 1 x Rubber Pad
- Ⓔ 2 x Nord Lock Washers
- Ⓕ 2 x M5 x 8mm Black Button Head Bolt
- Ⓖ 2 x M5 x 12 Caphead Bolt
- Ⓗ 4 x M5 x 12mm Black Button Head Bolts
- Ⓘ 4 x M5 x 40mm Black Button Head Bolts
- Ⓙ 4 x Spacers

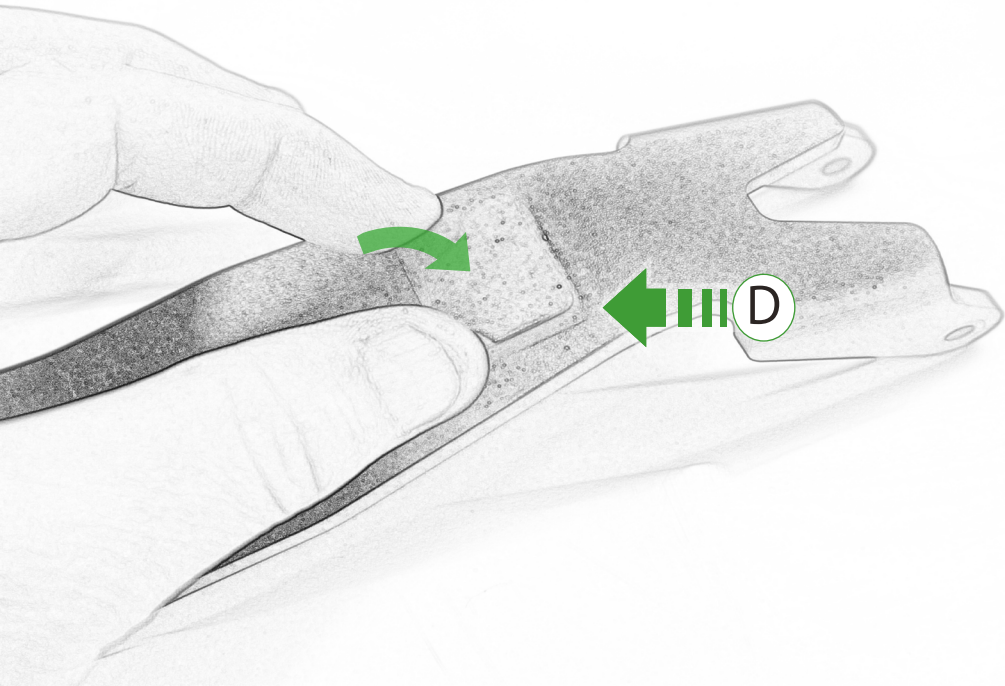


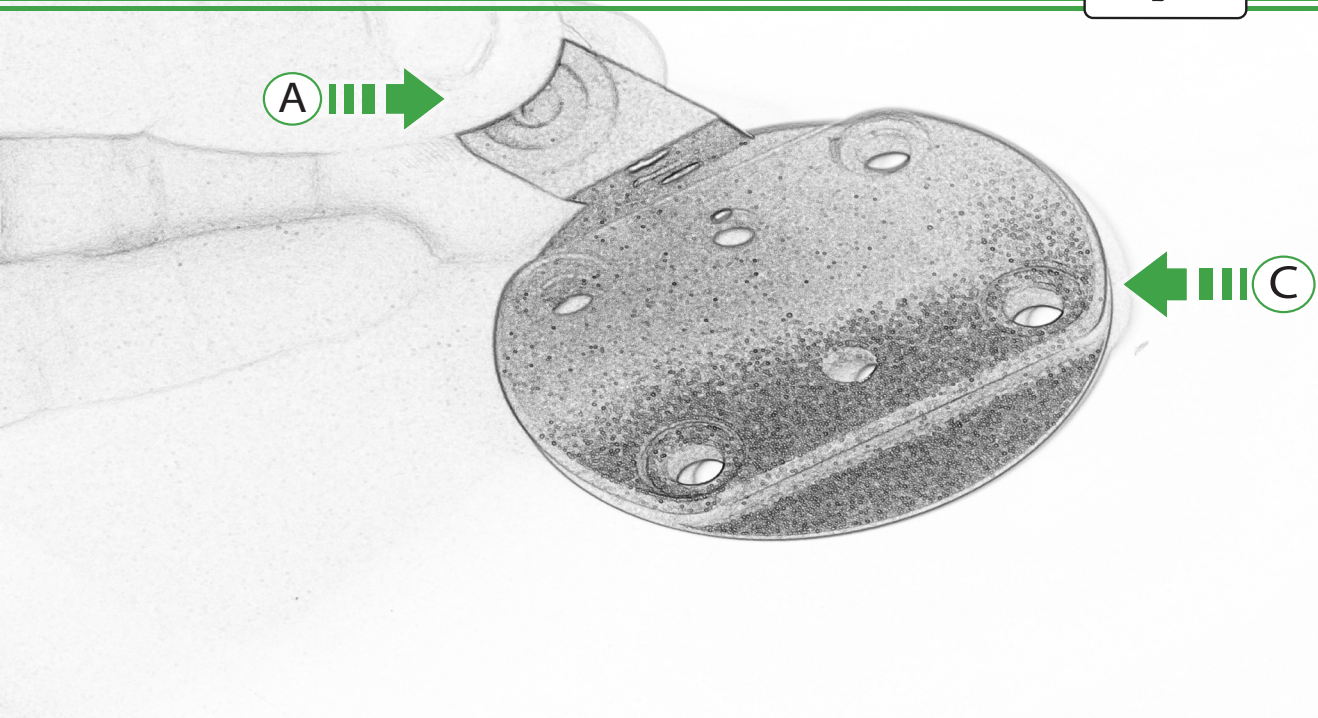

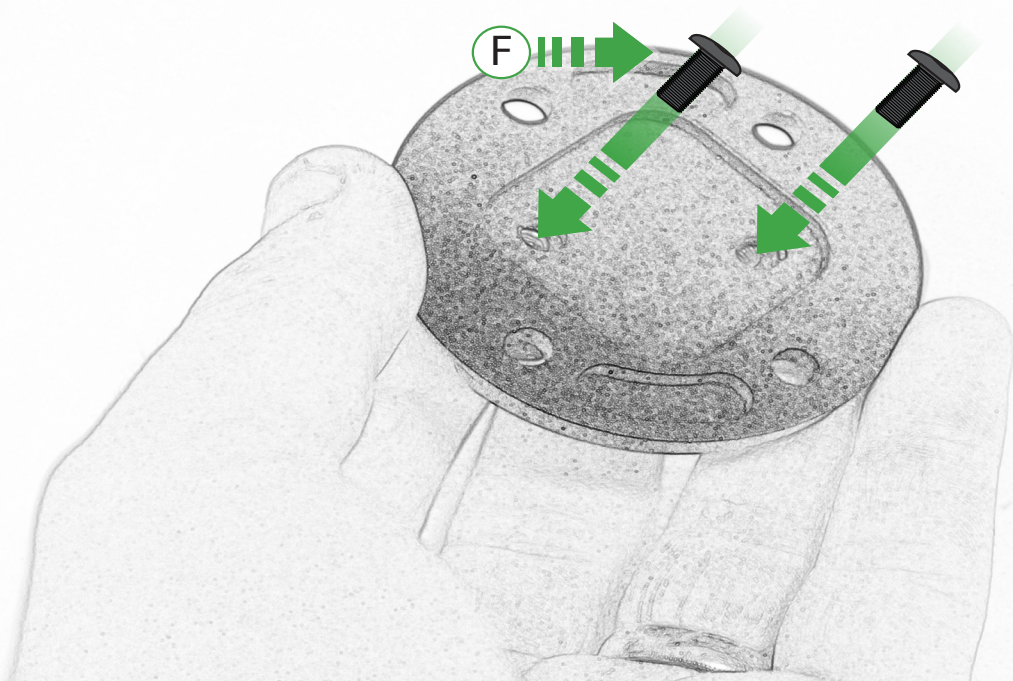

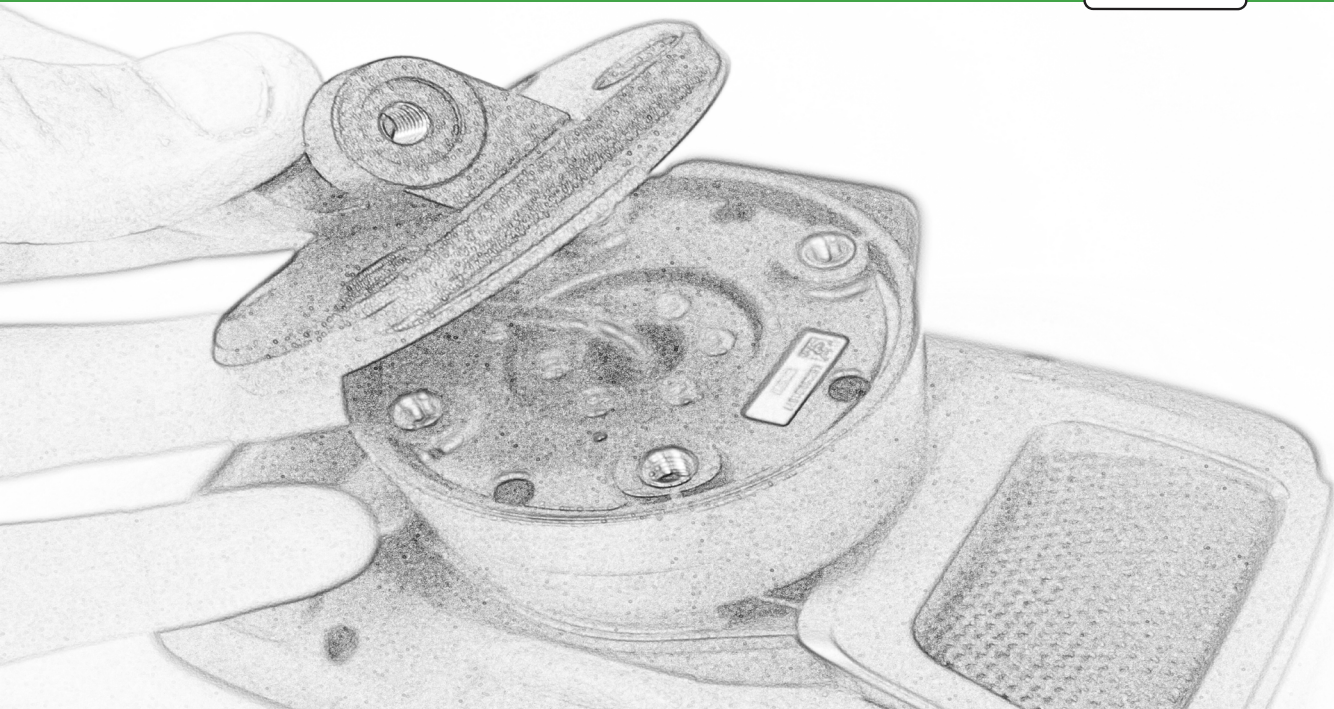


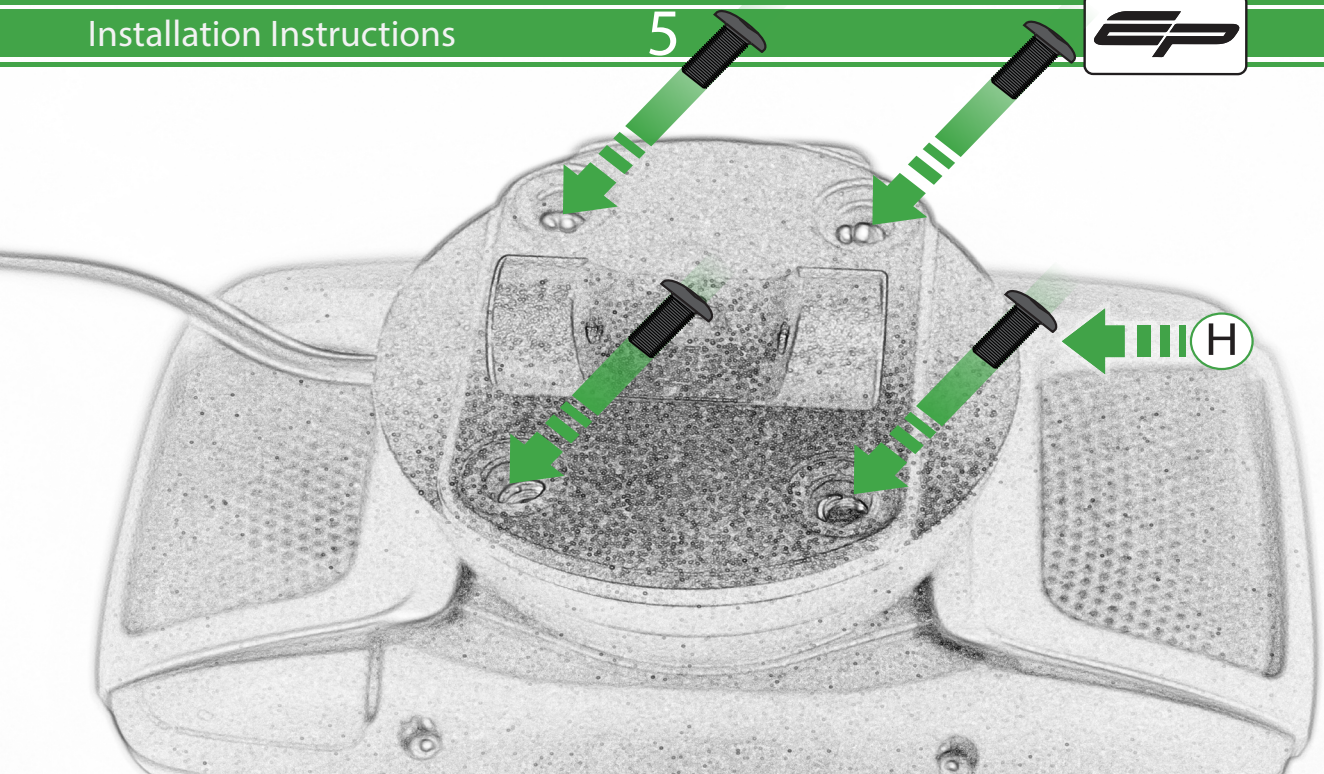


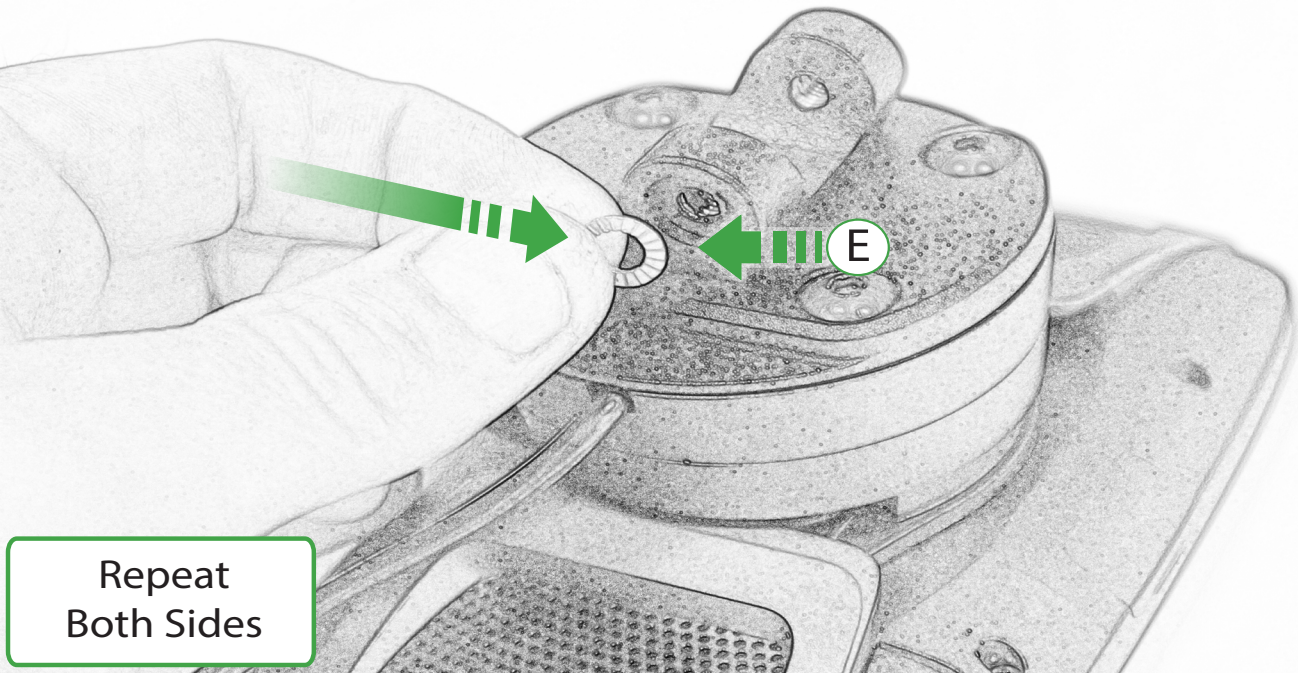



Repeat
Both Sides




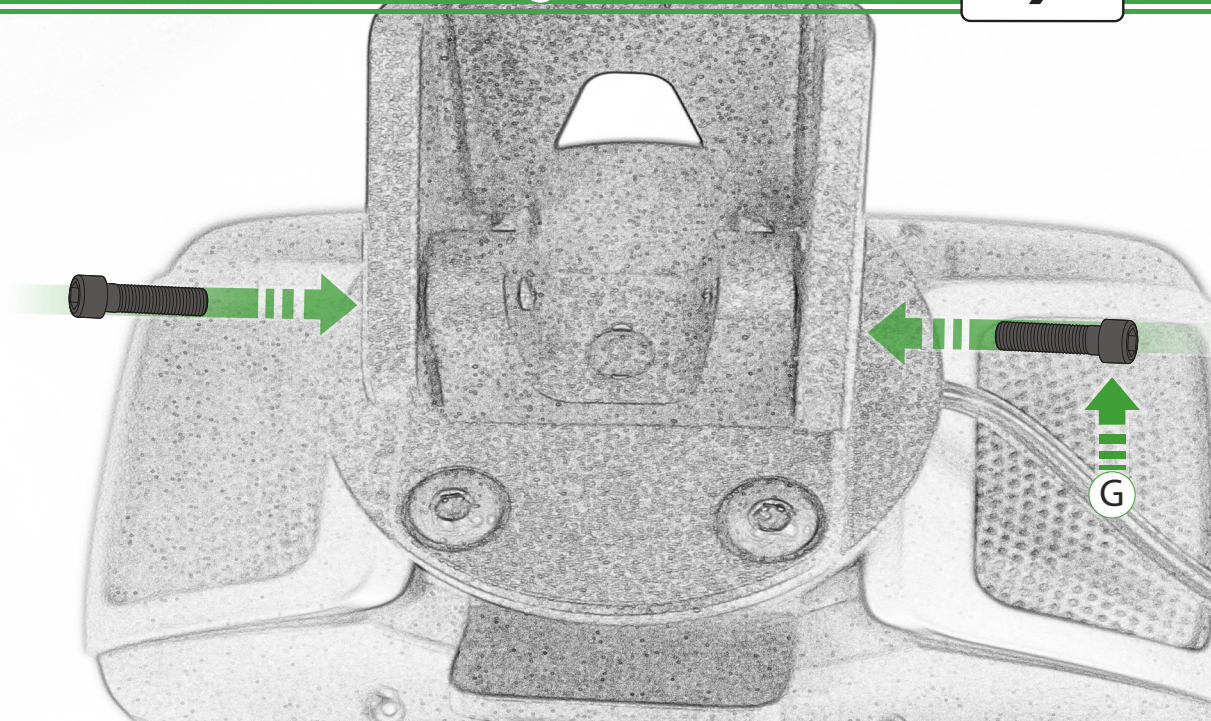

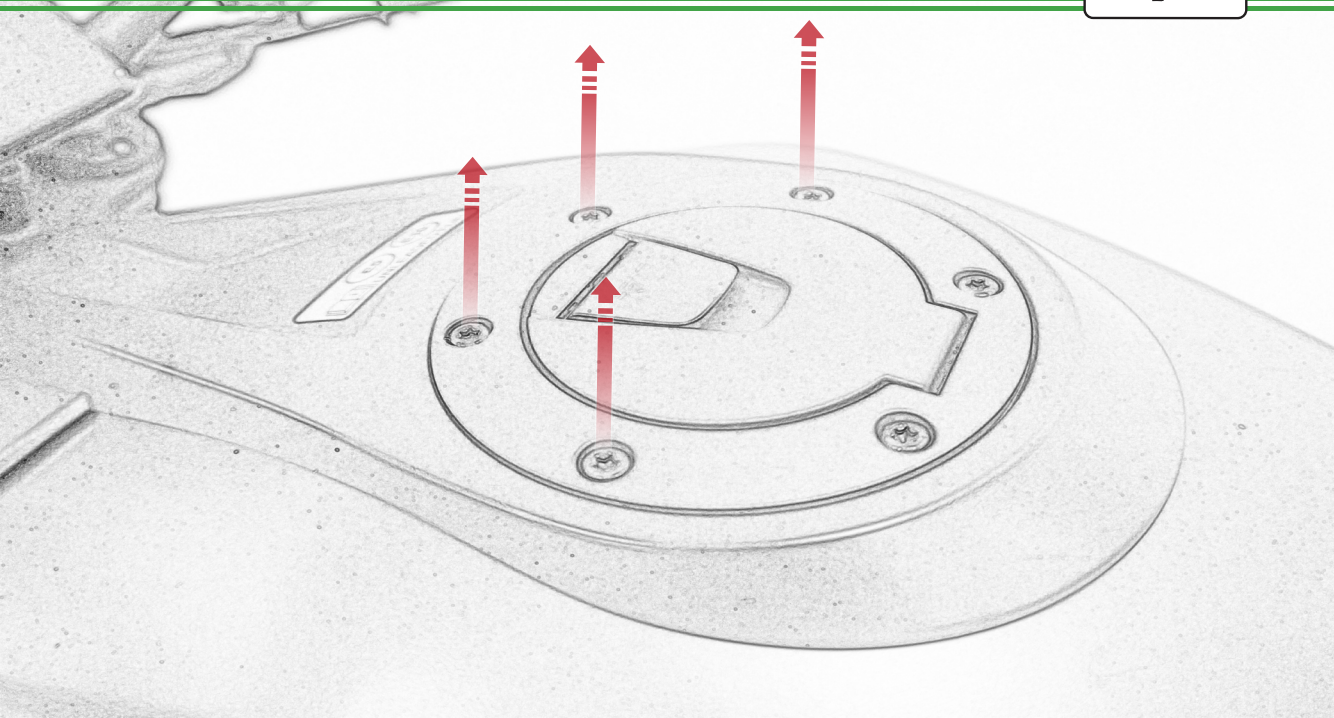

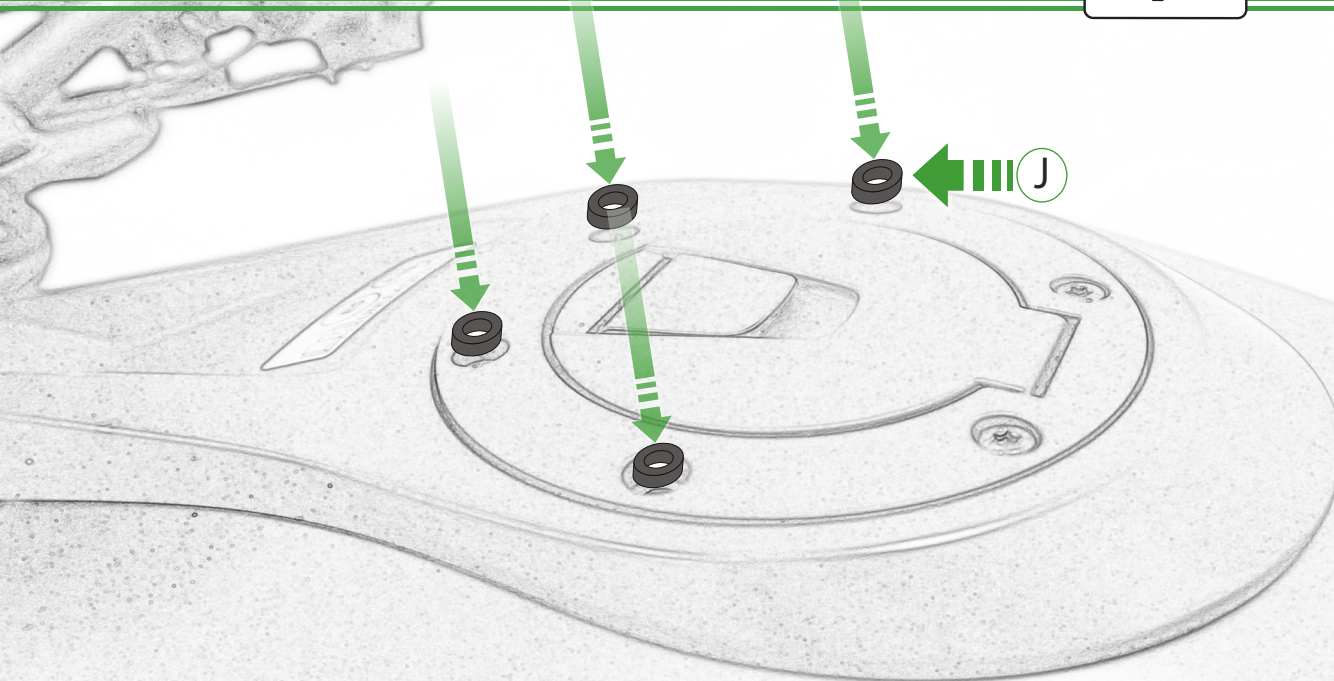

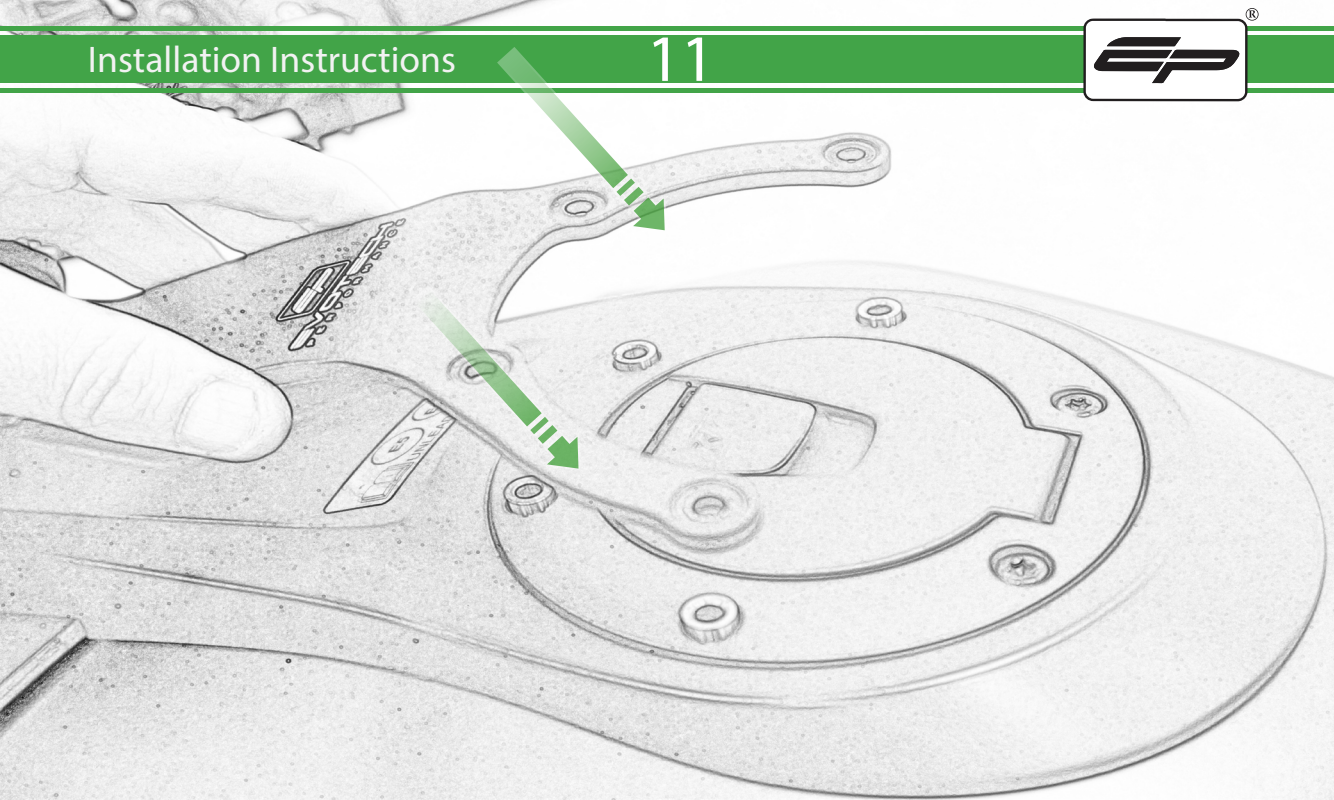

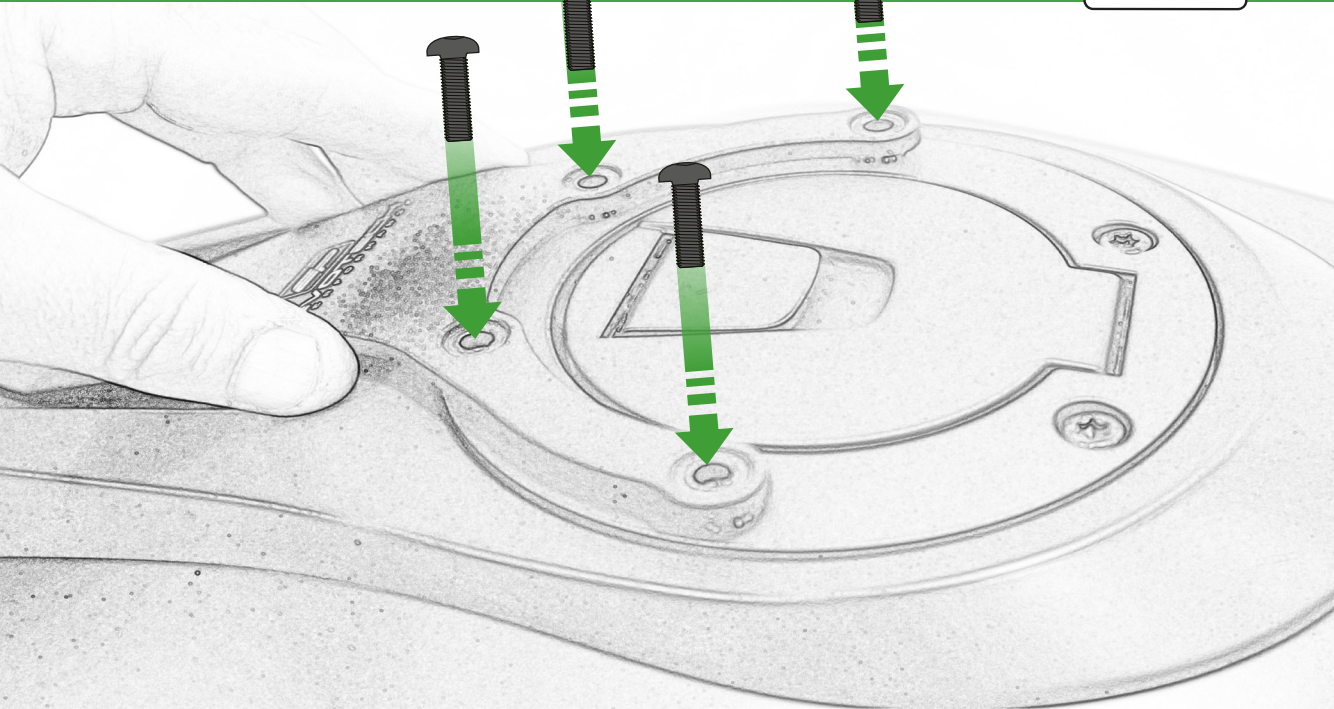



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com