



EVOTECH[®]
P E R F O R M A N C E


www.evotech-performance.com

Honda CBR500R Tom Tom Satnav Mount
Installation Instruction




- (A) 1 x Main Plate
- (B) 1 x Pivot Plate
- (C) 1 x Sub Mounting Bracket
- (D) 2 x M5 x 8mm Black Button Head Bolts
- (E) 2 x Locking Washer
- (F) 2 x M5 Black Washer
- (G) 2 x M5 x 12 Caphead Bolt
- (H) 4 x M4 x 12mm Black Button Head Bolts


EVOTECH
PERFORMANCE

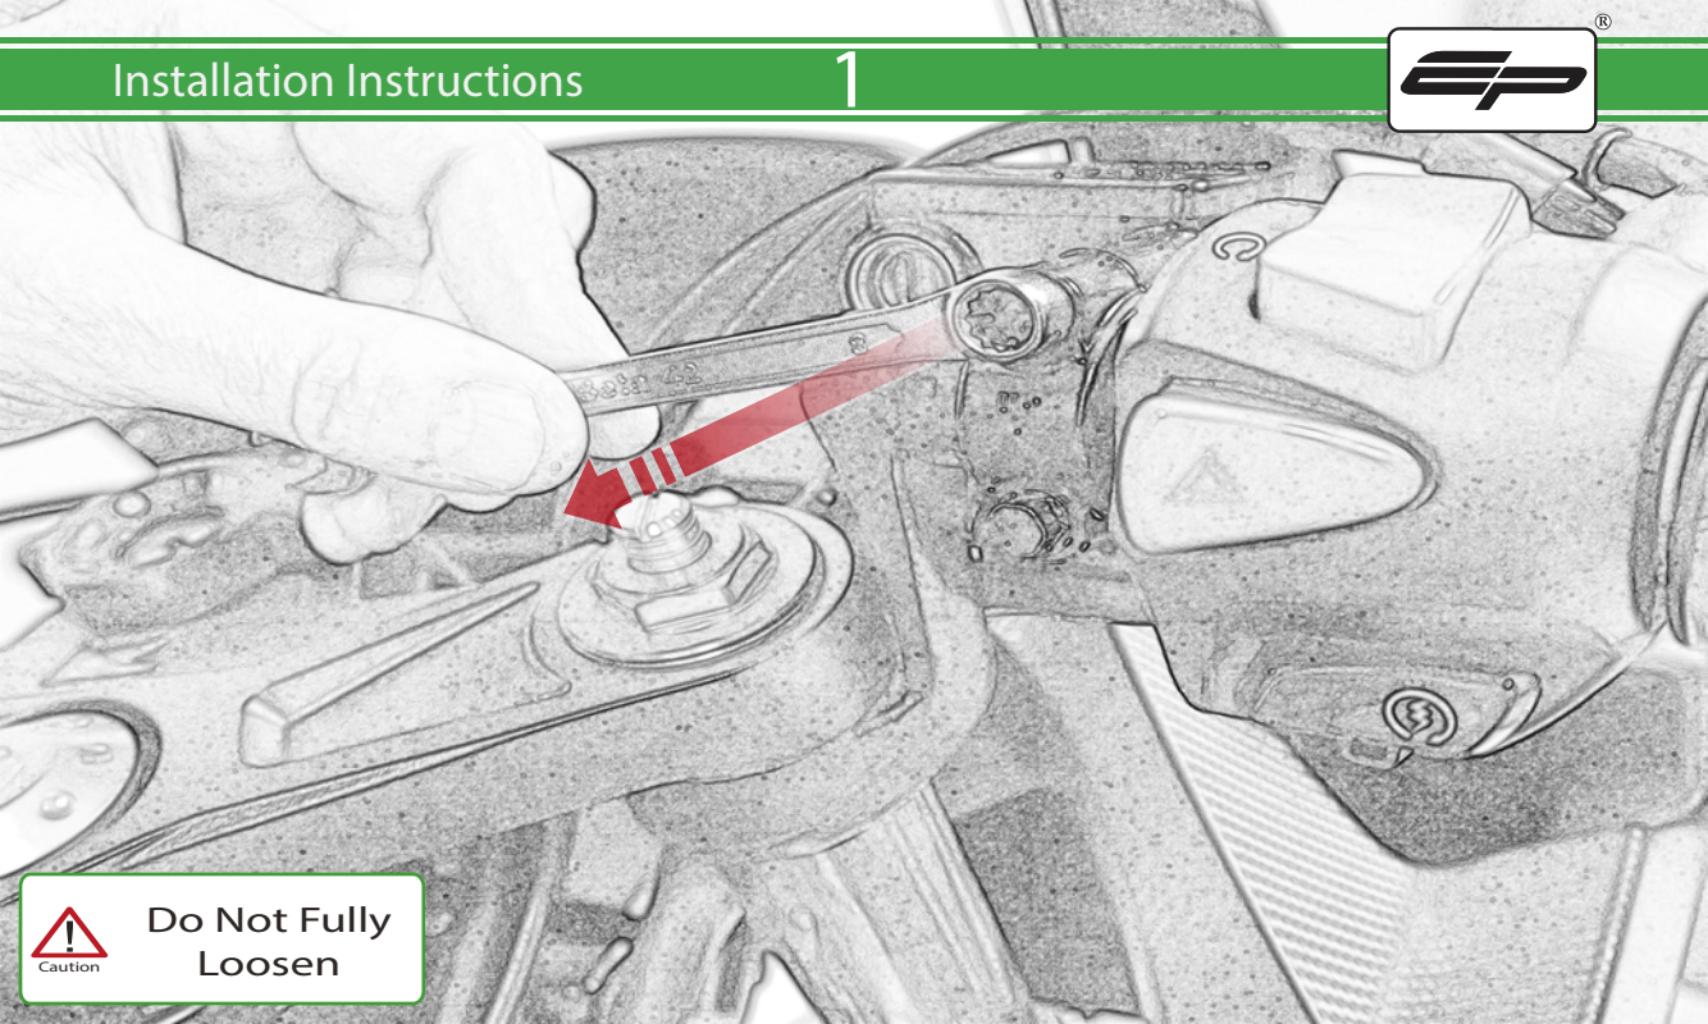

Caution
Do Not Fully
Loosen

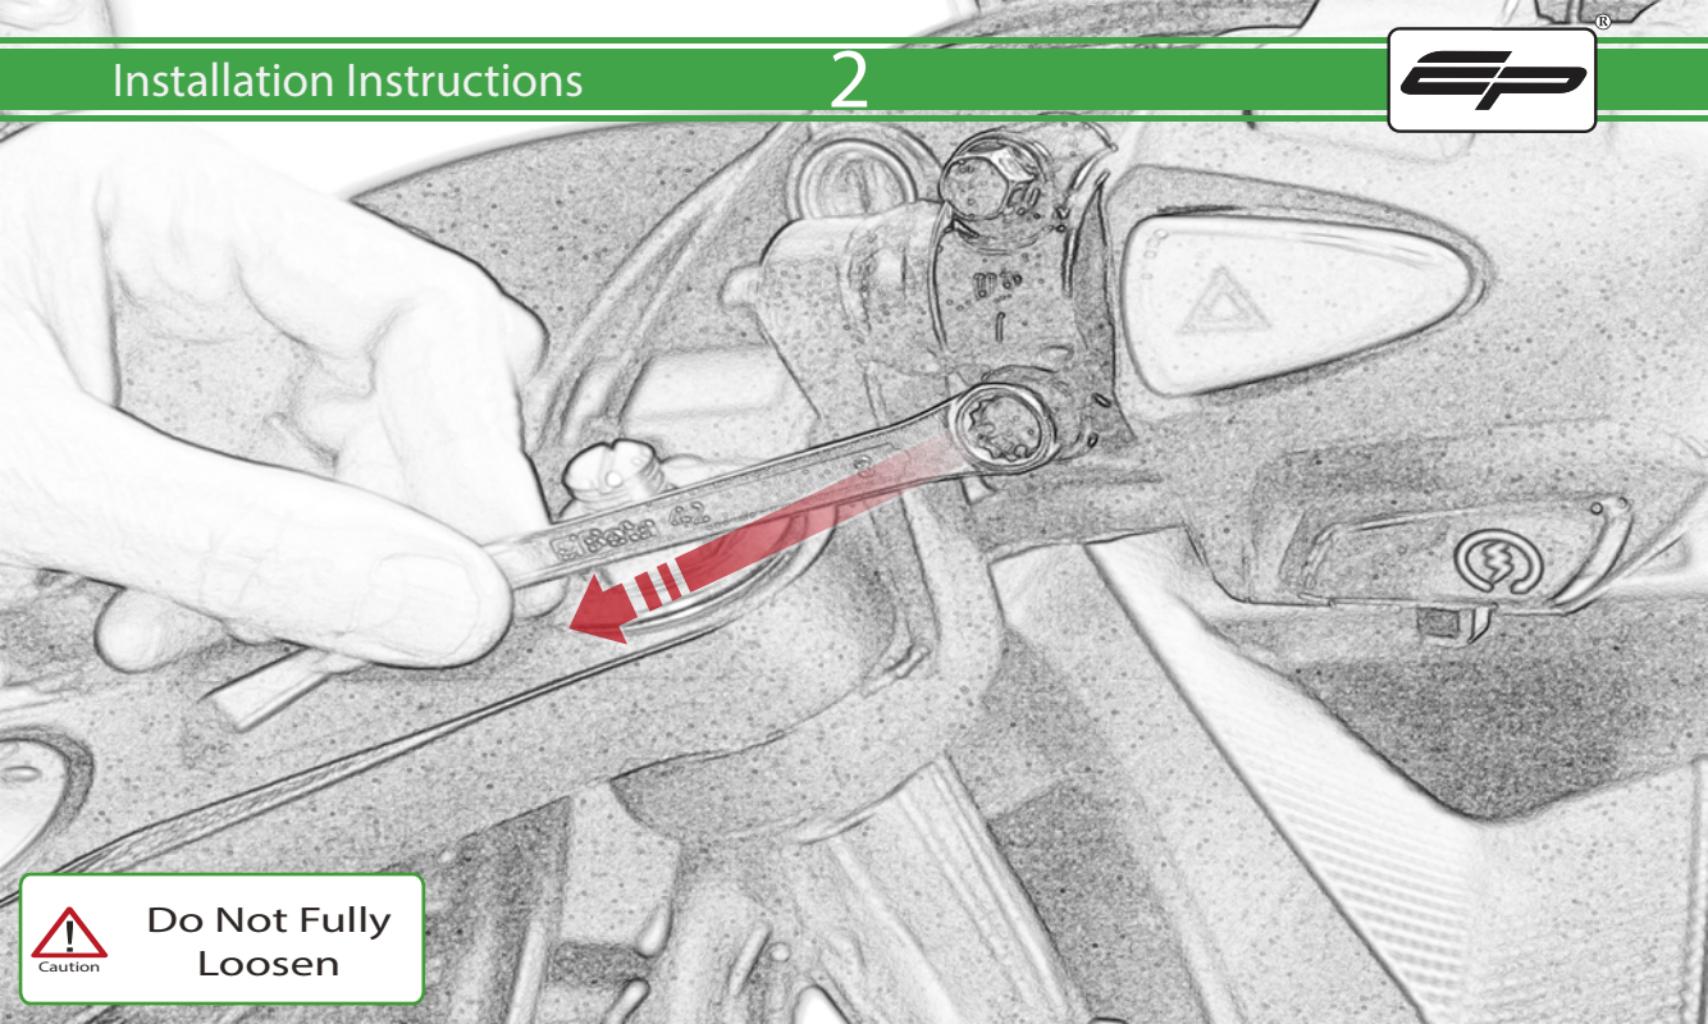



Caution
Do Not Fully
Loosen

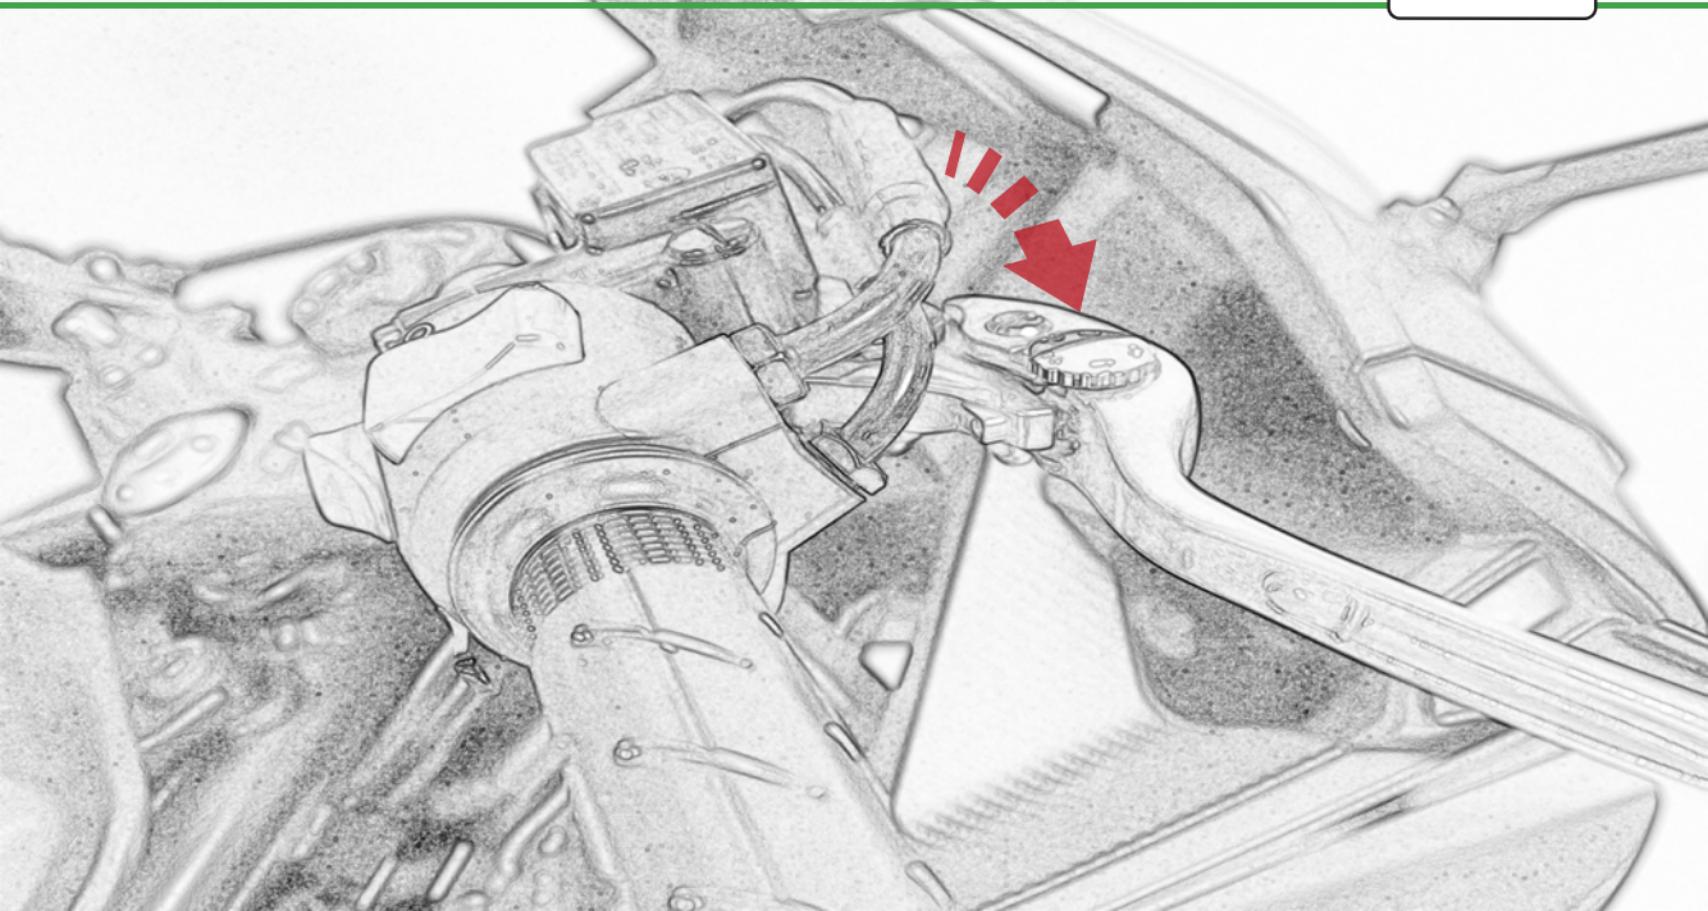

Installation Instructions


4

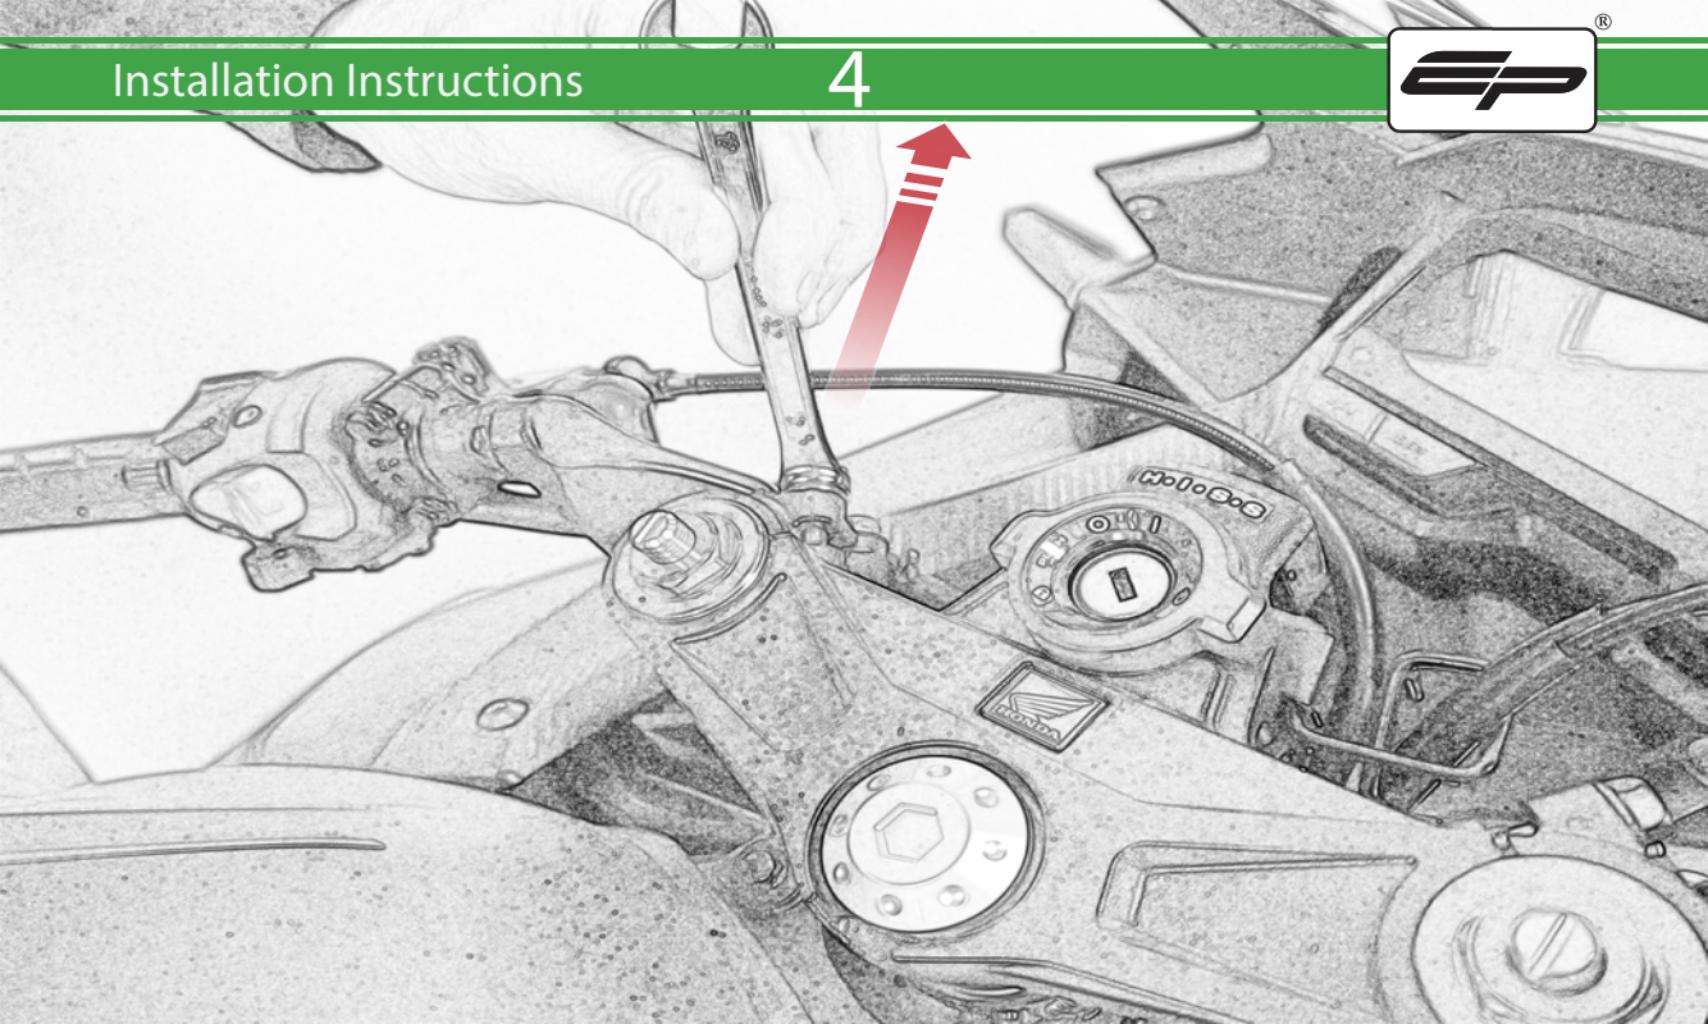


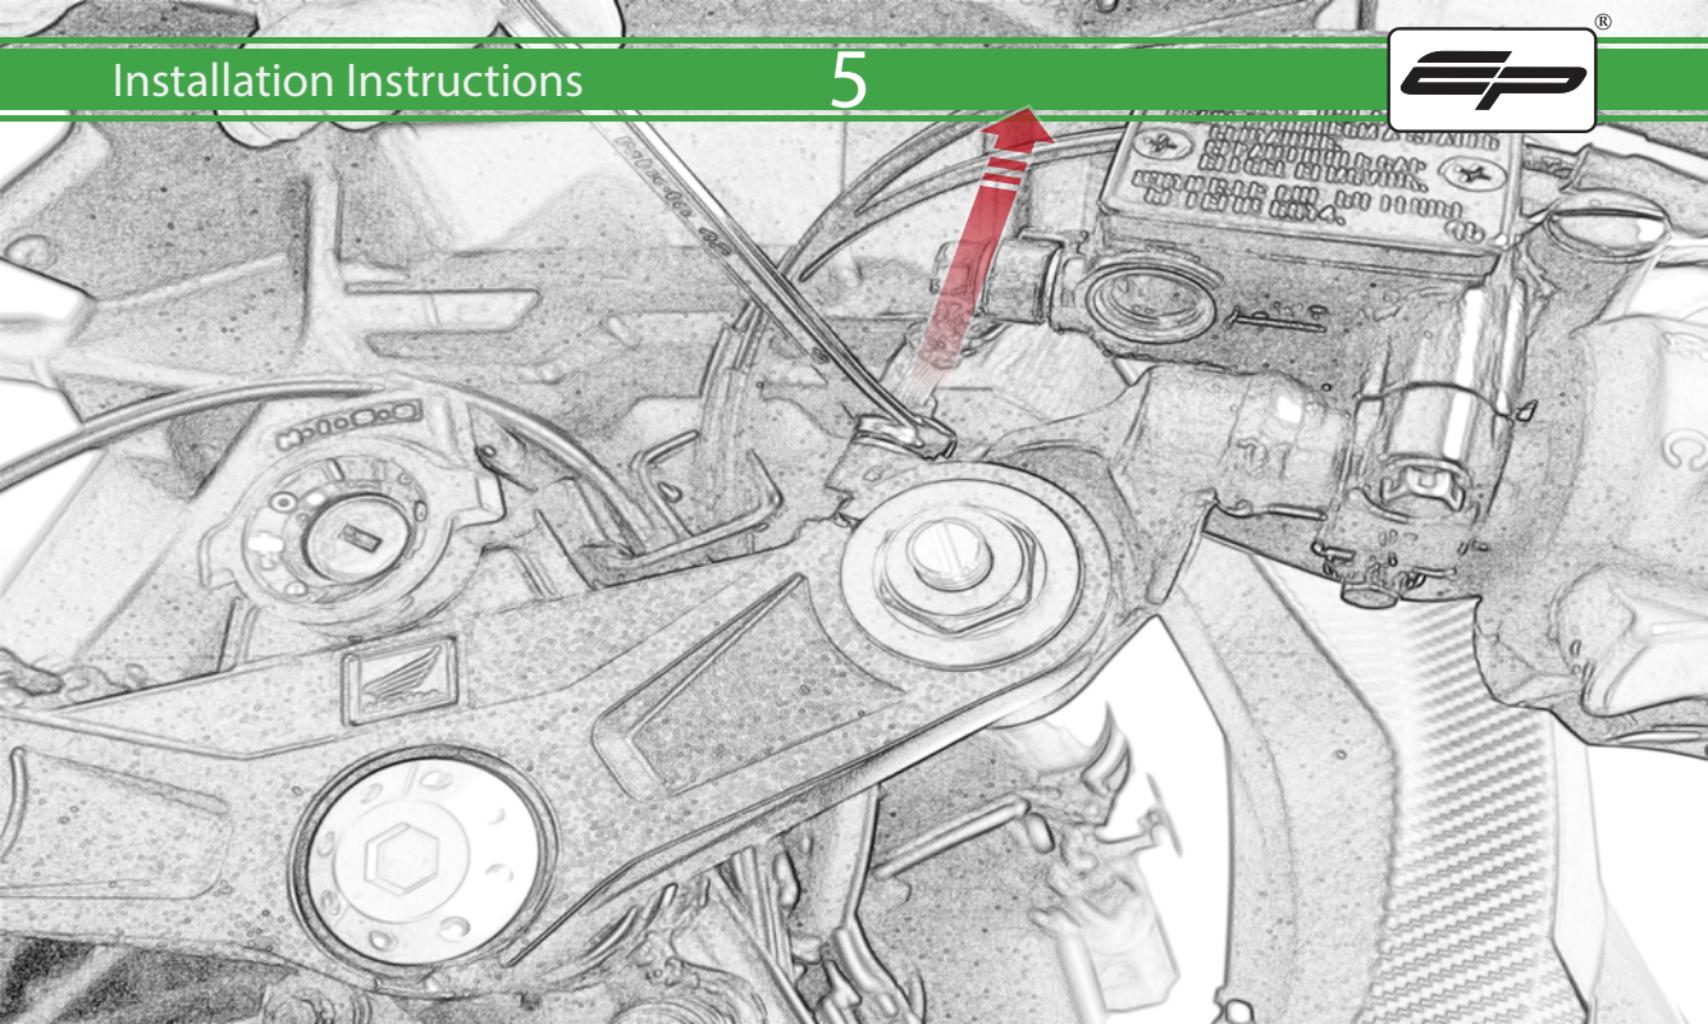



Installation Instructions


5

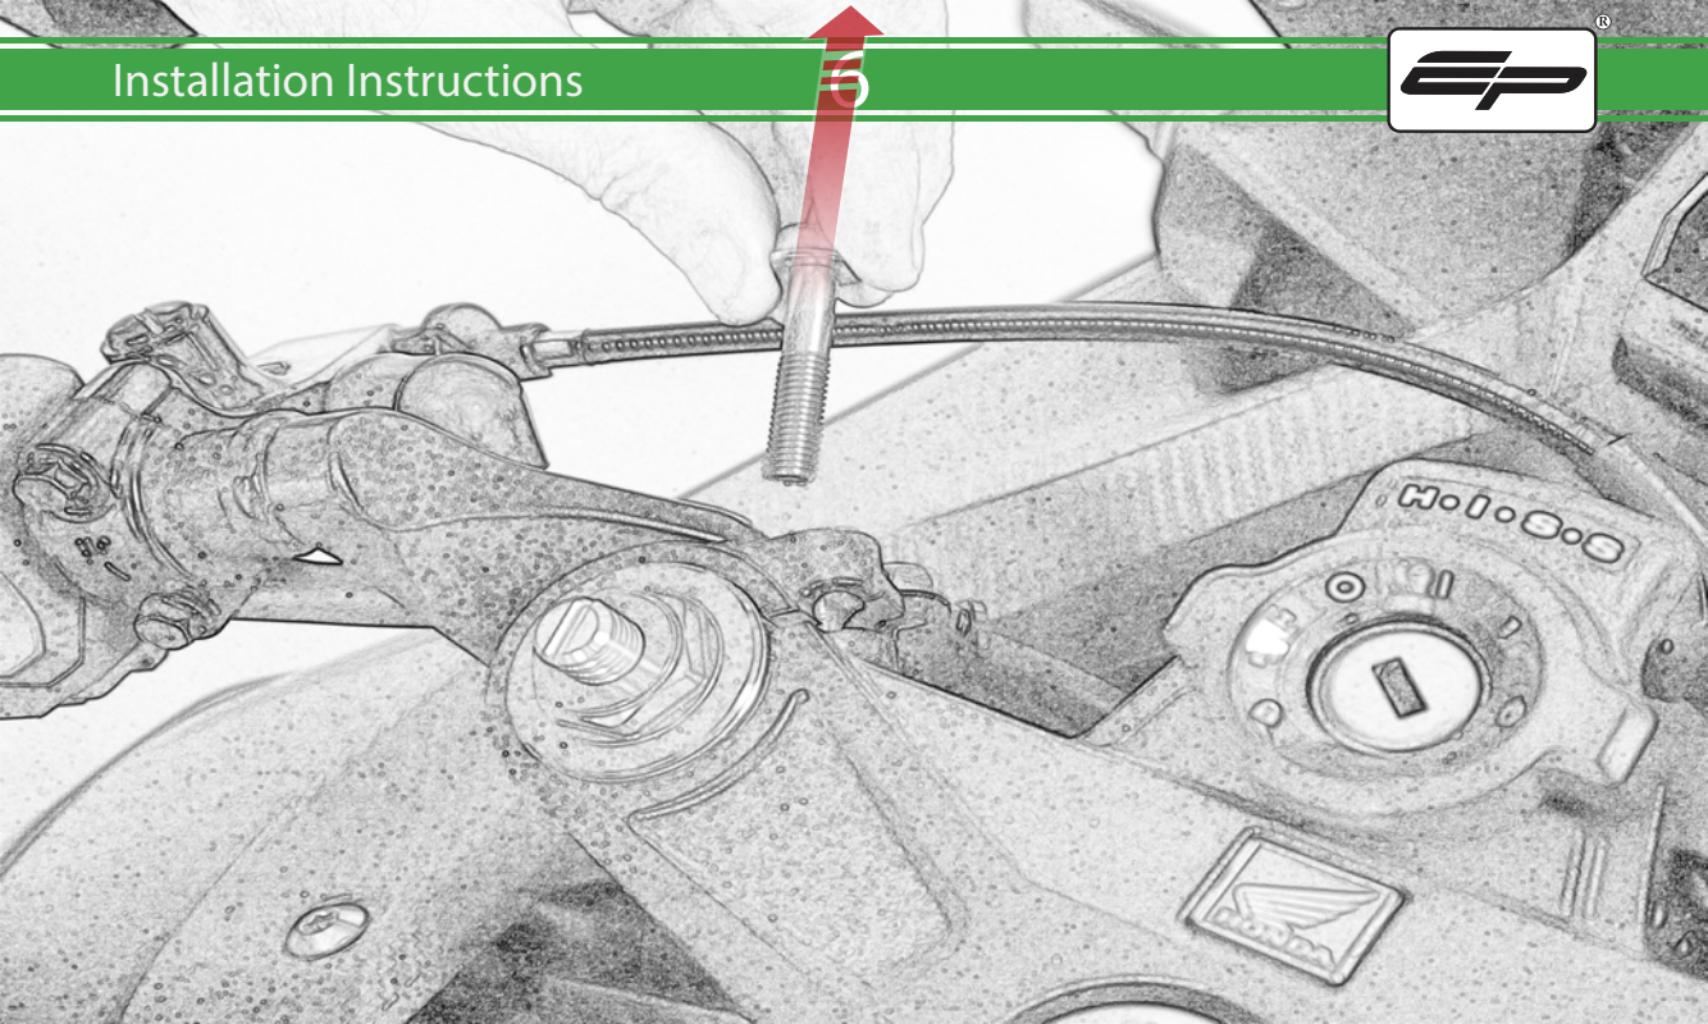

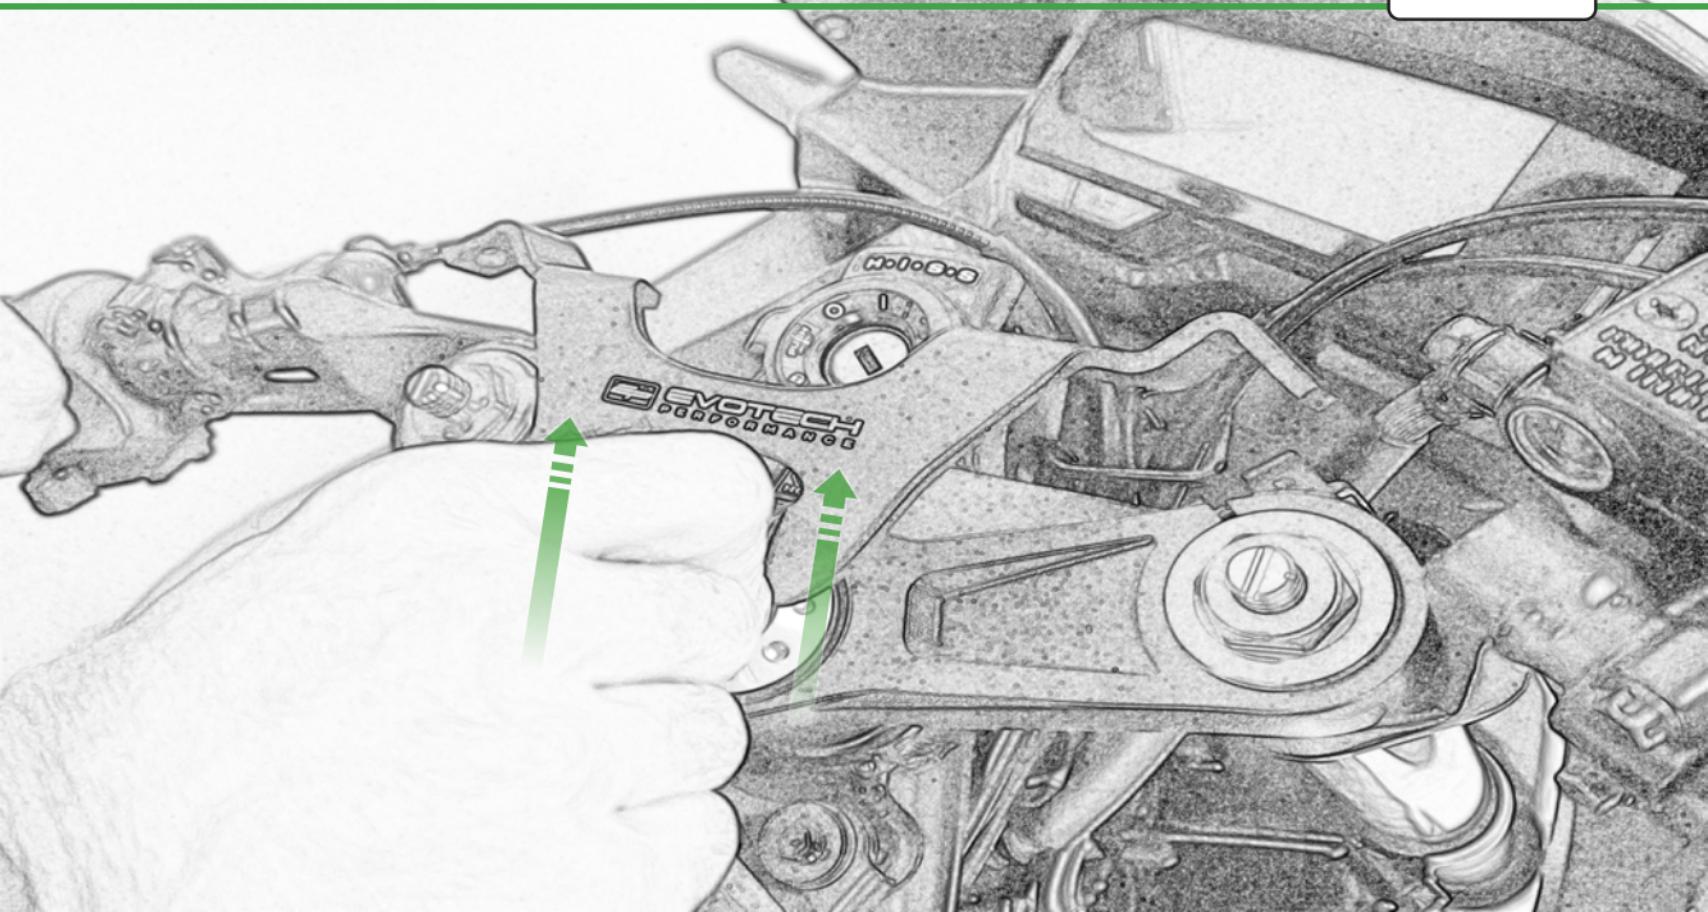

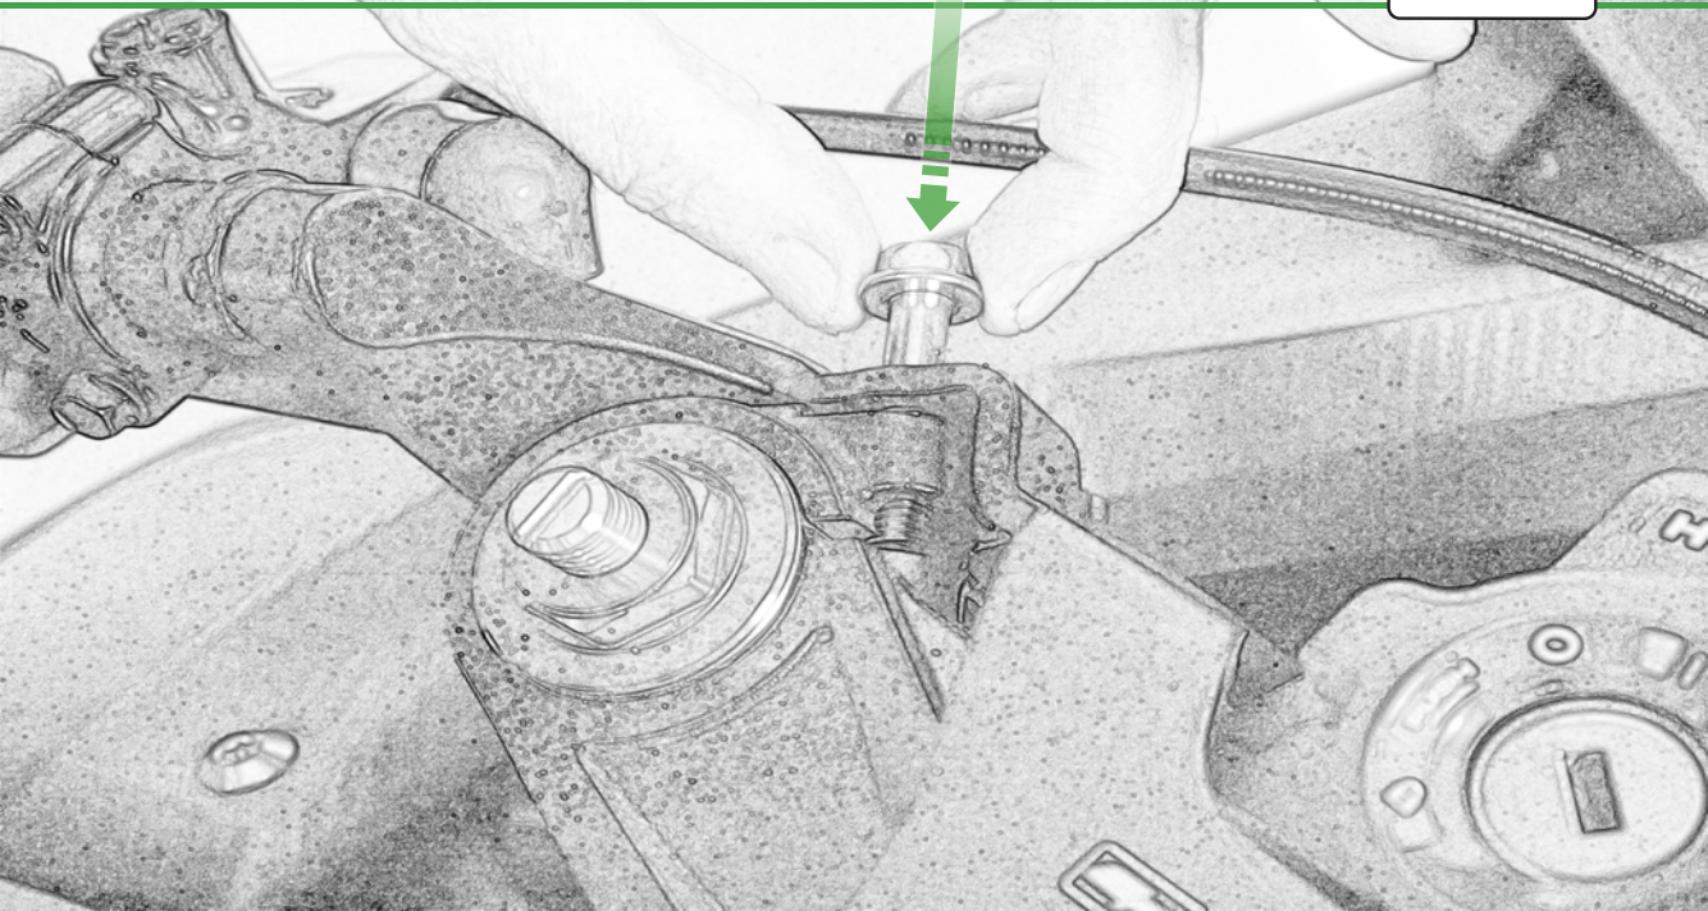

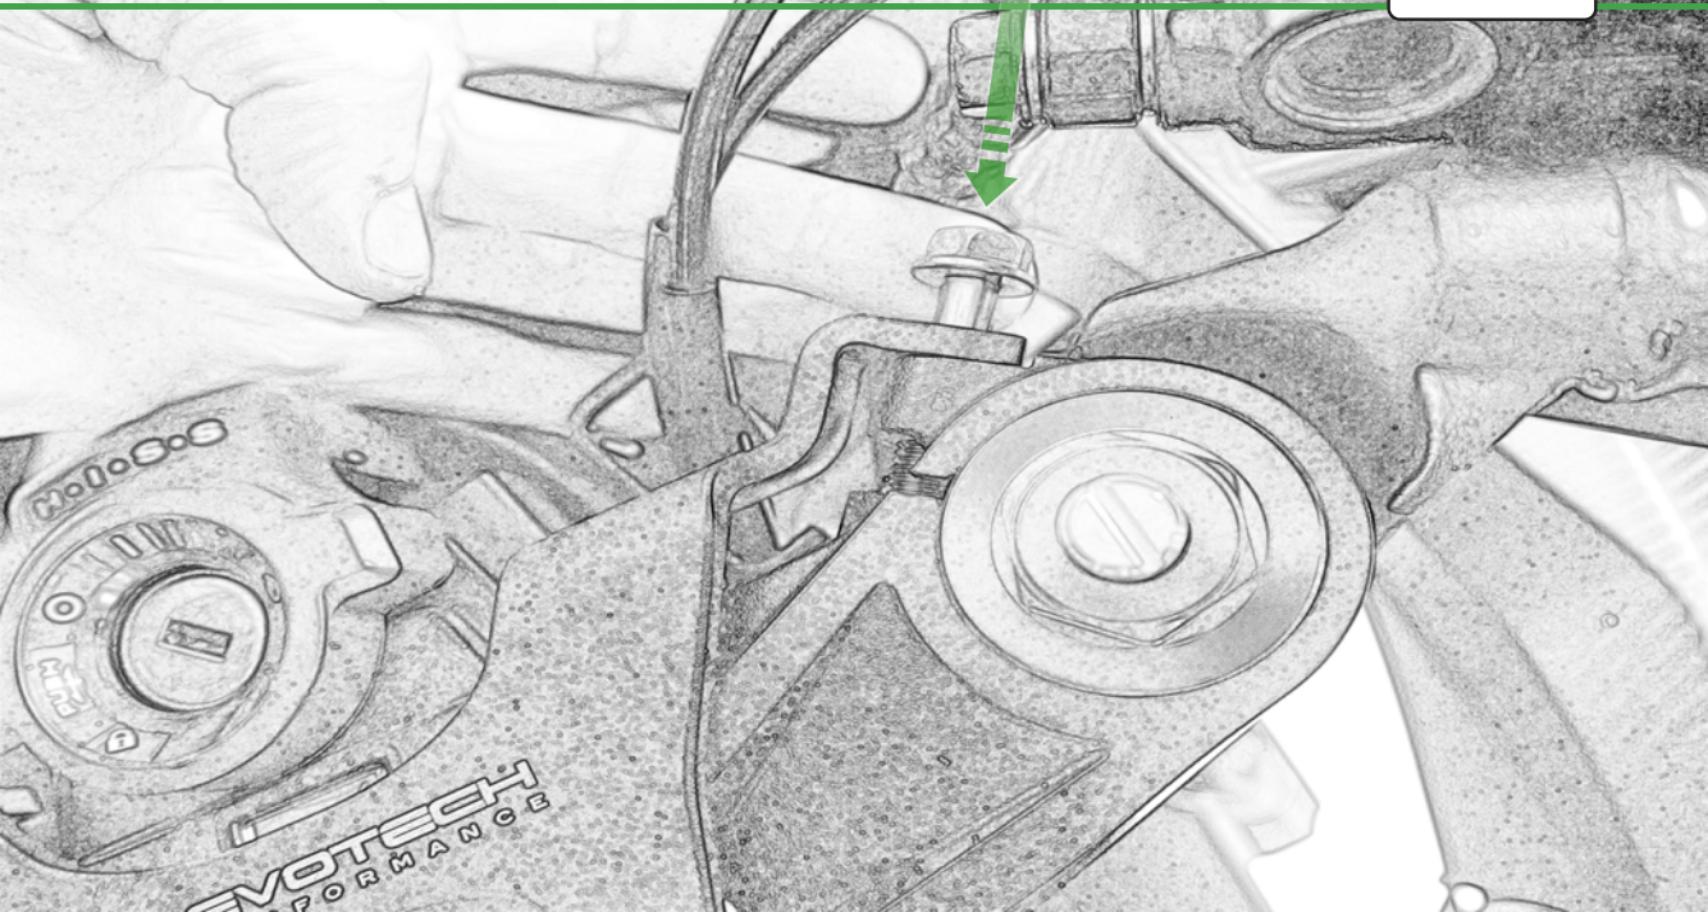

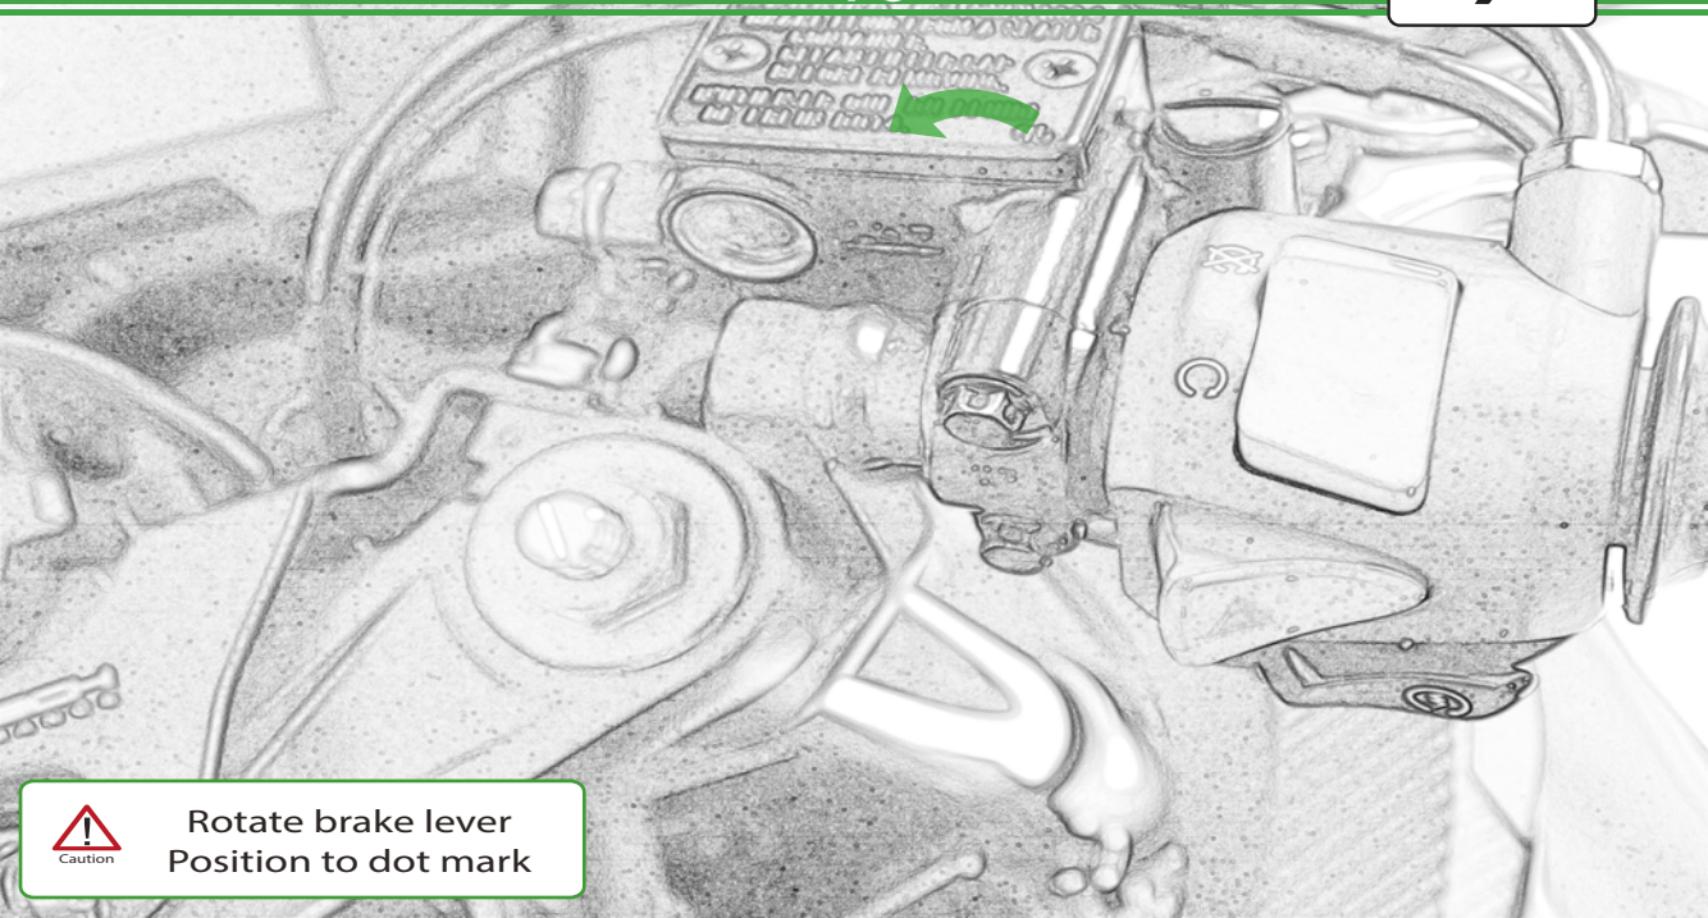


Caution
Rotate brake lever
Position to dot mark






B III →




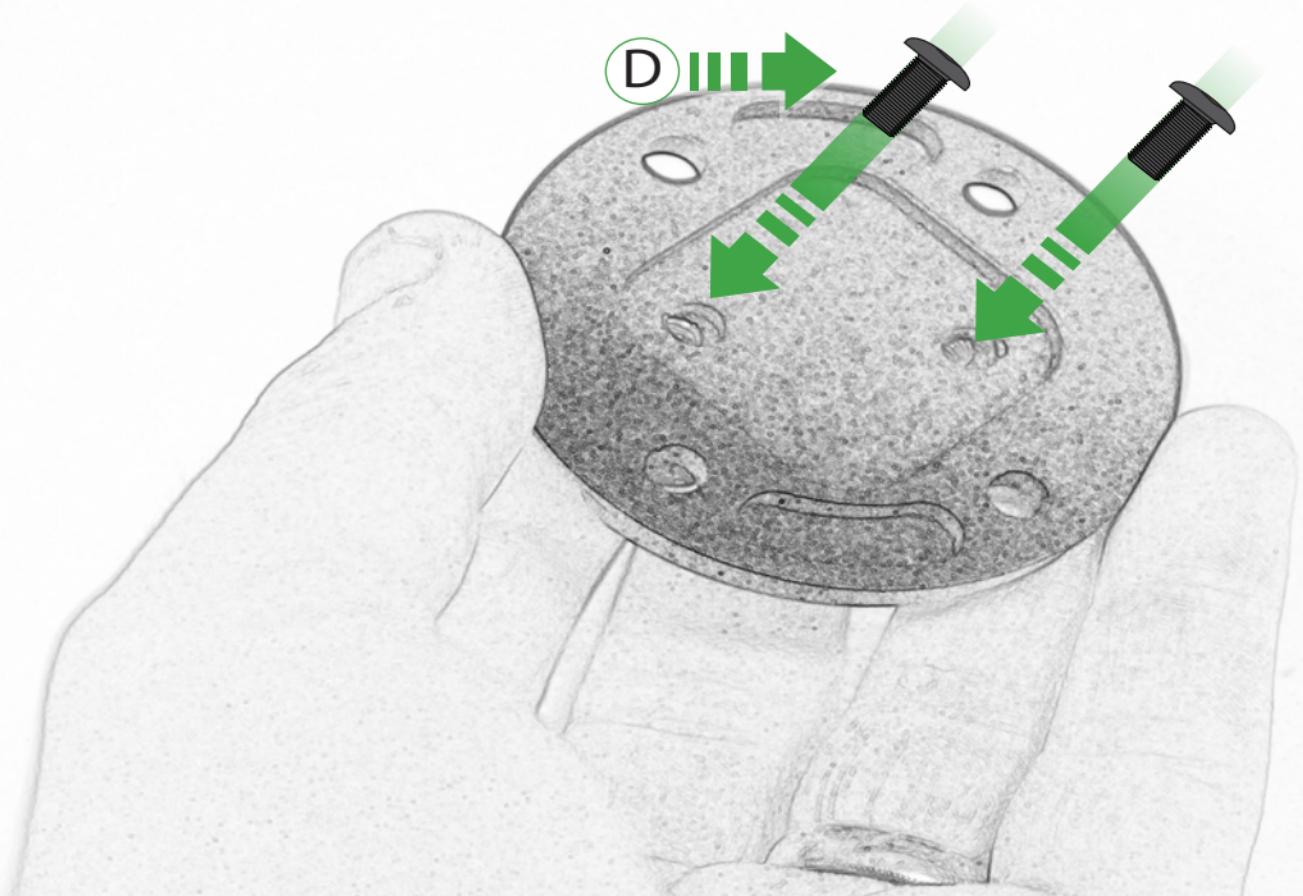


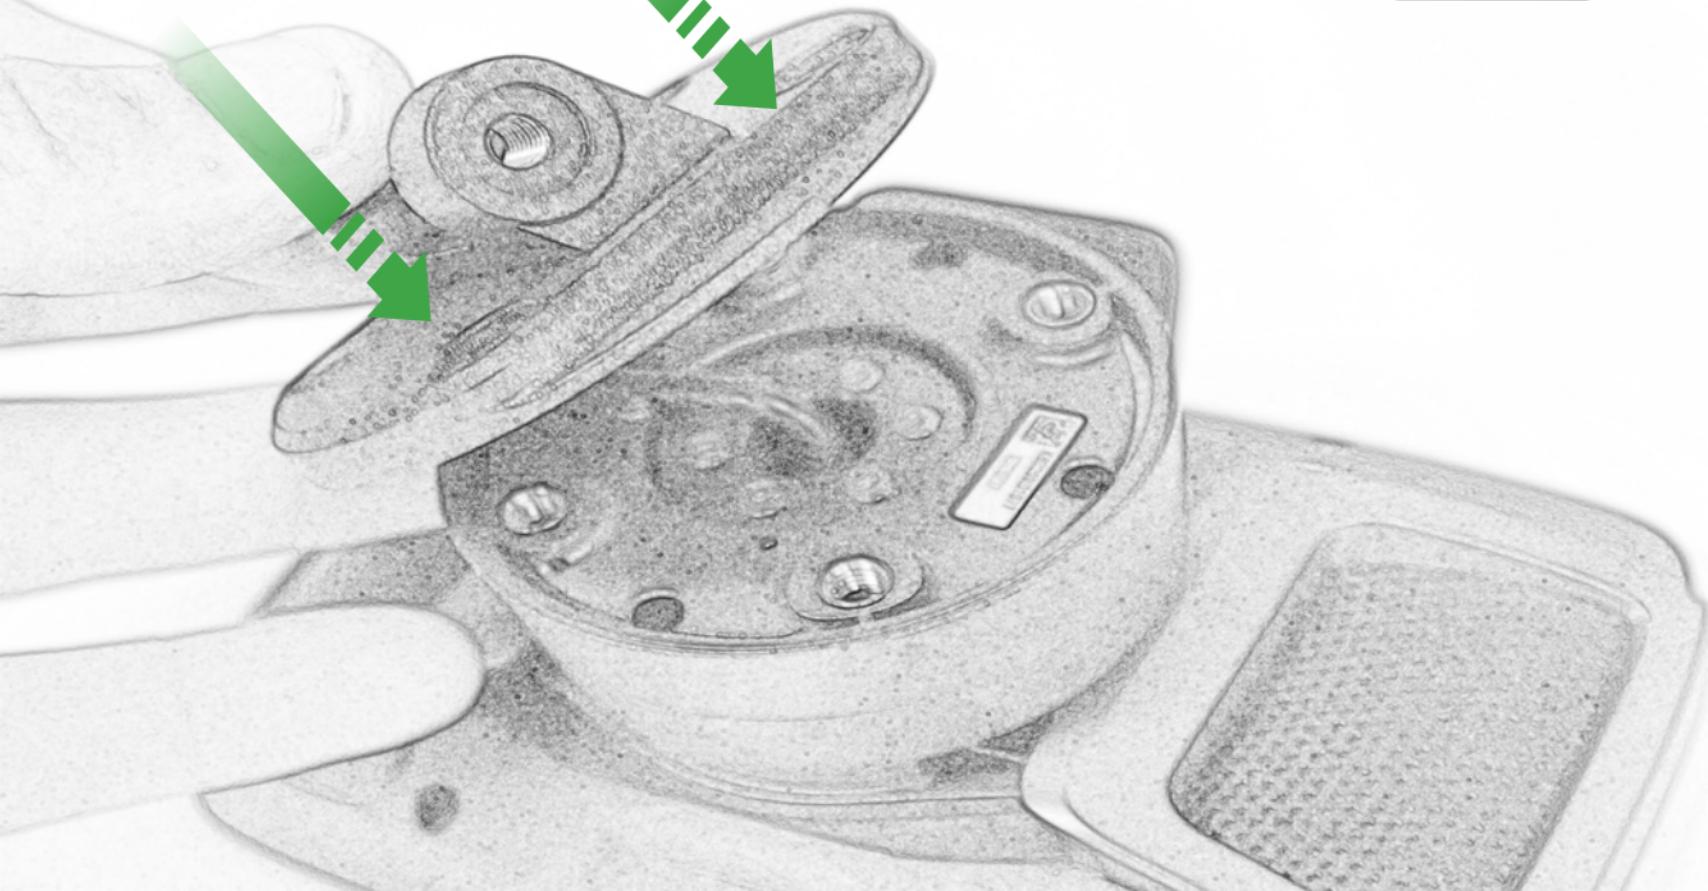


Installation Instructions


15

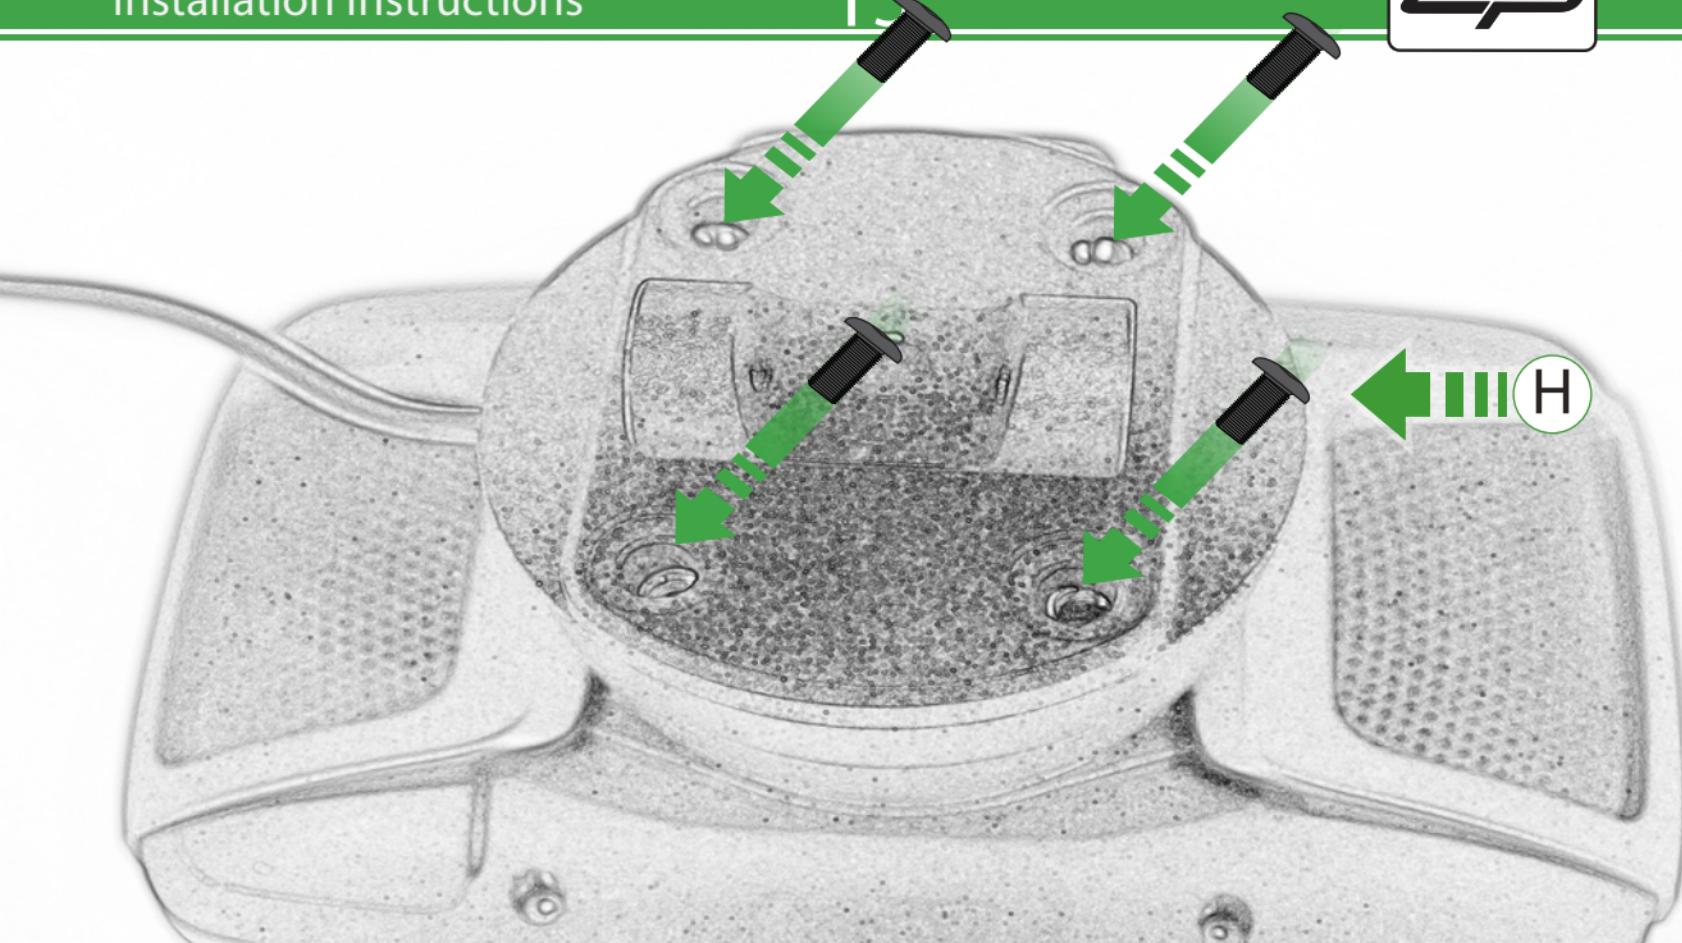

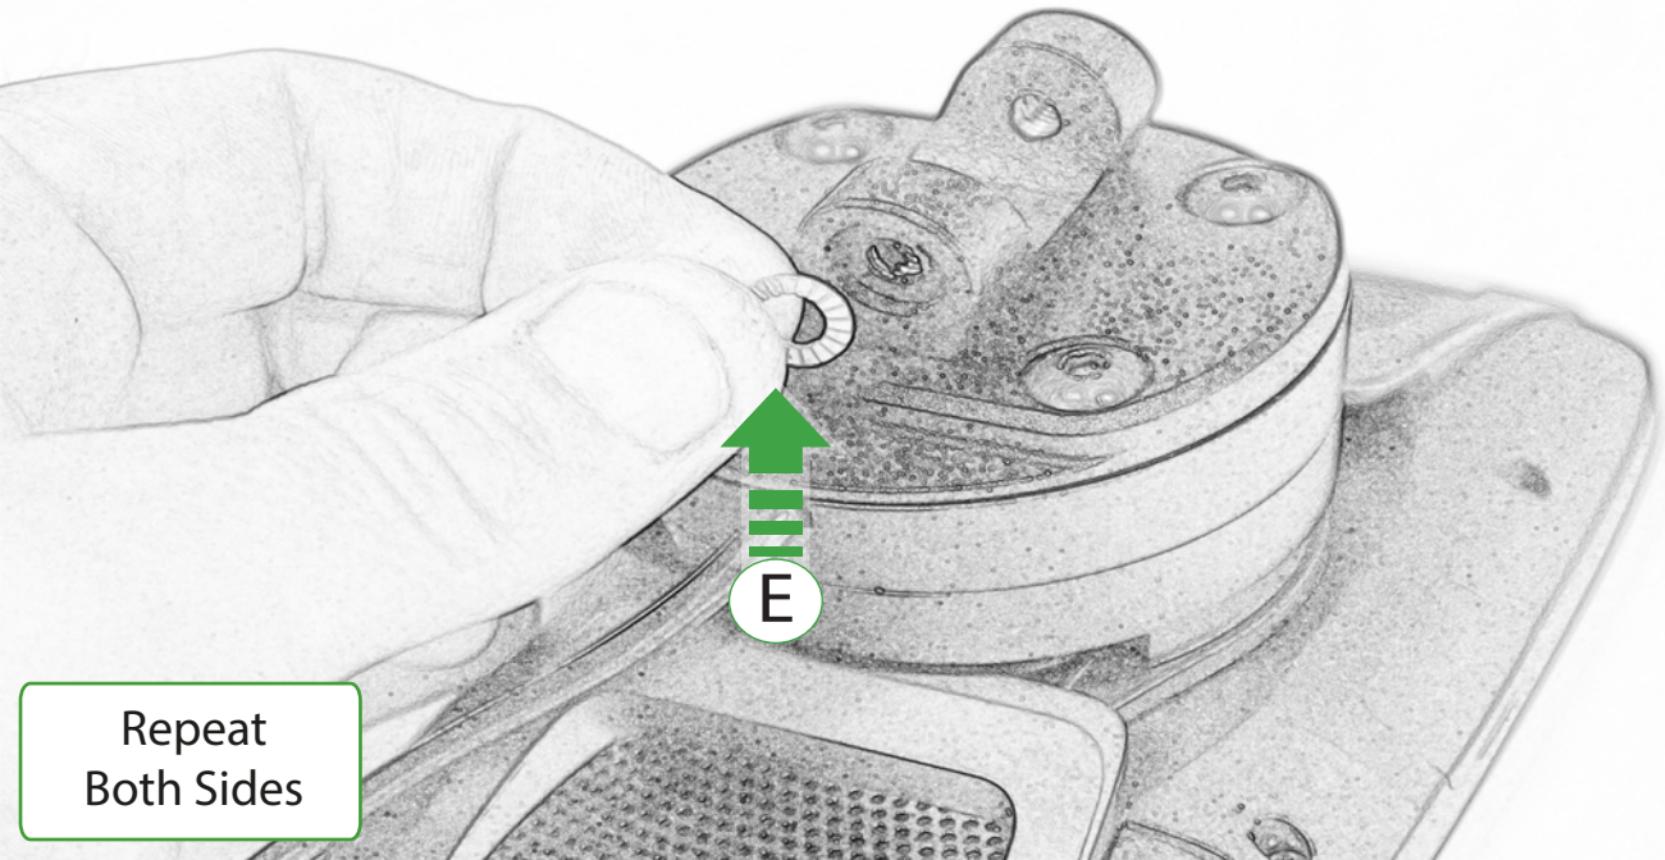

Repeat
Both Sides

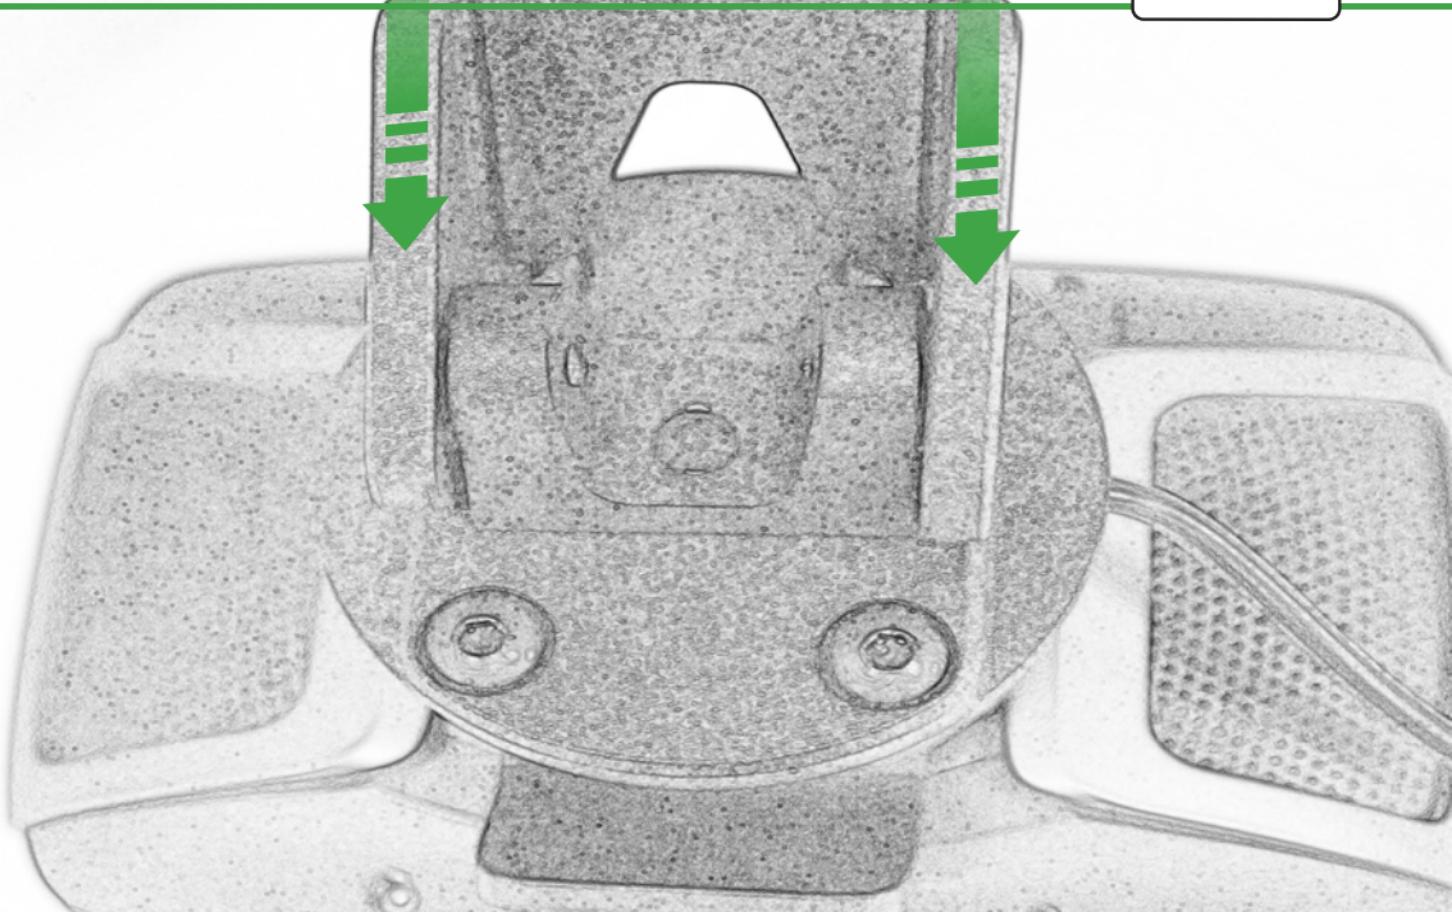

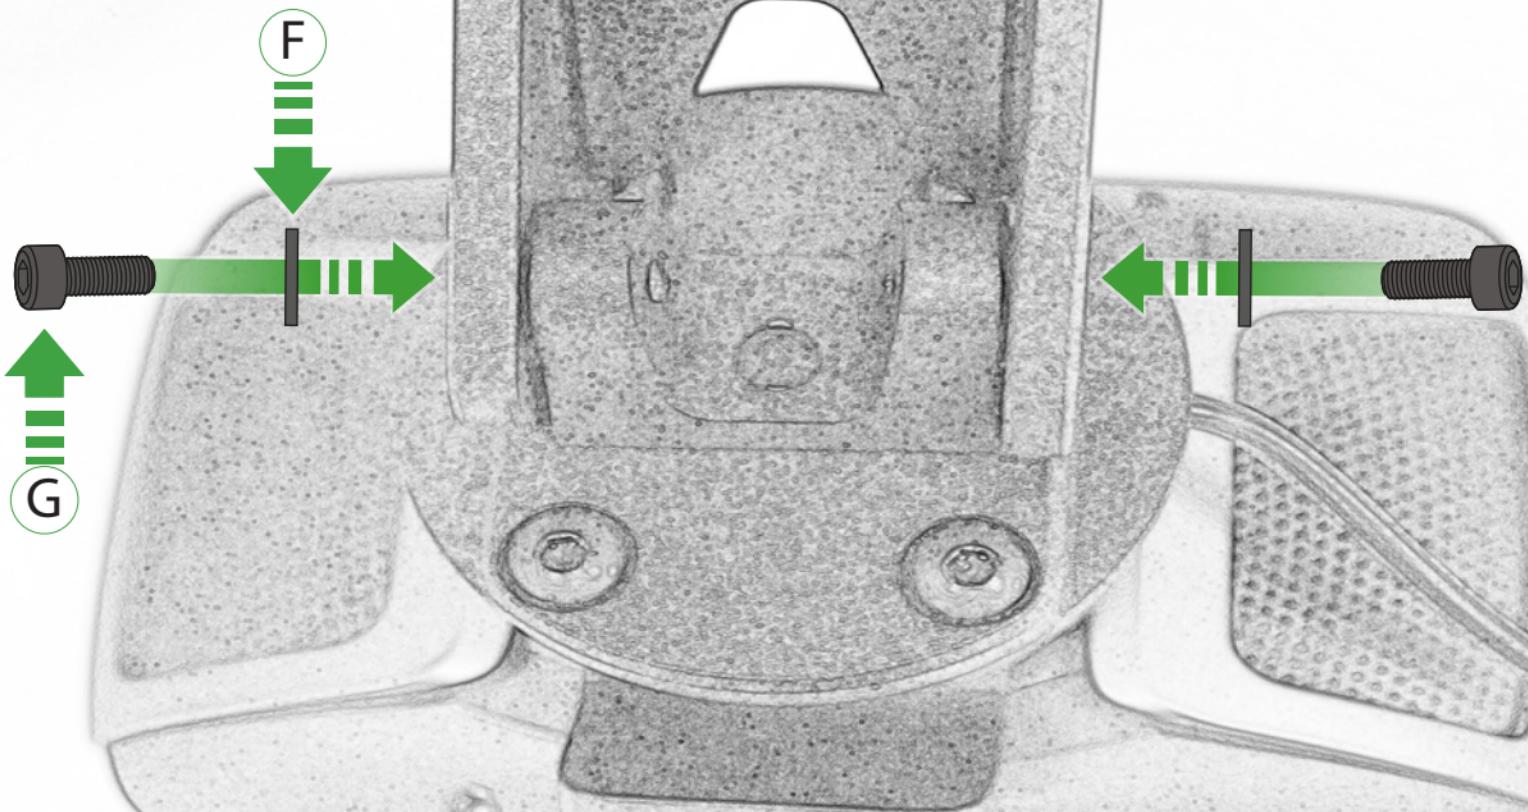



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

P E R F O R M A N C E



EVOTECH[®]
P E R F O R M A N C E

www.evotech-performance.com