

www.evotech-performance.com
Triumph Street Triple
Quadlock Sat Nav Mount

## Installation Instructions



## Kit Contents PRN014568-015080

A 1 x Main Plate

L 2 x M5 Black Washer

(B) 1 x Pivot Plate


- M 2 x M4 x 5mm Black Button Head Bolts
- © 1 x Quad Lock Sub Bracket
- ① 1 x Quad Lock Mounting Bracket
- (E) 2 x M5 x 8mm Black Button Head Bolts
- F 2 x P-clips (No.1)
- © 2 x P-clips (No.2)
- H 2 x P-clips (No.3)
- ① 2 x P-clips (No.4)
- ① 2 x Lobe Screw
- **(K)** 2 x Locking Washer

Sub Kit

- N 2 x M8 x 45mm Bolt
- © 2 x Spacer






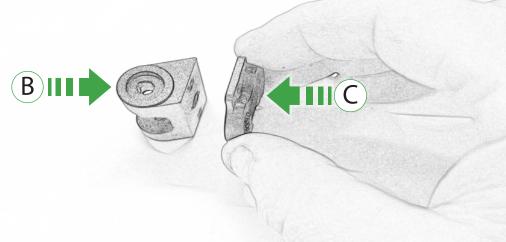






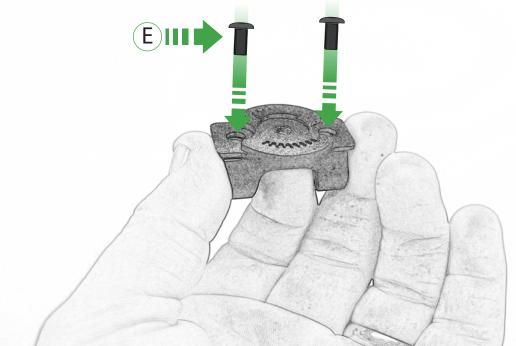




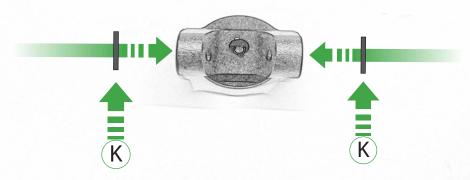






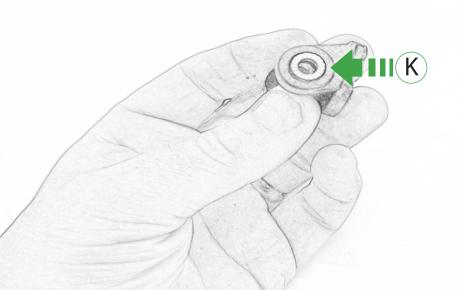


2




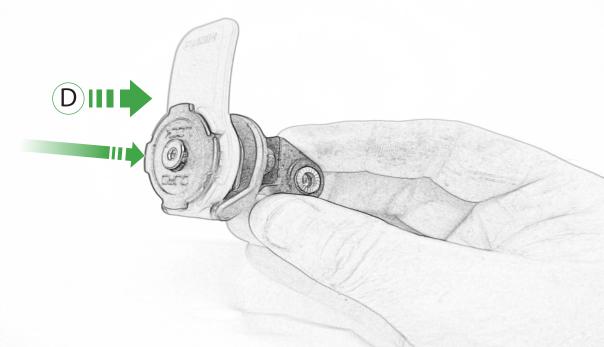








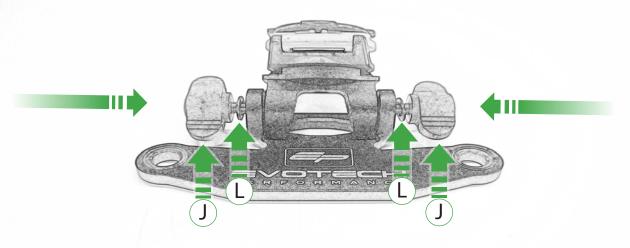


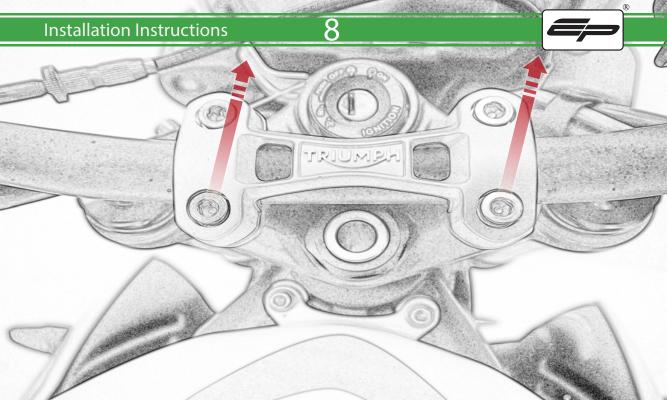


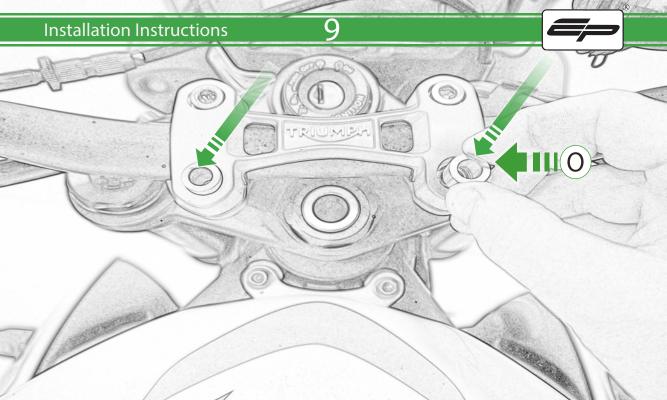

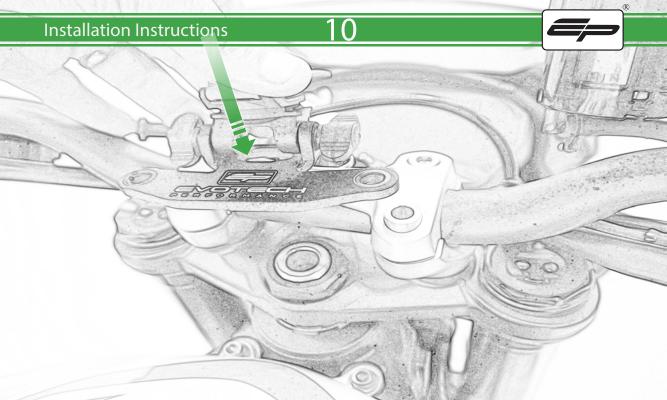

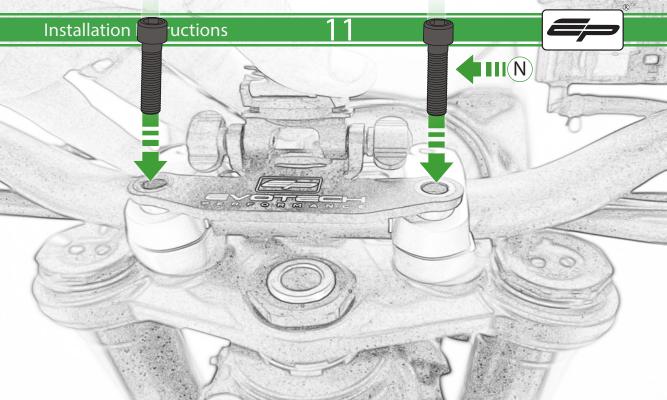

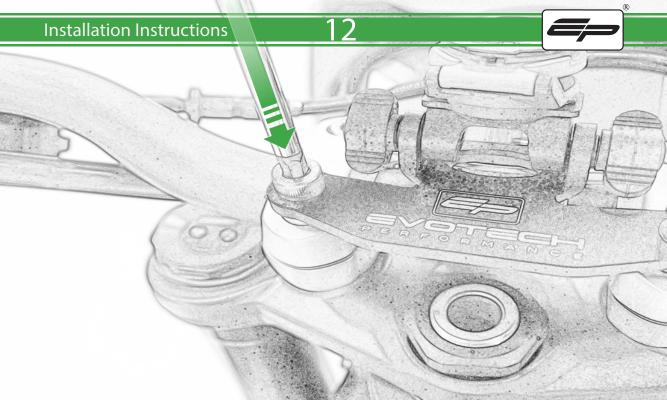

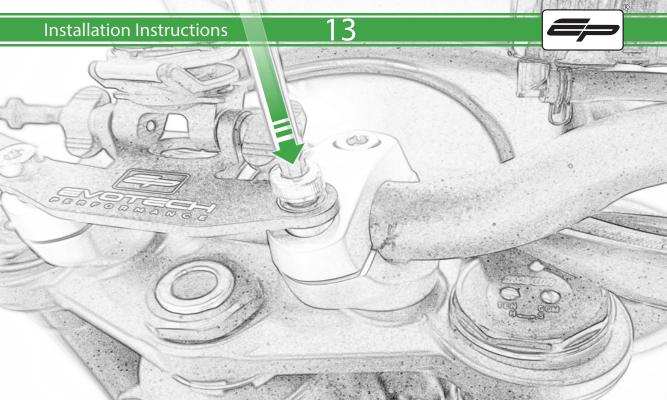





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





www.evotech-performance.com