

www.evotech-performance.com
KTM 1290 Super Duke Quad Lock Sat Nav
Installation Instructions

Installation Instructions




Kit Contents PRN014568-015584

- (A) 1 x Pivot Plate
- (B) 1 x Main Bracket
- © 1 x Quad Lock Plate
- ① 1 x Rubber Pad
- **E** 1 x Quad Lock Mount
- F 2 x M5 x 8mm Black Button Head Bolt
- © 2 x M5 x 12 Caphead Bolt
- (H) 2 x Nord Lock Washers
- 1 4 x M5 x 40mm Black Button Head Bolts
- J 4 x Spacers





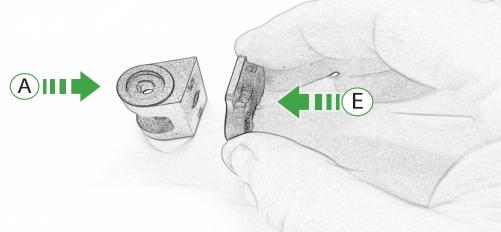














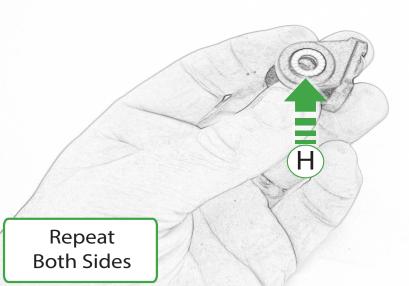






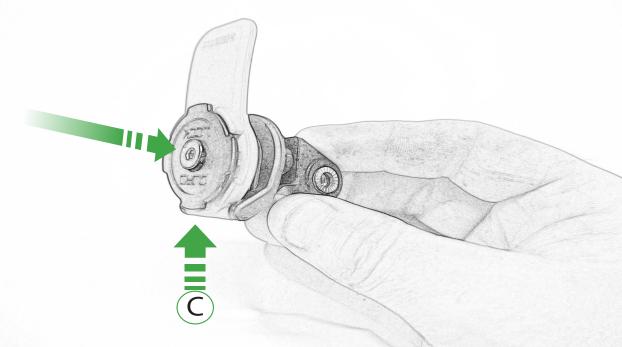

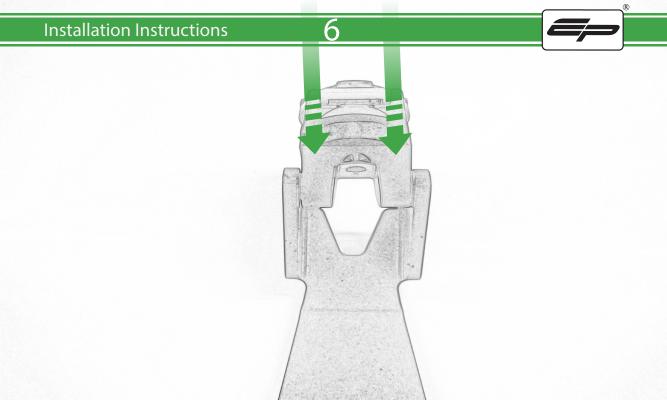







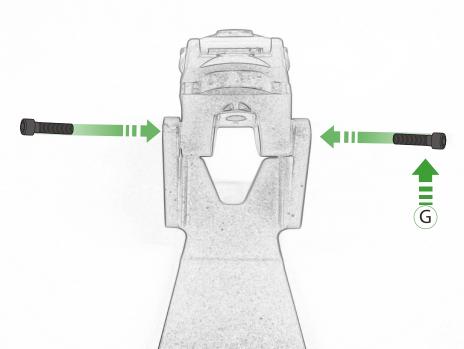








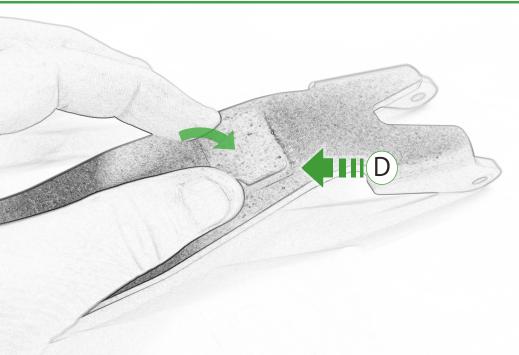

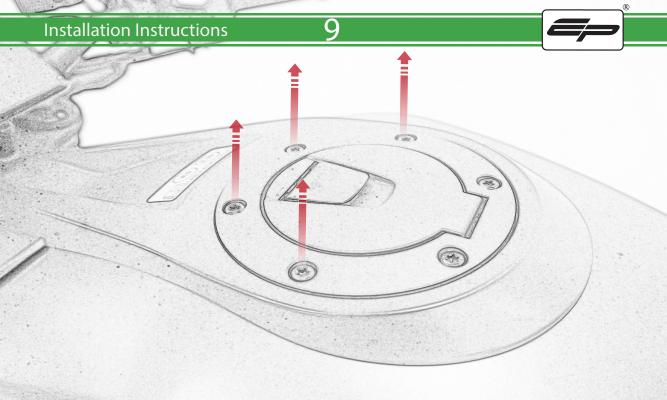

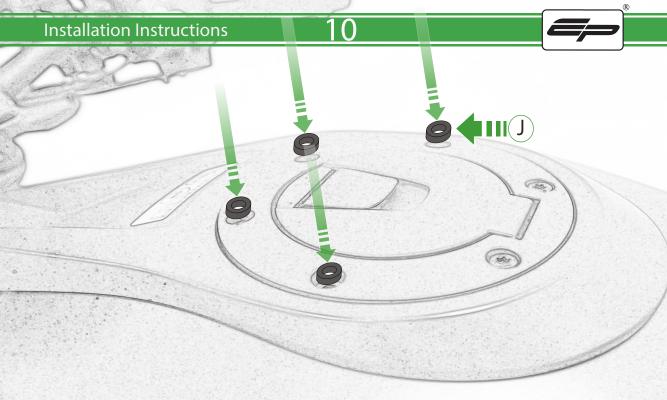

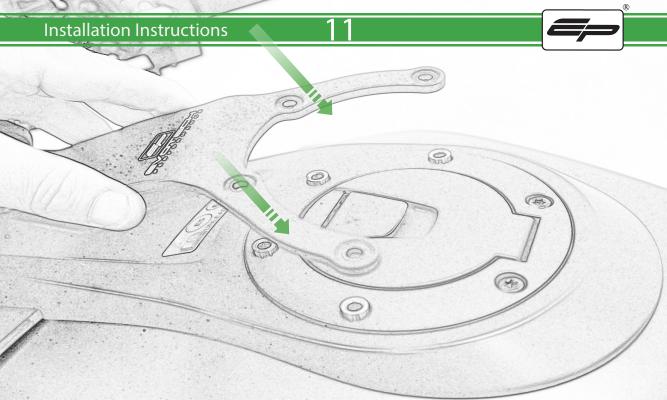

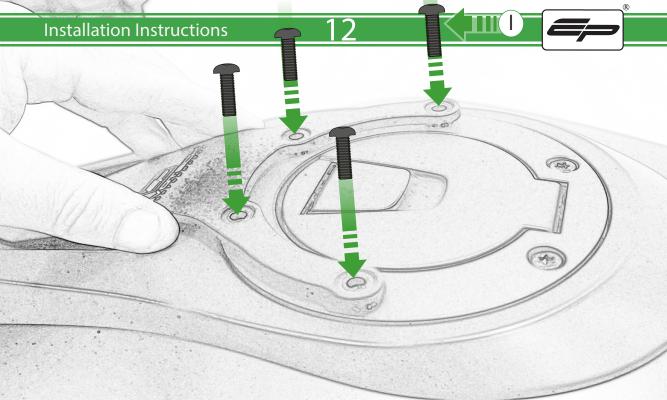





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





www.evotech-performance.com