

www.evotech-performance.com
Triumph Speed Triple RR
Quad Lock Sat Nav Mount

Installation Instructions




R


- A 1 x Main Plate
- B 1 x Pivot Plate
- © 1 x Quad Lock Sub Bracket
- ① 1 x Quad Lock Mounting Bracket
- **E** 2 x M5 x 8mm Black Button Head Bolts
- F 2 x P-clips (No.1)
- © 2 x P-clips (No.2)
- H 2 x P-clips (No.3)
- 1 2 x P-clips (No.4)
- ① 2 x Lobe Screw
- K 2 x Locking Washer

- L 2 x M5 Black Washer
- M 2 x M4 x 5mm Black Button Head Bolts

Sub Kit

- (AA) 1 x Pad
- BB 2 x M6 x 35 Cap Head
- © 2 x M6 x 12mm Black Button Head

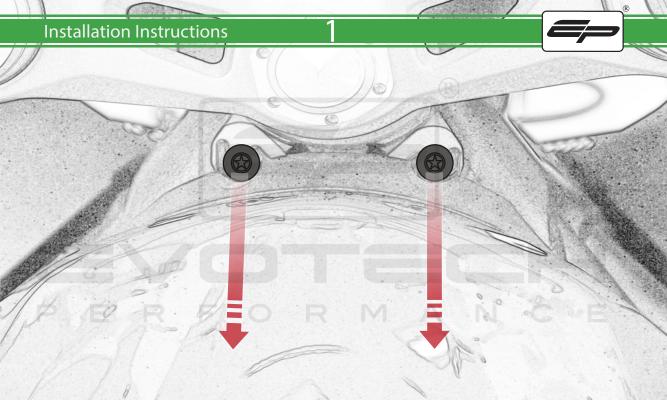


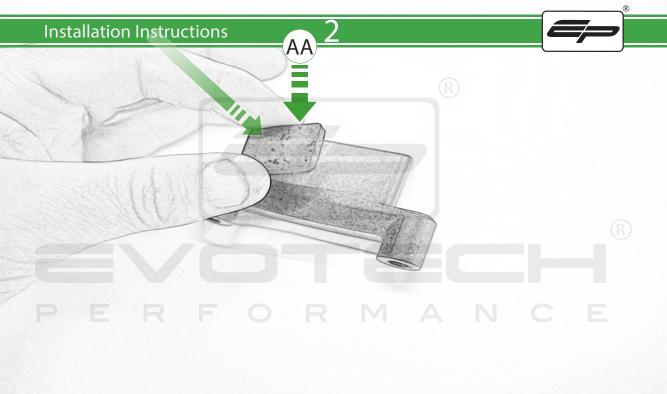



3





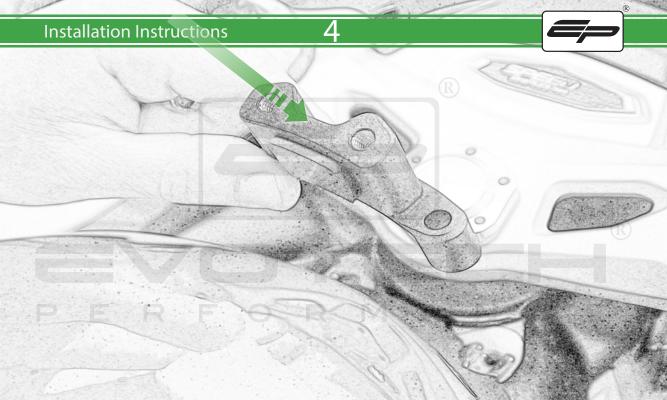


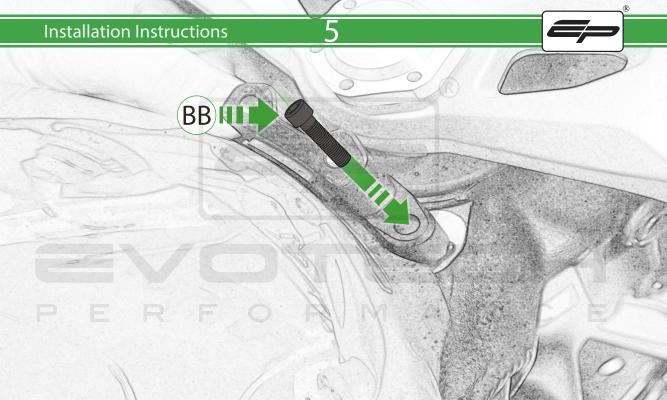

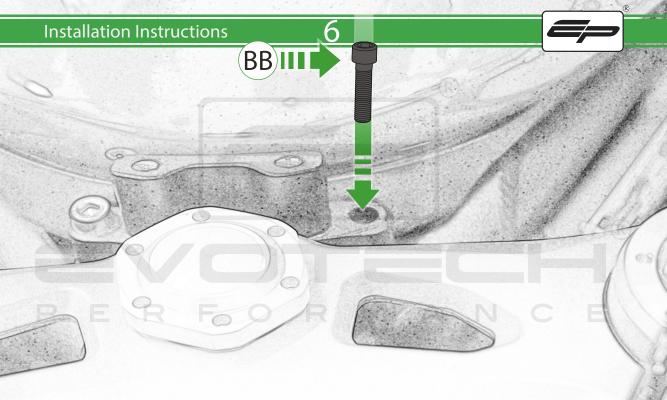






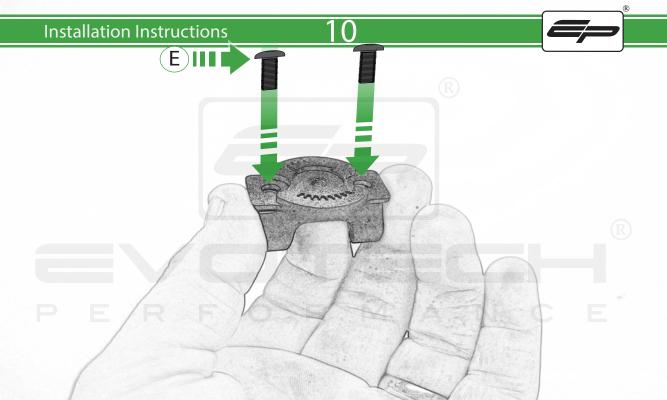





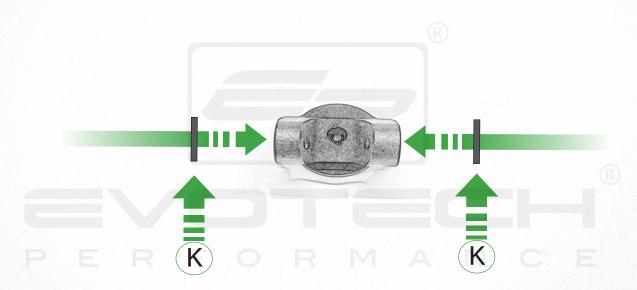












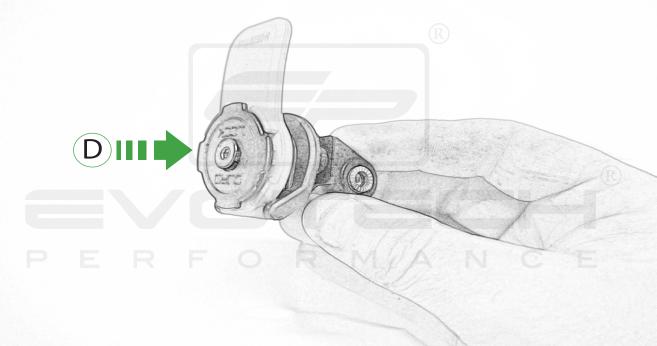



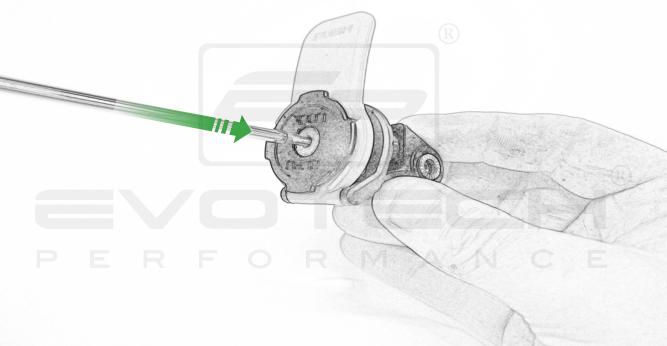



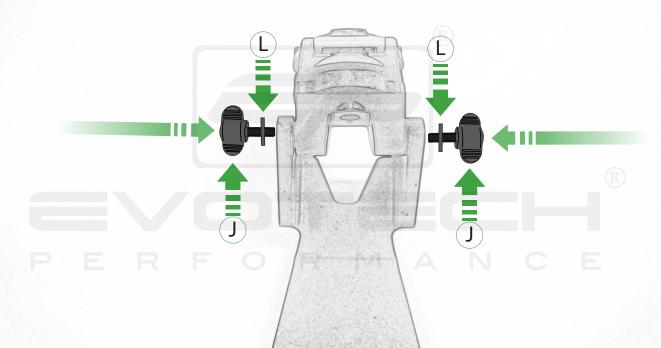





ESSENTIAL CHECKS 1



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



www.evotech-performance.com