

www.evotech-performance.com

Triumph Rocket

Quad Lock Sat Nav Mount

Installation Instructions




A 1 x Main Plate


L 2 x M5 Black Washer


B 1 x Pivot Plate


- M 2 x M4 x 5mm Black Button Head Bolts
- © 1 x Quad Lock Sub Bracket
- D 1 x Quad Lock Mounting Bracket
- **(E)** 2 x M5 x 8mm Black Button Head Bolts
- F 2 x P-clips (No.1)
- © 2 x P-clips (No.2)
- H 2 x P-clips (No.3)
- 1 2 x P-clips (No.4)
- ① 2 x Lobe Screw
- K 2 x Locking Washer


- (A) 2 x M5 x 16mm Flange Bolt
- BB 1 x M5 x 20mm Flange Bolt

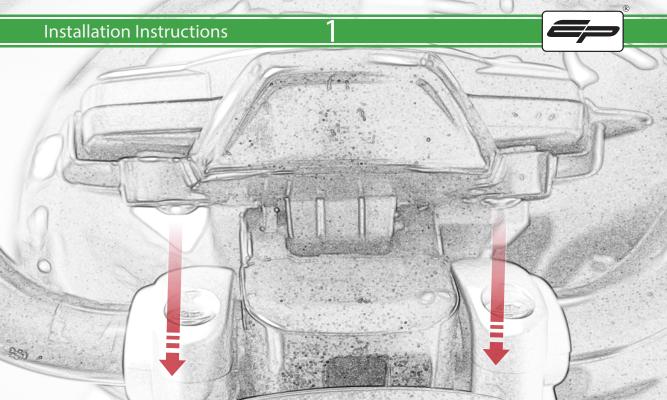

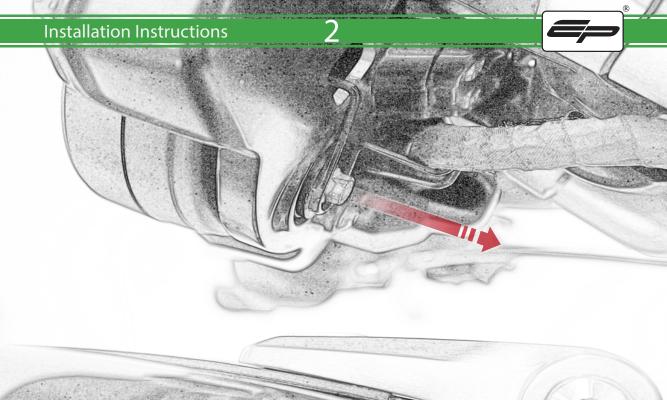


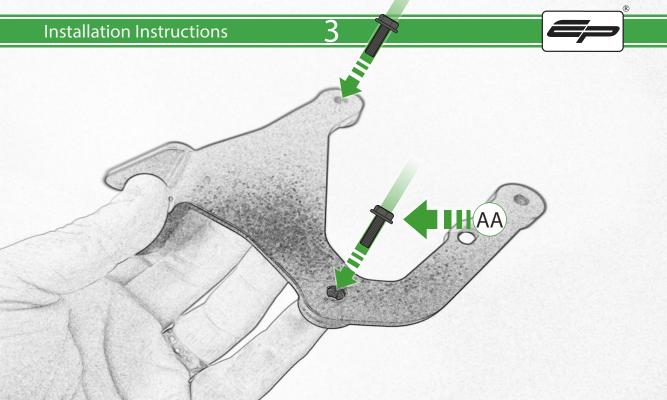


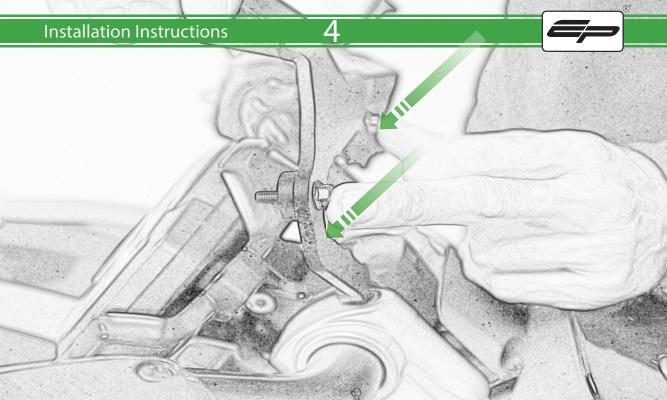


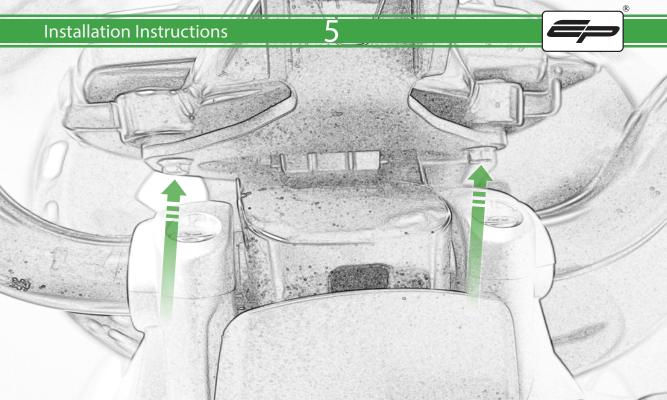




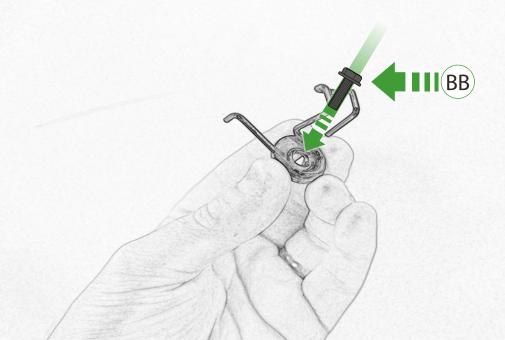


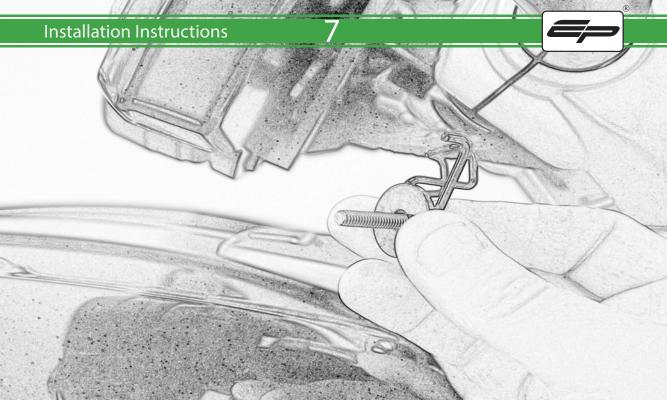

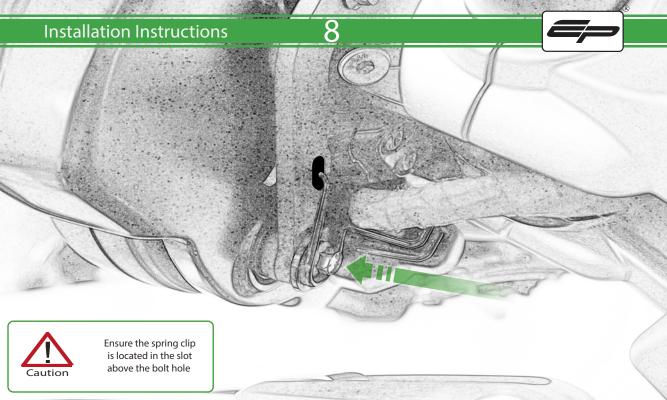



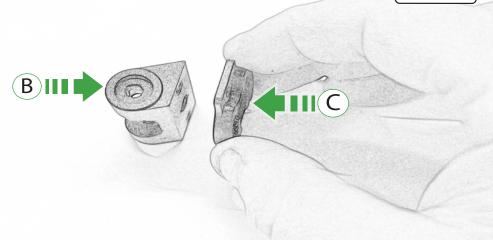

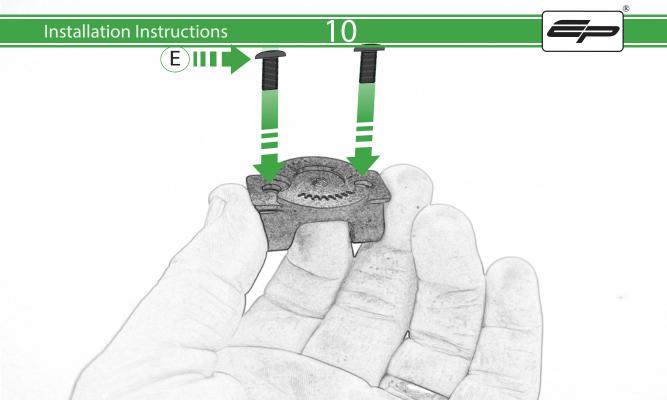






12






à



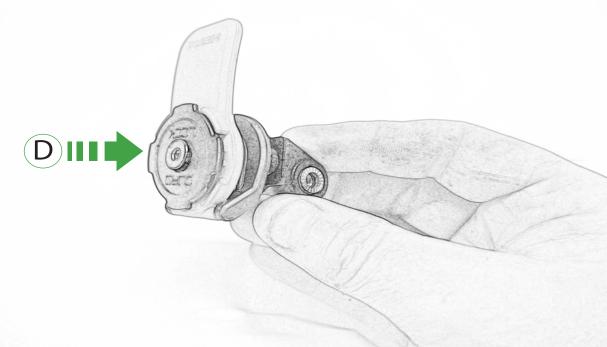




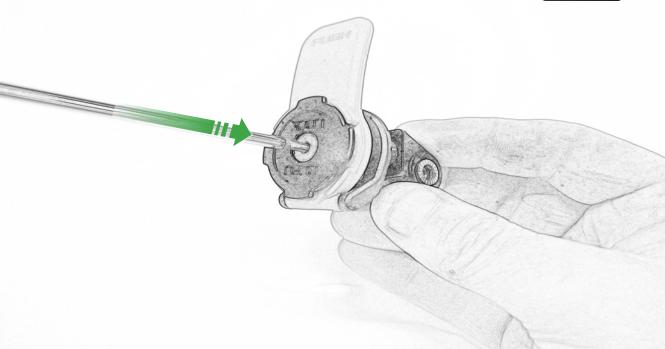

15



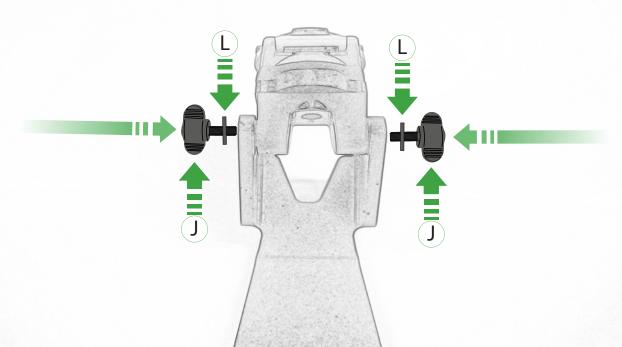







It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Some smartphone models may also require an anti-vibration mount or dampener to further reduce vibration and help with image stabilisation.

It is the rider's responsibility to ensure that this is fitted correctly before use.

ERFORMANCE



www.evotech-performance.com