



www.evotech-performance.com

Triumph Tiger 900 SP Connect Sat Nav Mount Installation Instructions




For SP Connect mirco stem mount alu Part number #53122
follow instructions 1 - 34


For SP Connect anti vibration module Part number #53135
follow instructions 35 - 67





Kit Contents PRN014677-014925


- | | |
|-----------------------------------|------------------------------------|
| (A) 1 x M6 x 16 Countersunk Screw | (L) 2 x M5 Black Washer |
| (B) 1 x Pivot Plate | (M) 2 x M4 x 5mm Button Head Bolts |
| (C) 1 x SP Connect Plate | |
| (D) 1 x Spanner | |
| (E) 2 x M5 x 10mm Caphead Bolts | |
| (F) 2 x P-clips (No.1) | |
| (G) 2 x P-clips (No.2) | |
| (H) 2 x P-clips (No.3) | |
| (I) 2 x P-clips (No.4) | |
| (J) 2 x Lobe Screw | |
| (K) 2 x Locking Washer | |
- Sub Kit
- | |
|--------------------------------|
| (N) 2 x M5 x 35mm Caphead Bolt |
| (M) 1 x M5 Nylock Nut |

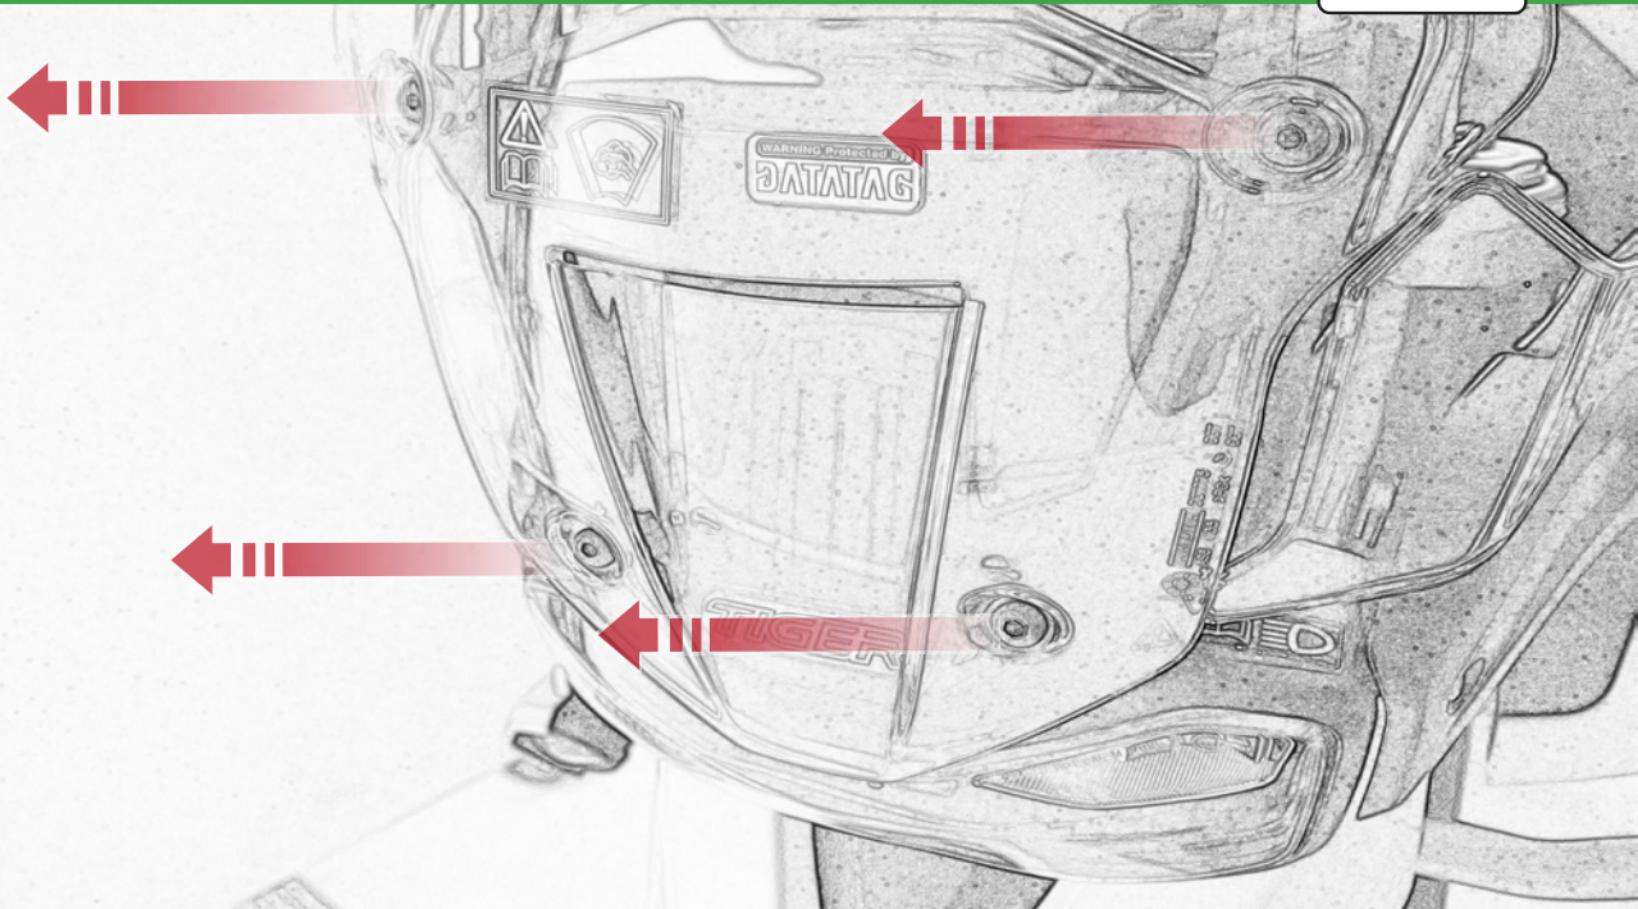


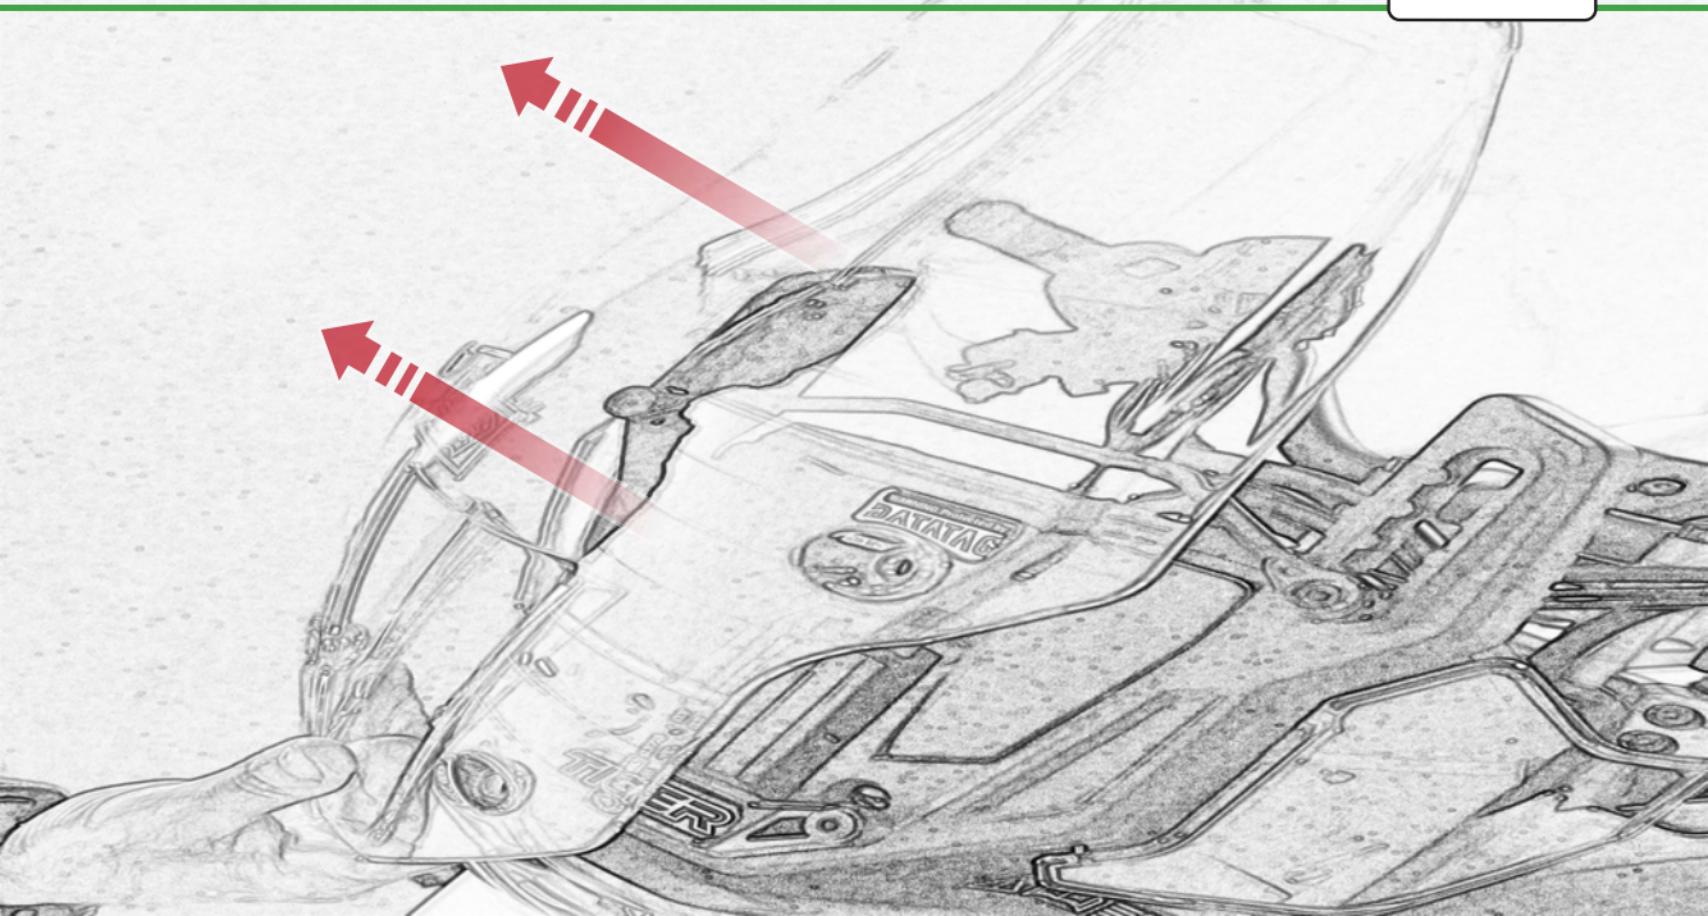


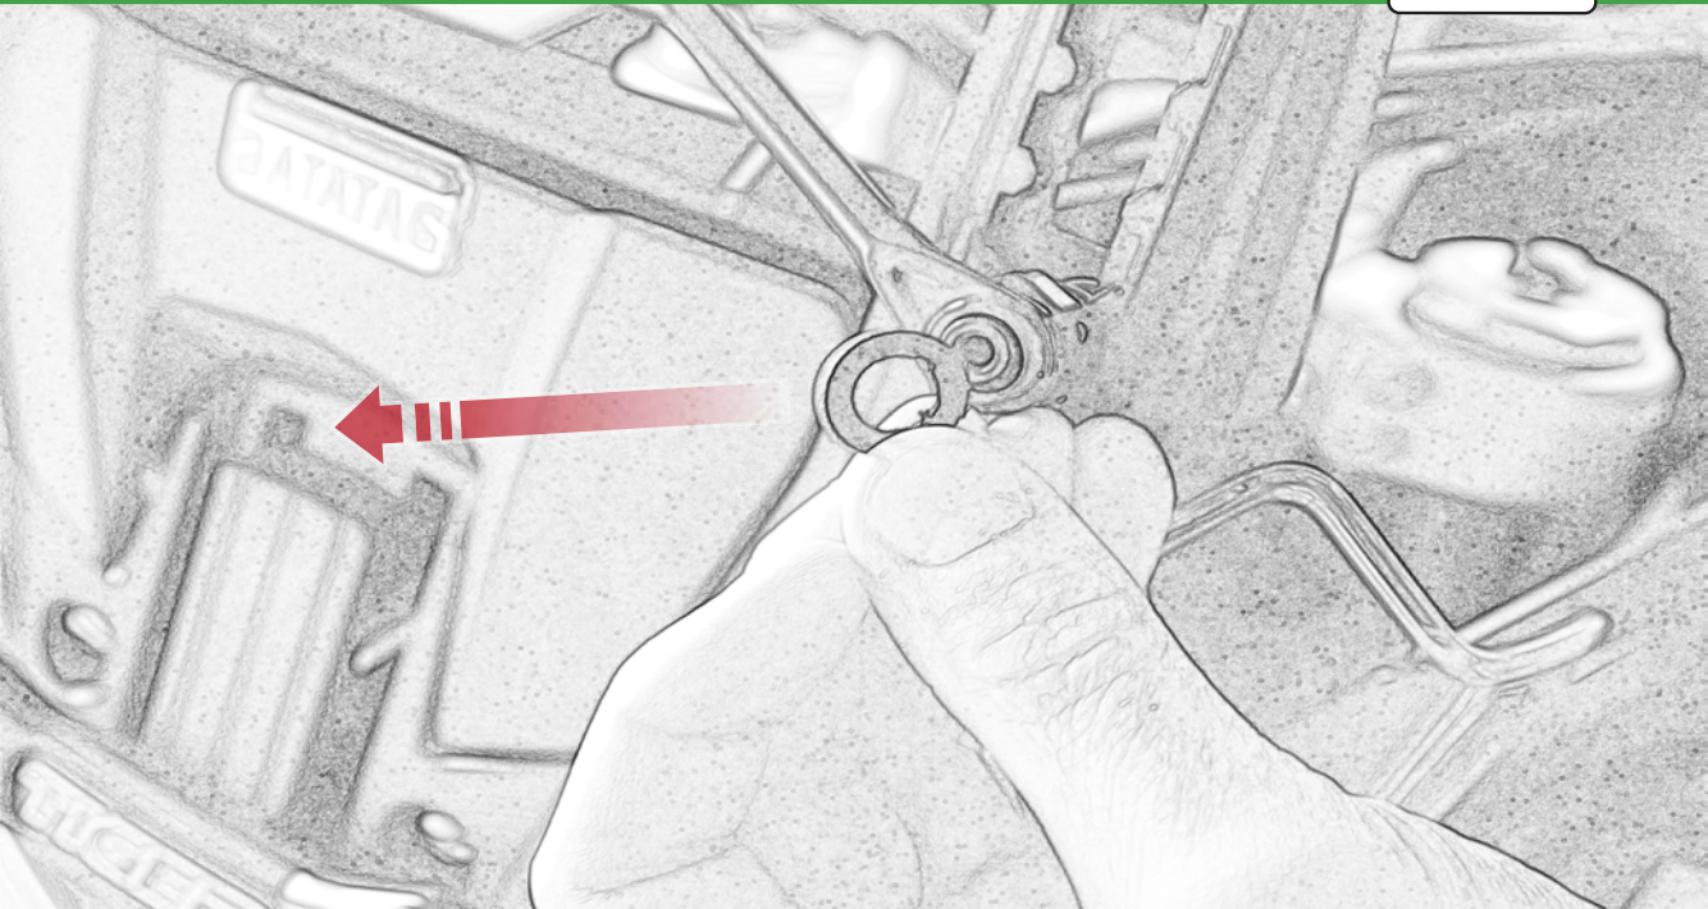


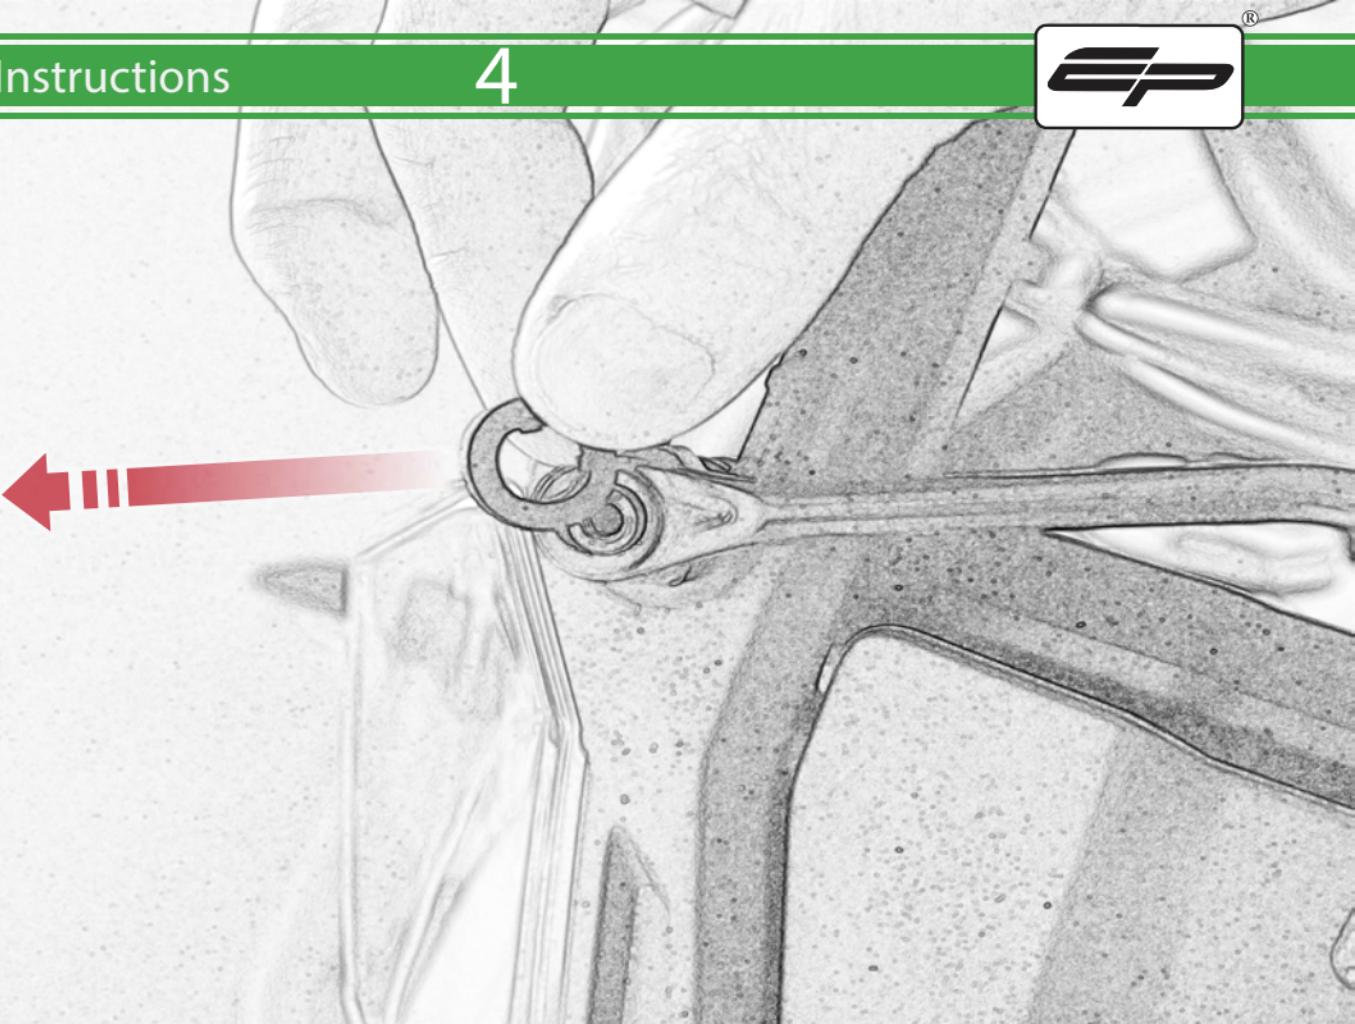

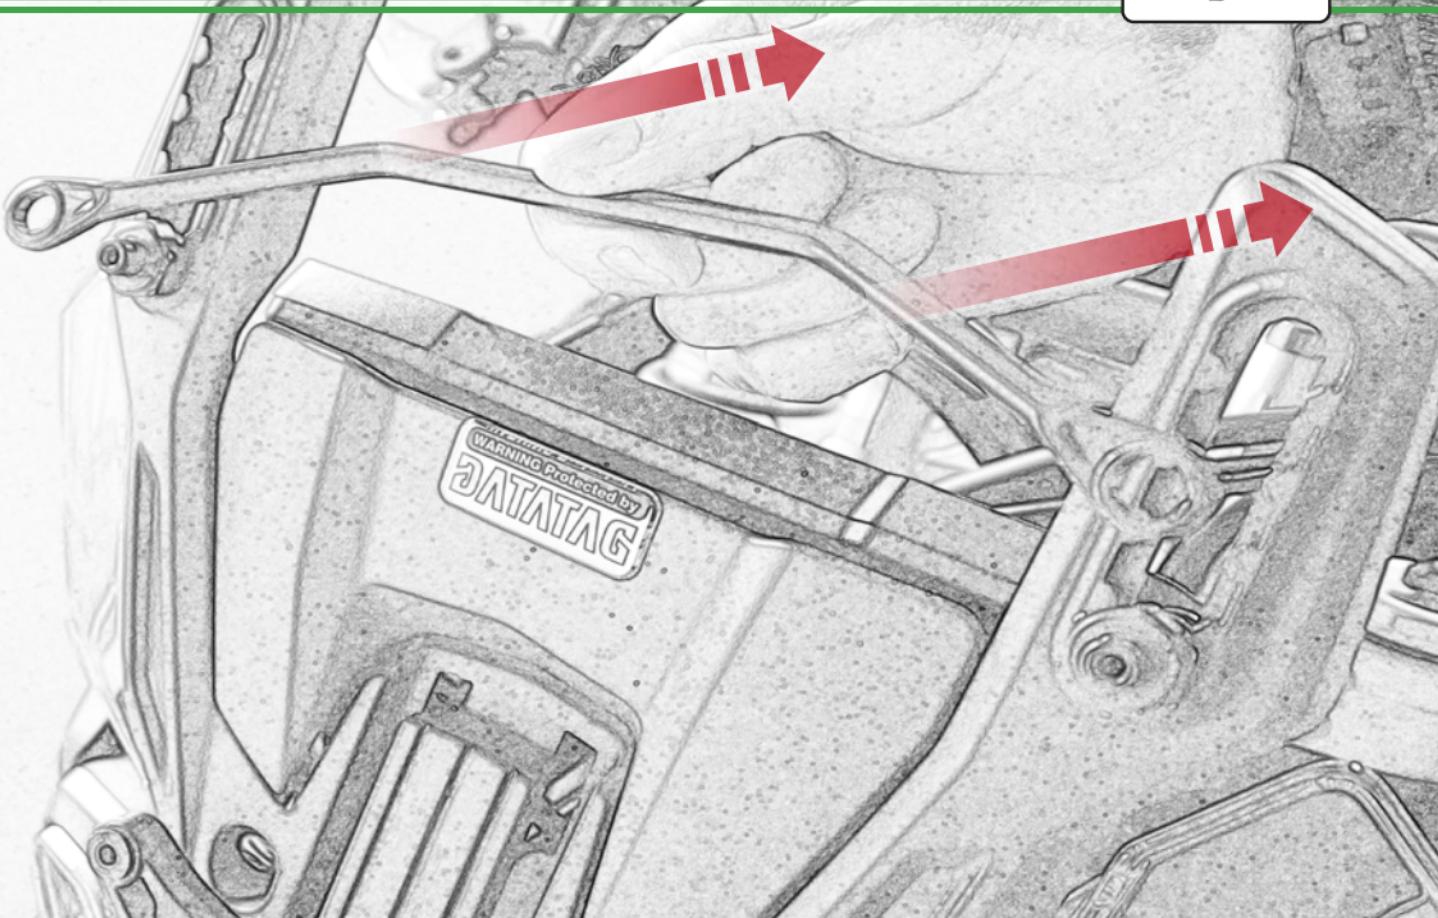


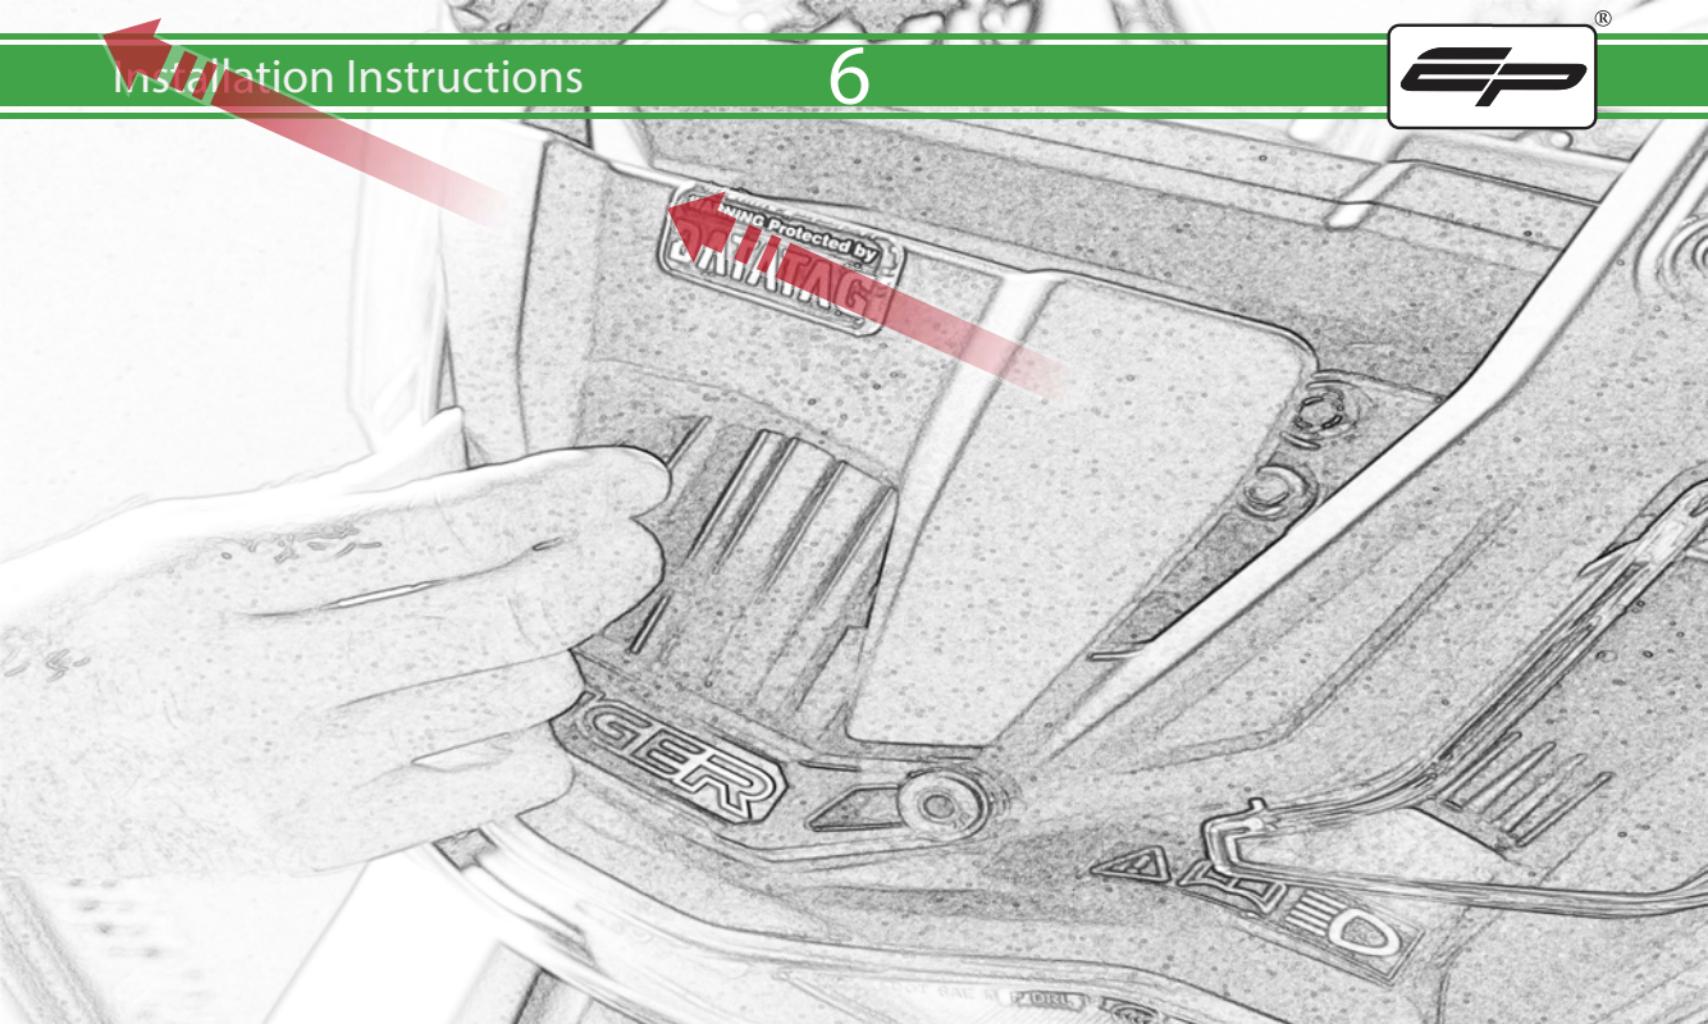


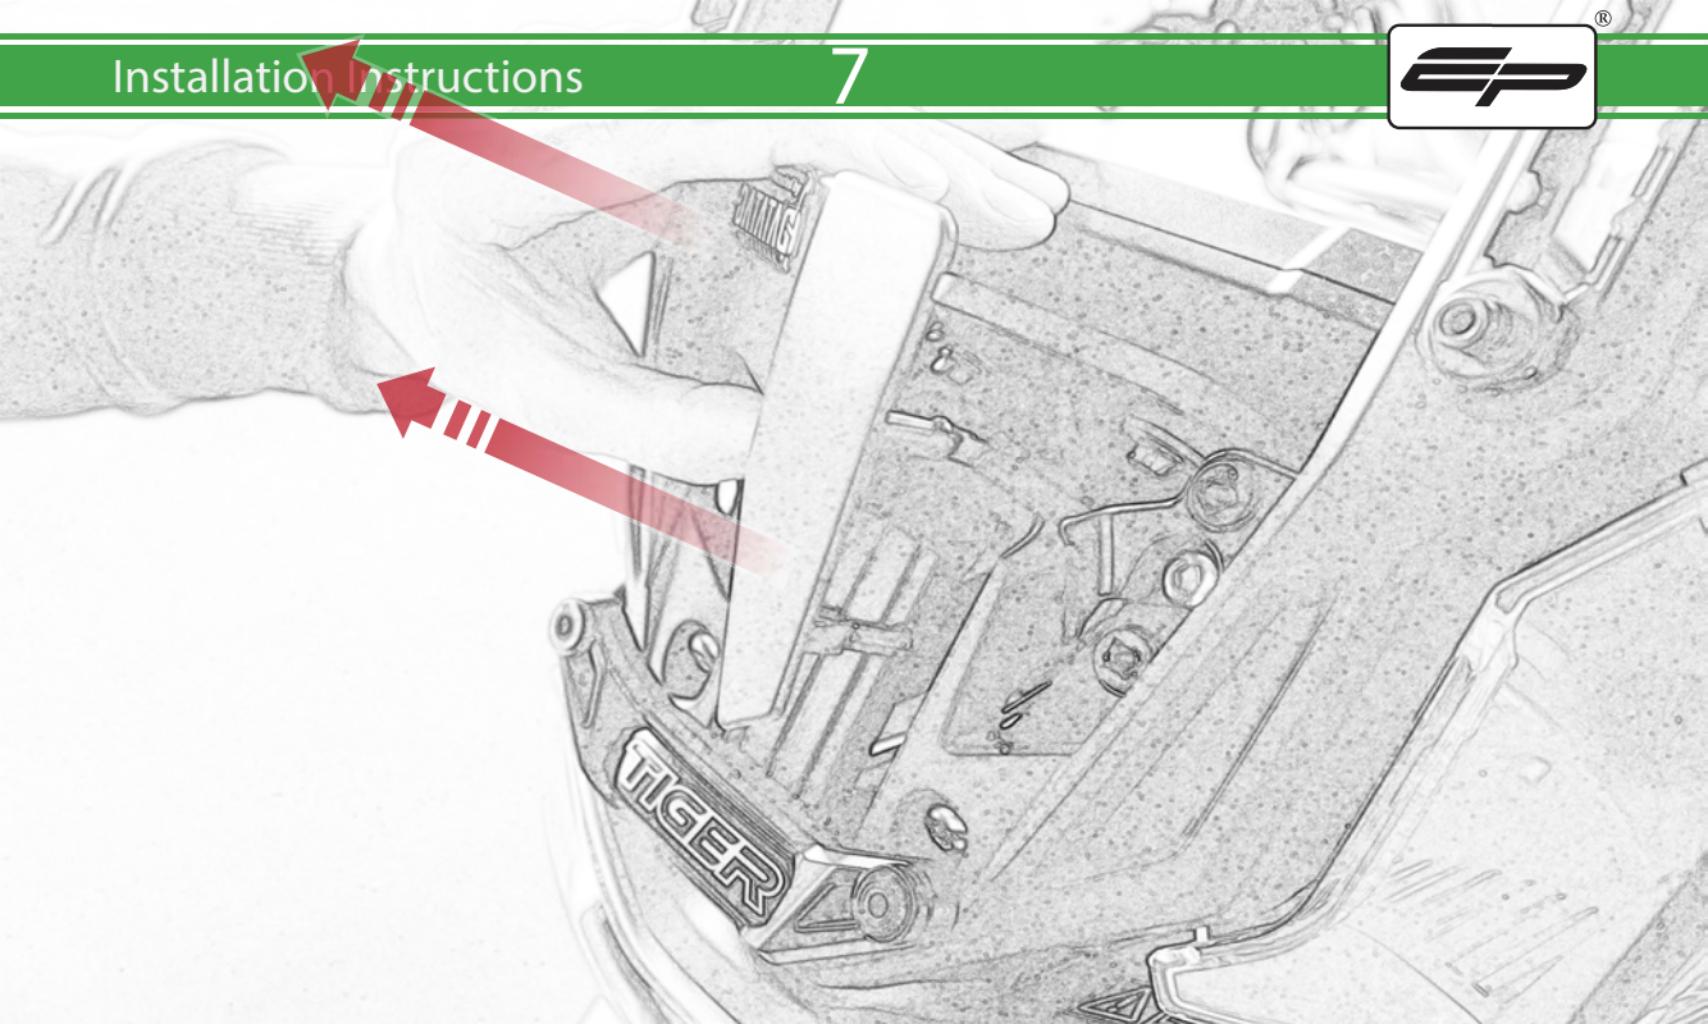


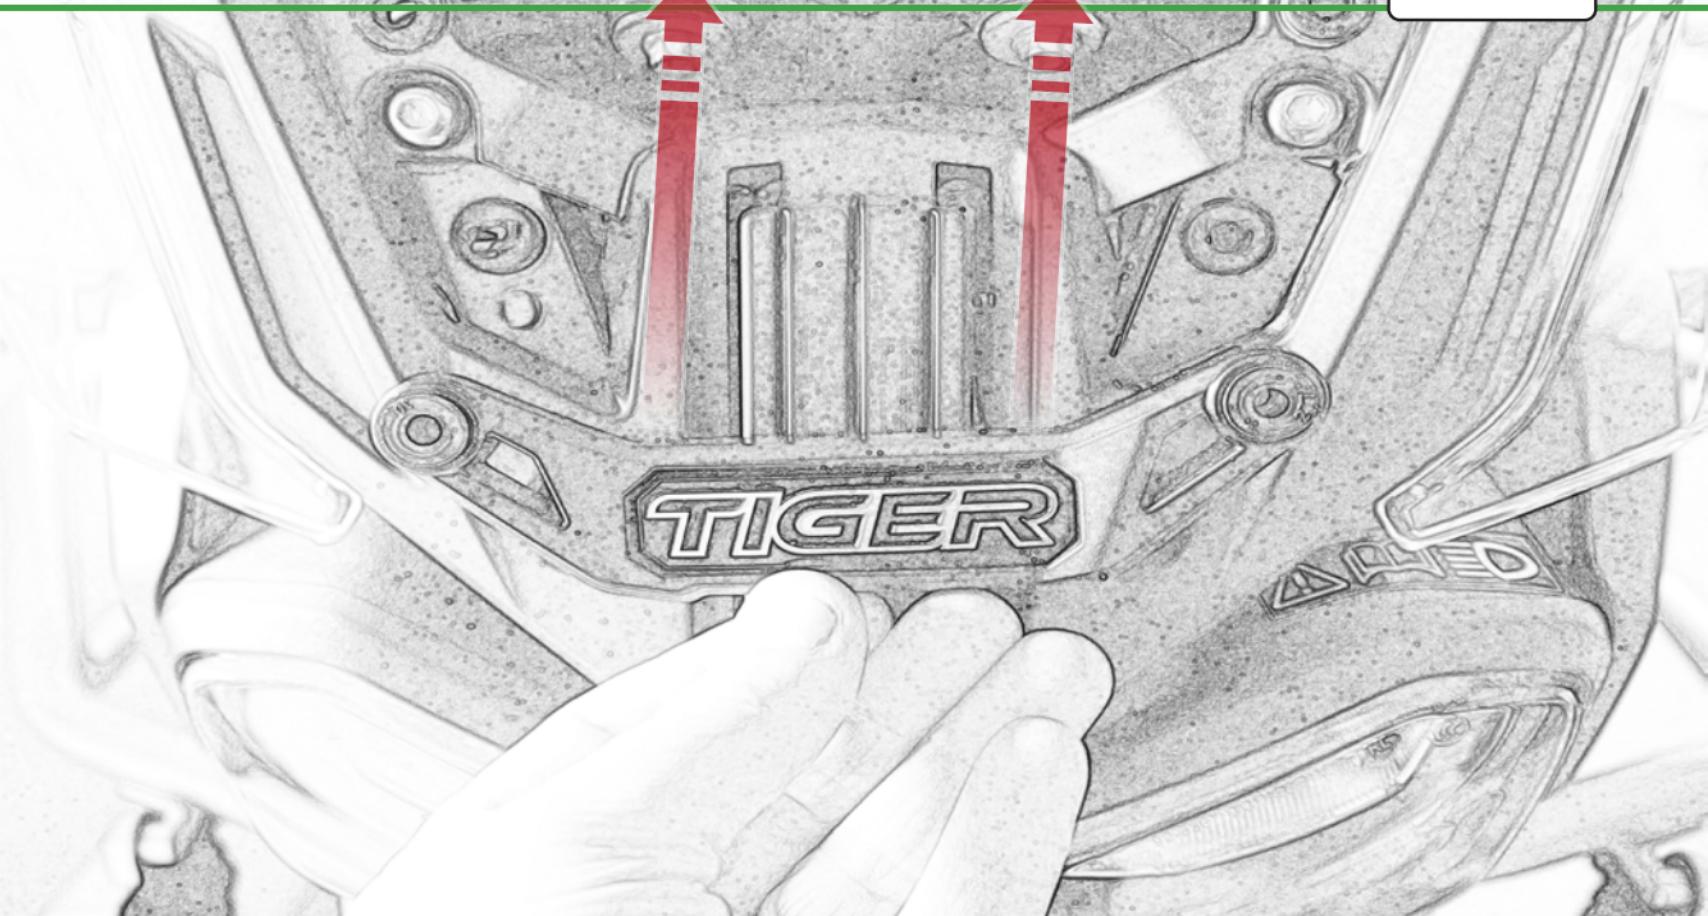





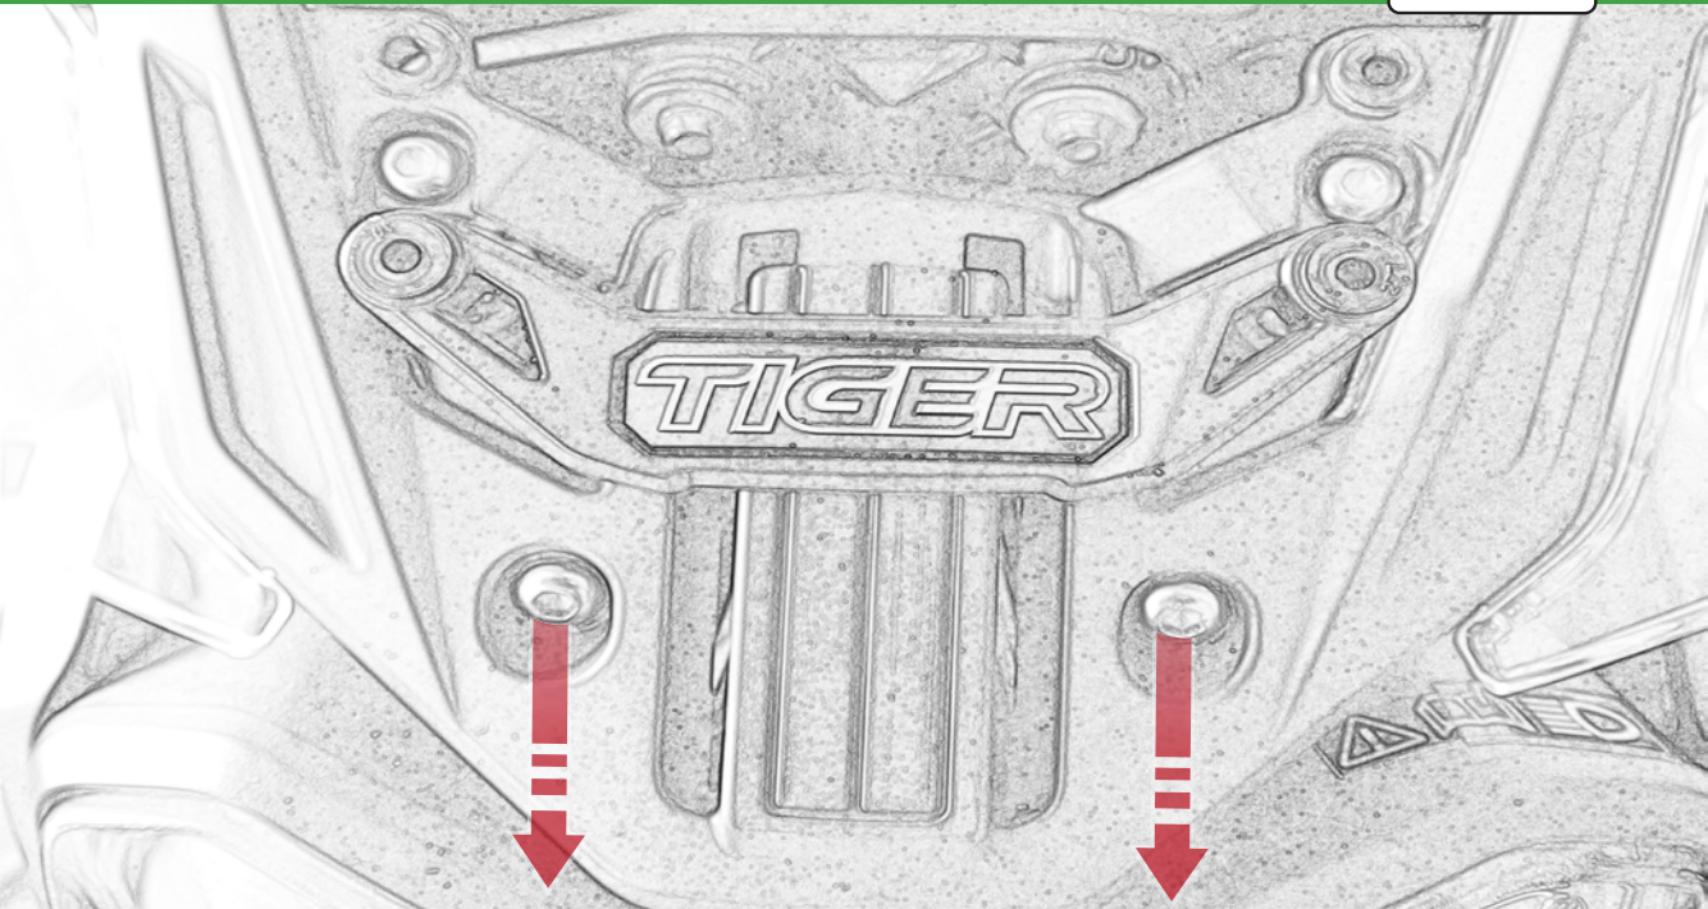


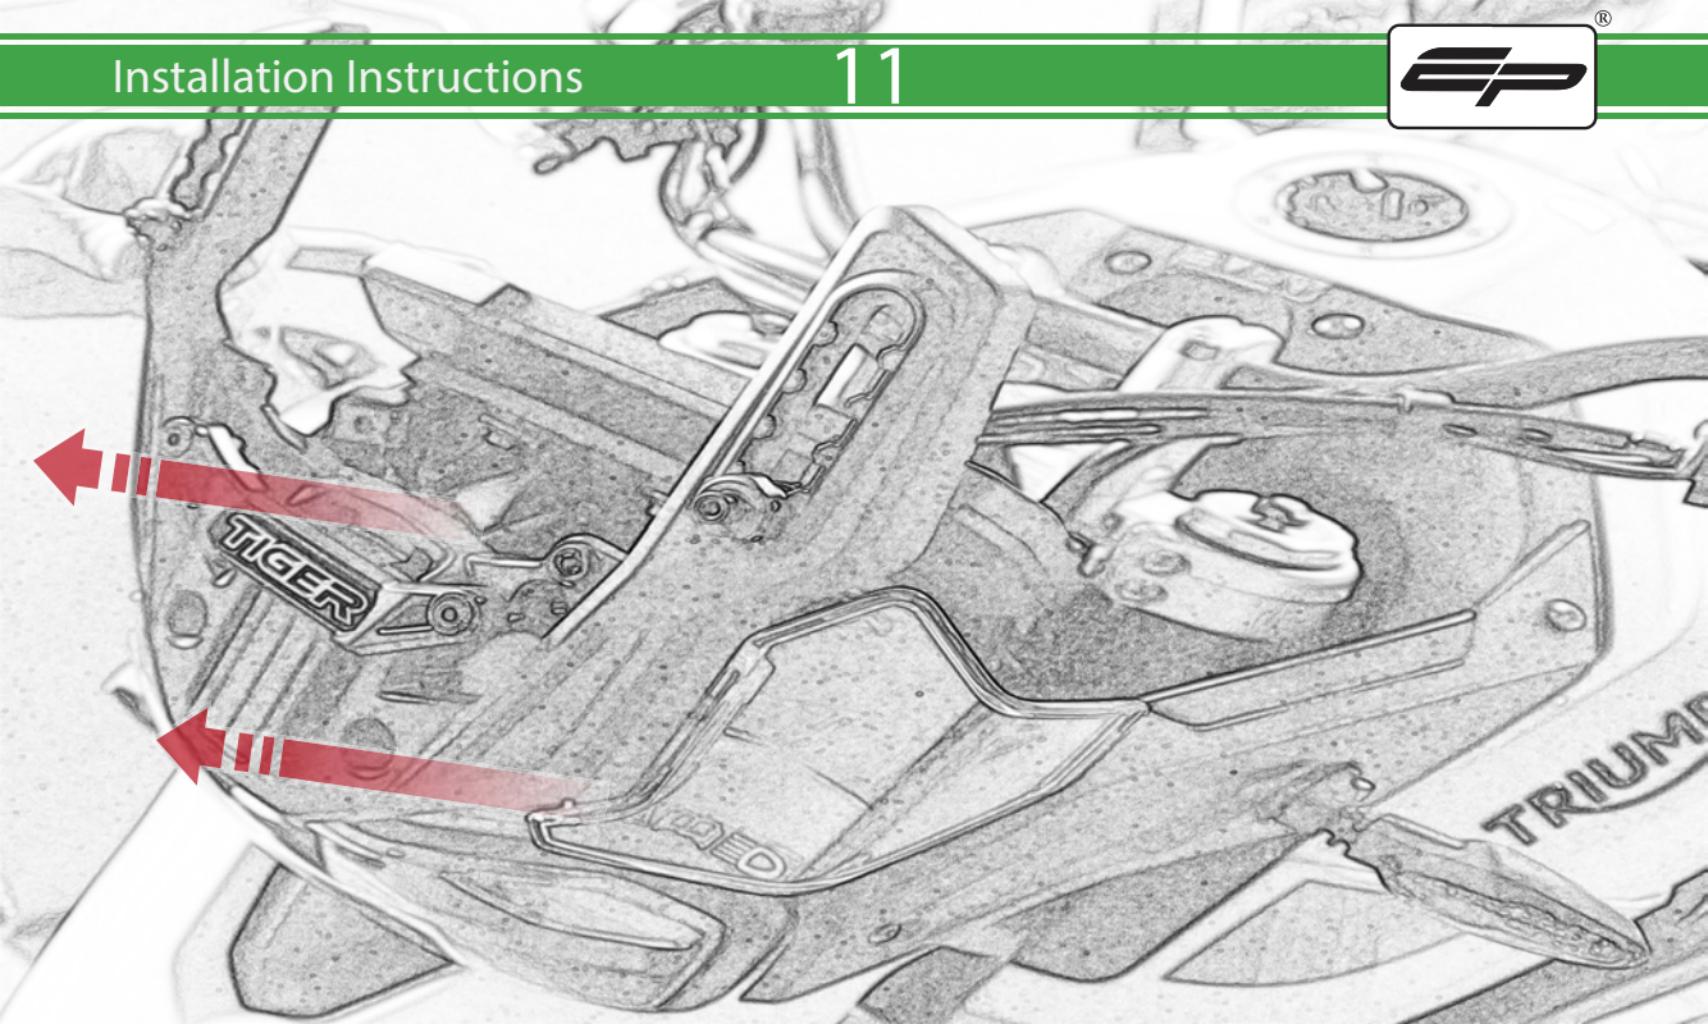


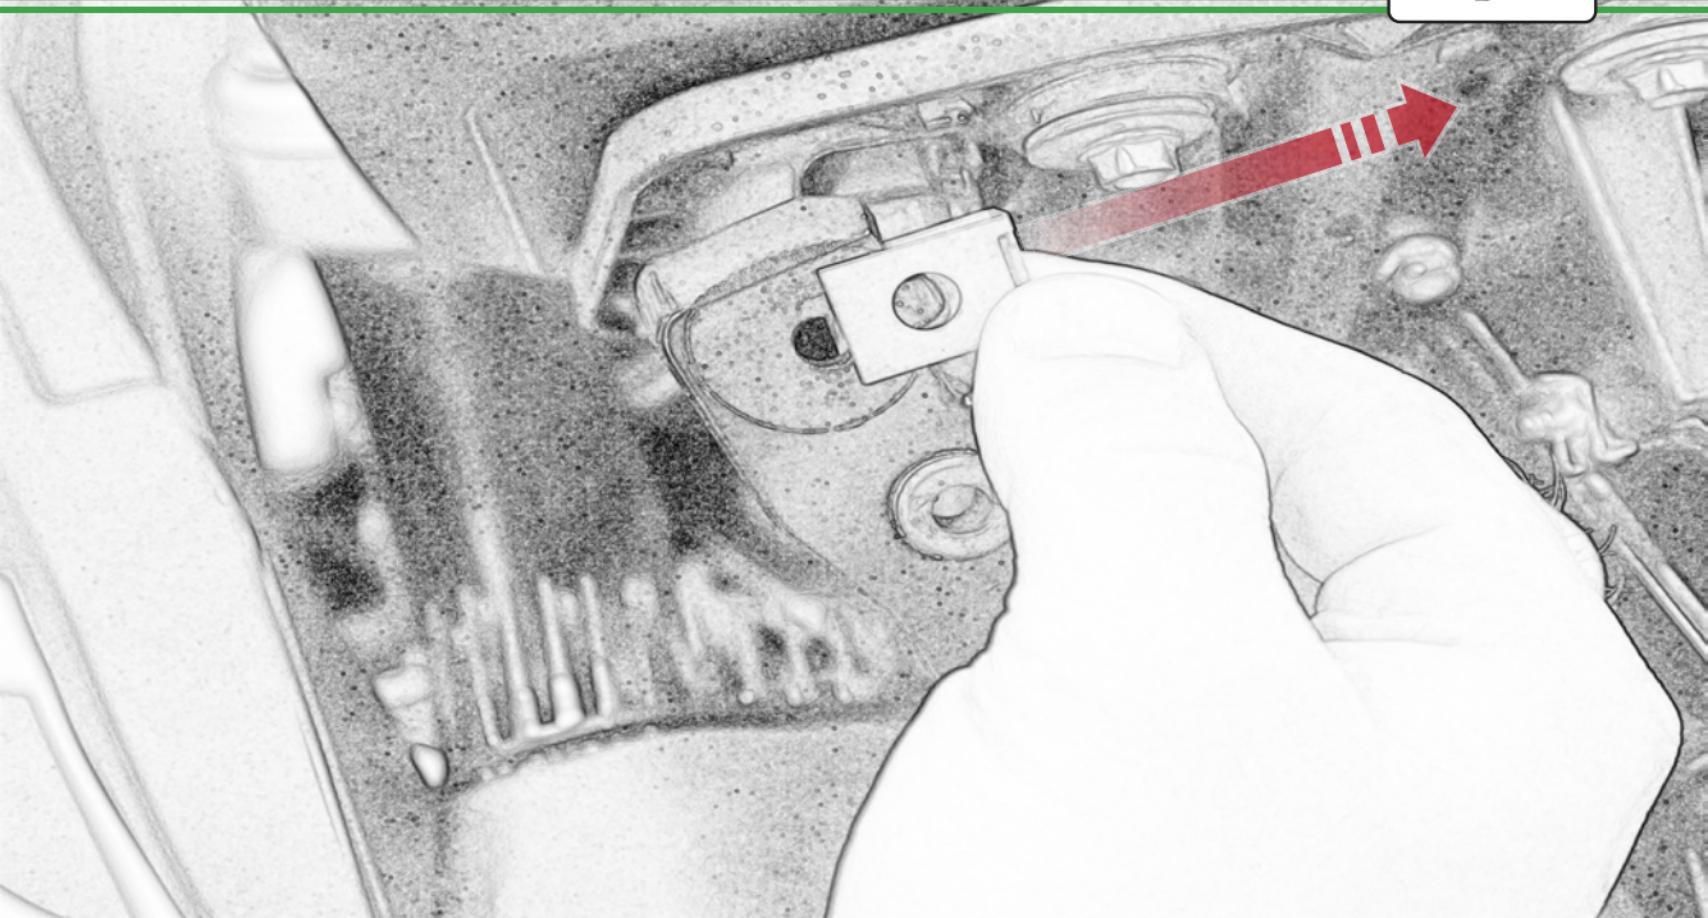

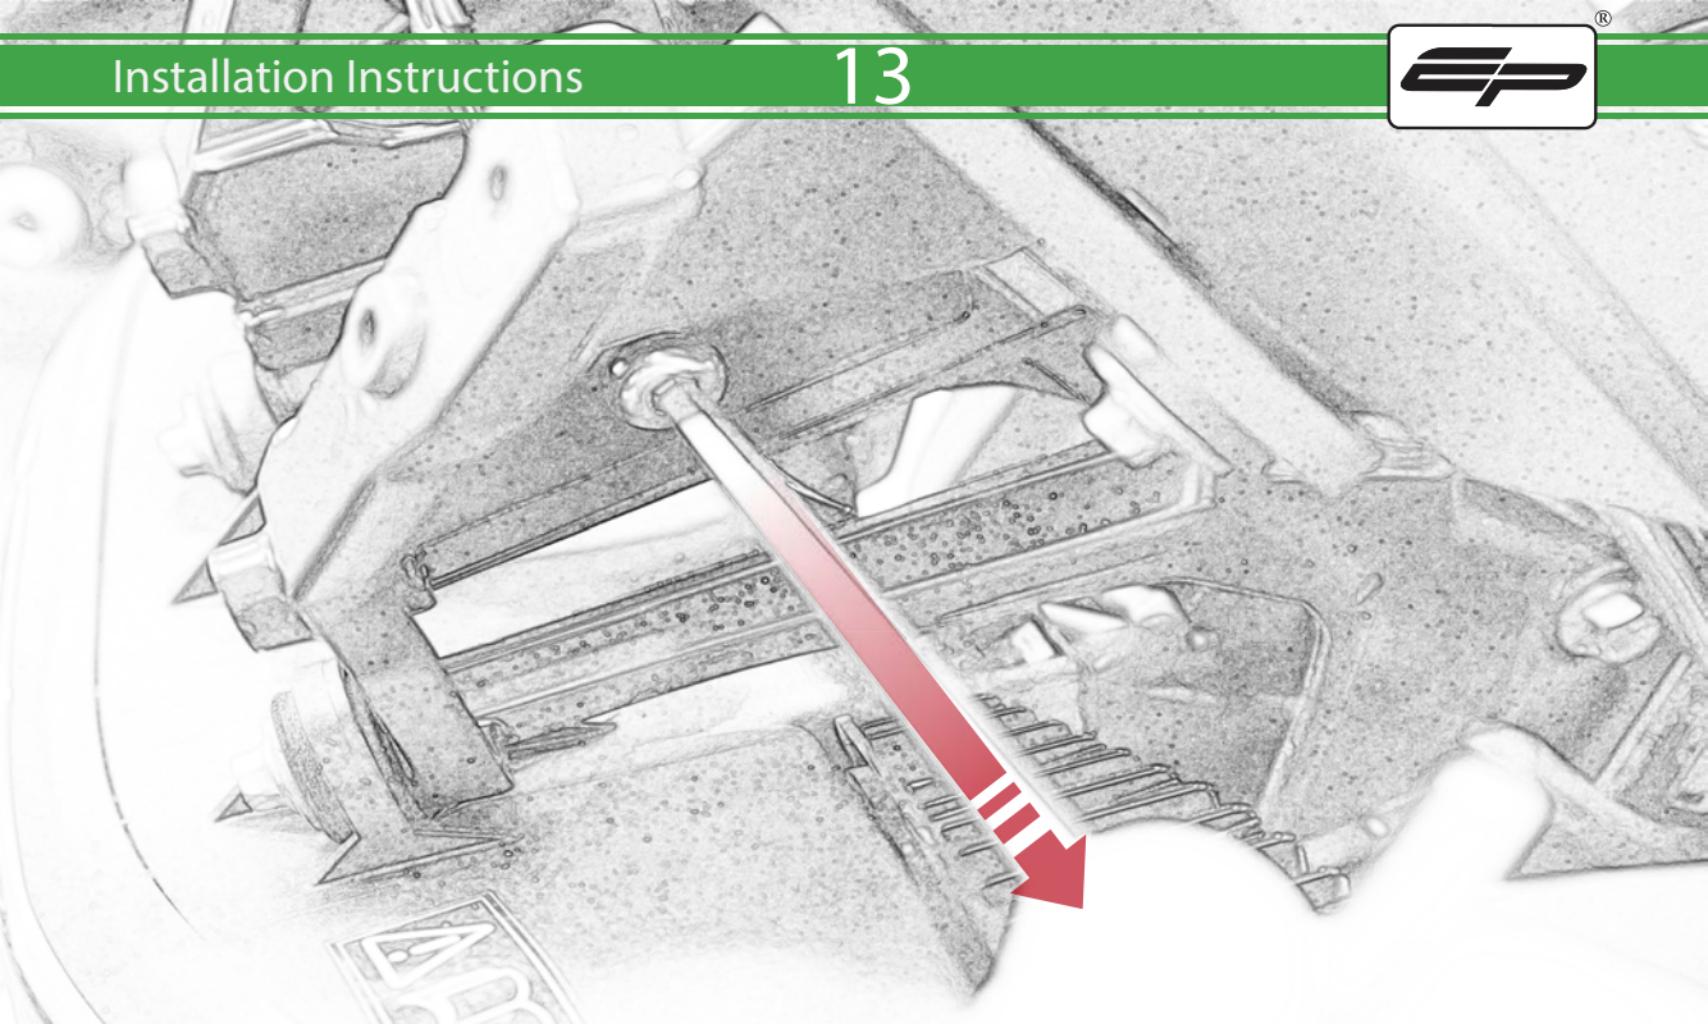


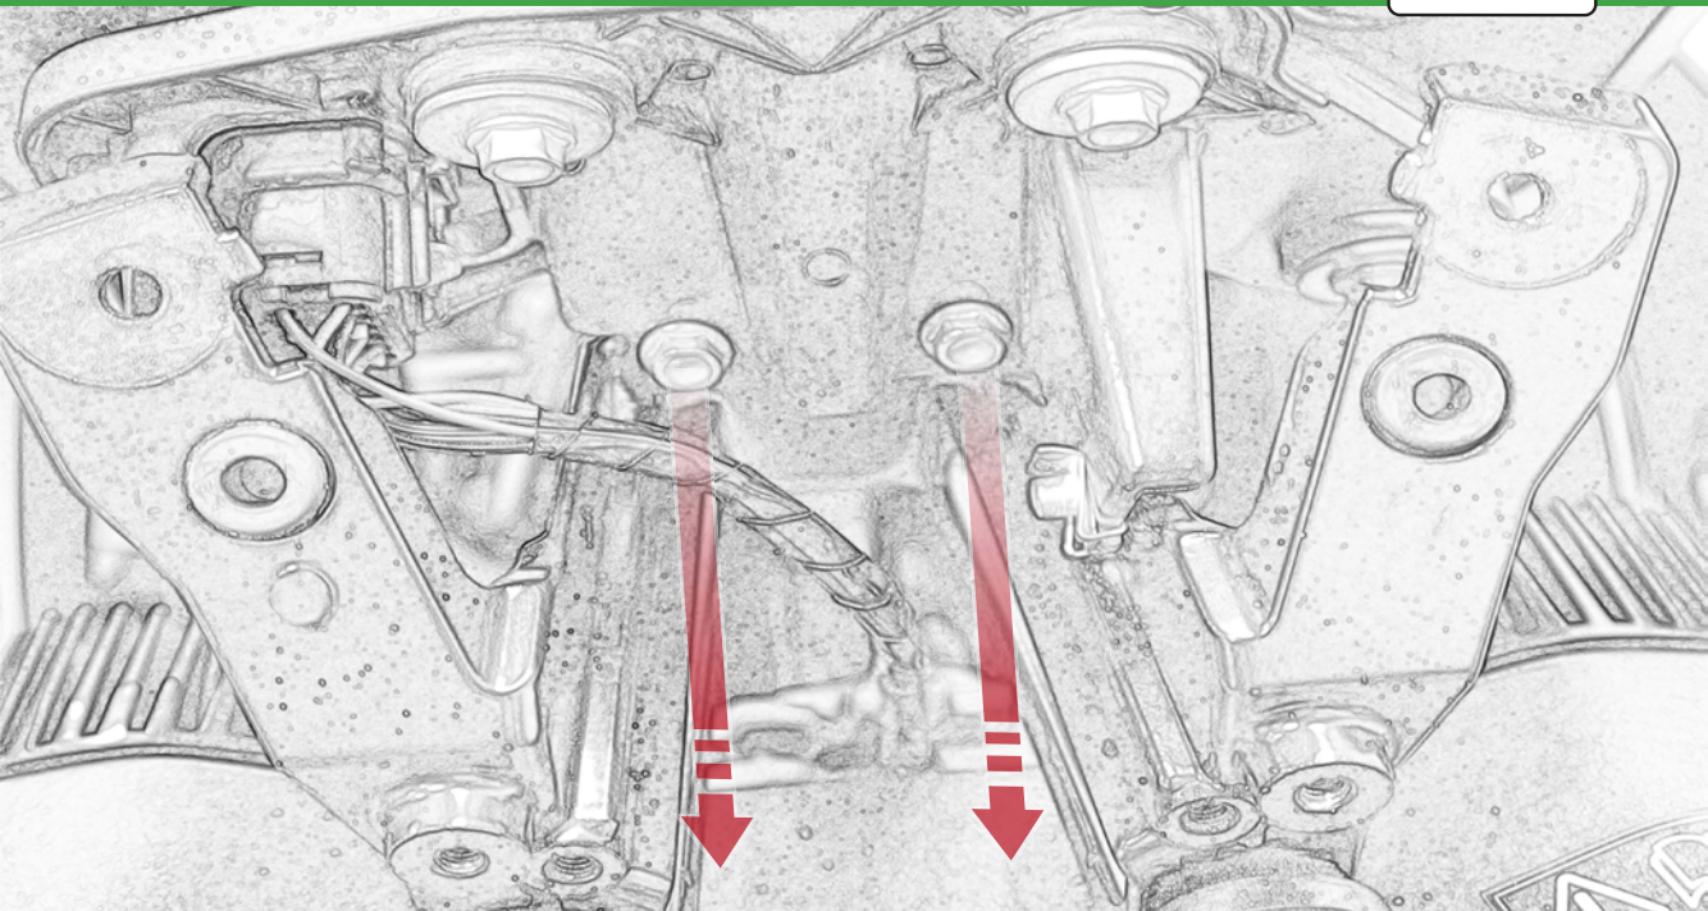


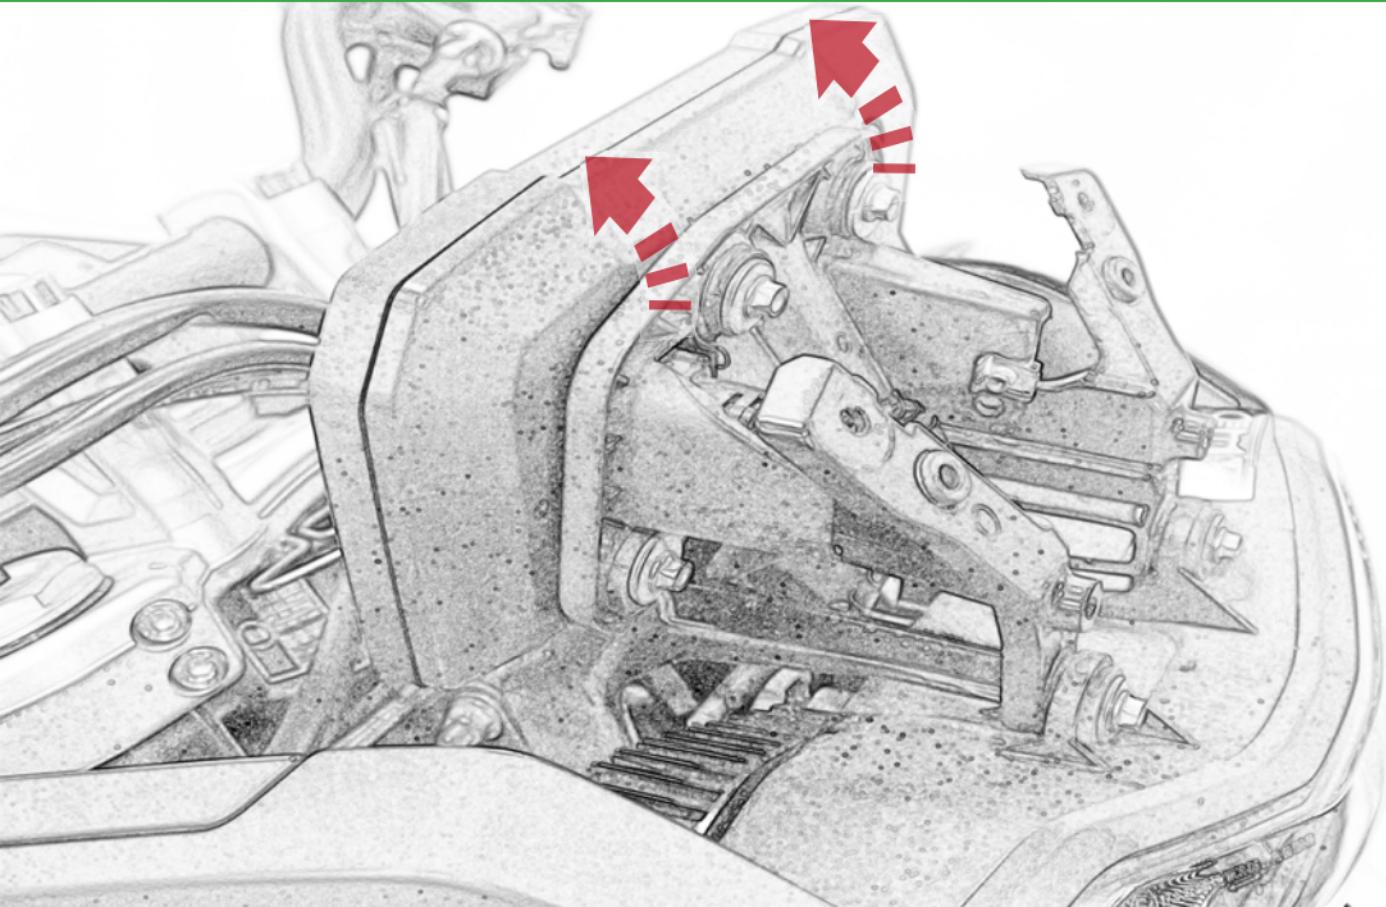


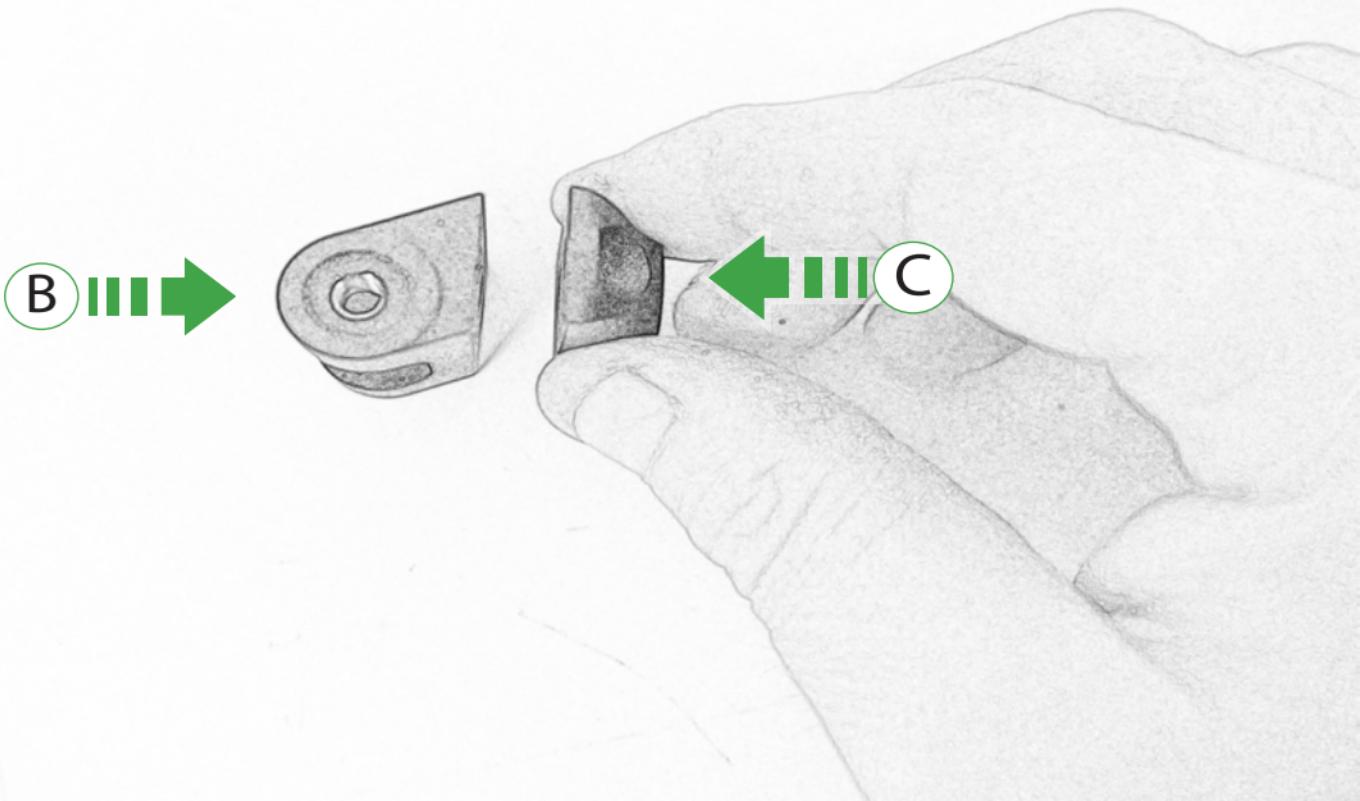



E 

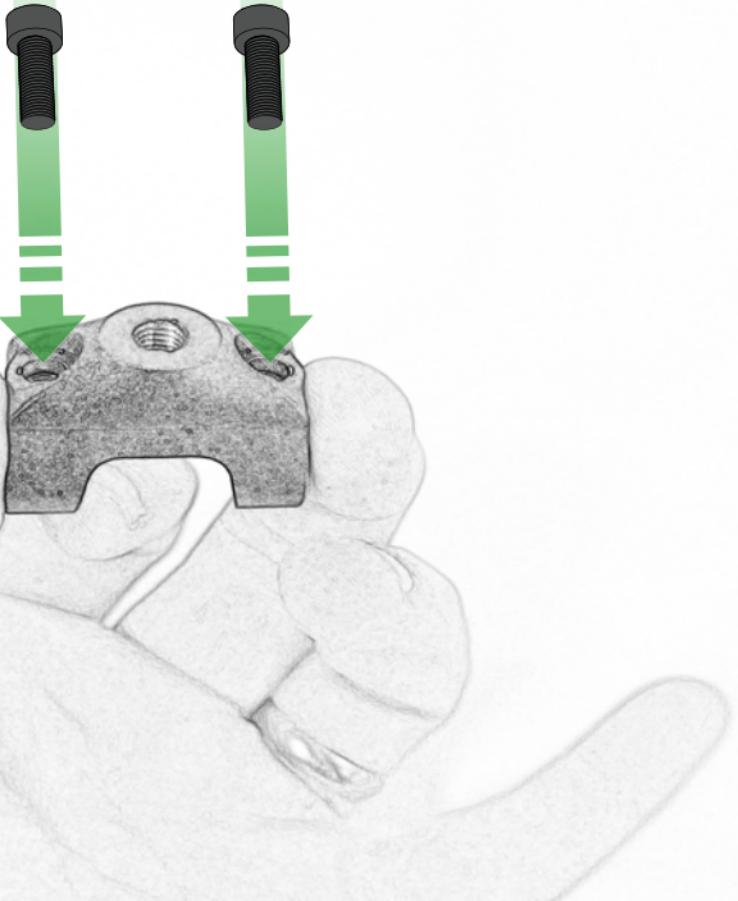


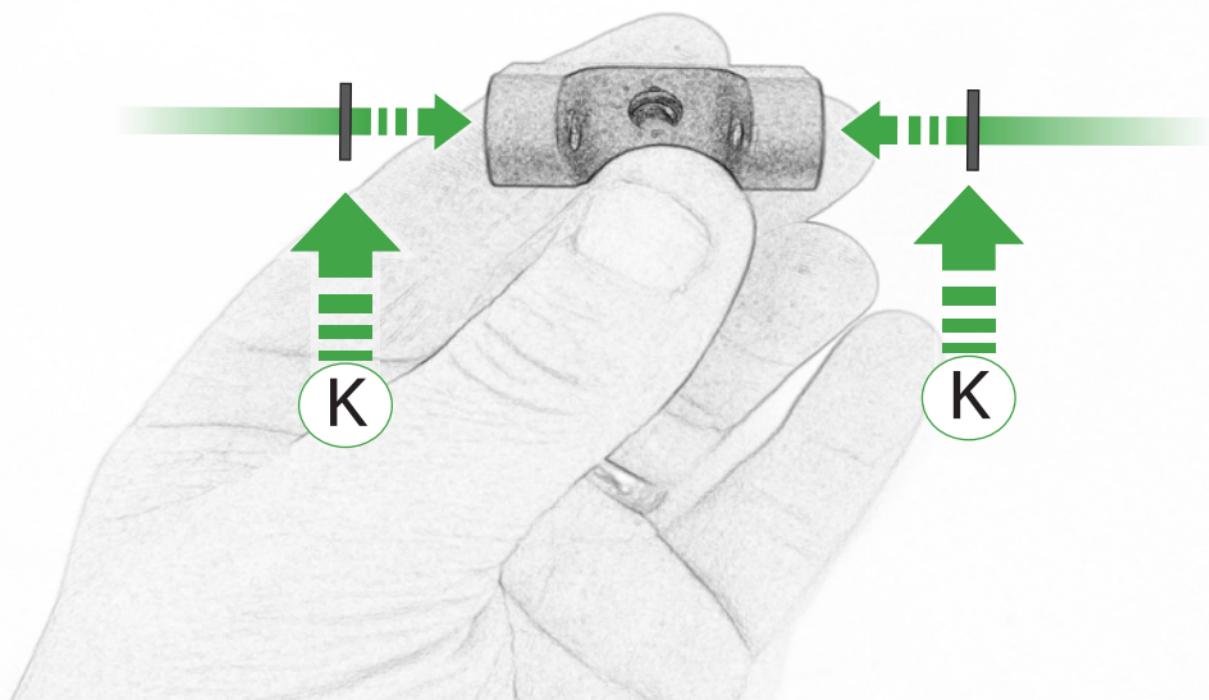


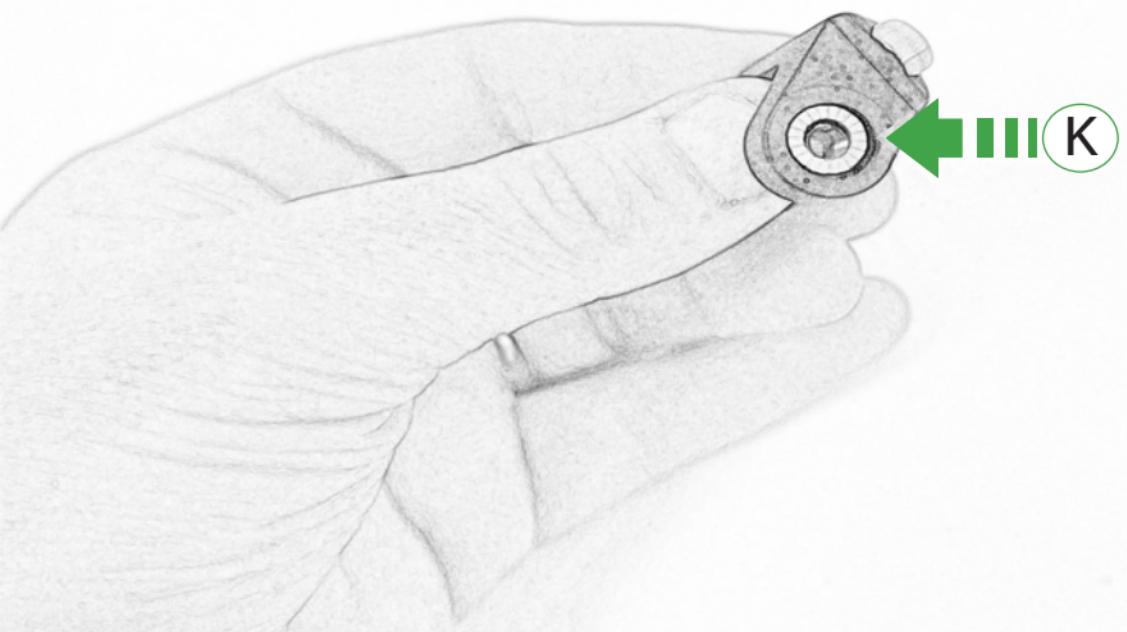


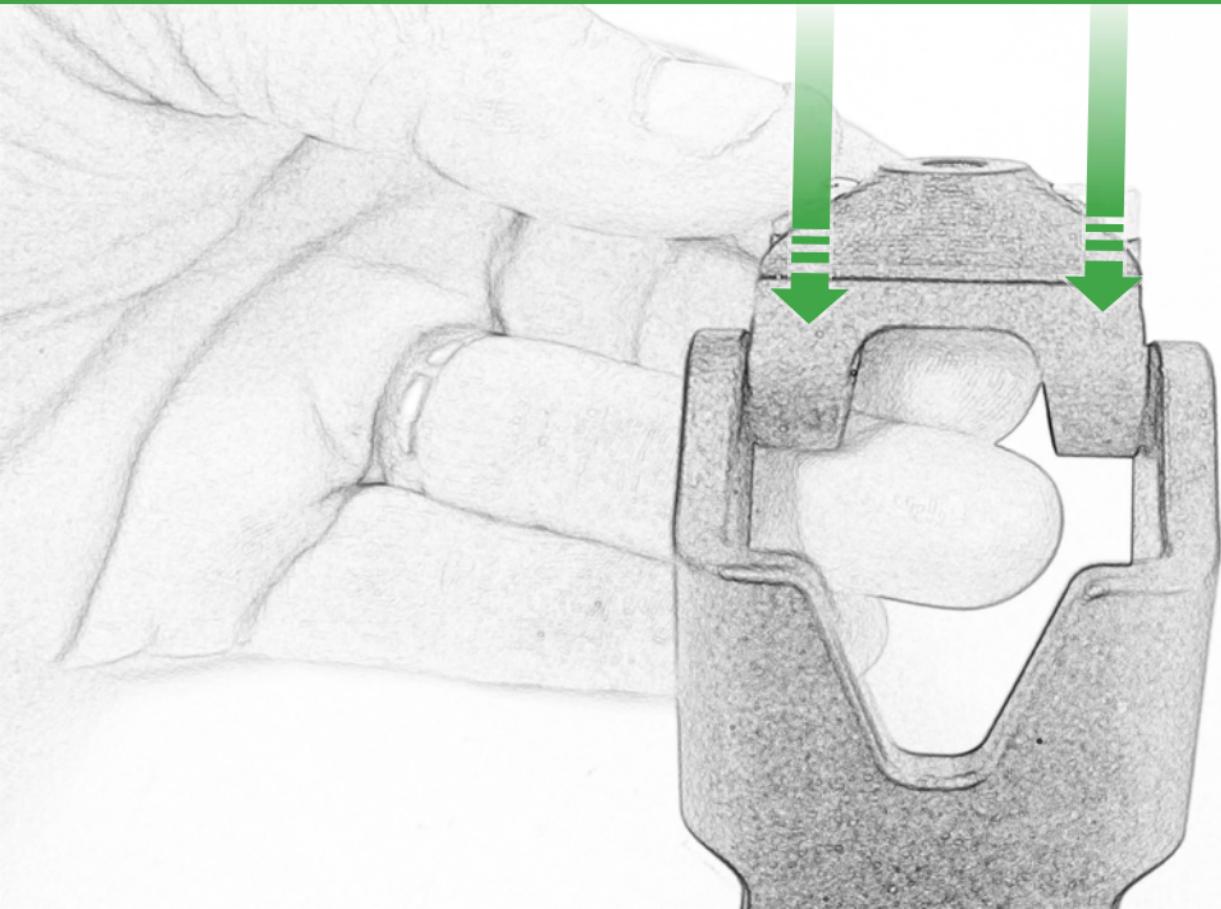

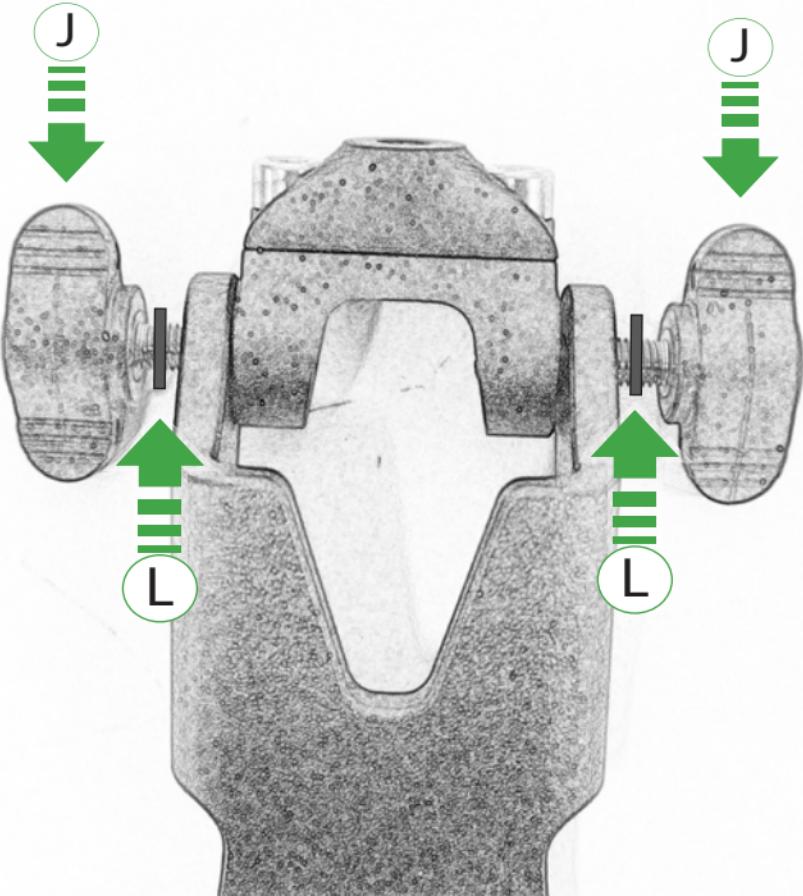

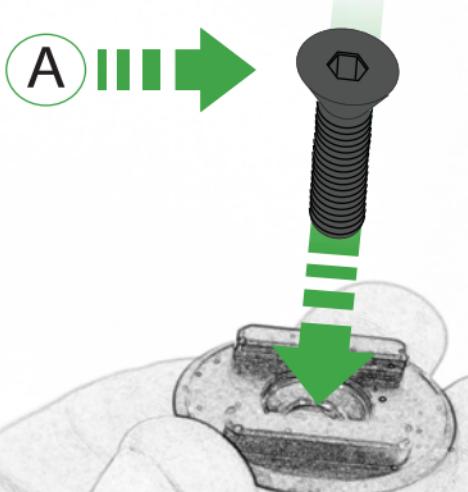

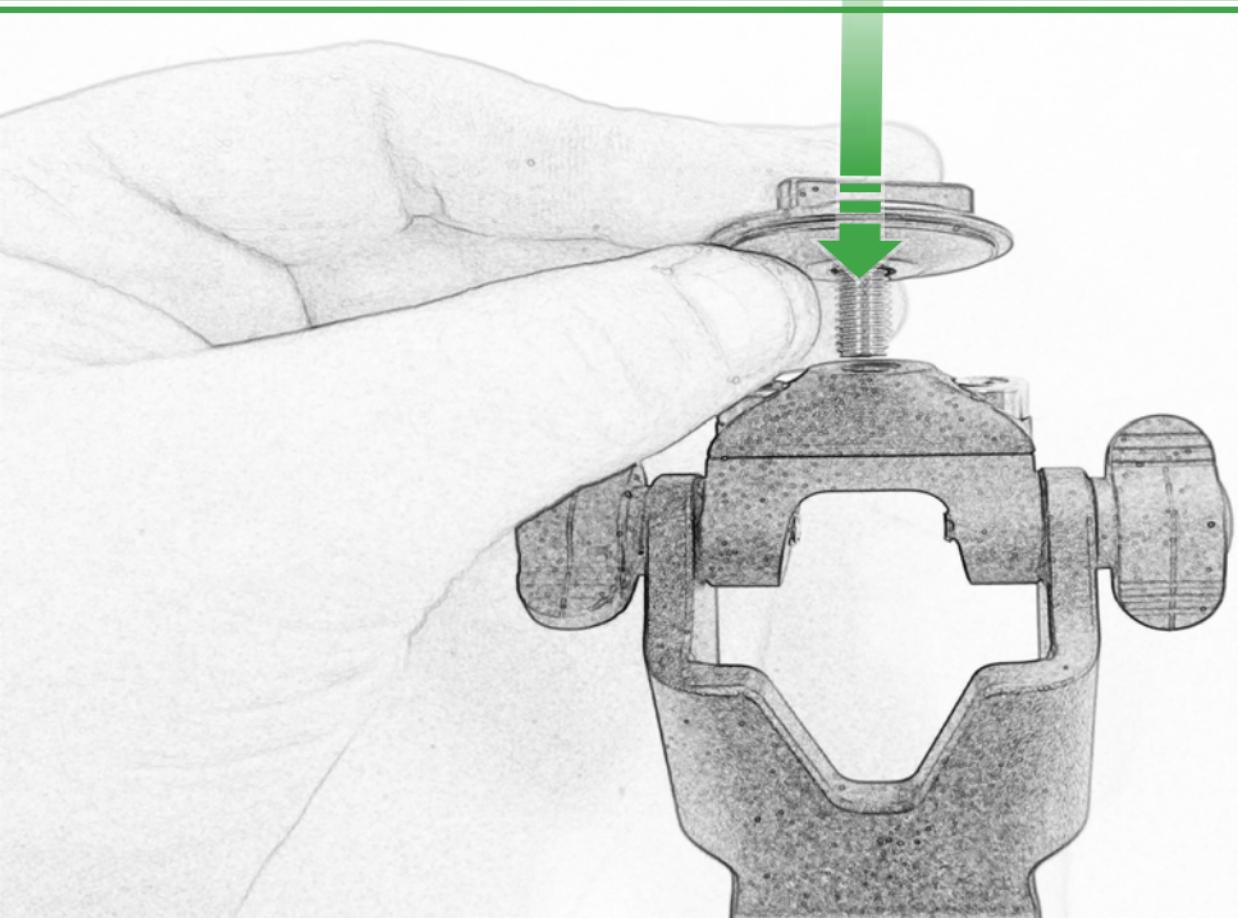

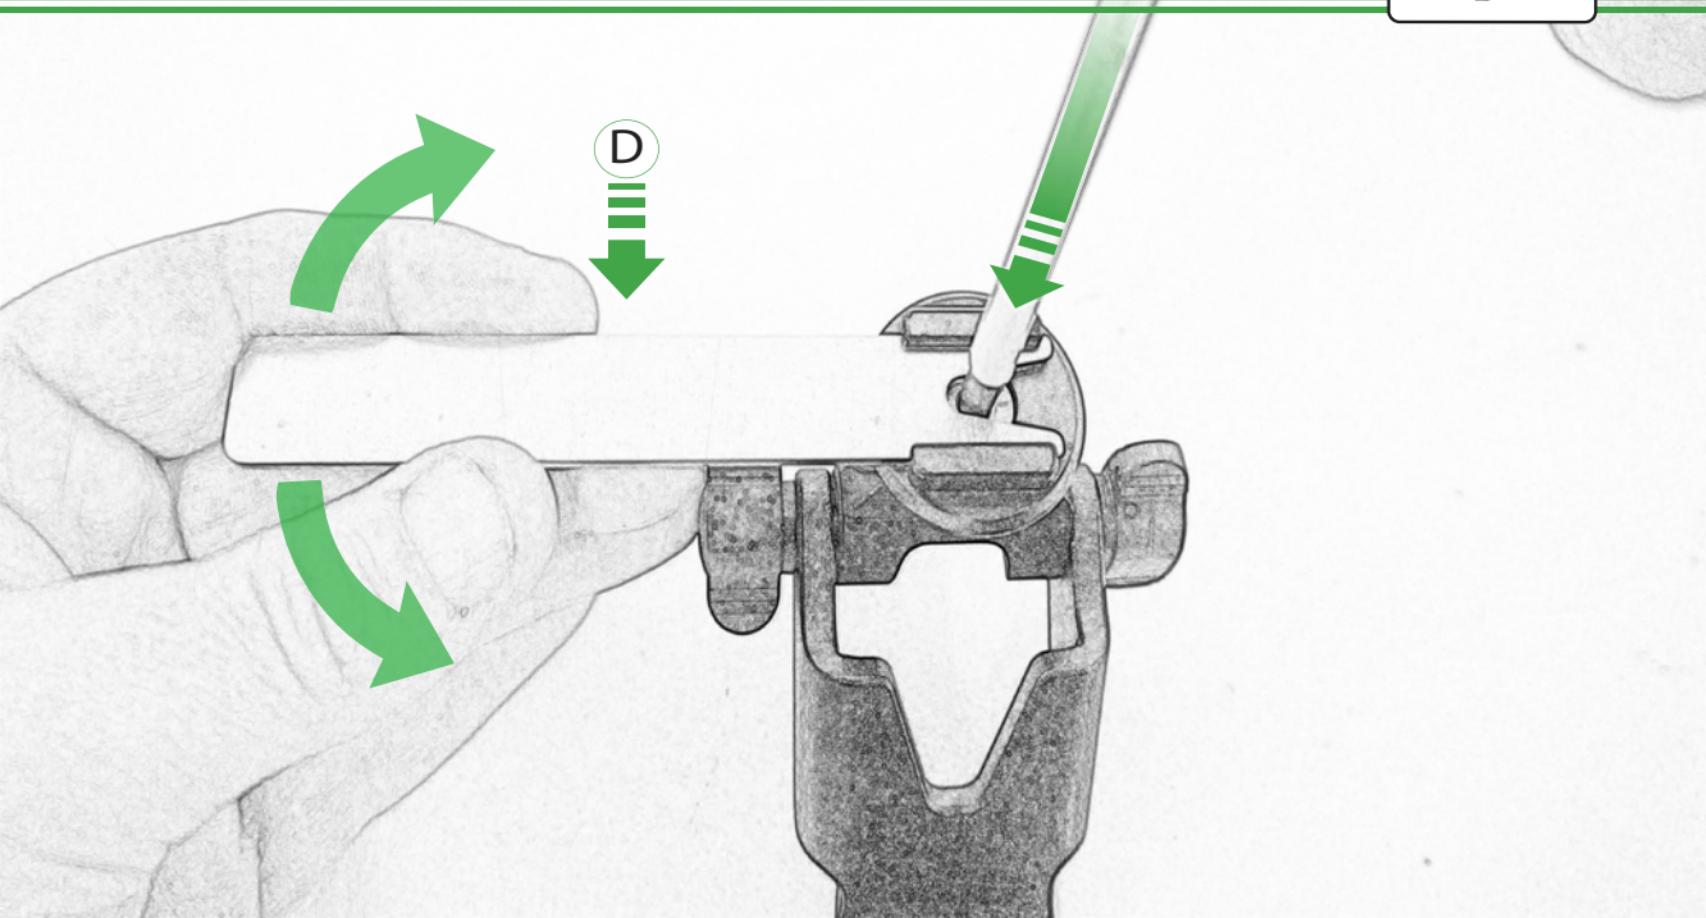





F








M

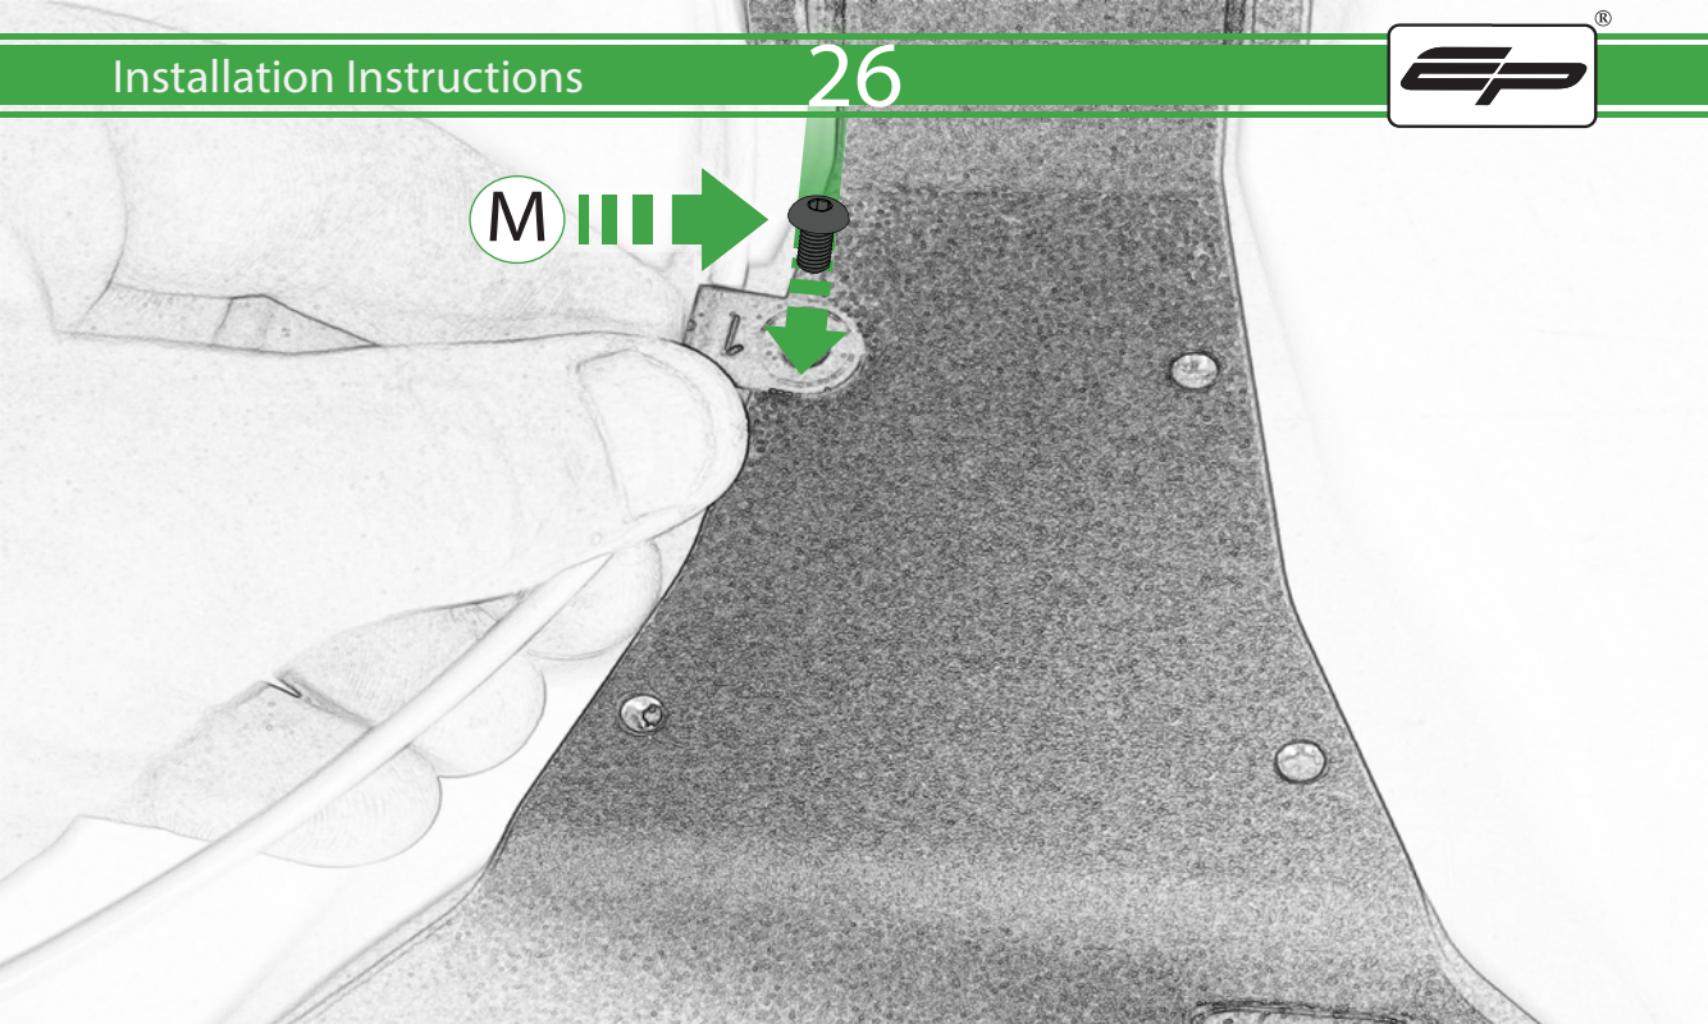


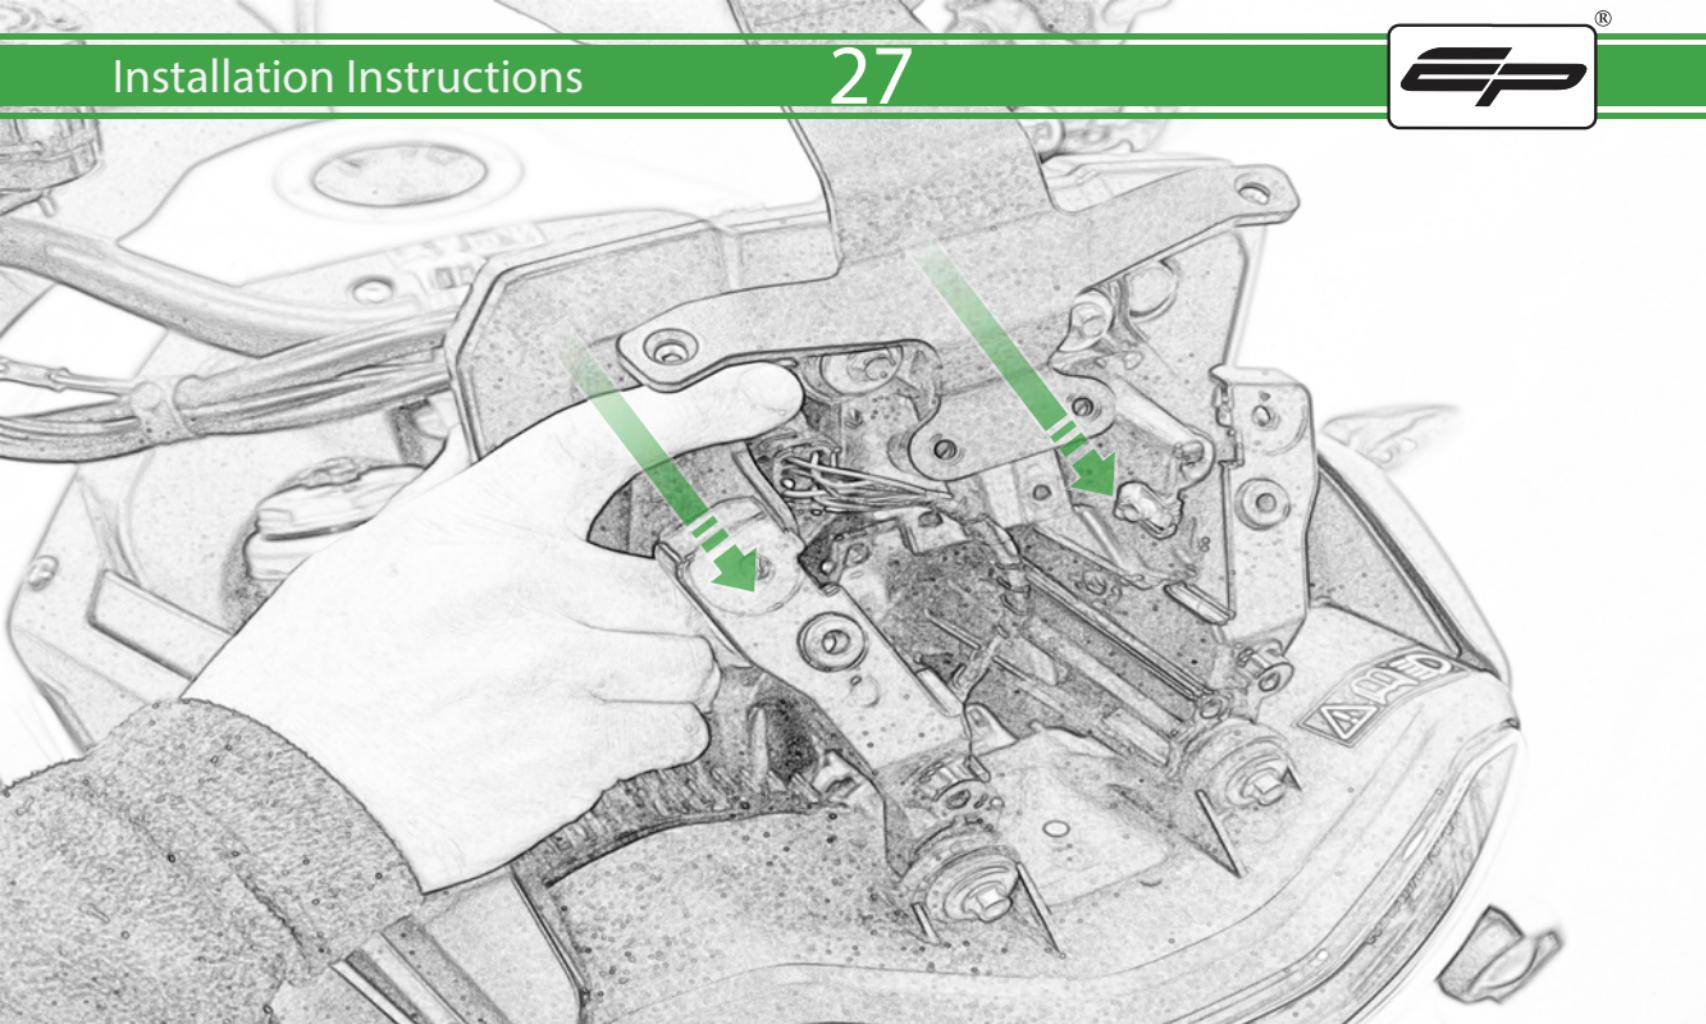


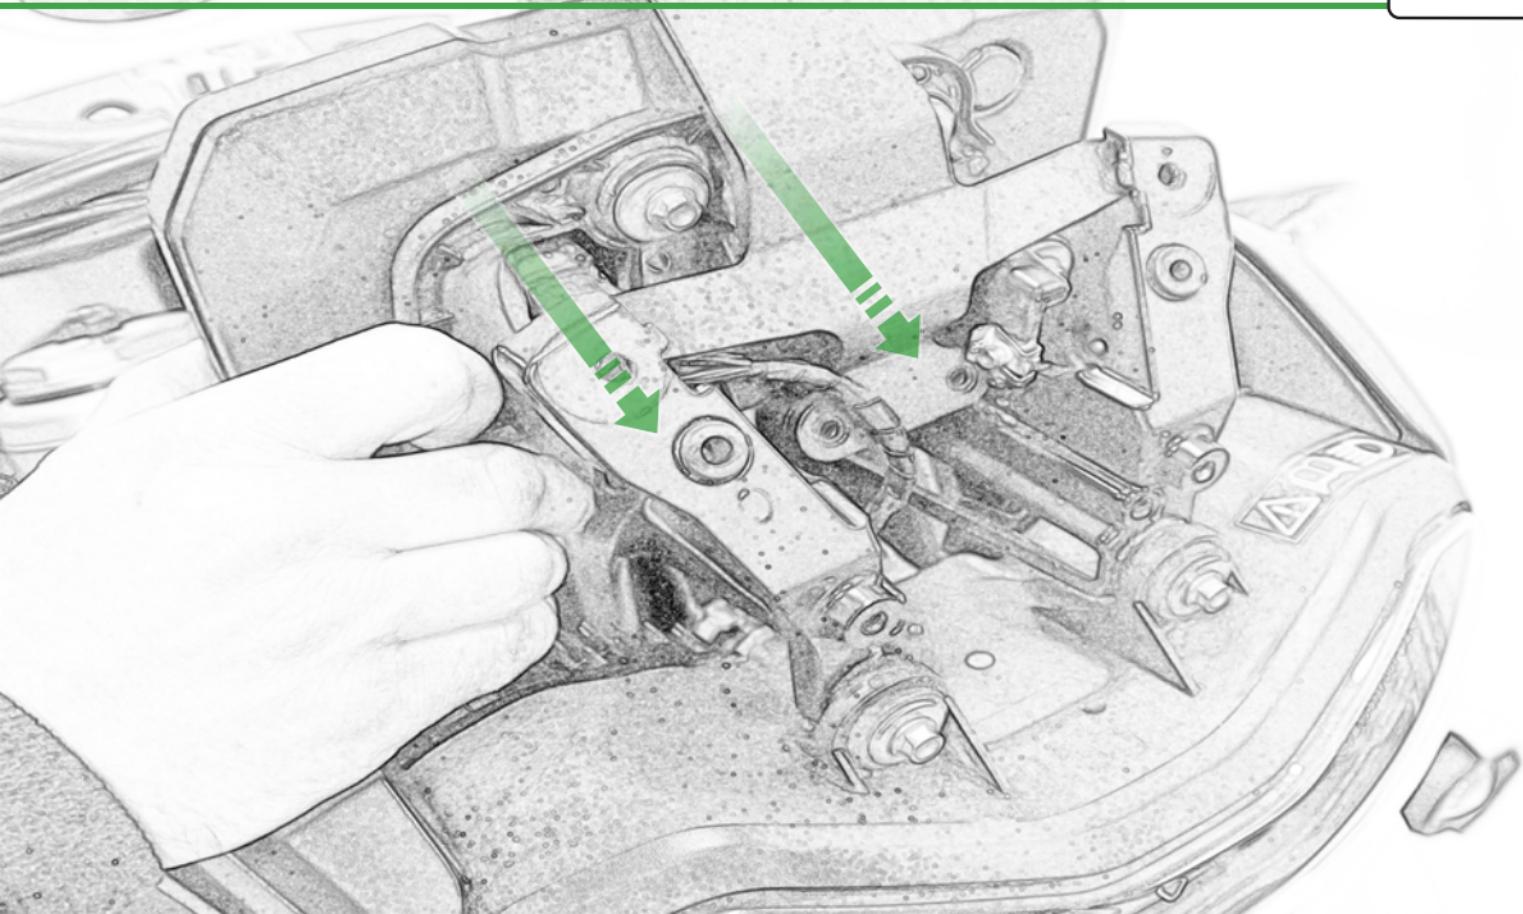

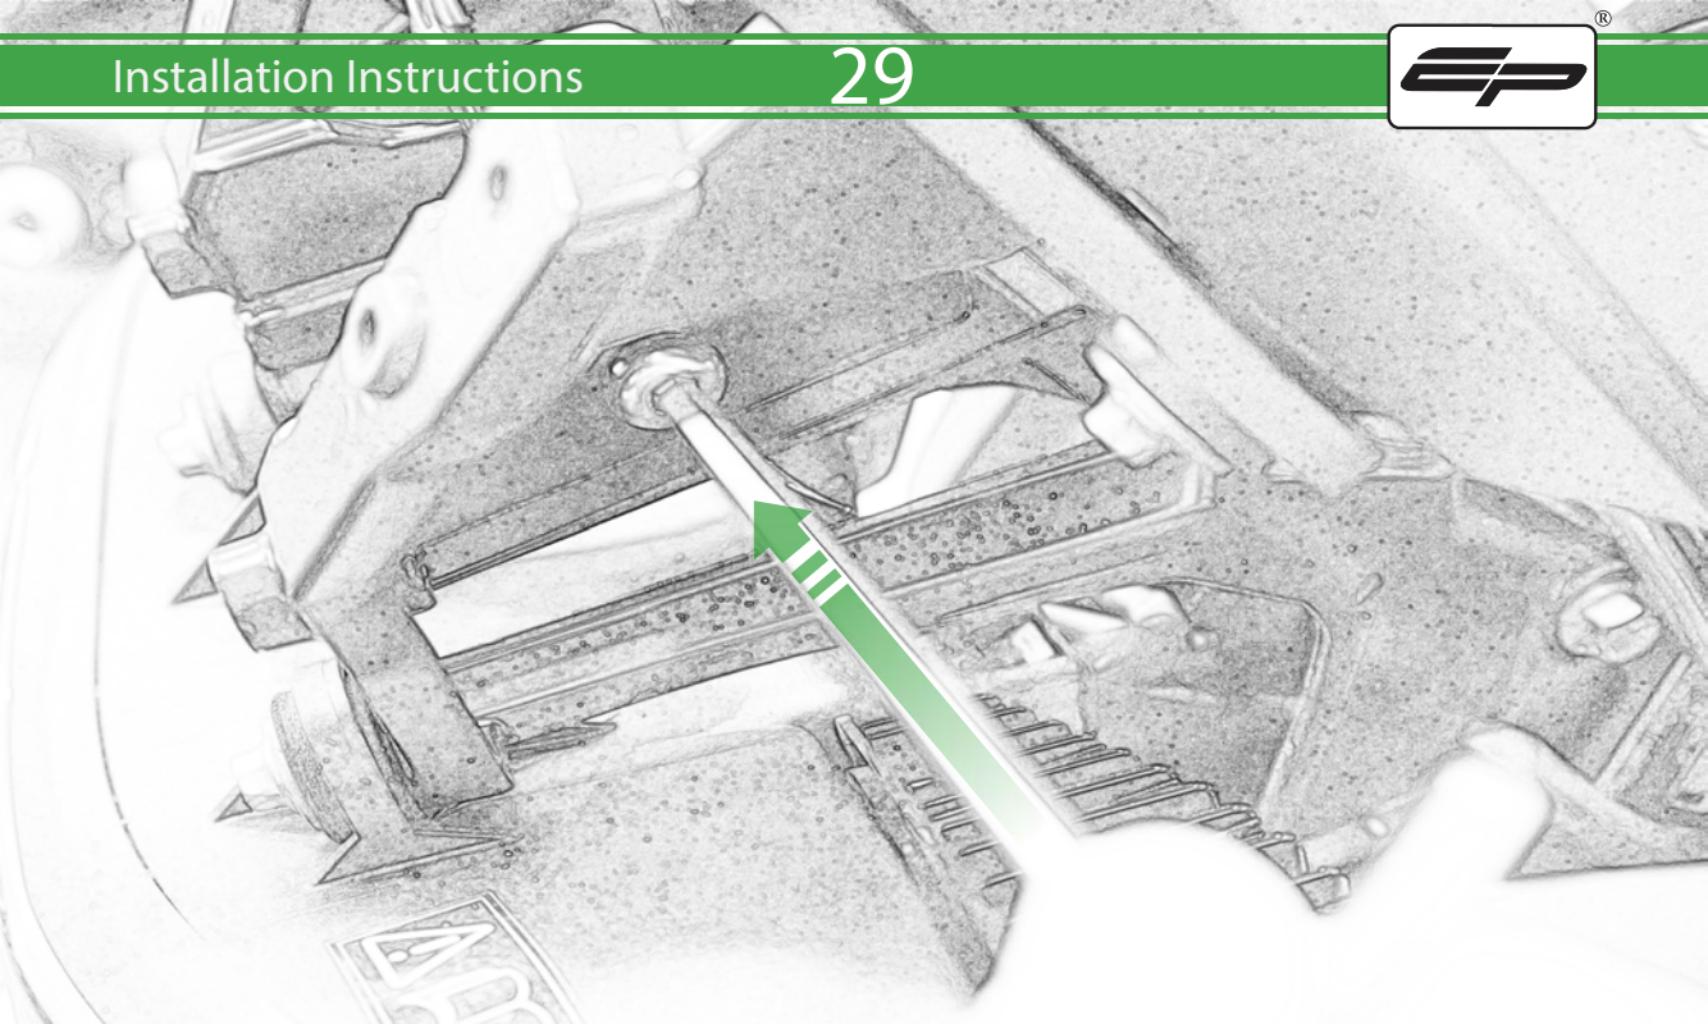

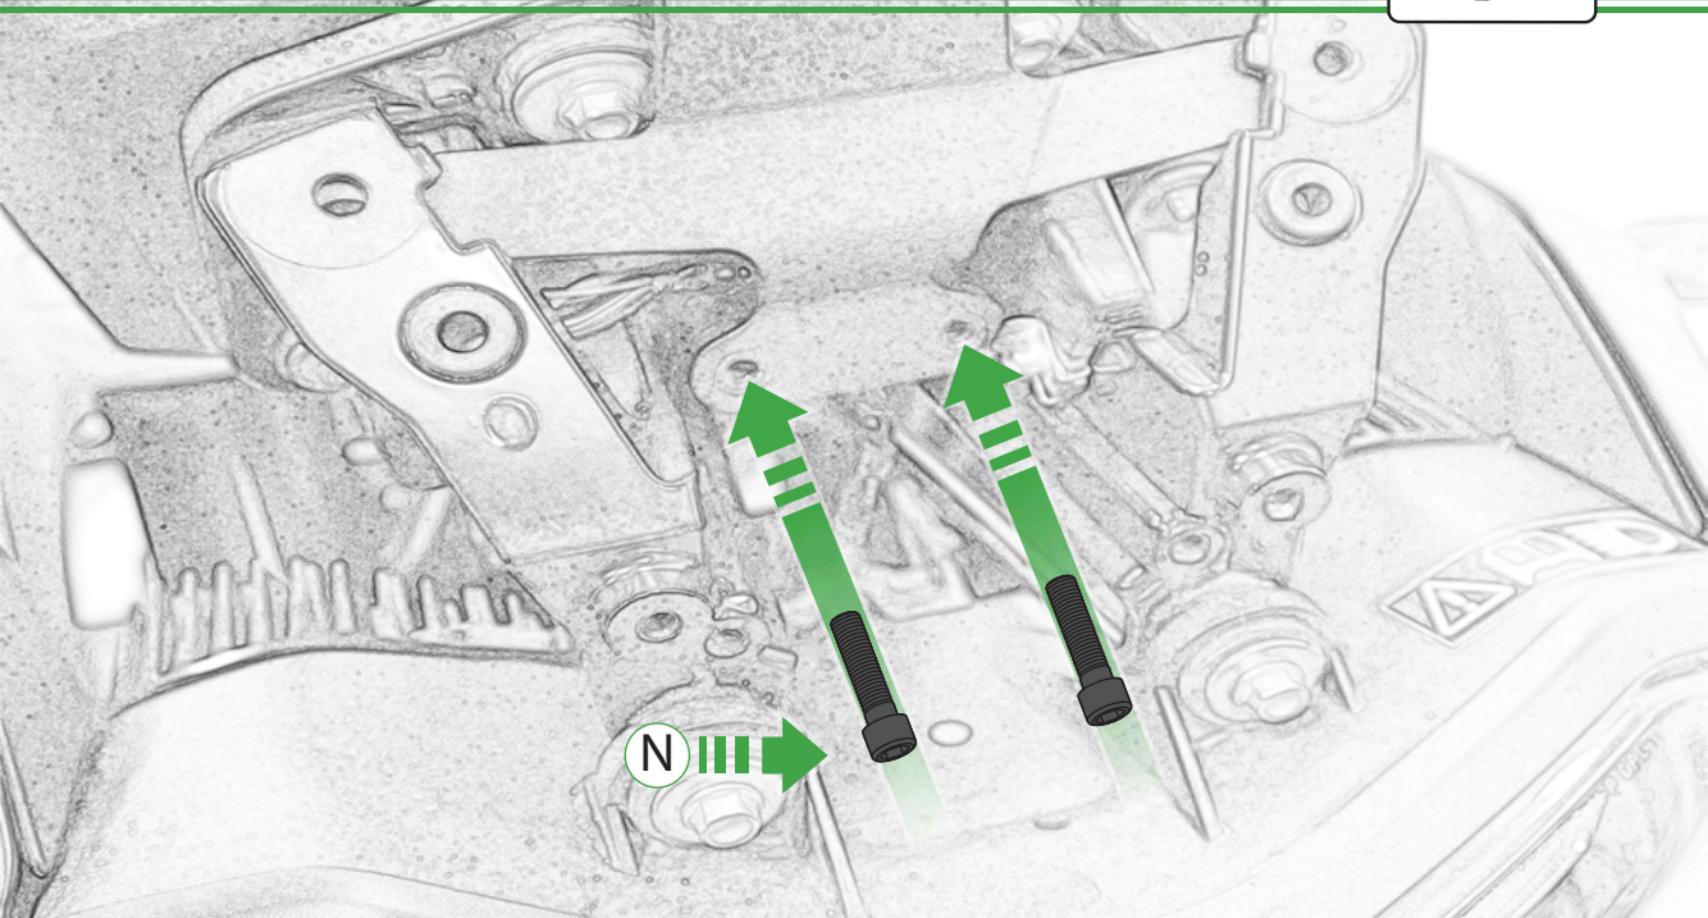

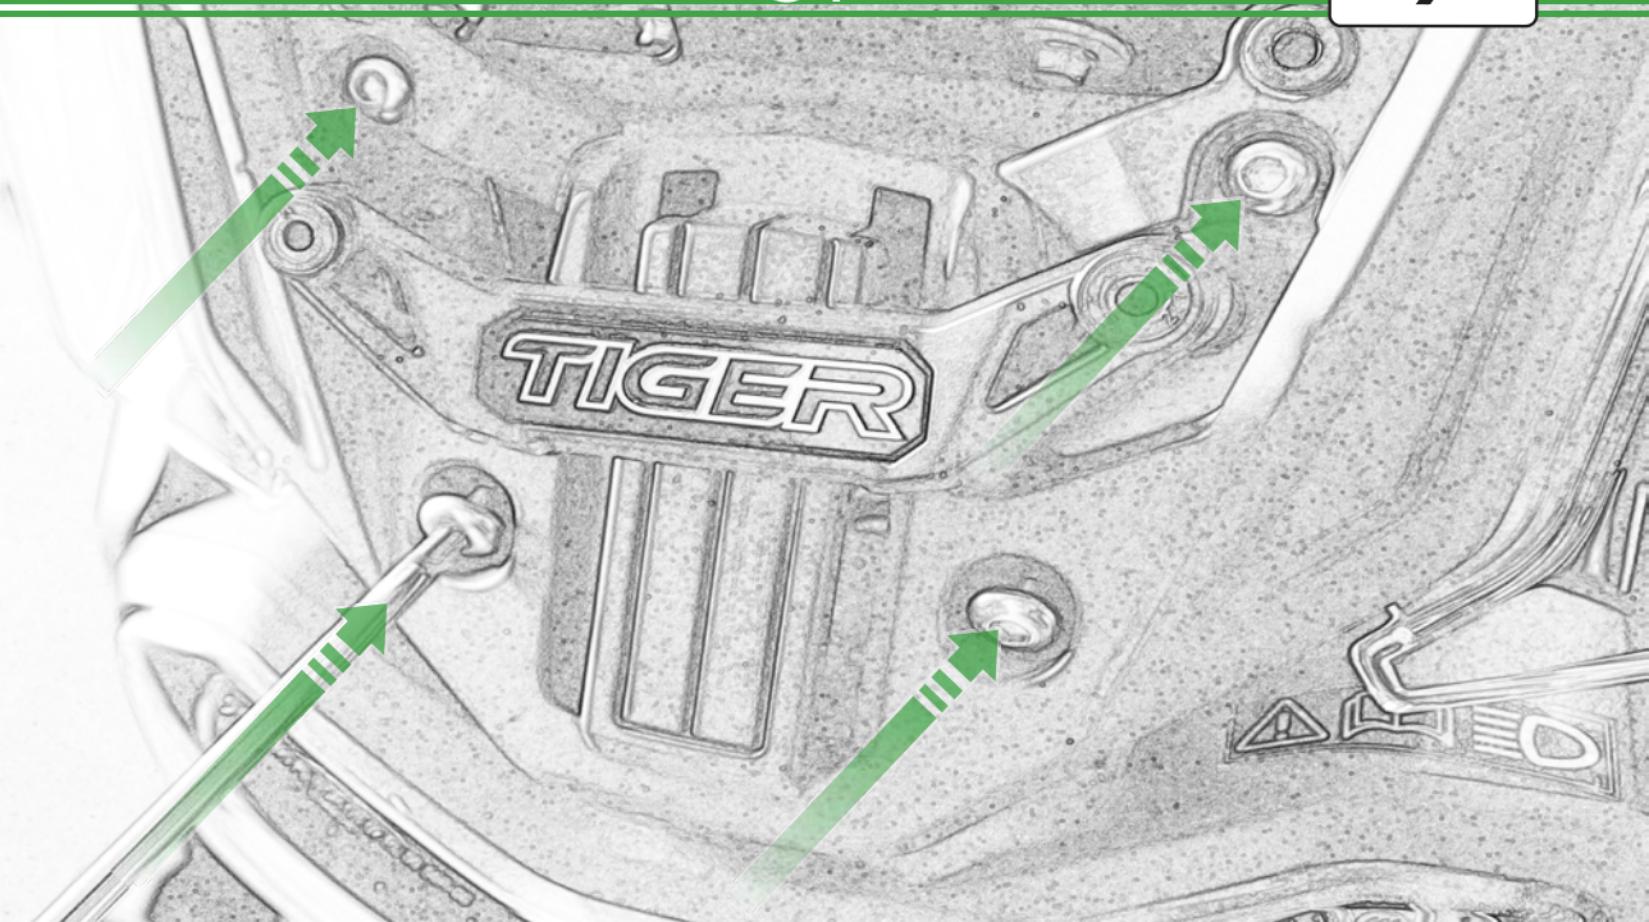

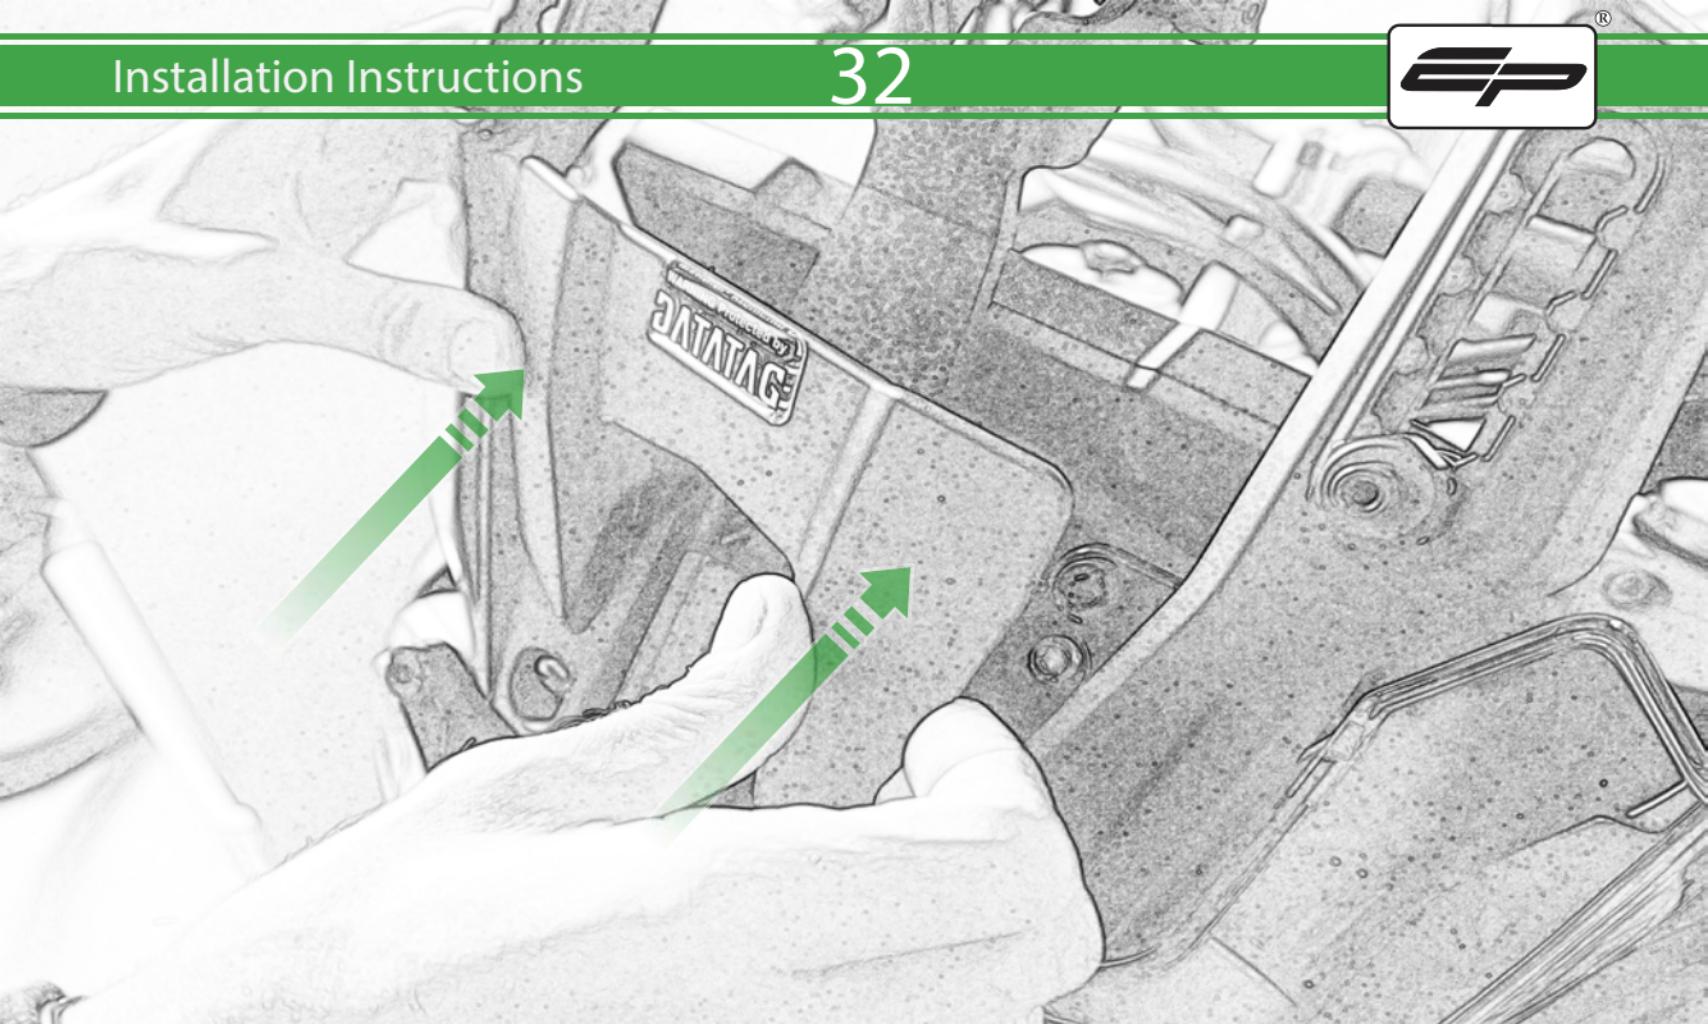






Reverse Stages


4 - 1





Kit Contents PRN014677-014925


- | | | | |
|-----|-------------------------------|---------|--------------------------------|
| (A) | 1 x M6 x 16 Countersunk Screw | (L) | 2 x M5 Black Washer |
| (B) | 1 x Pivot Plate | (M) | 2 x M4 x 5mm Button Head Bolts |
| (C) | 1 x SP Connect Plate | Sub Kit | |
| (D) | 1 x Spanner | (N) | 2 x M5 x 35mm Caphead Bolt |
| (E) | 2 x M5 x 10mm Caphead Bolts | (M) | 1 x M5 Nylock Nut |
| (F) | 2 x P-clips (No.1) | | |
| (G) | 2 x P-clips (No.2) | | |
| (H) | 2 x P-clips (No.3) | | |
| (I) | 2 x P-clips (No.4) | | |
| (J) | 2 x Lobe Screw | | |
| (K) | 2 x Locking Washer | | |

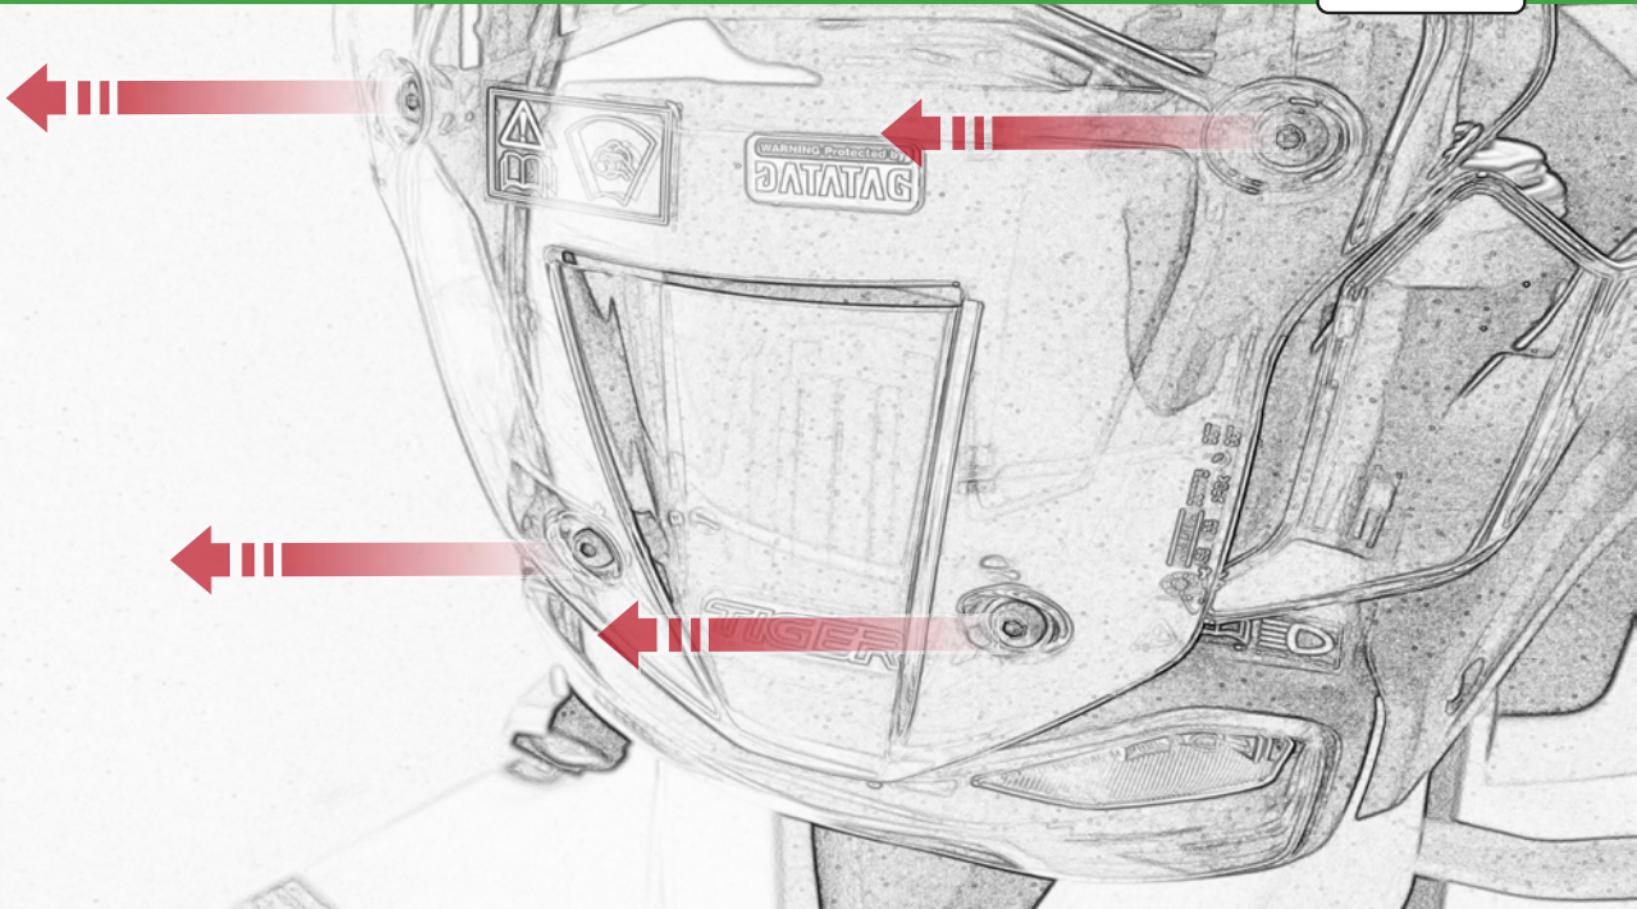


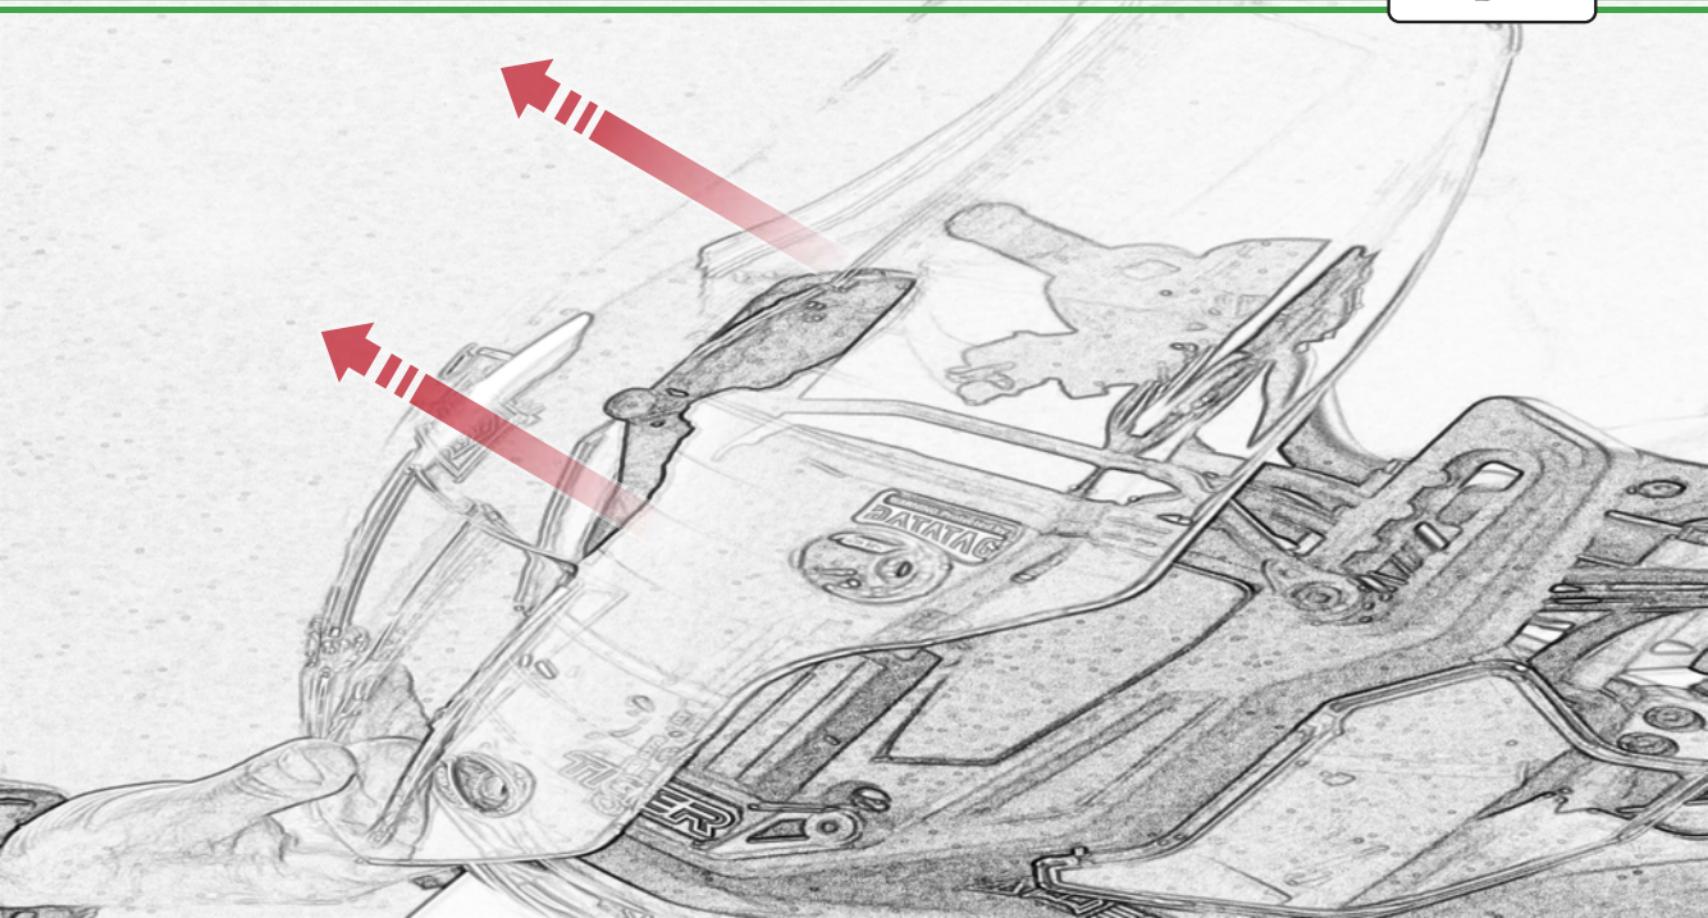


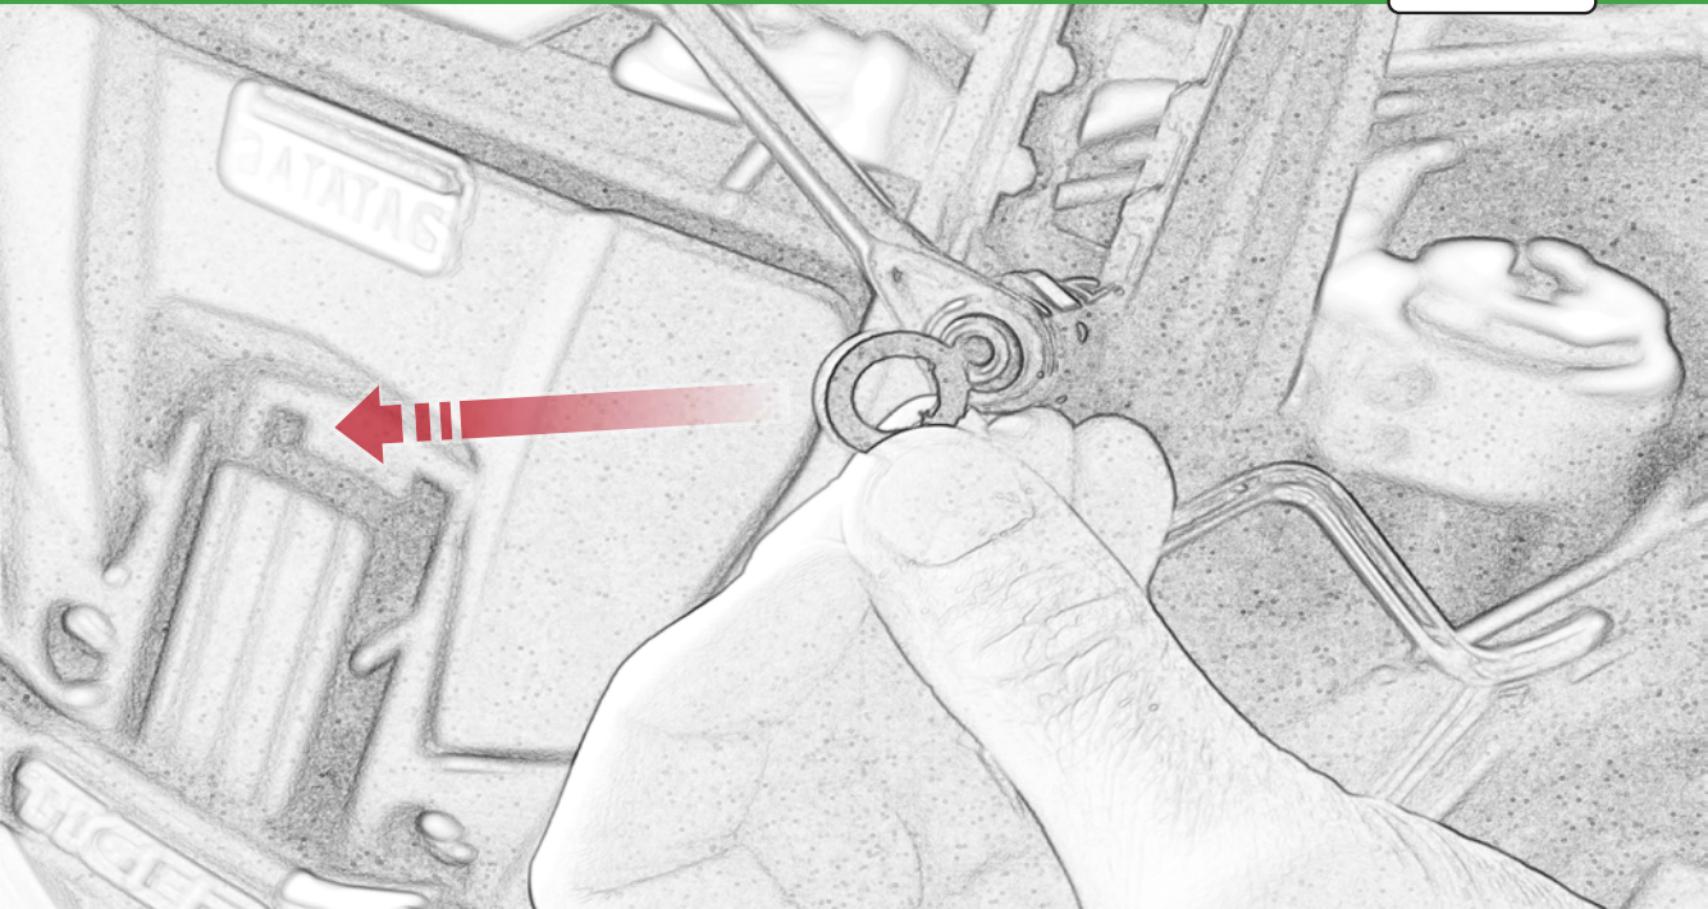


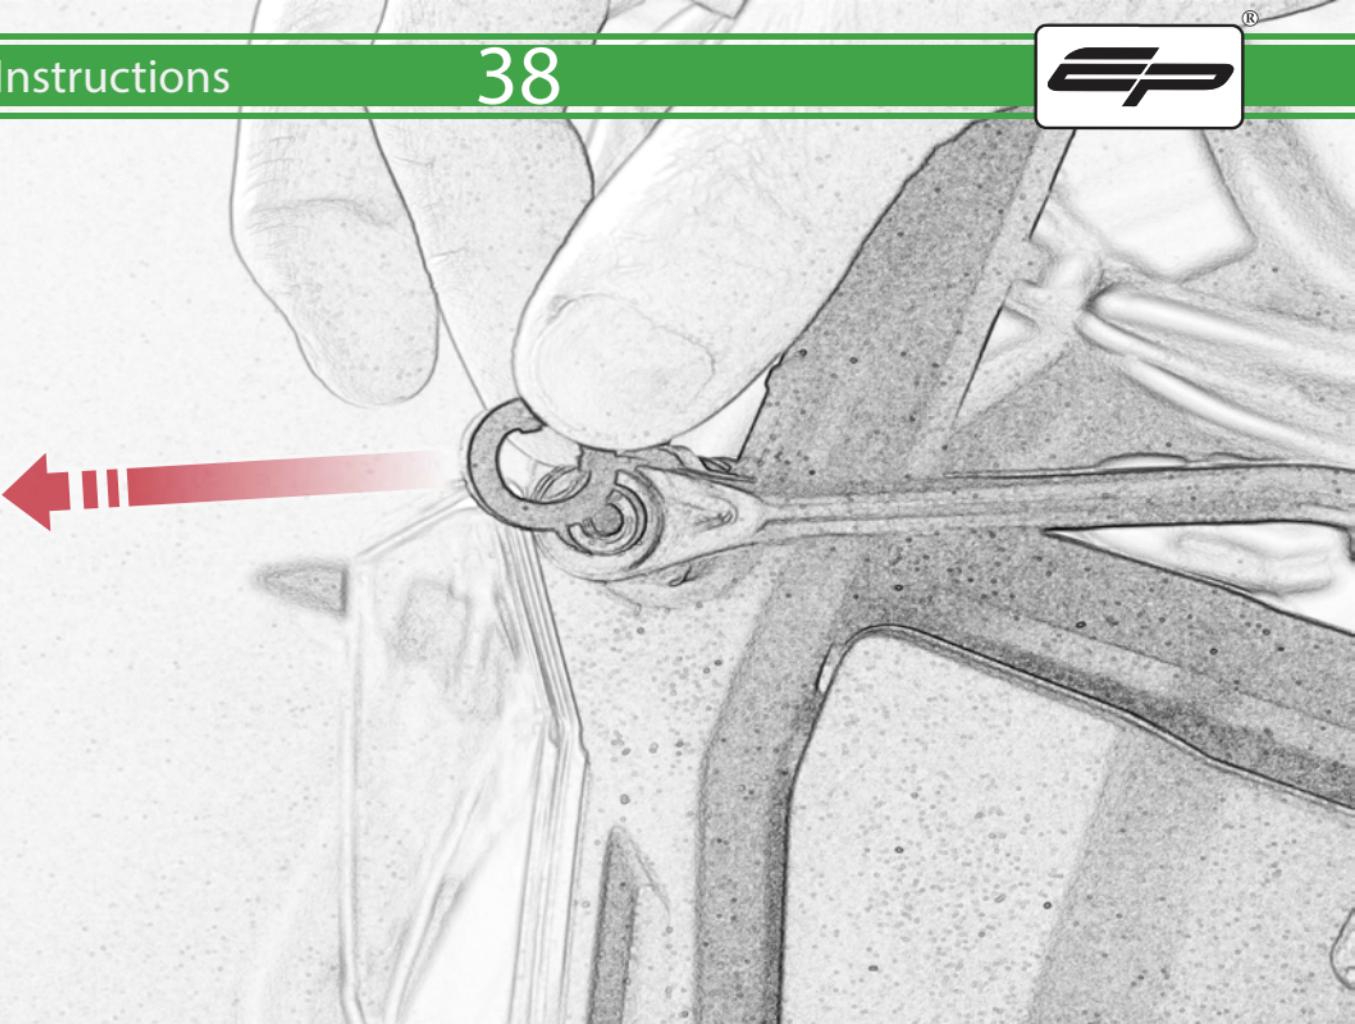

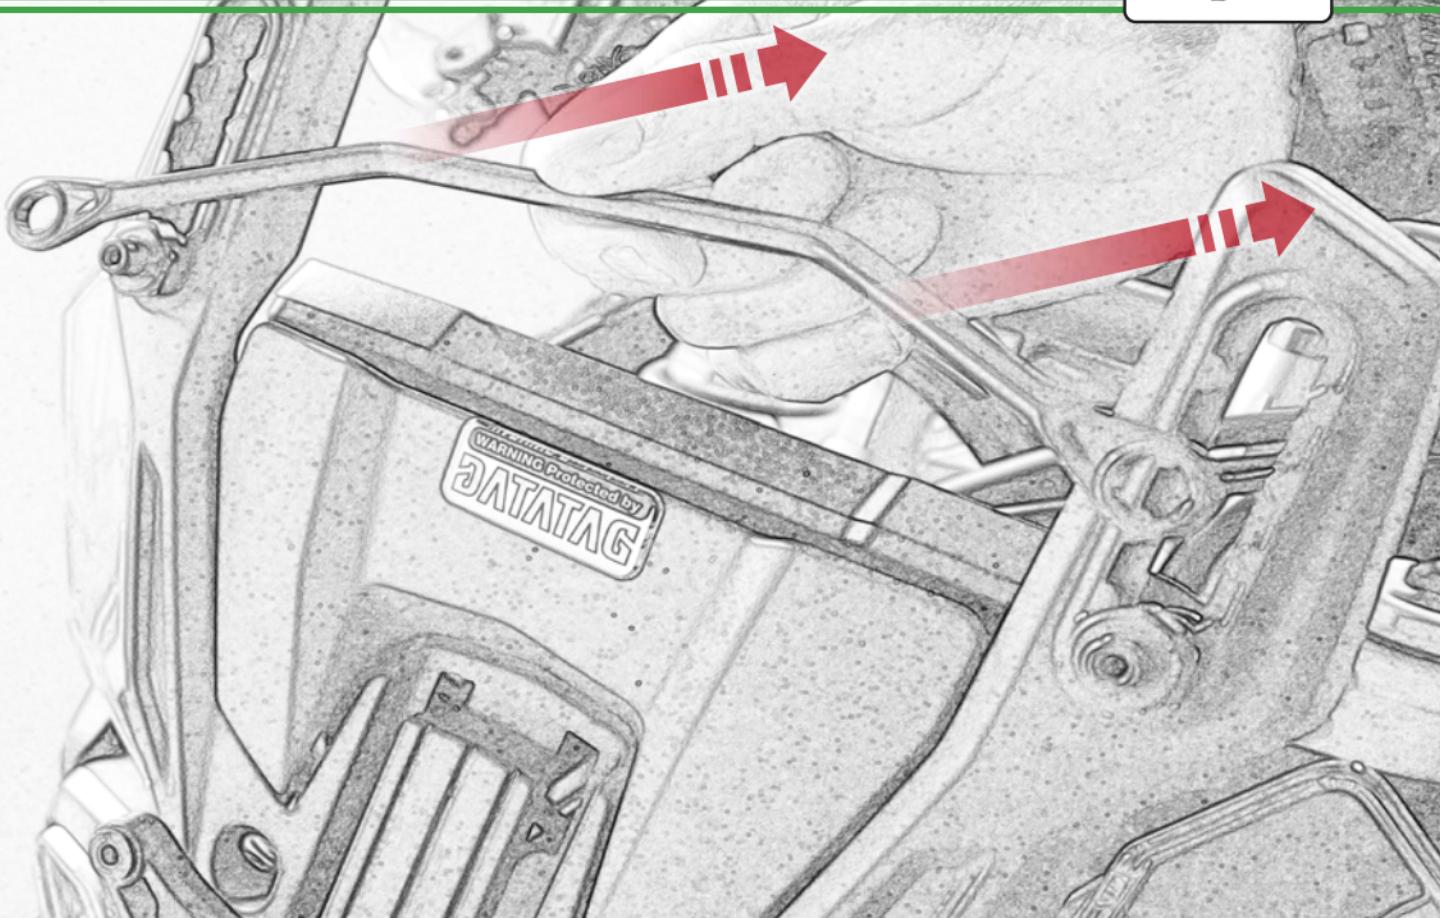


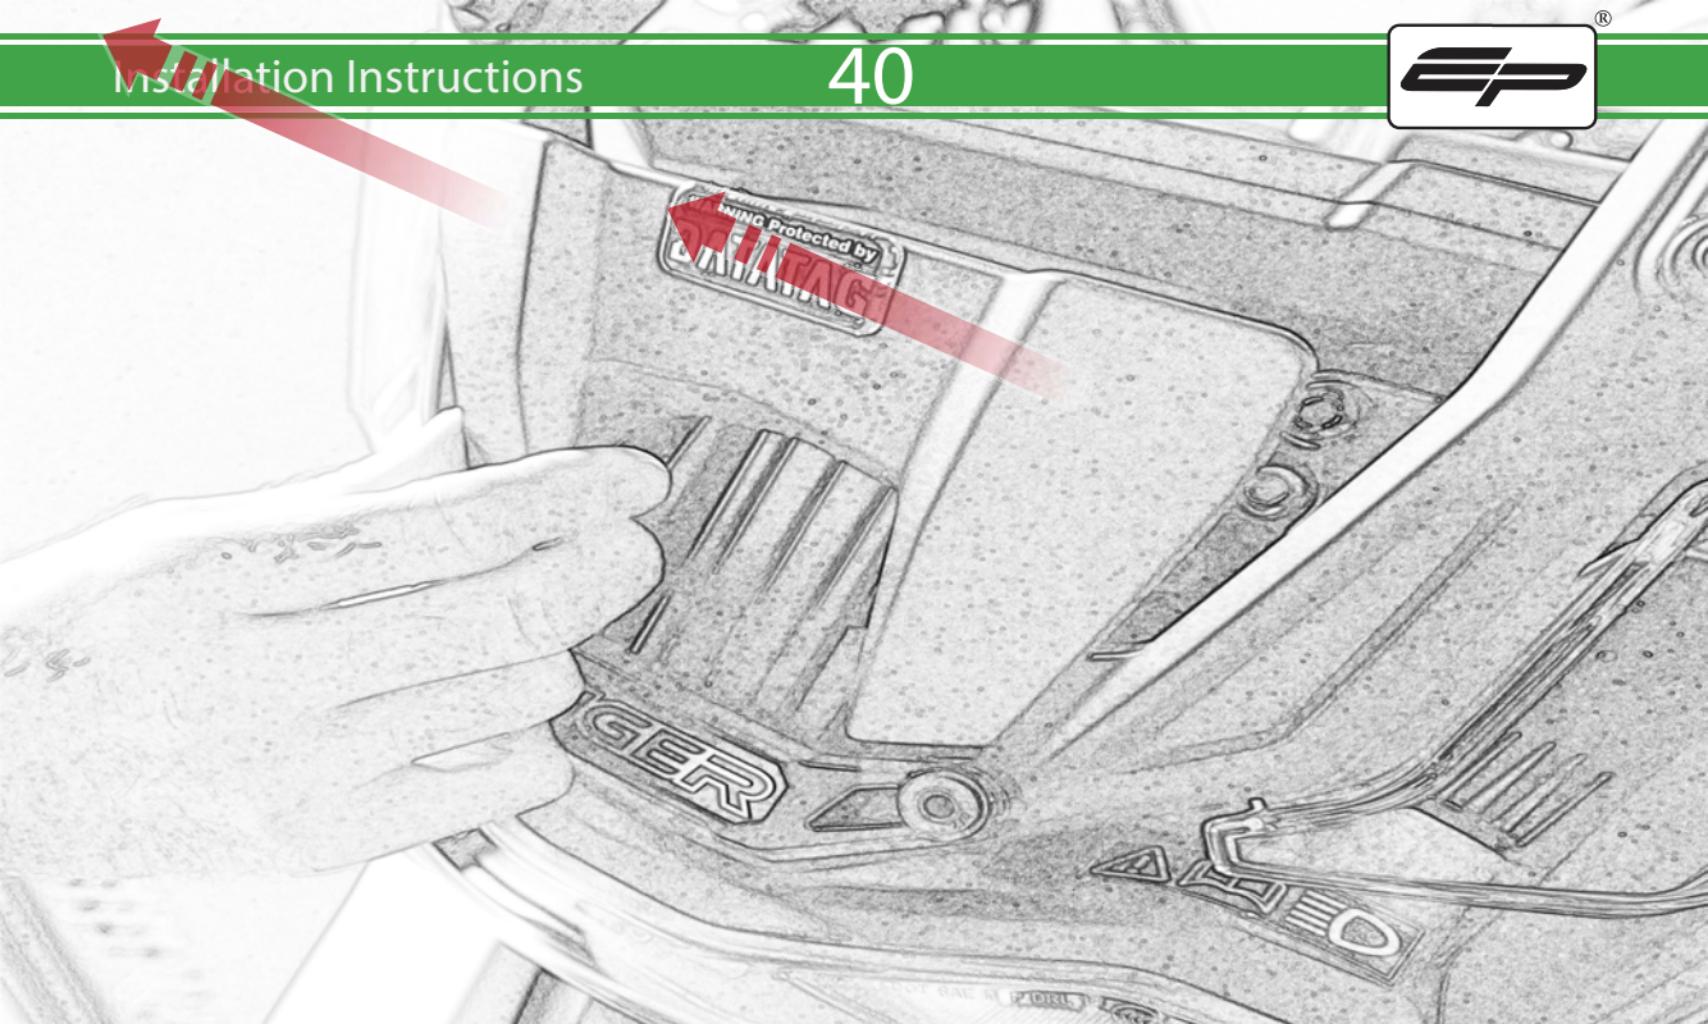


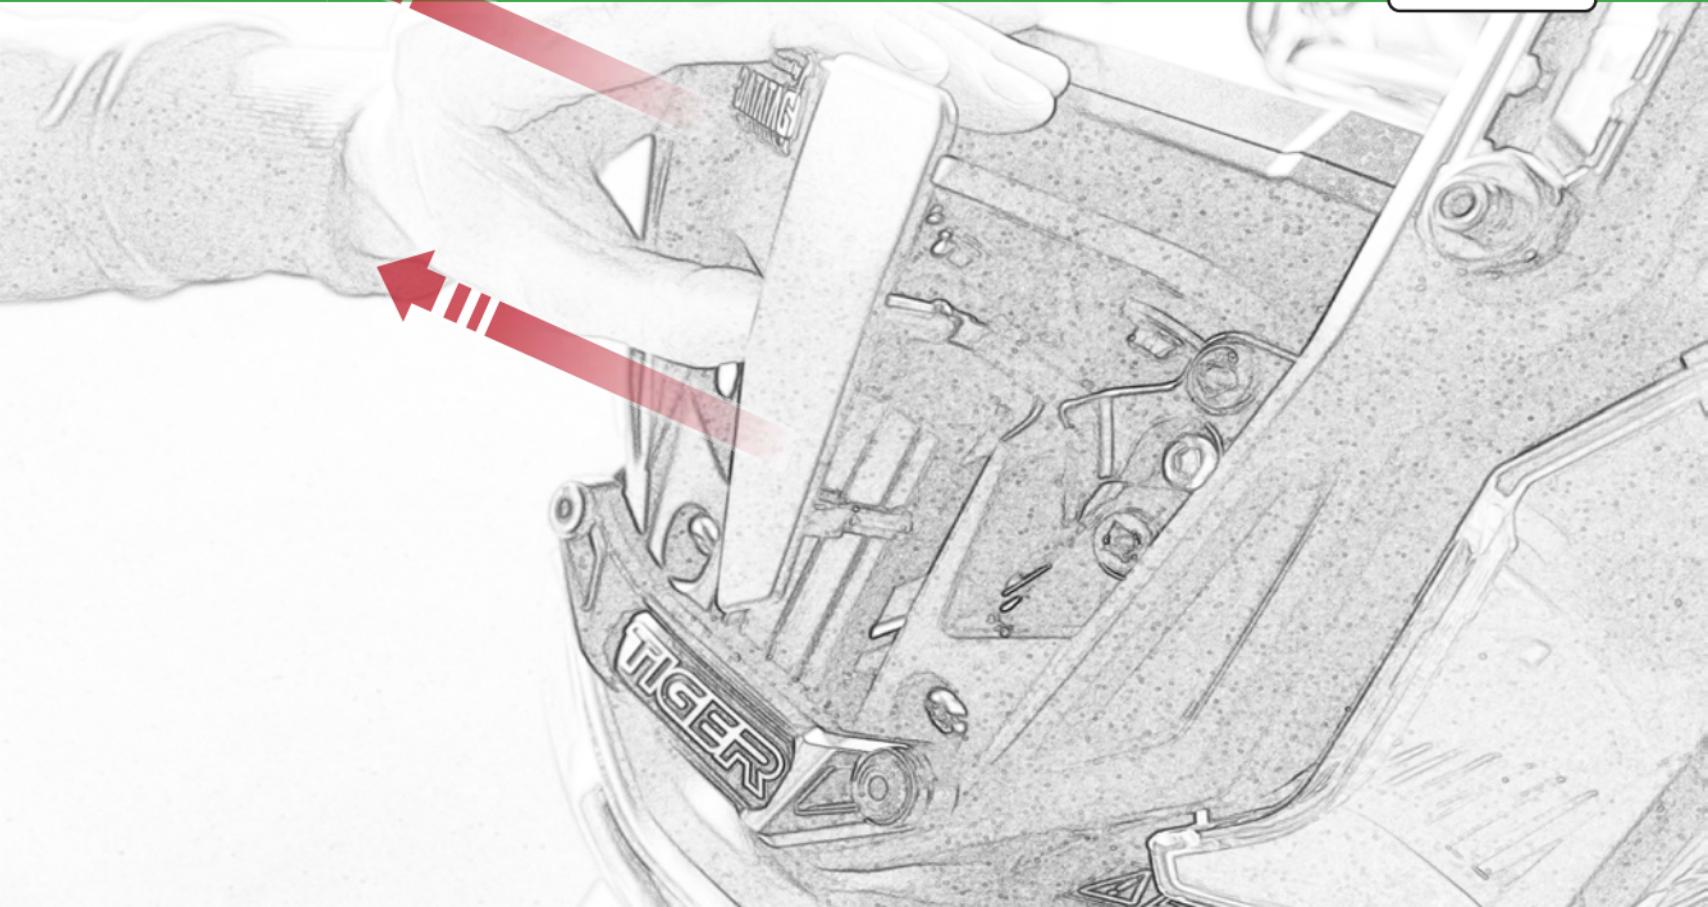


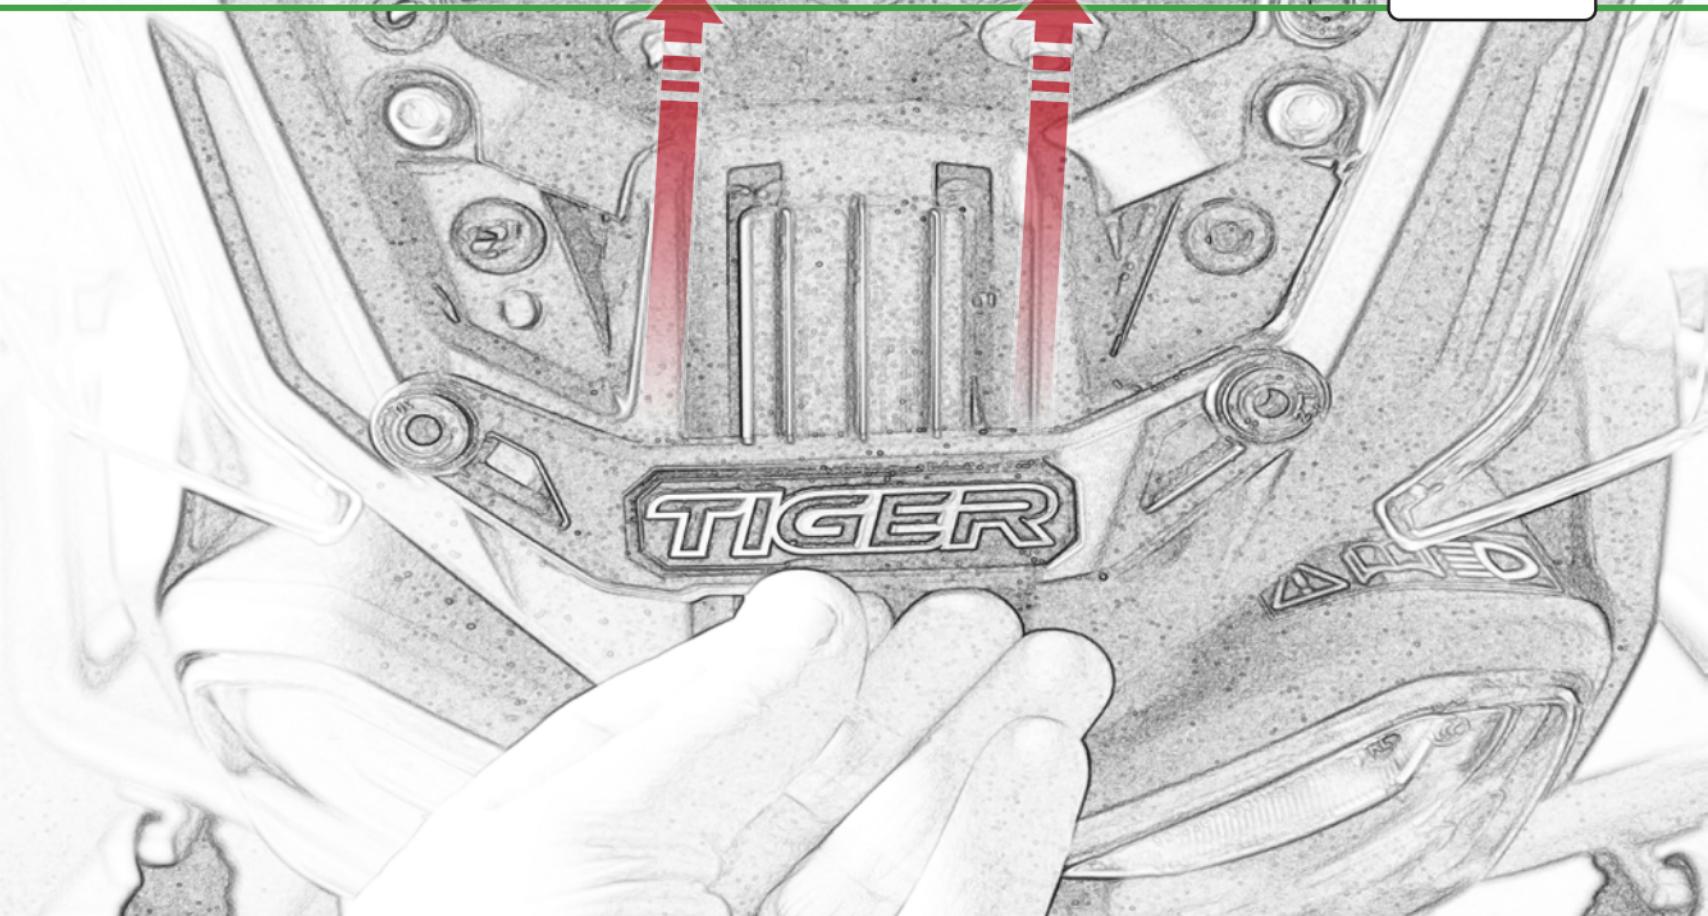





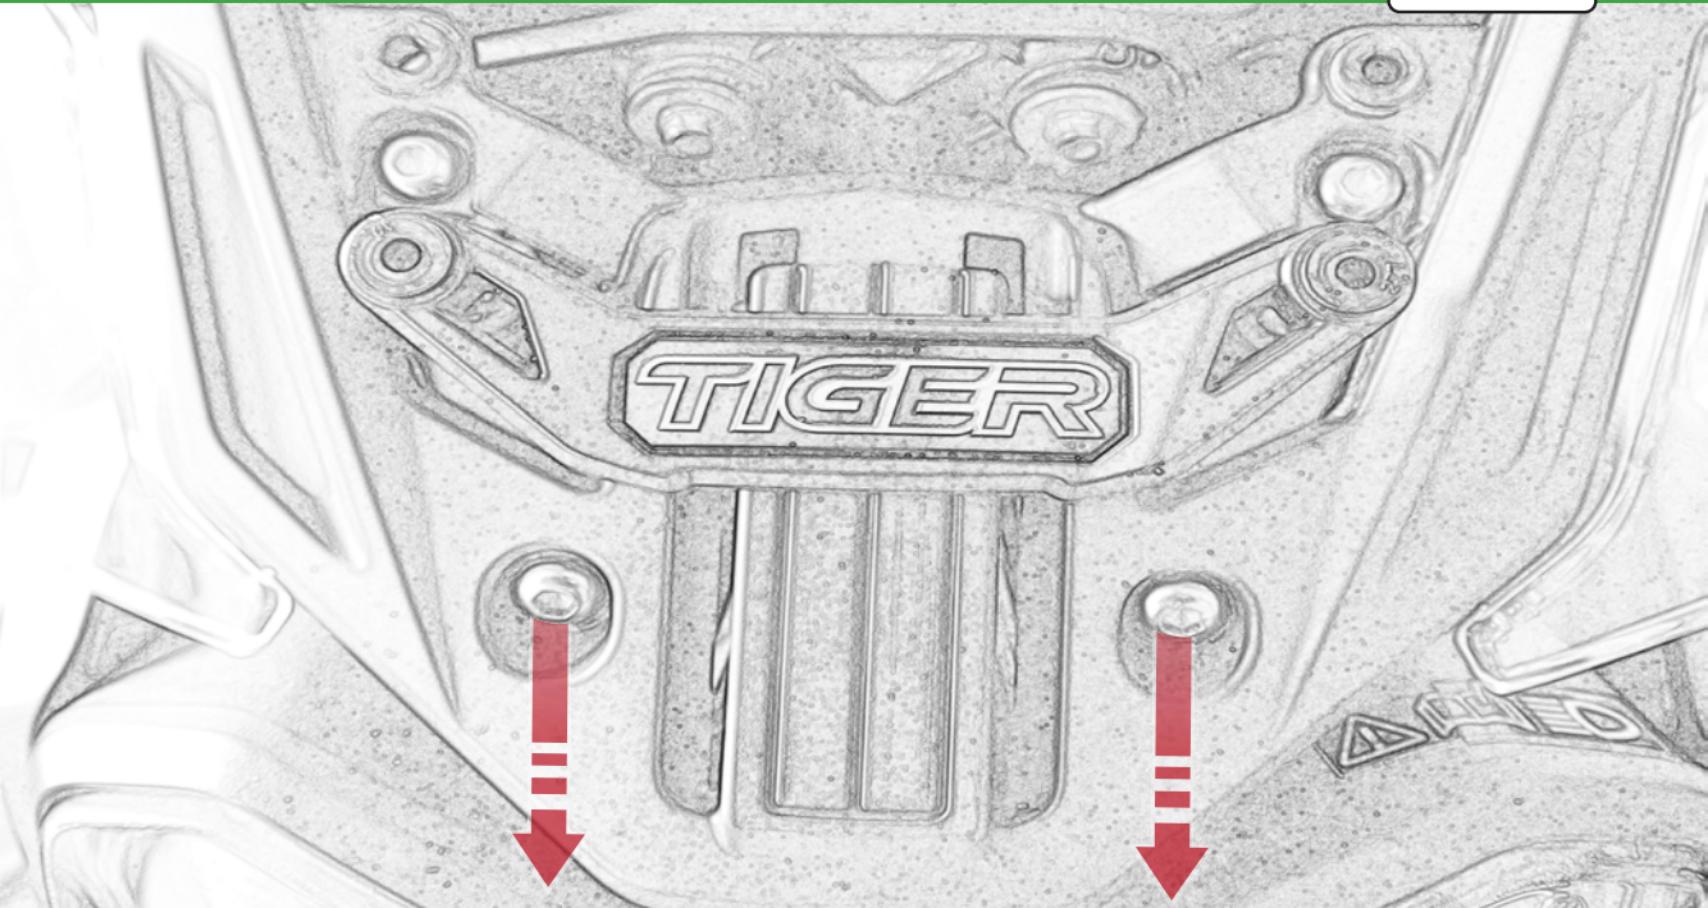


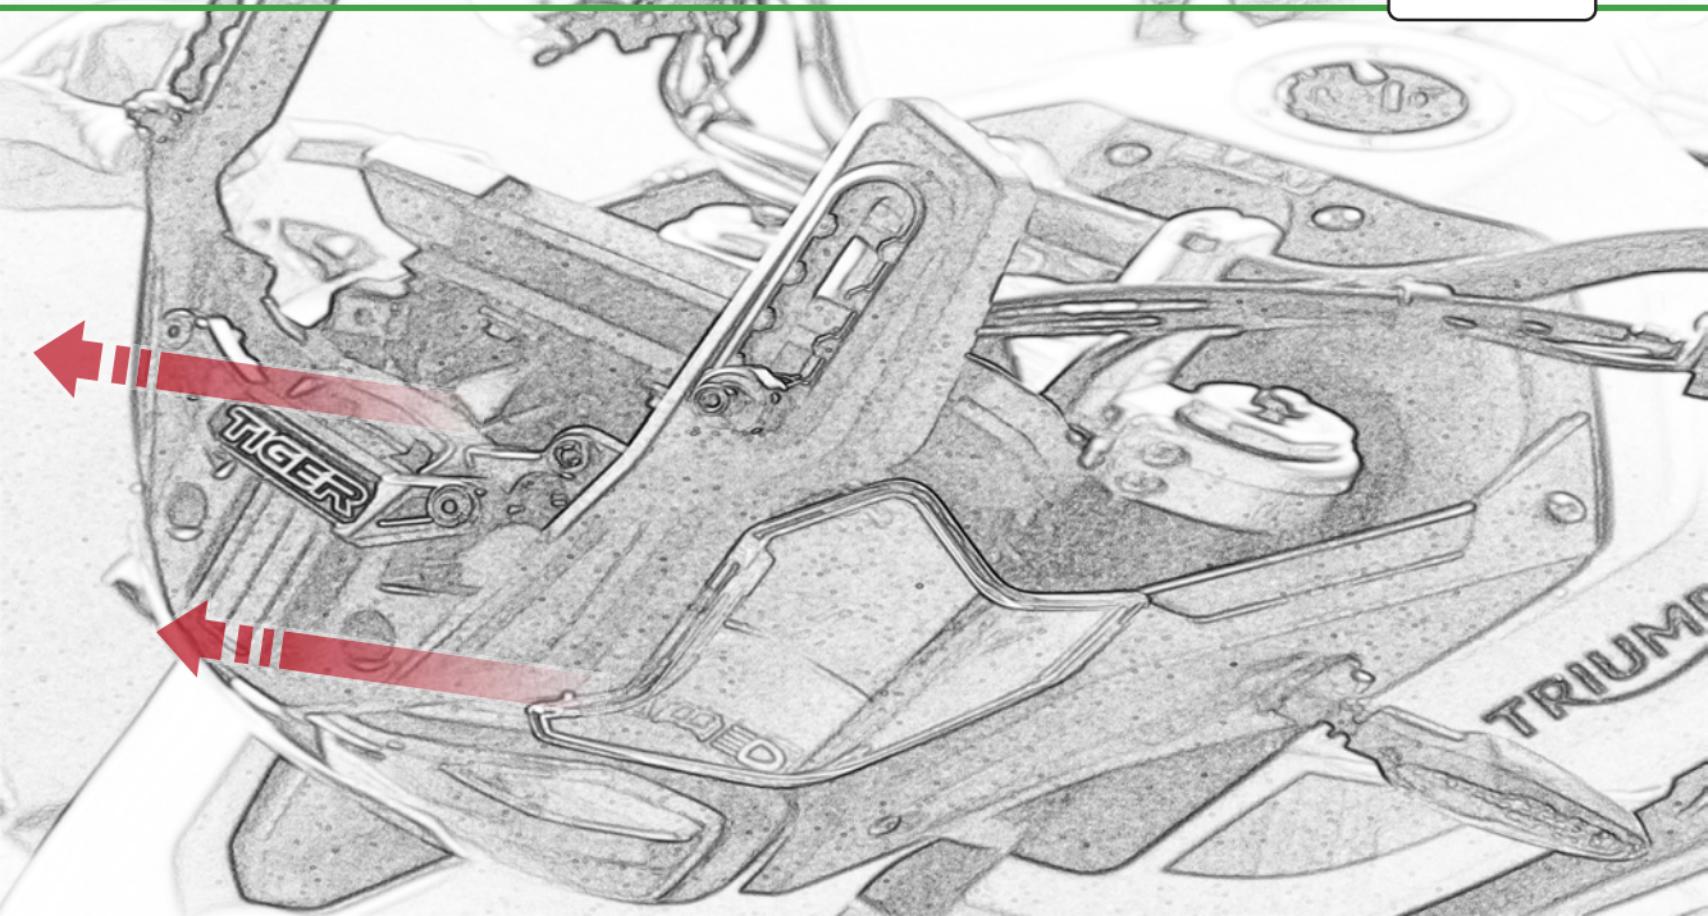


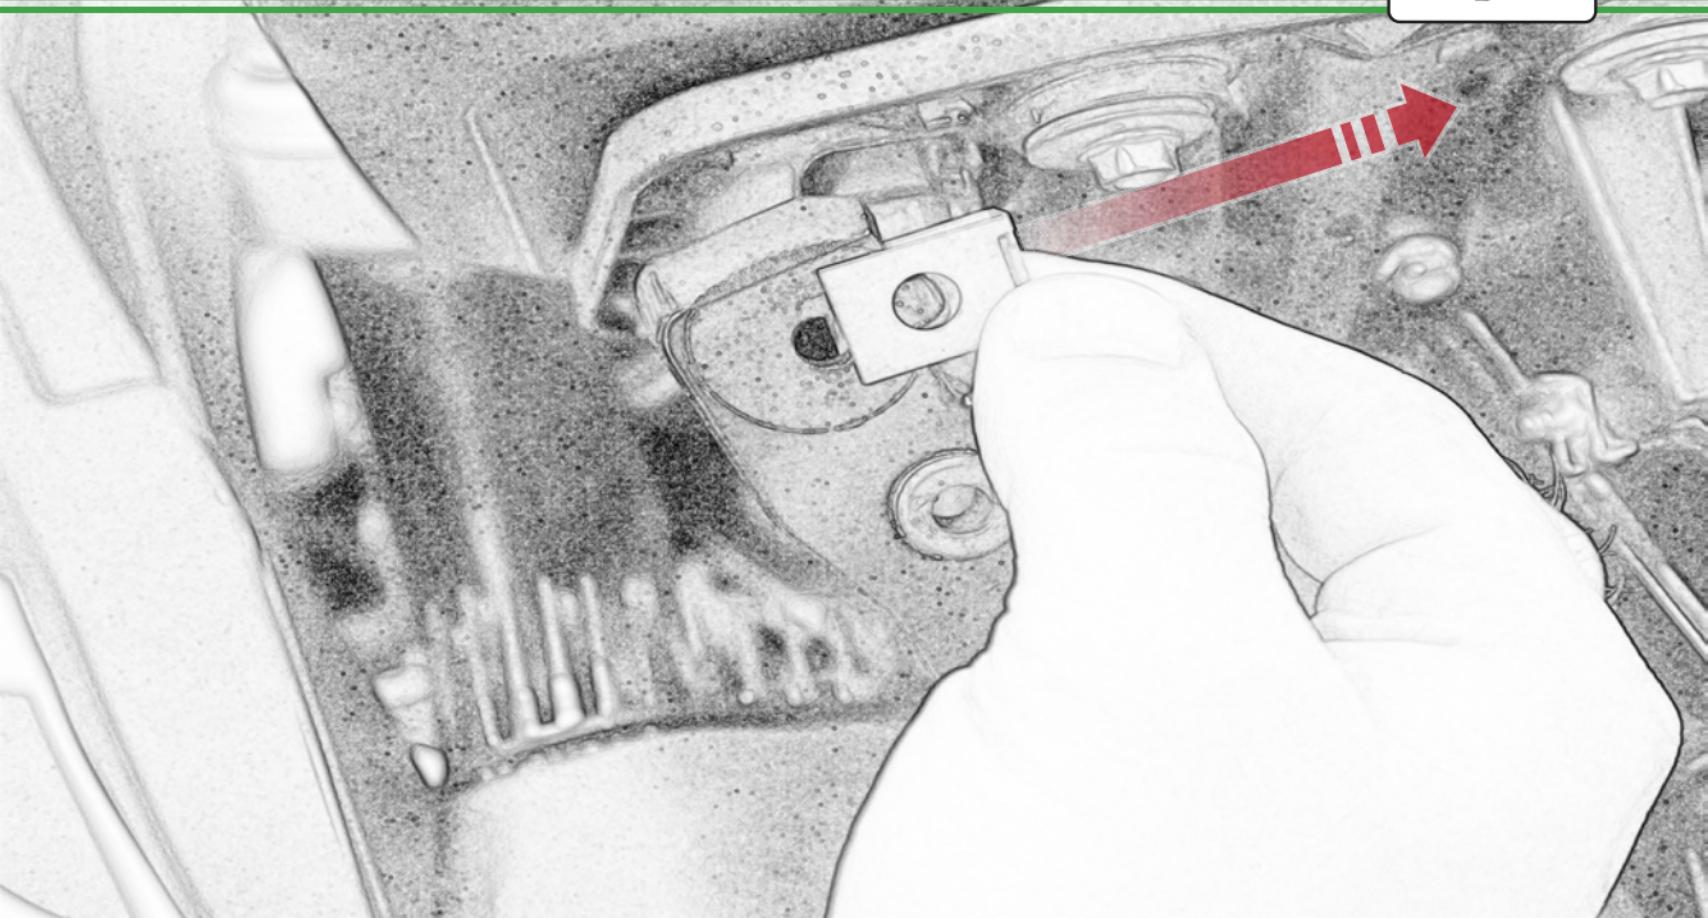

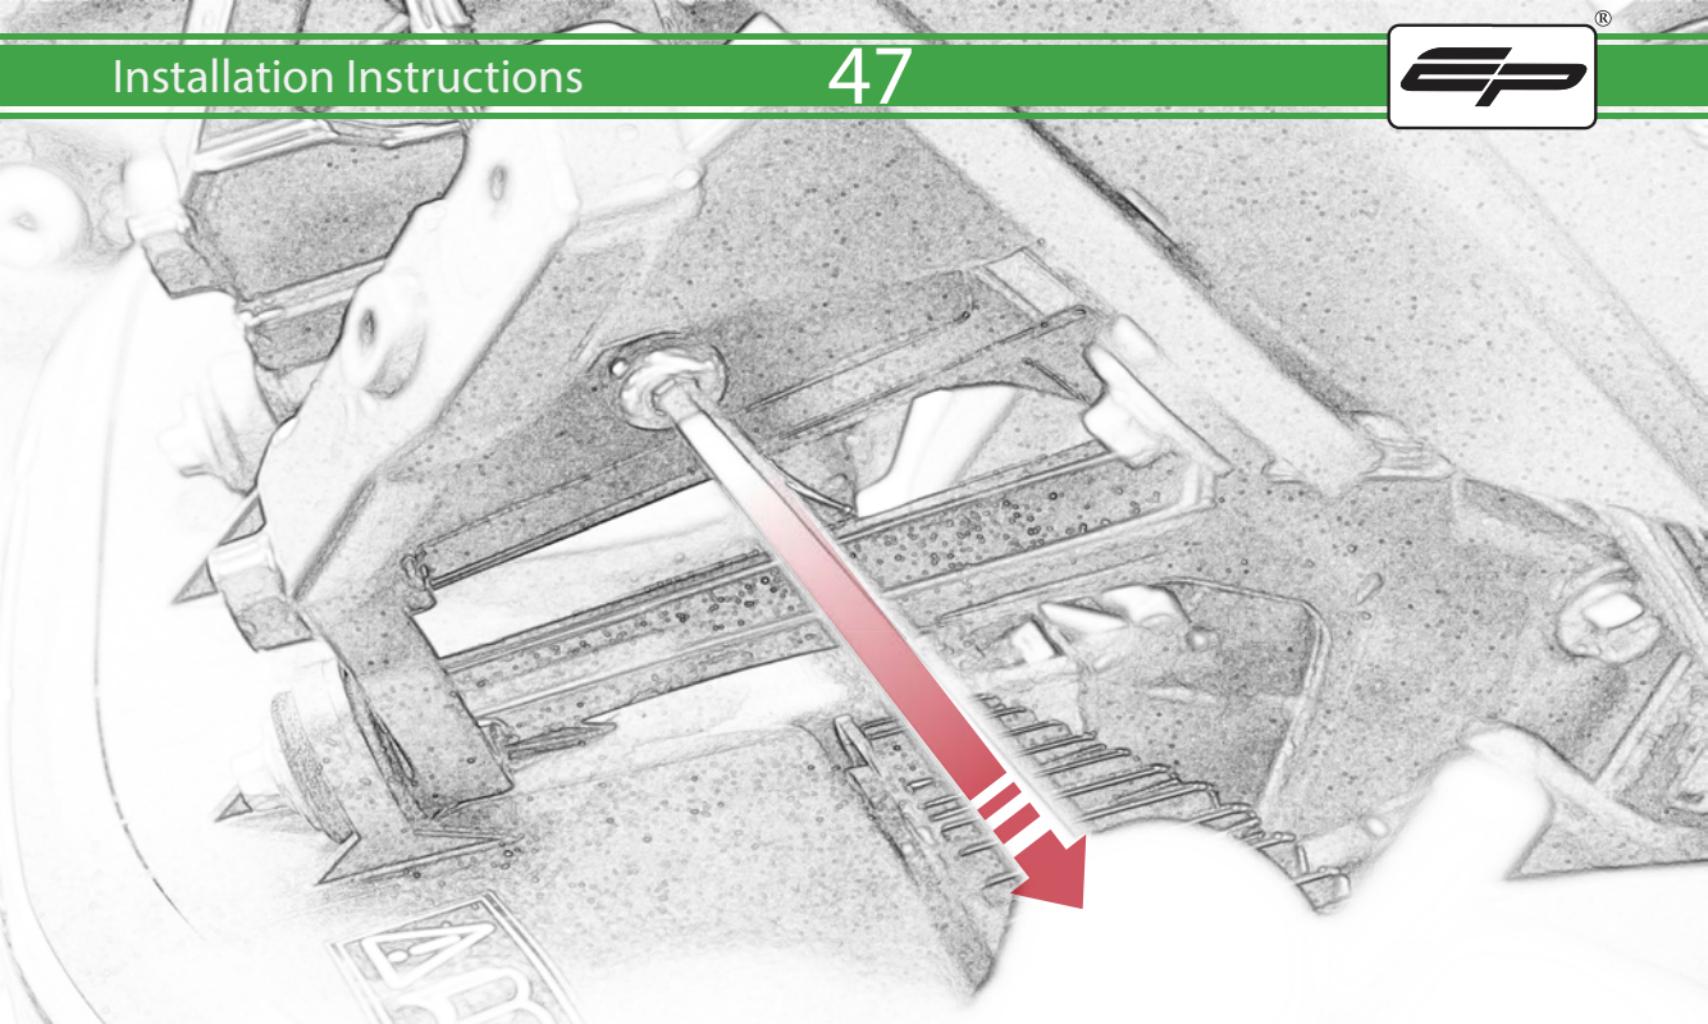

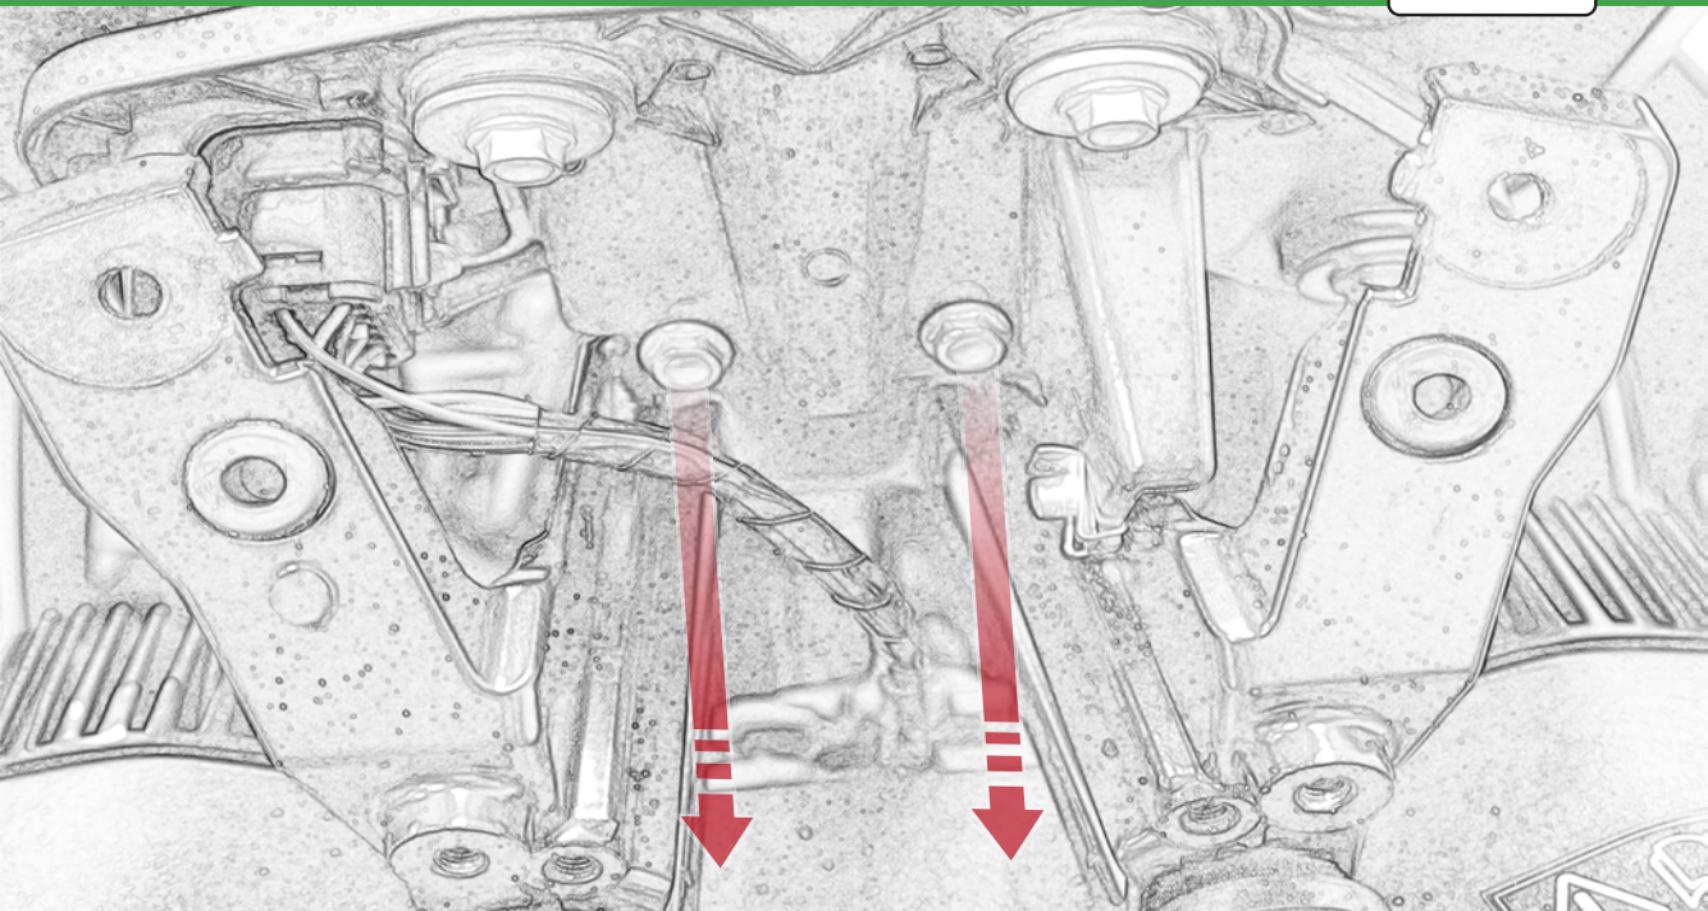


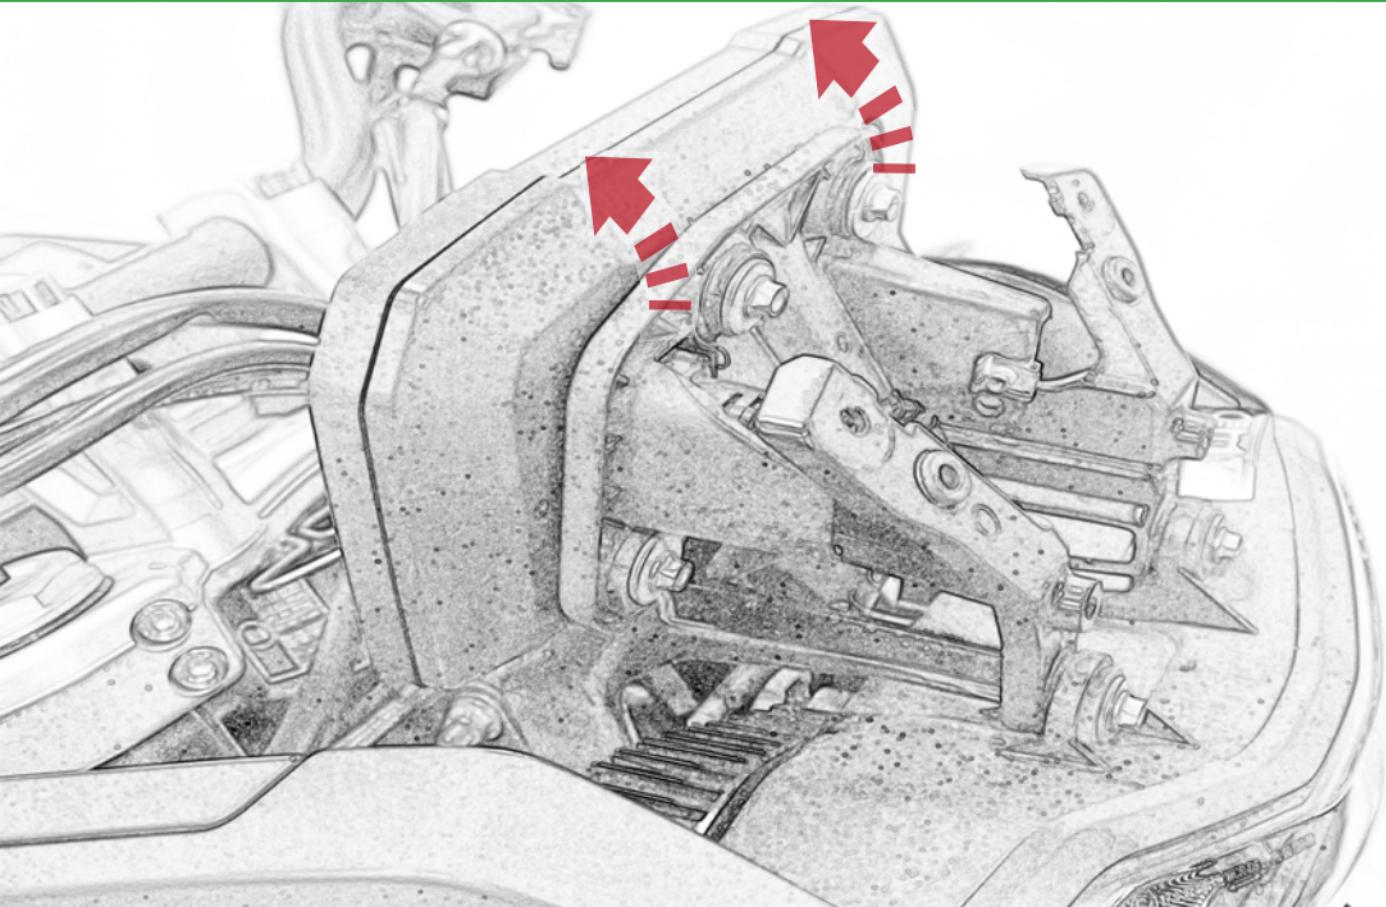


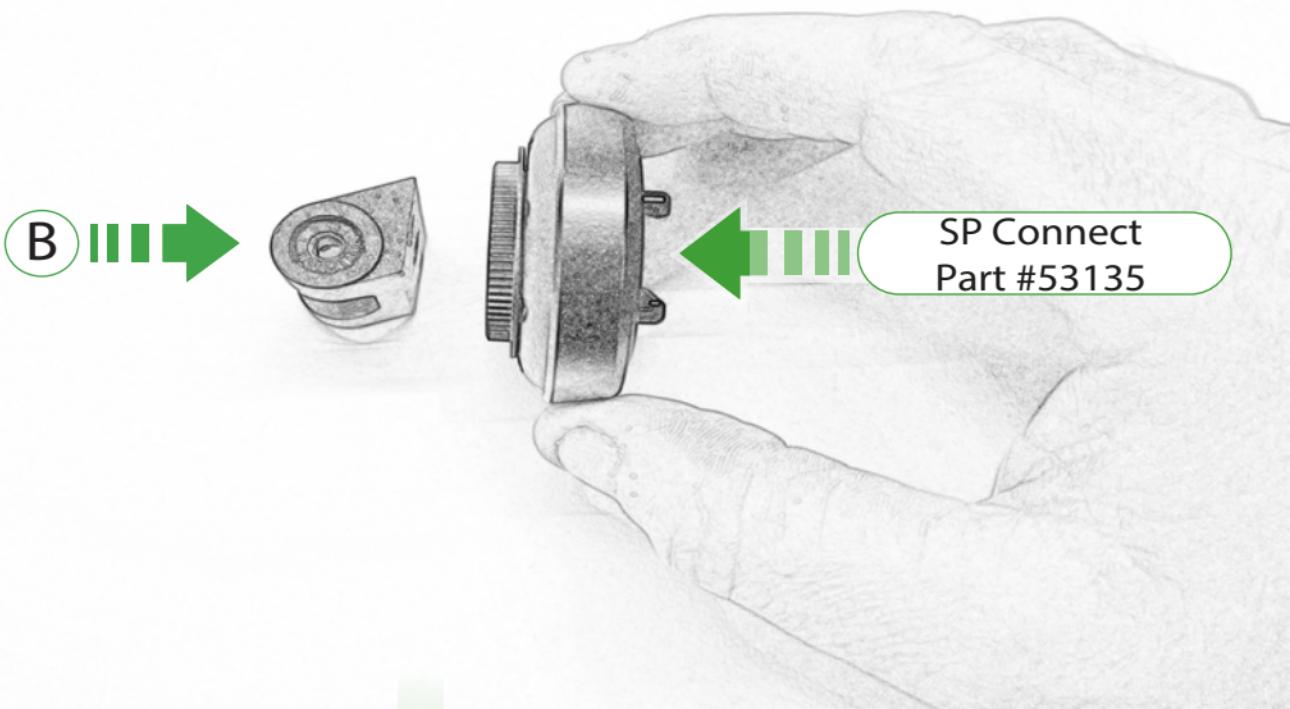





Supplied with
#53135

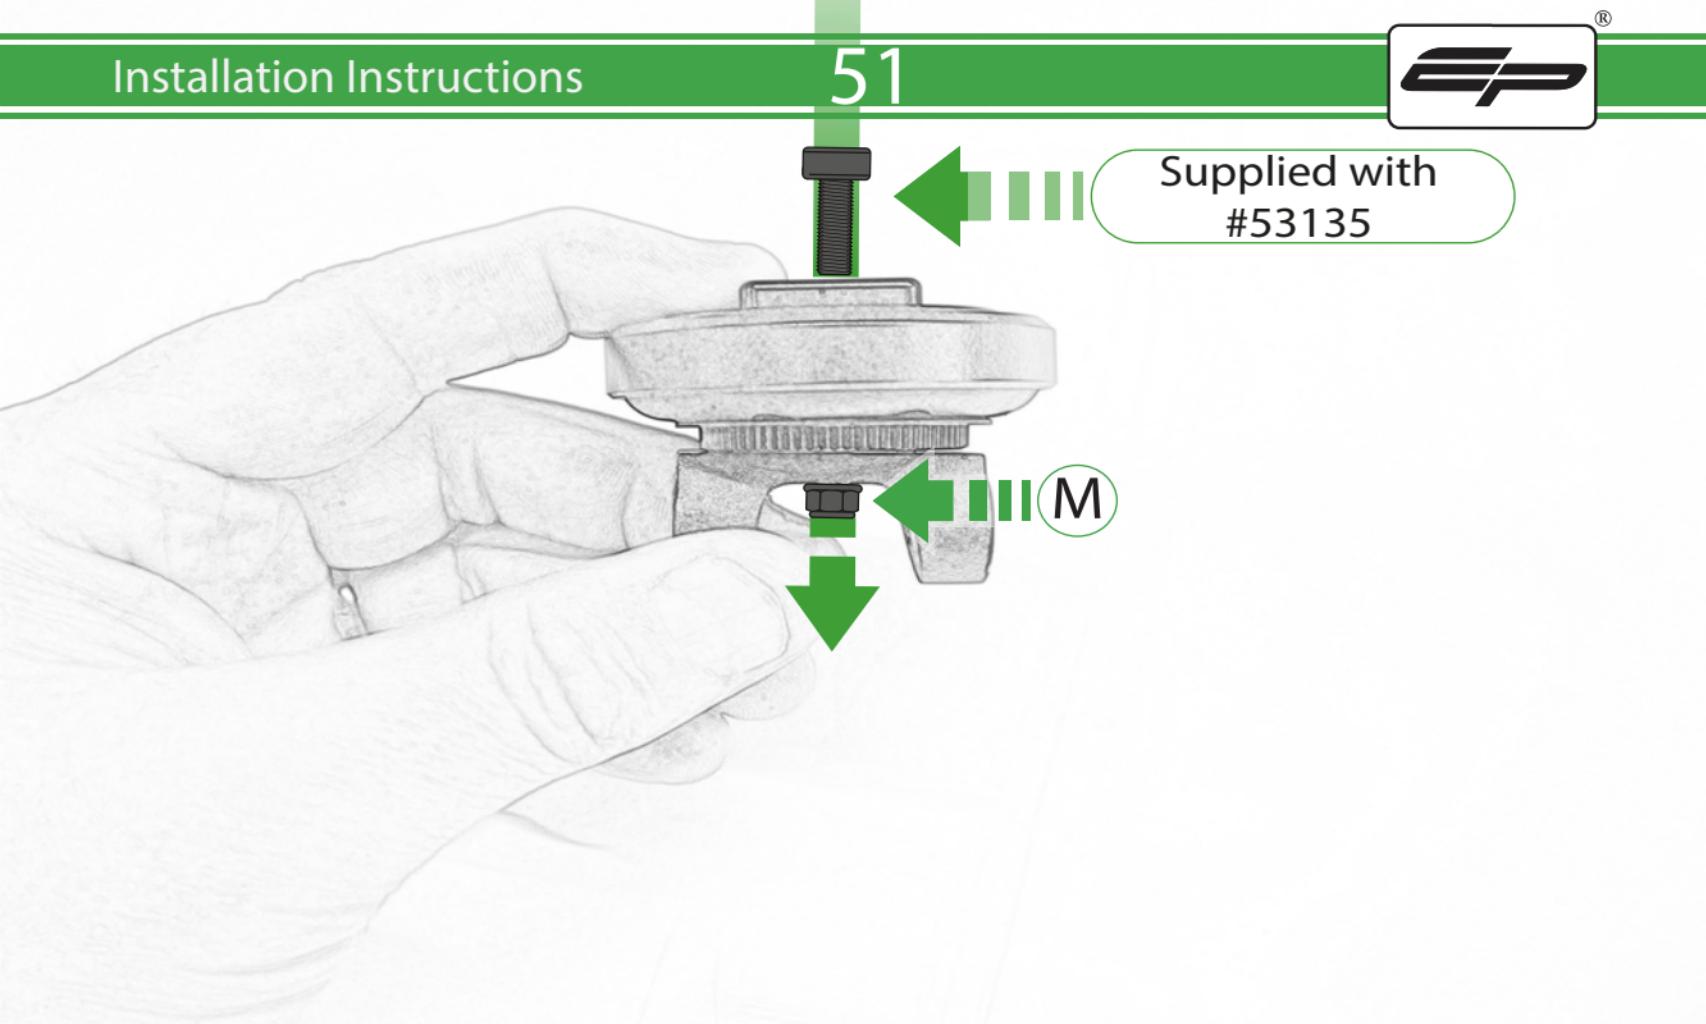

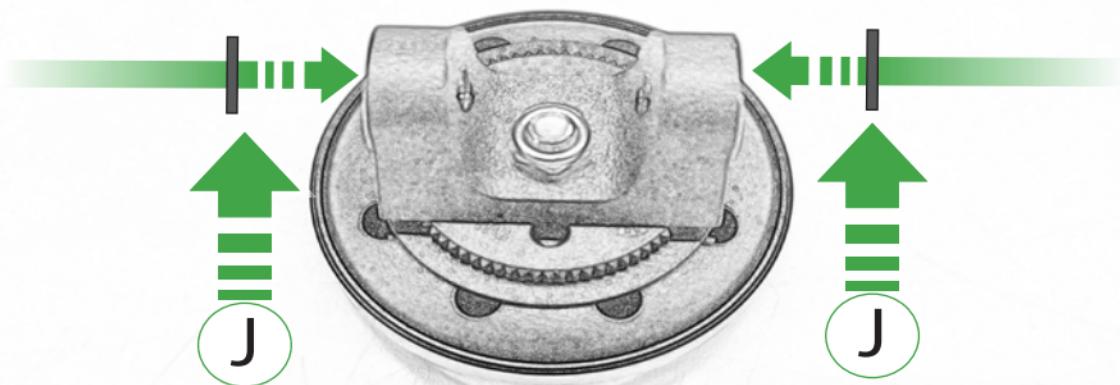


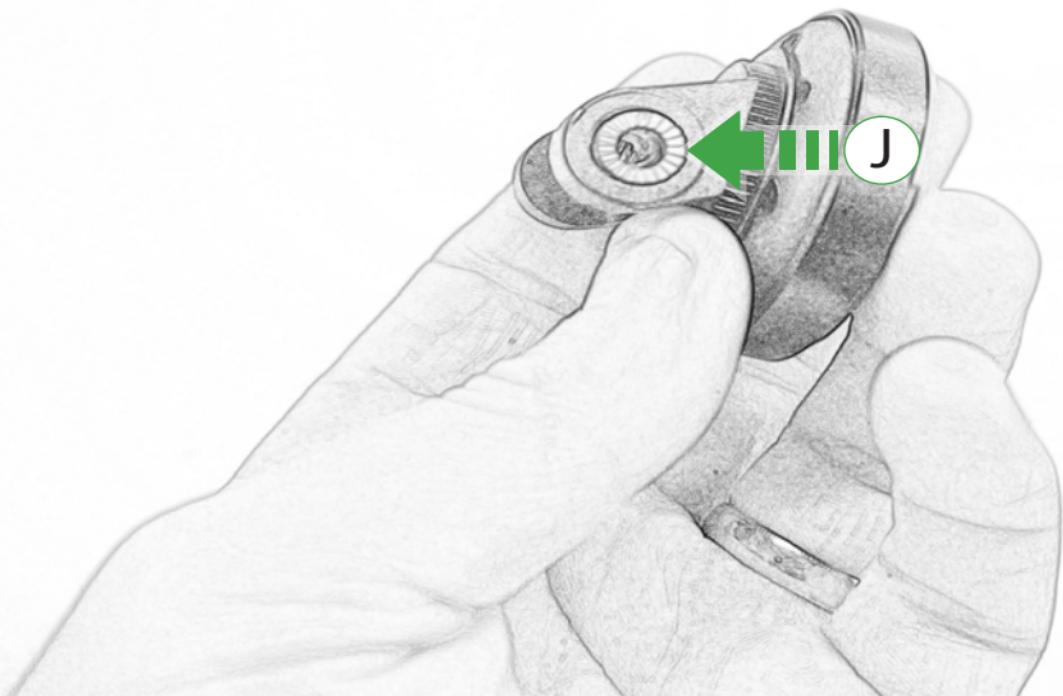


Repeat
Both Sides

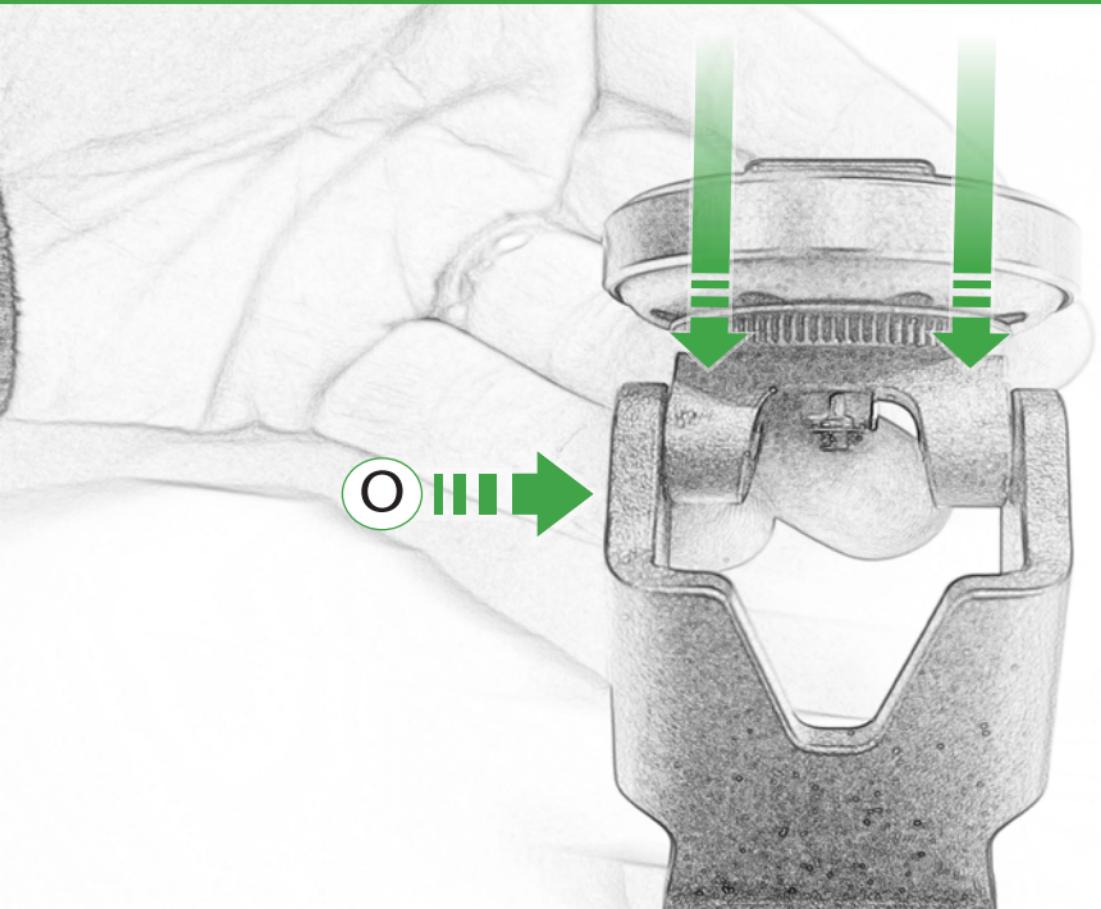




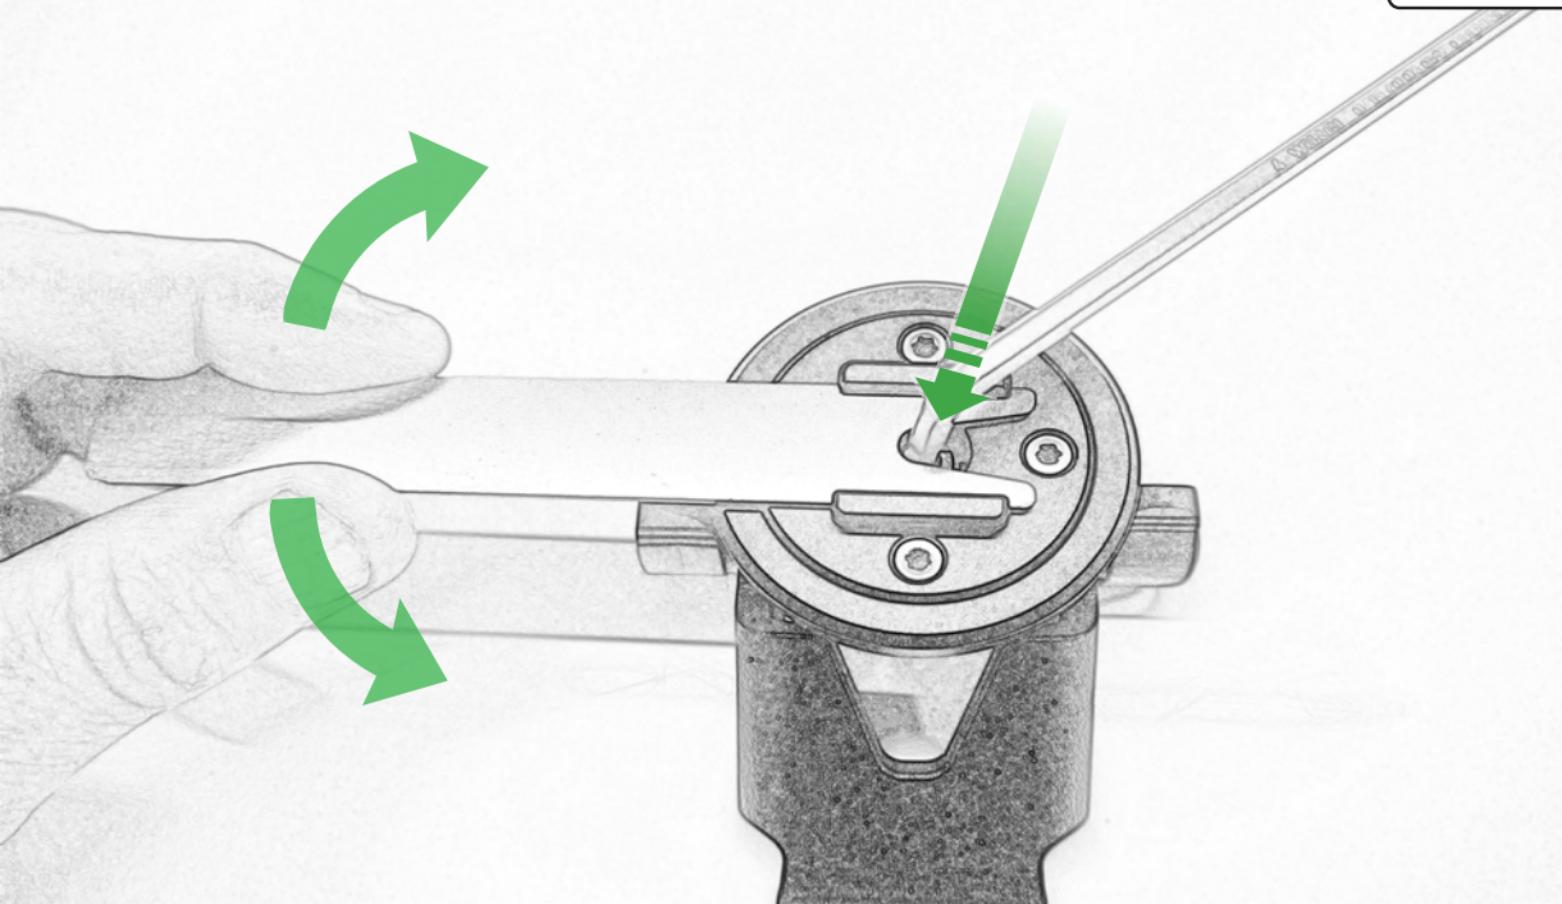


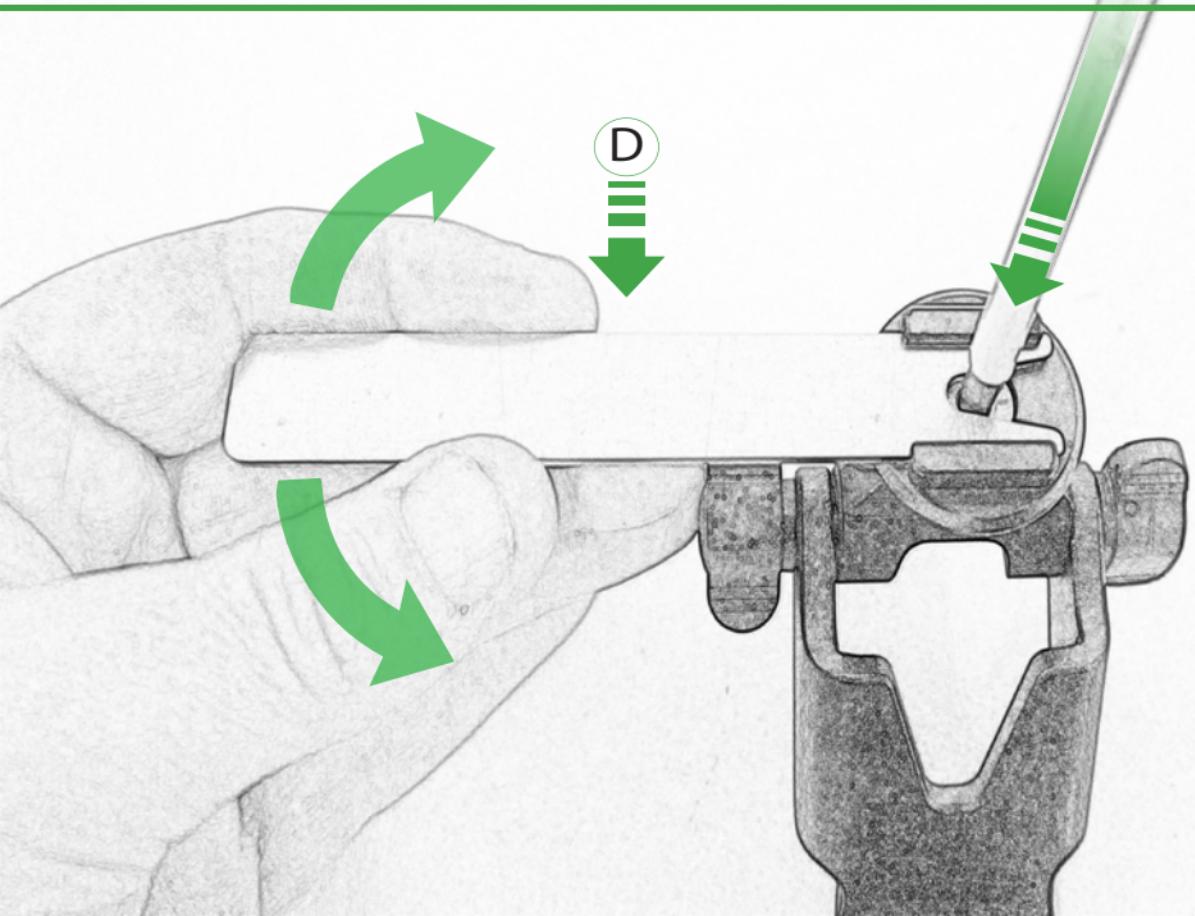






F

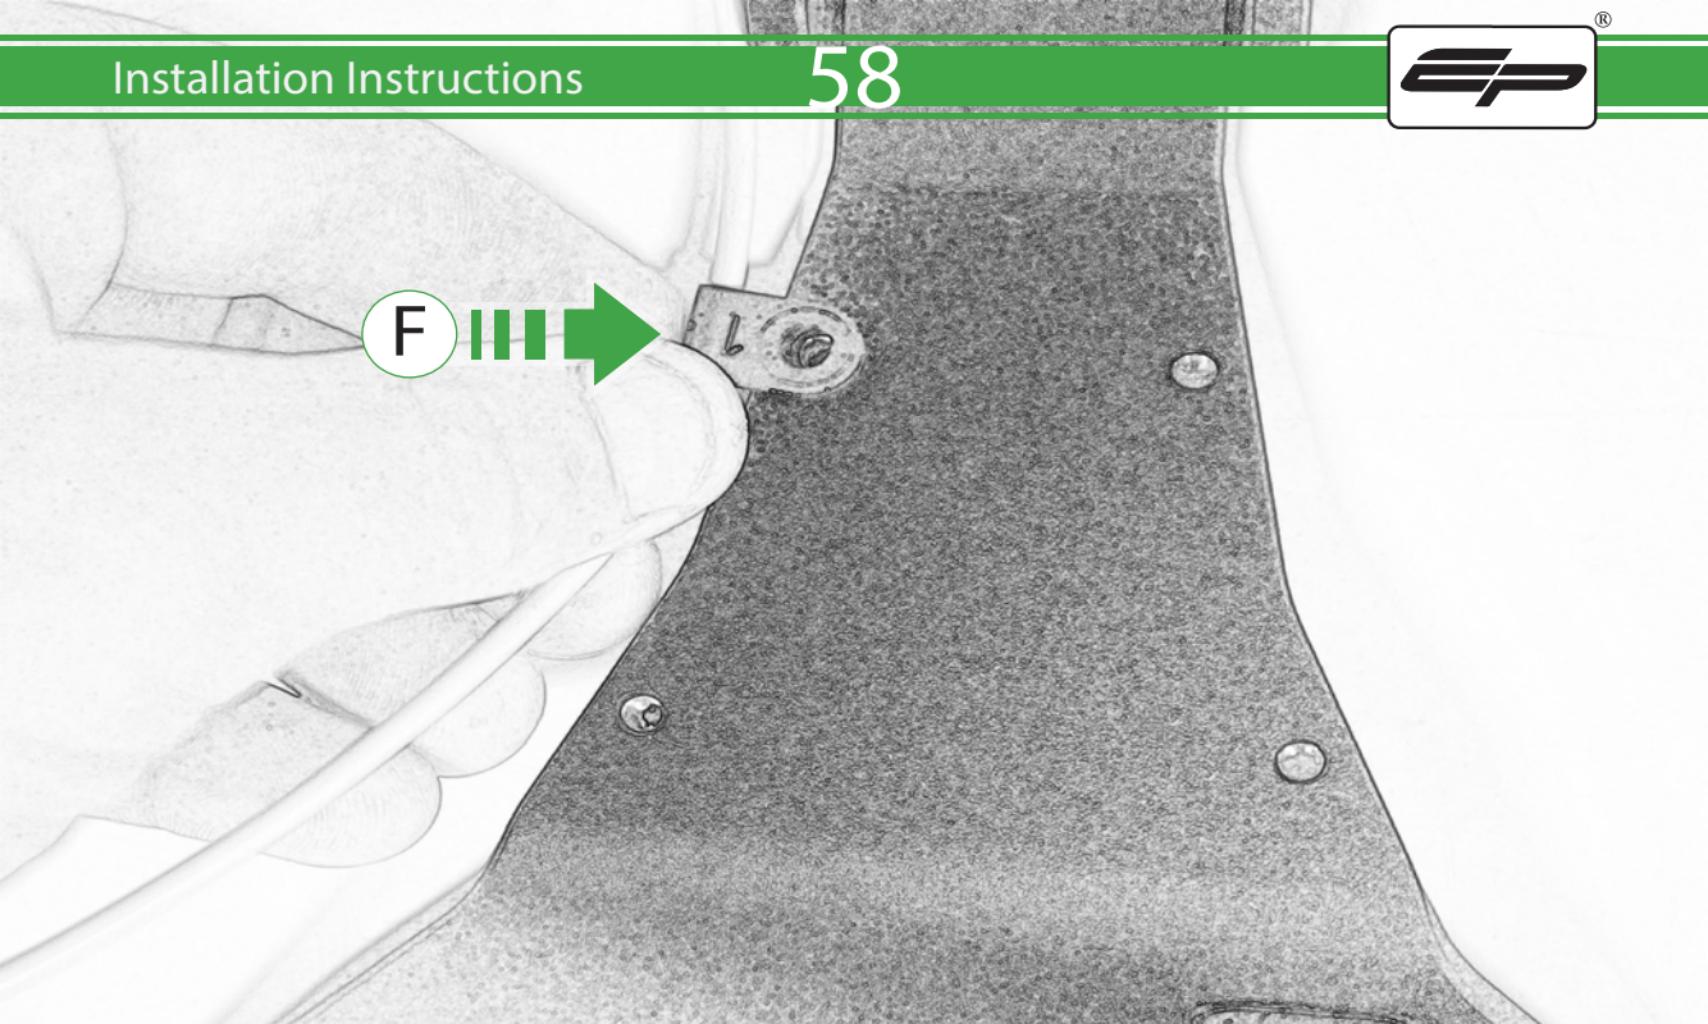


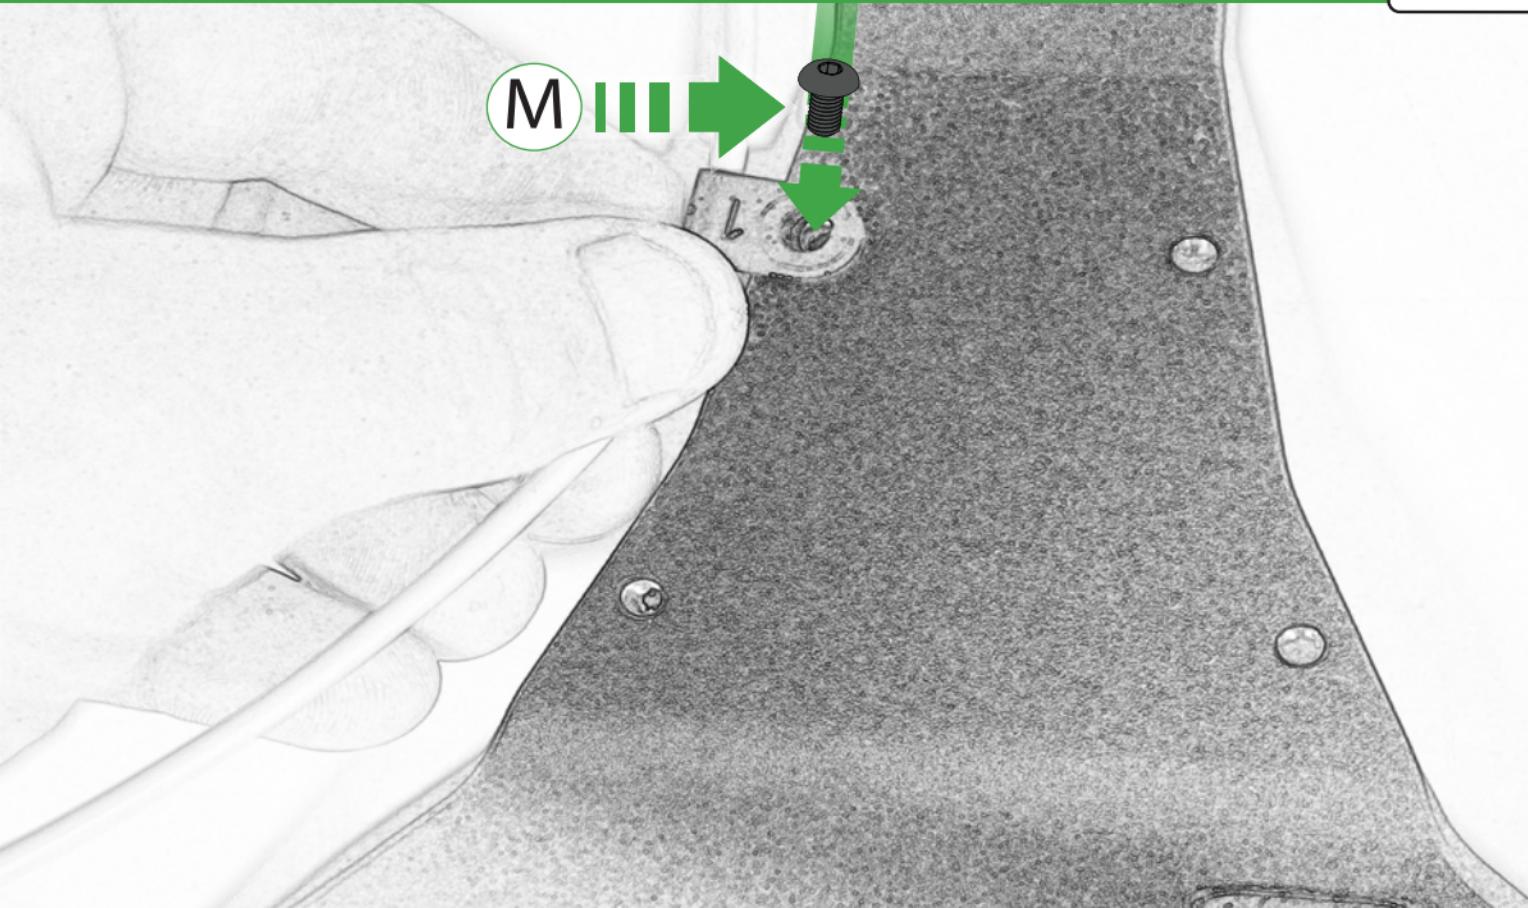
**M**

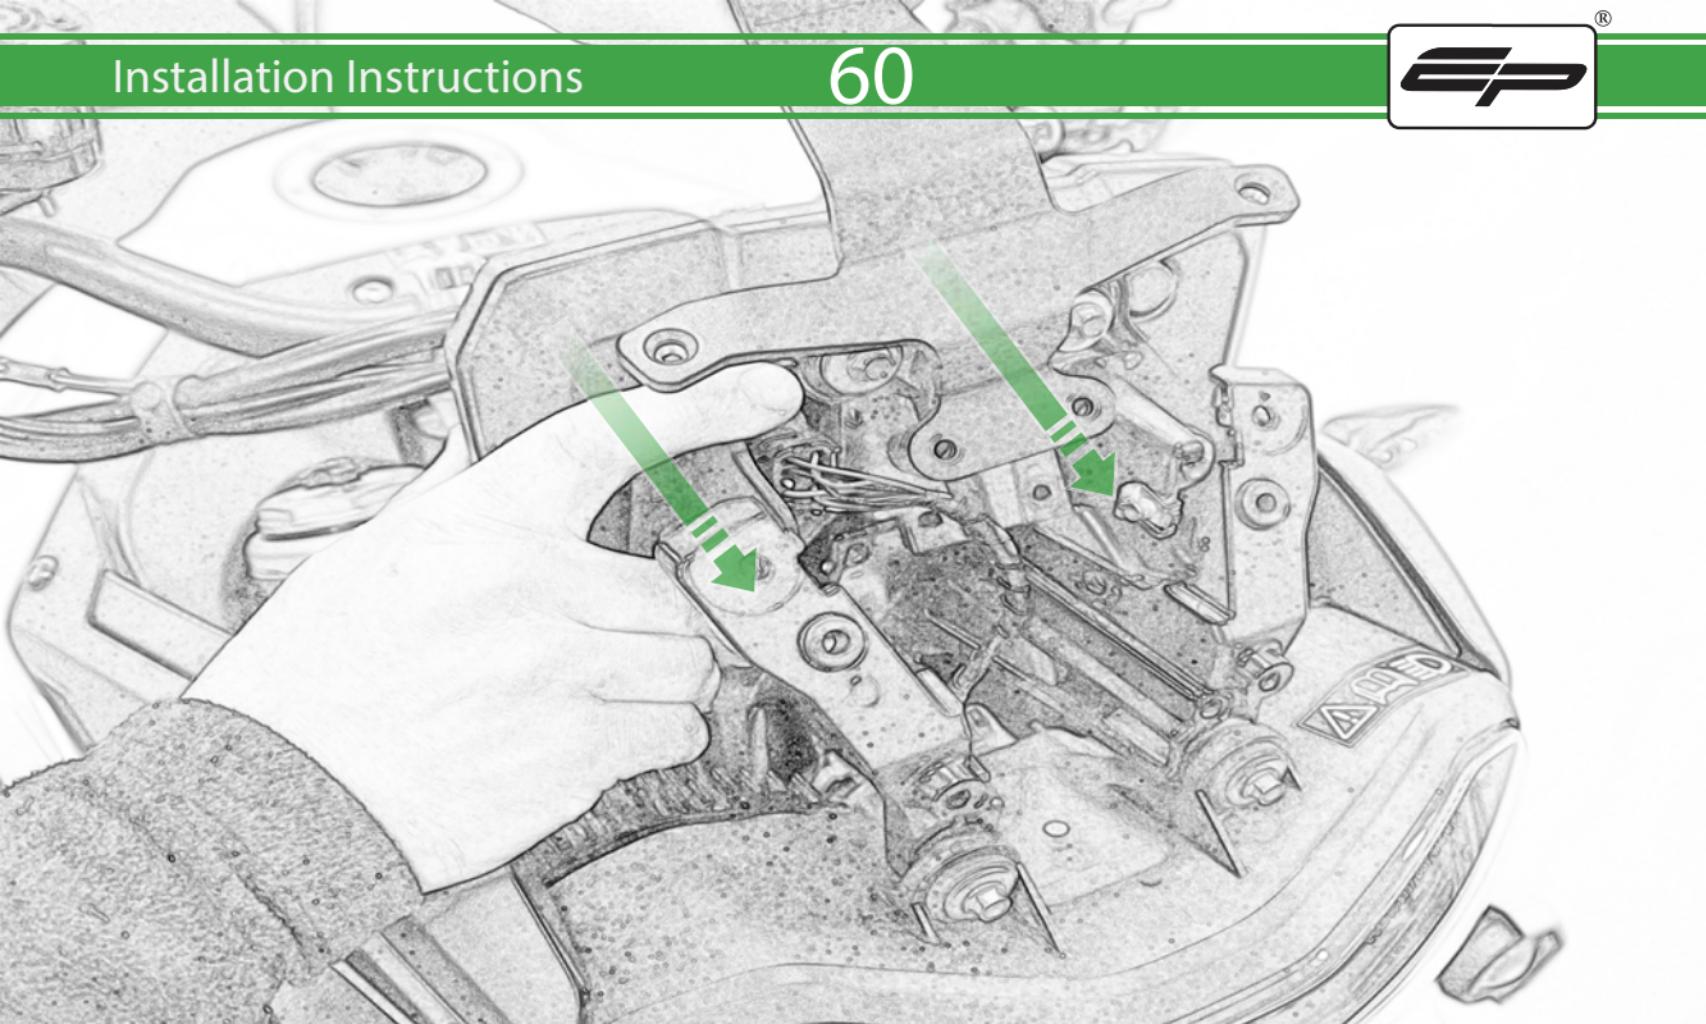


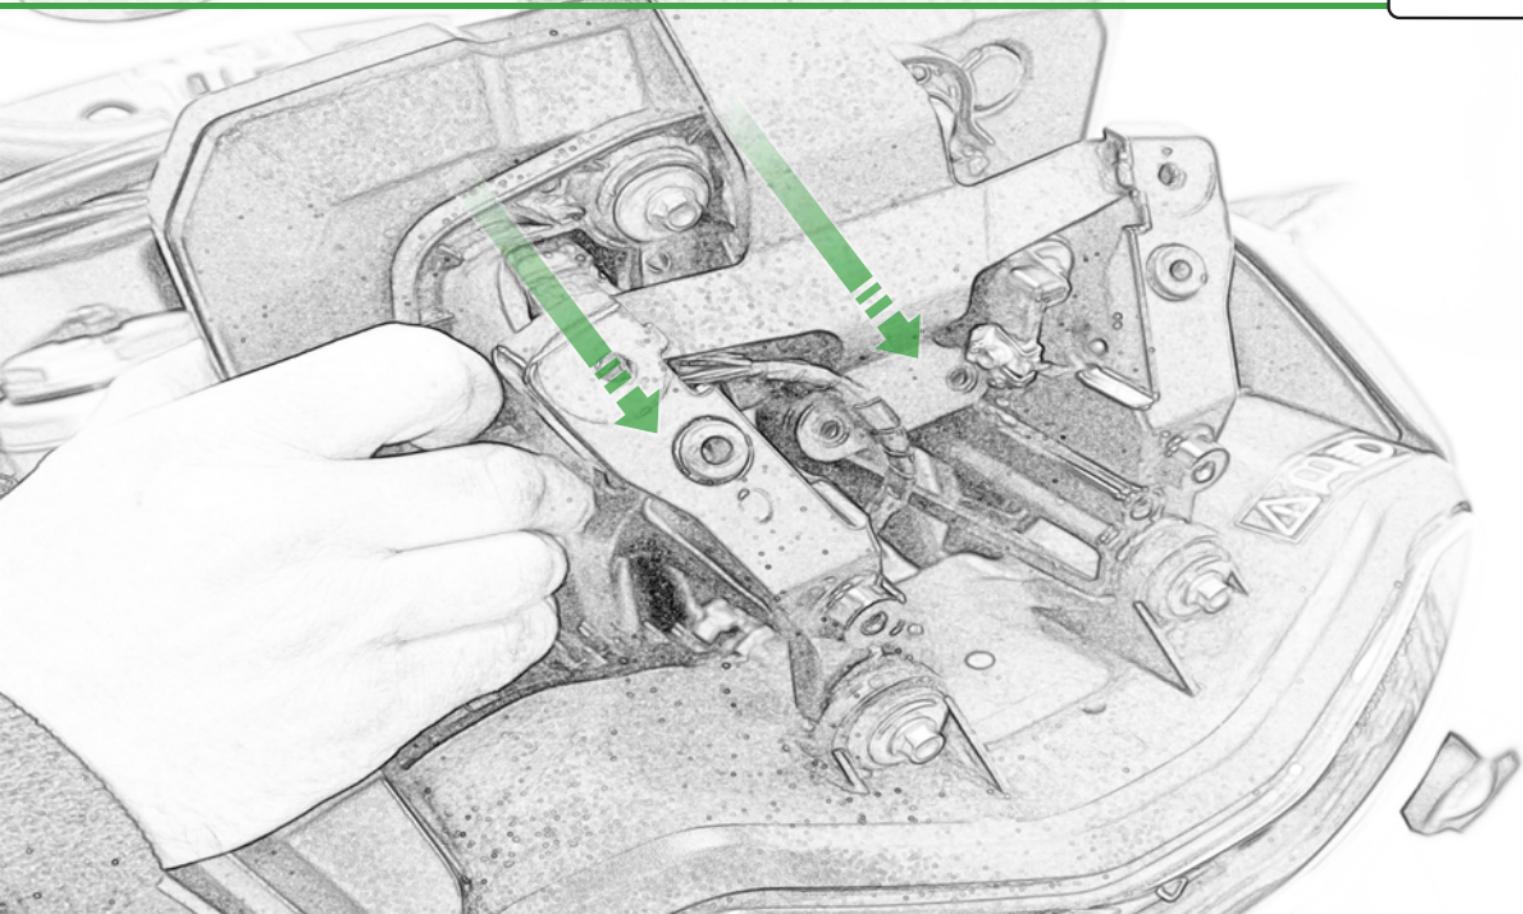

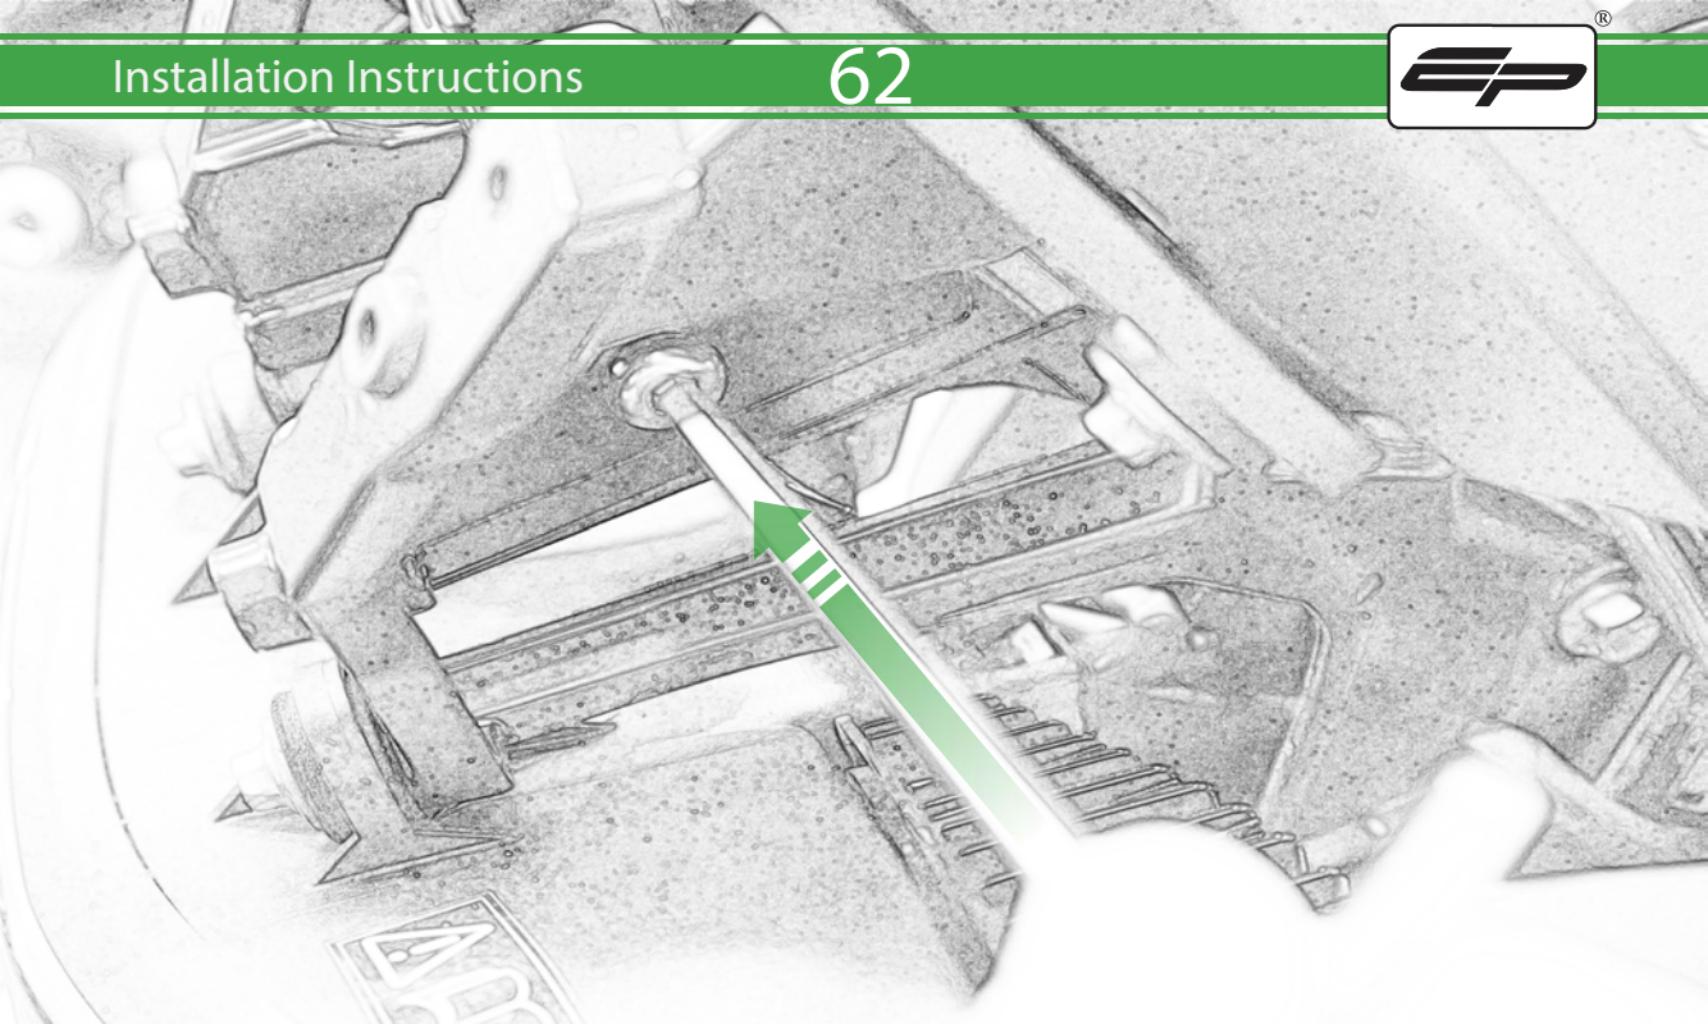

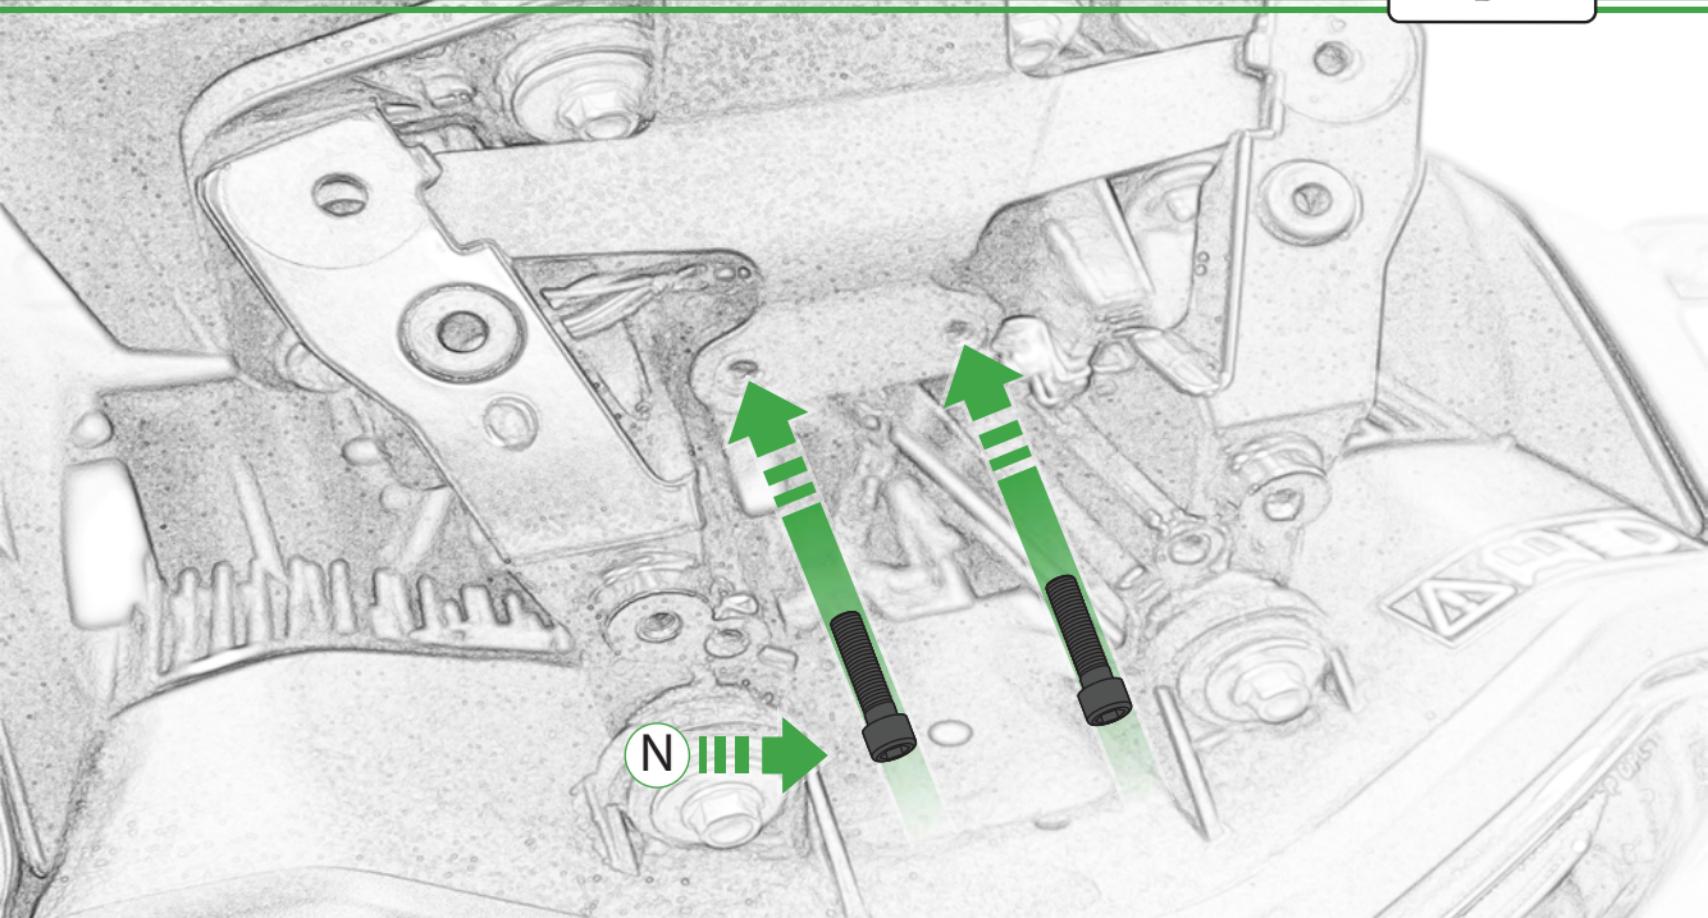

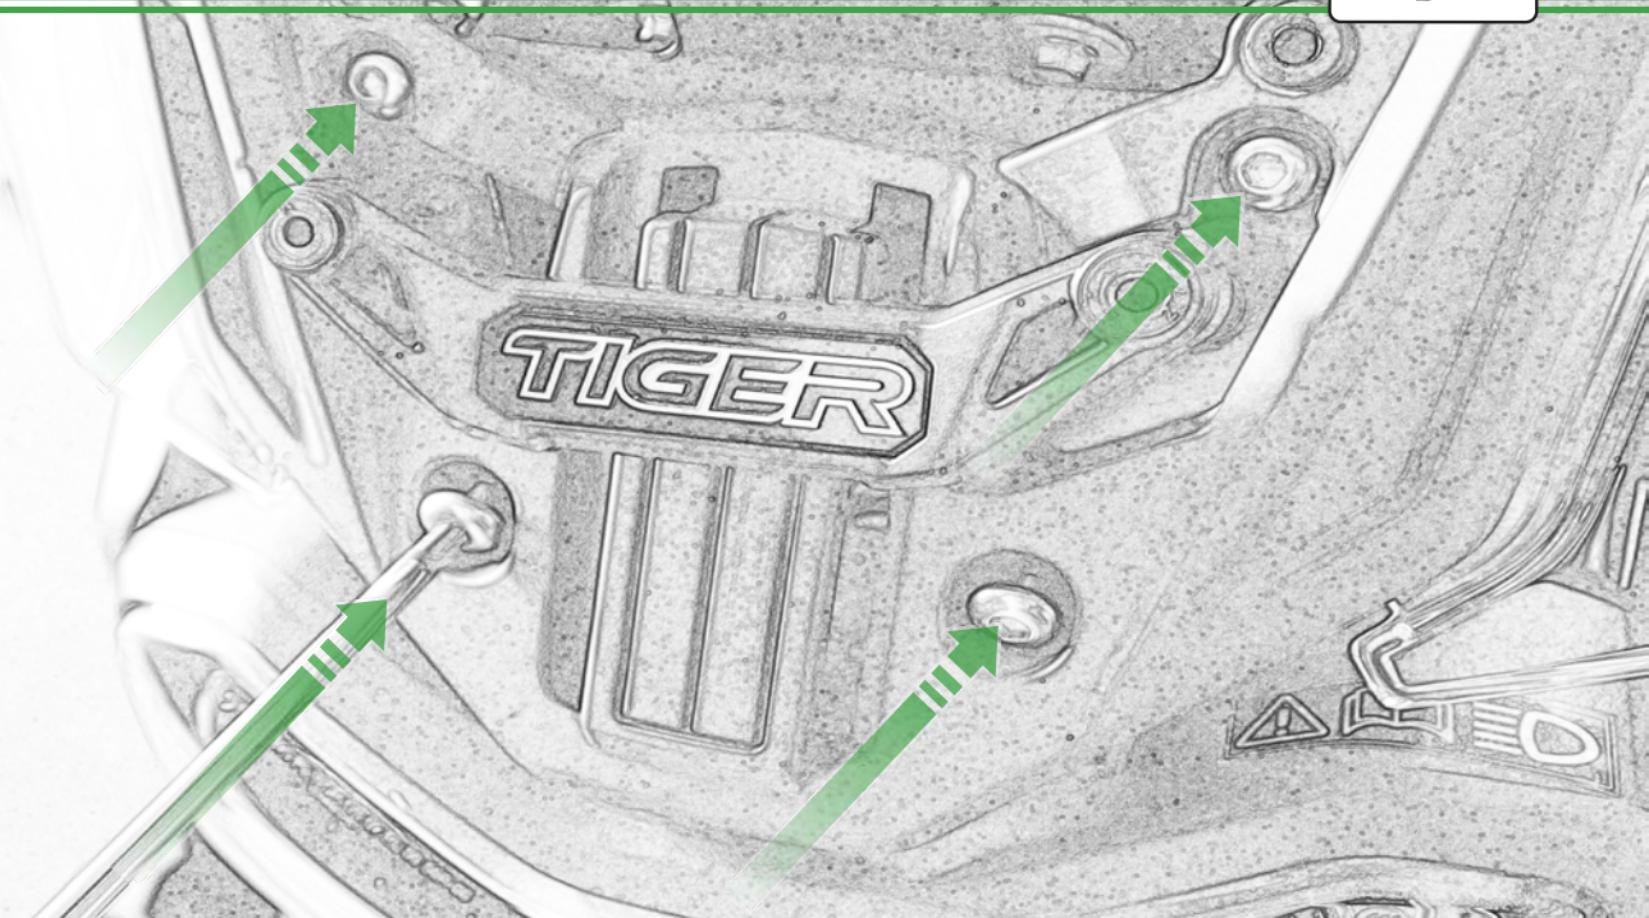

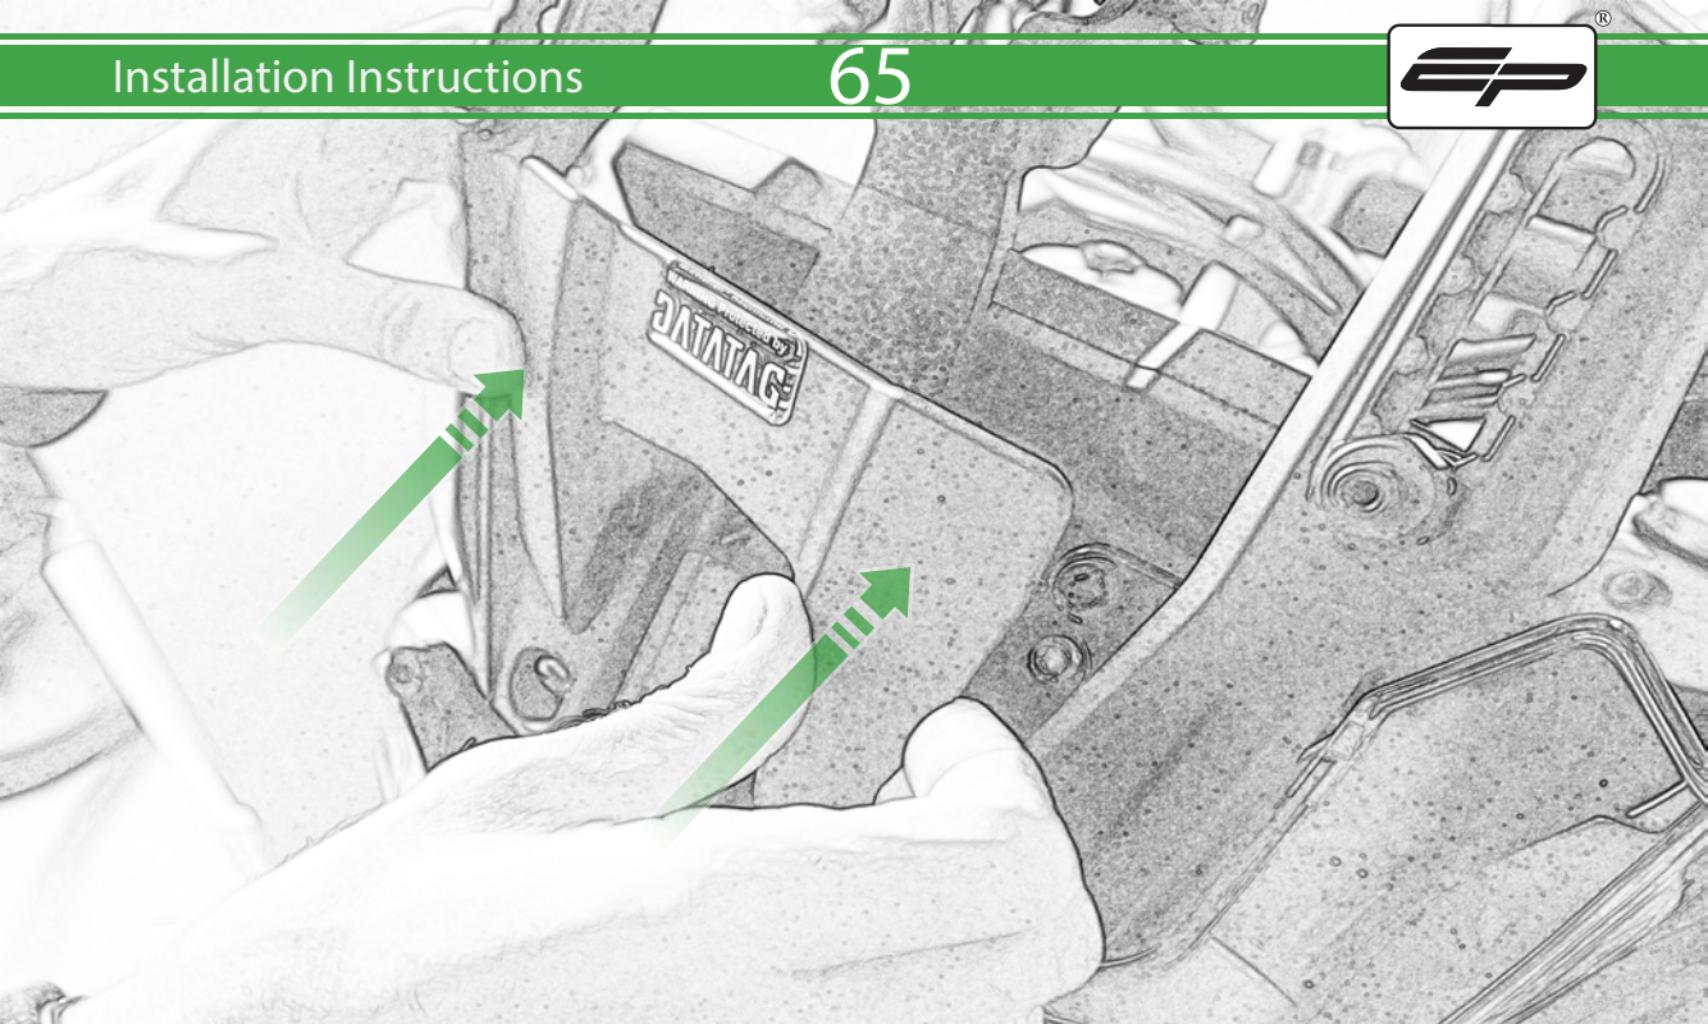





Reverse Stages

4 - 1



EVOTECH
P E R F O R M A N C E

www.evotech-performance.com