



KTM 1290 Super Duke
SP Connect Sat Nav Mount

Installation Instructions

Kit Contents

- (A) 1 x M5 x 12 Countersunk Screw
- (B) 1 x Pivot Plate
- (C) 1 x SP Connect Plate
- (D) 1 x Rubber Pad
- (E) 2 x Nord Washer
- (F) 2 x M5 x 10mm Black Button Head Bolts
- (G) 2 x M5 Washer
- (H) 2 x Lobe Screw
- (I) 2 x M5 x 10 Caphead Bolt
- (J) 4 x Spacers
- (K) 4 x M5 x 40mm Black Button Head Bolts






SP Connect
Standard Mount





SP Connect
Anti Vibration Mount



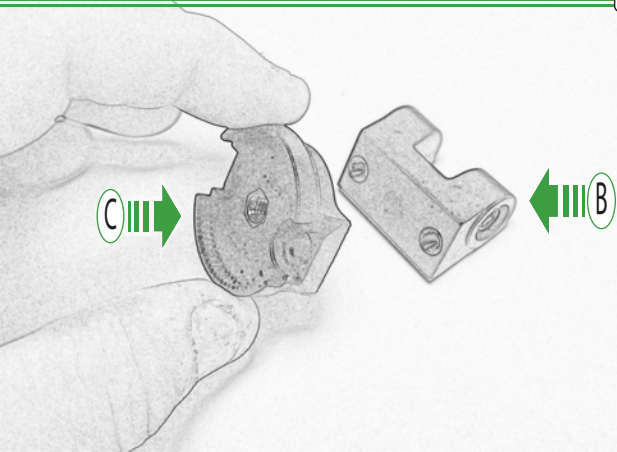

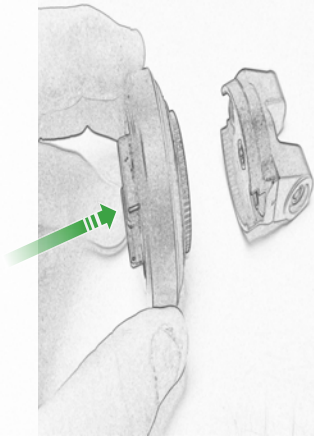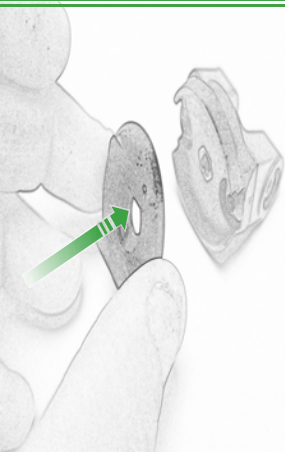

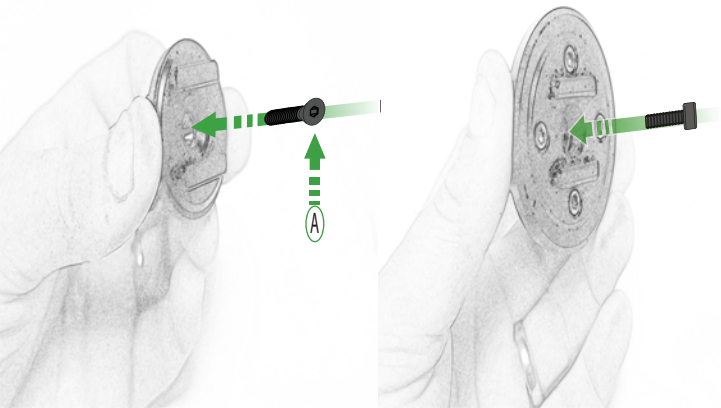

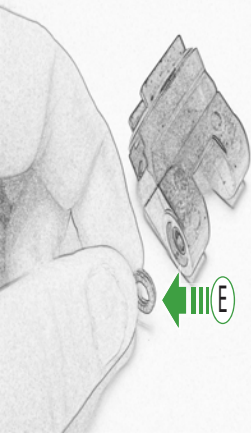





Repeat
Both Sides





Repeat
Both Sides

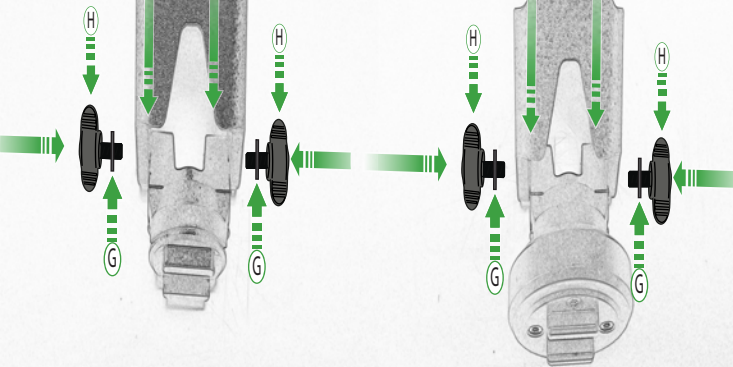


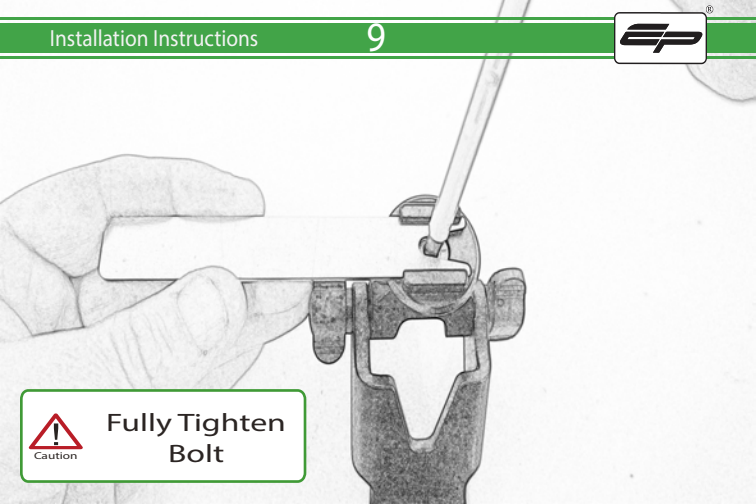



**Fully Tighten
Bolt**

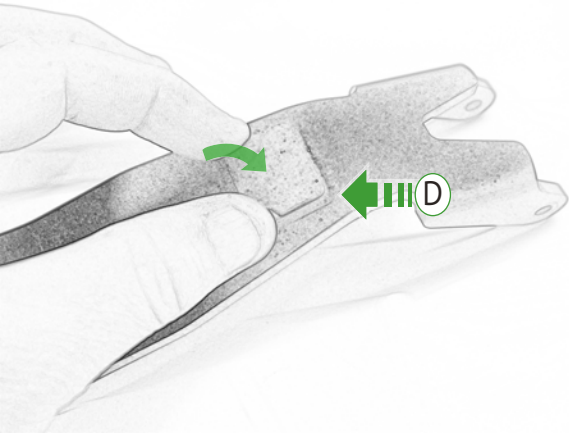

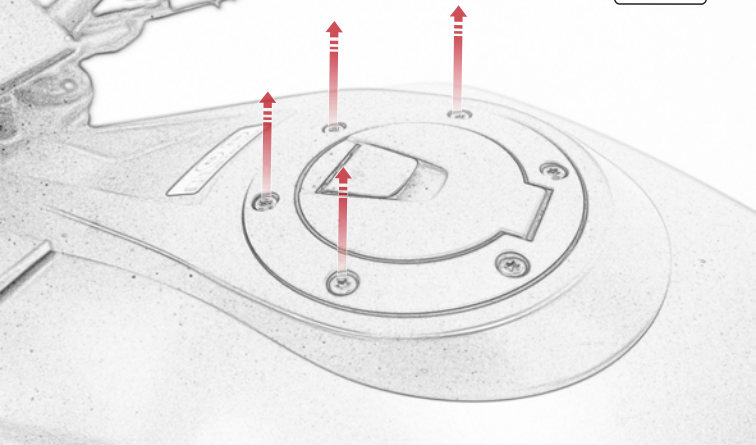

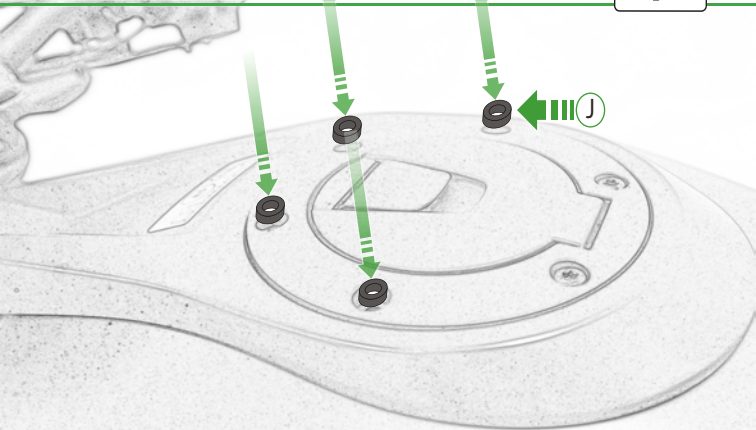

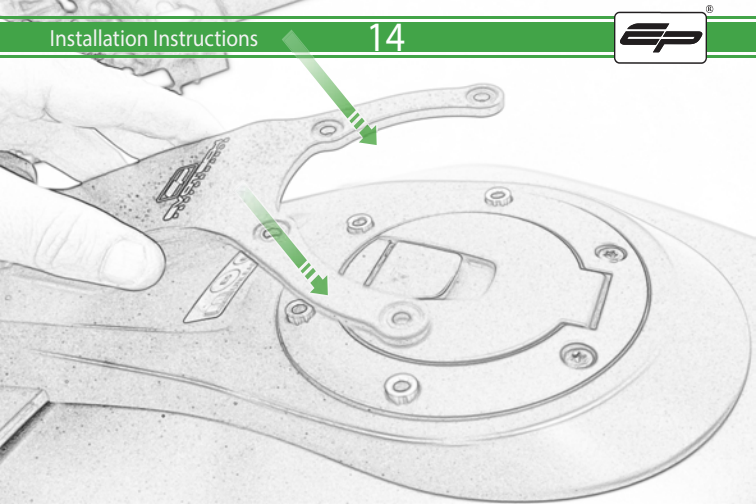

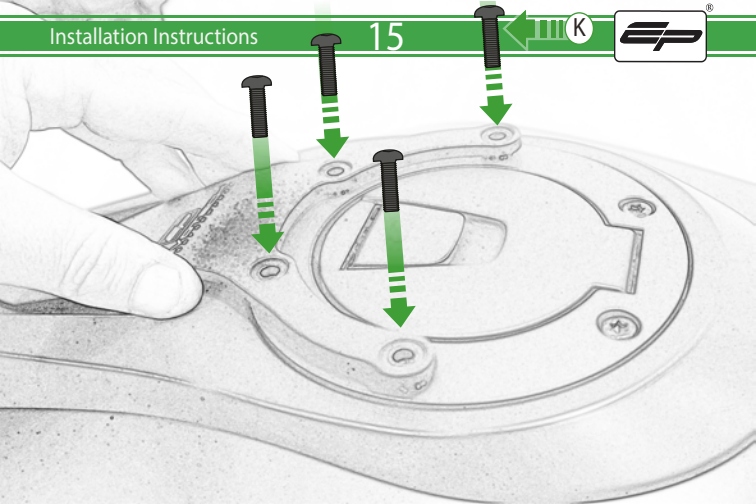



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com