

www.evotech-performance.com
Triumph Speed Triple RR
SP Connect Sat Nav Mount

## Installation Instructions





R

- A 1 x Main Plate
- B 1 x Pivot Plate
- © 1 x Sub Mounting Bracket
- ① 1 x M5 x 12mm Countersunk Screws
- © 2 x P-clips (No.1)
- © 2 x P-clips (No.2)
- © 2 x P-clips (No.3)
- (No.4)
- 1 2 x Lobe Screw
- ① 2 x M5 Black Washer
- K 2 x Locking Washer

- (L) 2 x M4 x 5mm Black Button Head Bolts
- M 2 x M5 x 10mm Black Button Head Bolts
- N 4 x M4 x 10mm Black Button Head Bolts


- Sub Kit
- (AA) 1 x Pad
- BB 2 x M6 x 35 Cap Head
- © 2 x M6 x 12mm Black Button Head

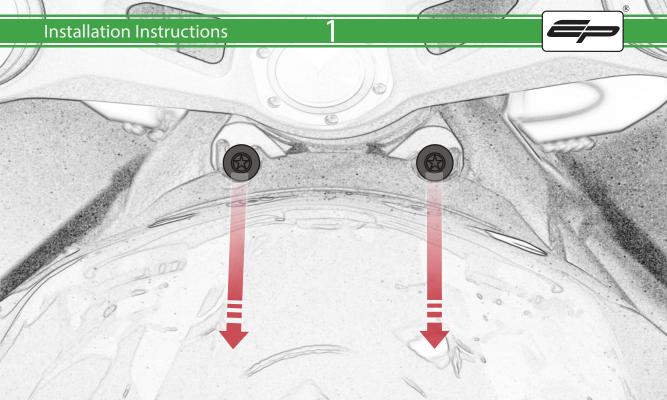


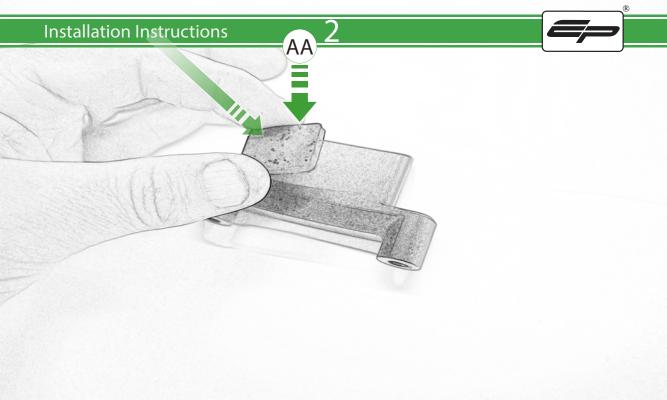






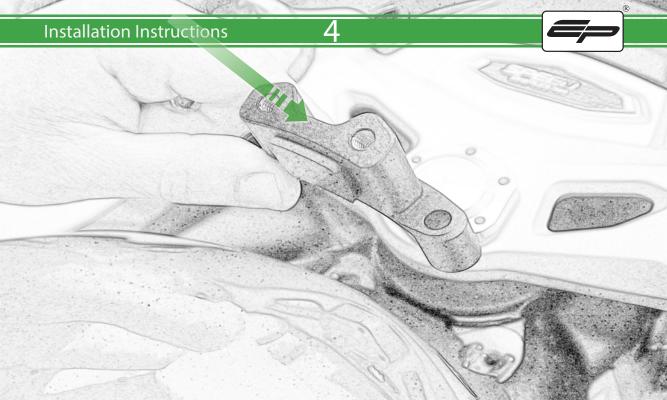

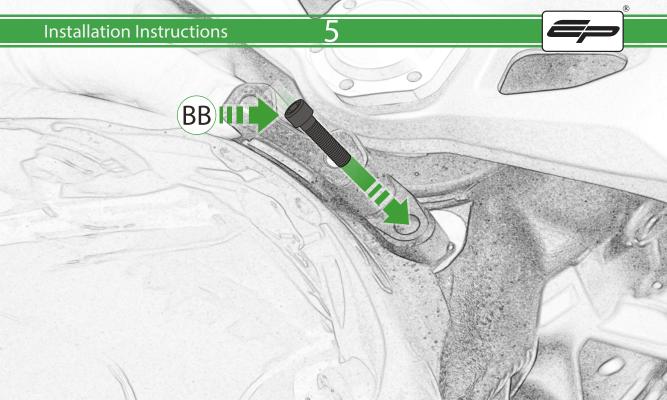





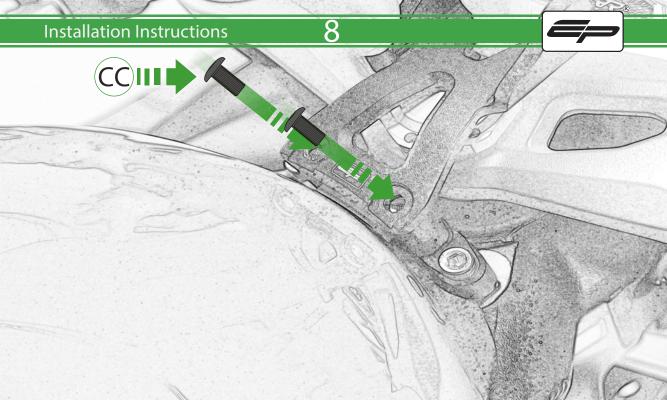

9




SP Connect Standard Mount




SP Connect Anti Vibration Mount



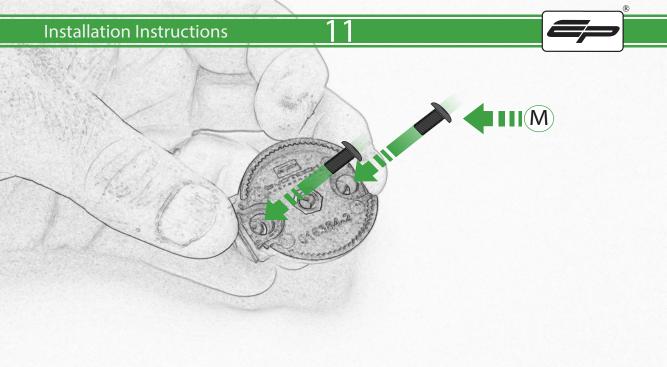






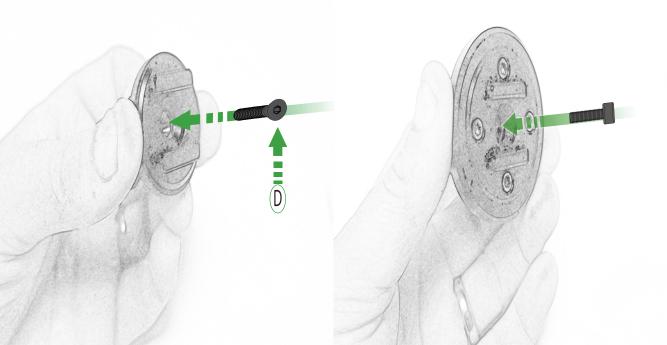








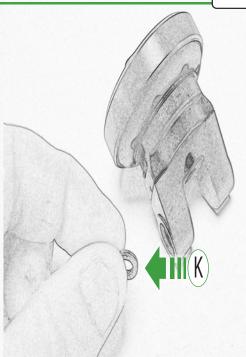









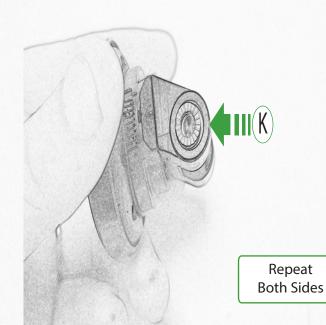

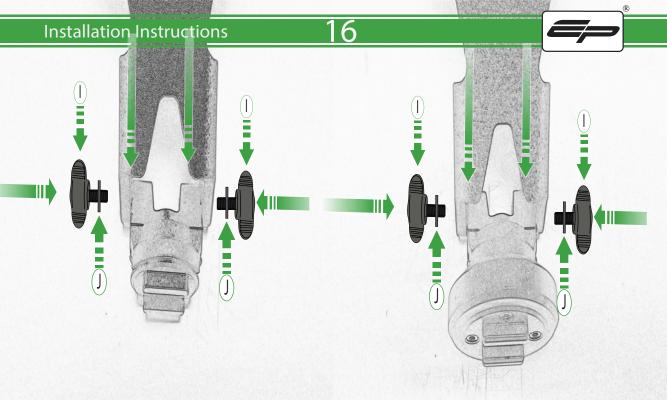

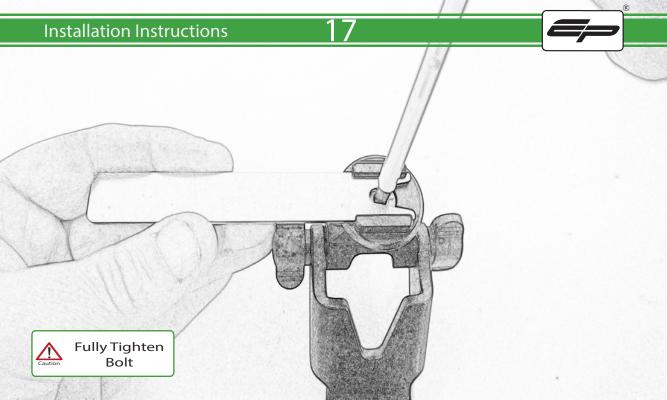





## ESSENTIAL CHECKS 1



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



www.evotech-performance.com