

www.evotech-performance.com
Yamaha Tenere 700 Hand Guards
Installation Instructions


## **Installation Instructions**





## Kit Contents PRN014747


- A 1 x R/H Outer Bracket
- **B** 1 x R/H Mirror Bracket
- © 1 x L/H Outer Bracket
- D 1 x L/H Mirror Bracket
- © 2 x Bar End Inner Spacers
- (F) 2 x Bar End Outer
- © 2 x M8 x 30 Caphead S/S
- H 4 x M5 Washers Black
- 1 4 x M5 x 16mm Button Head Bolt
- 1 x Main Tail Tidy




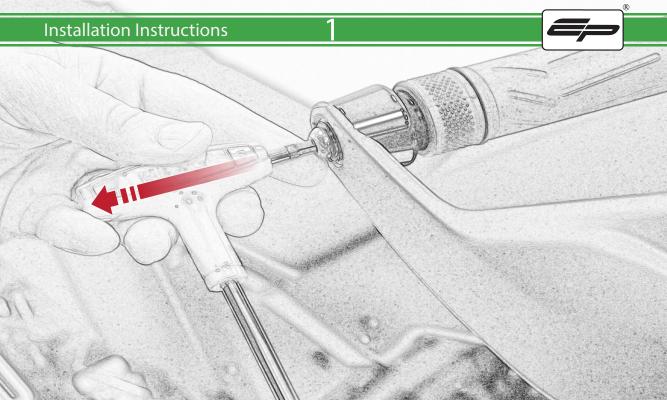


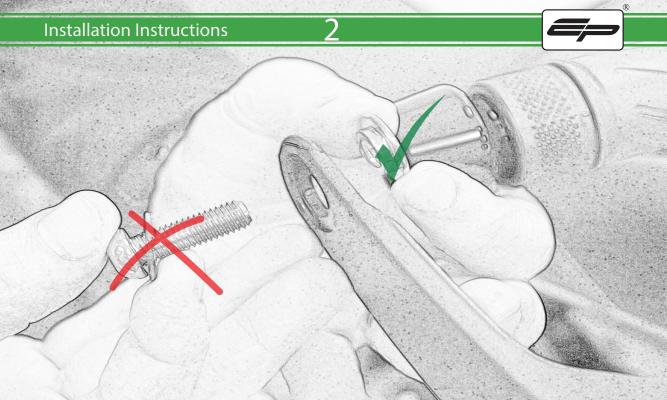


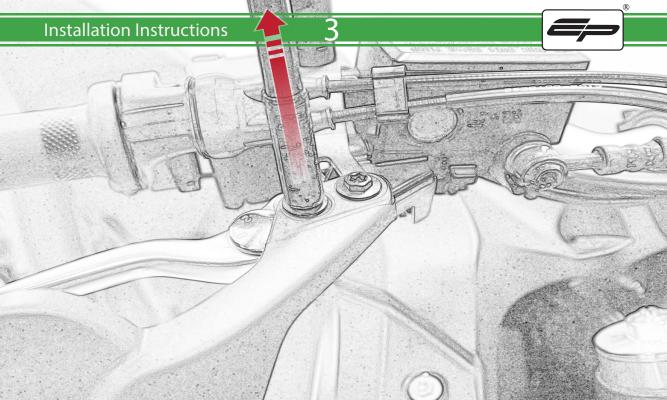


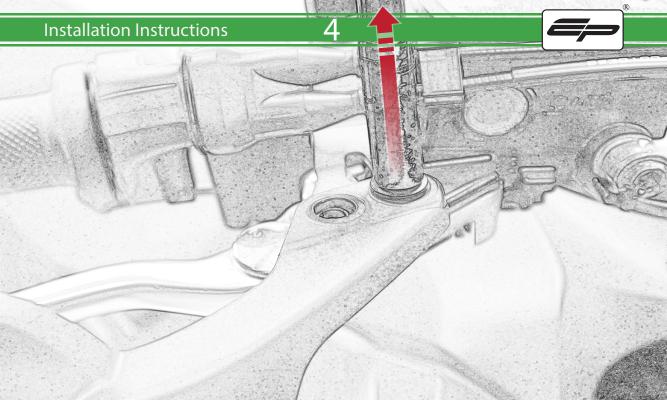


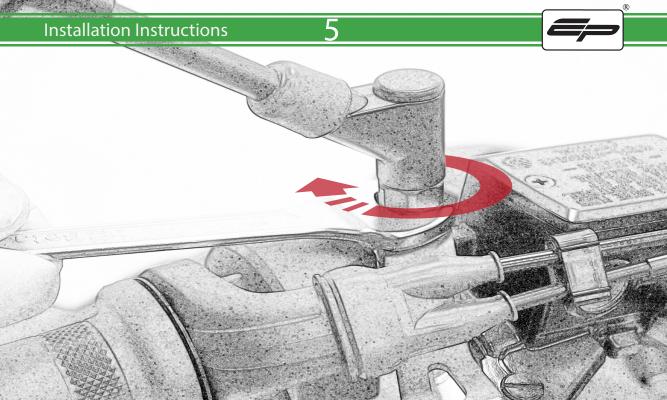


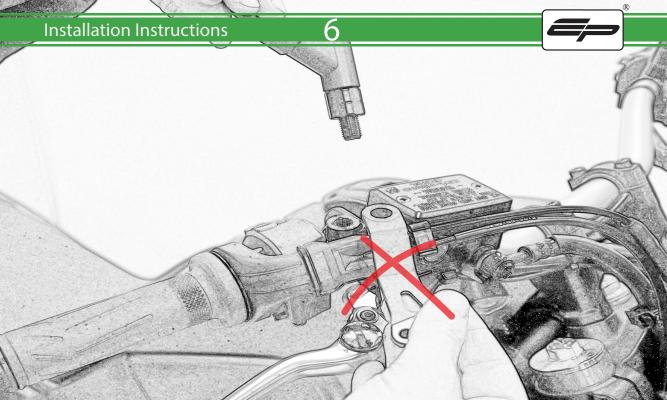


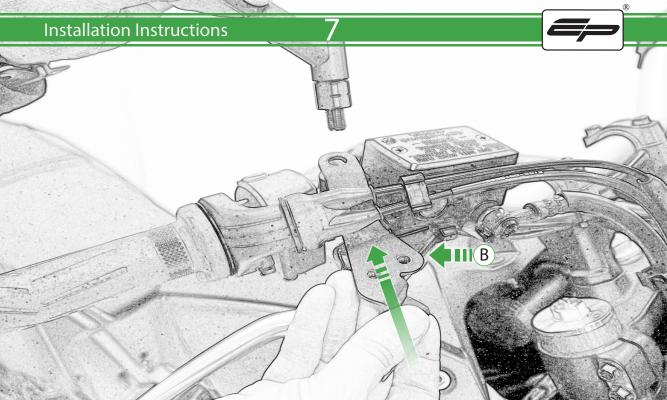


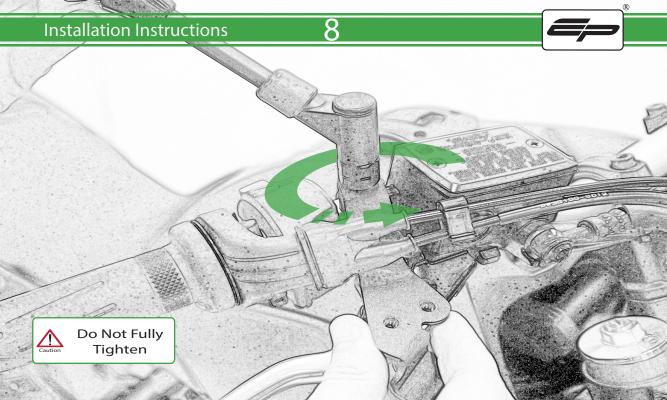


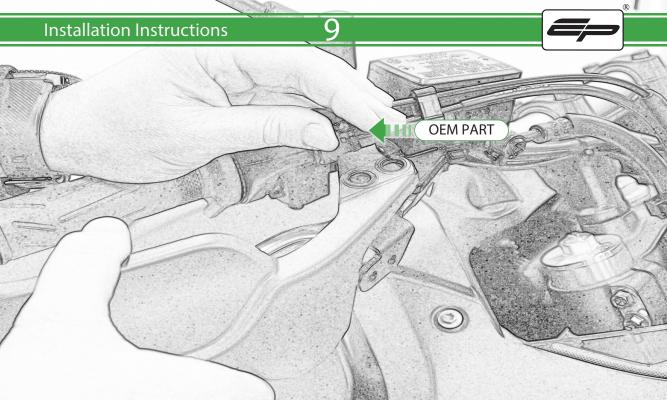


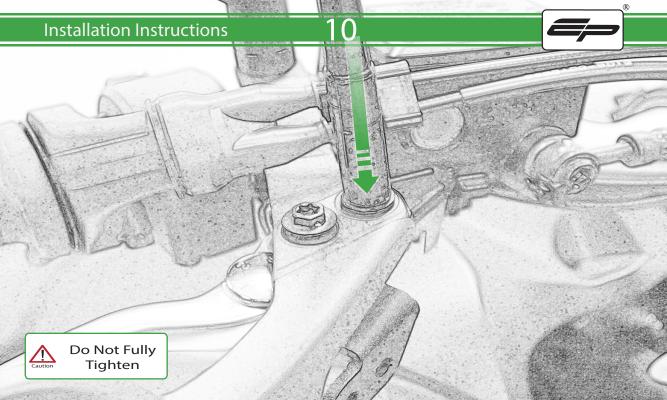

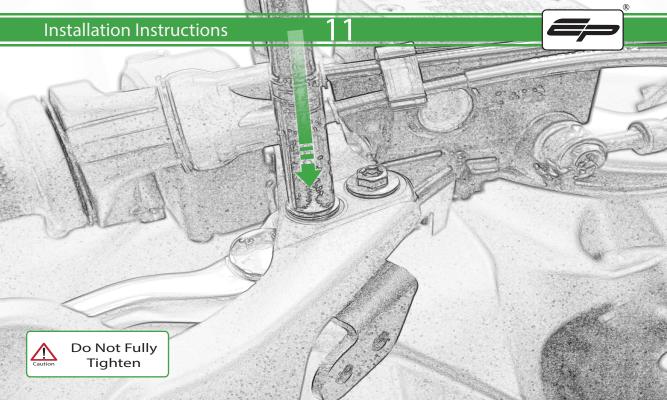


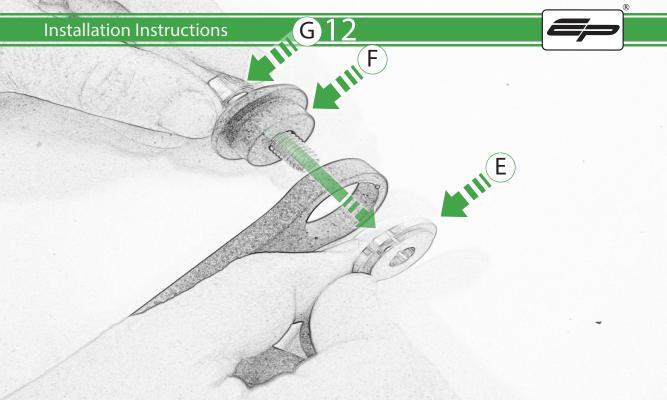


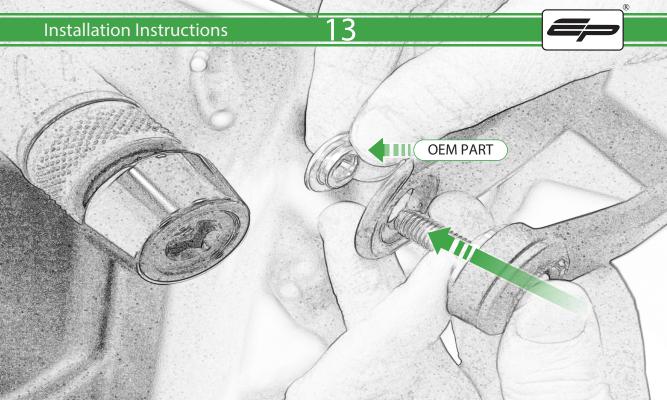


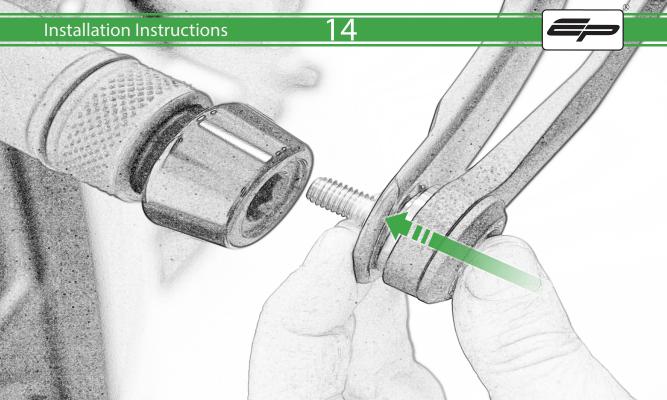





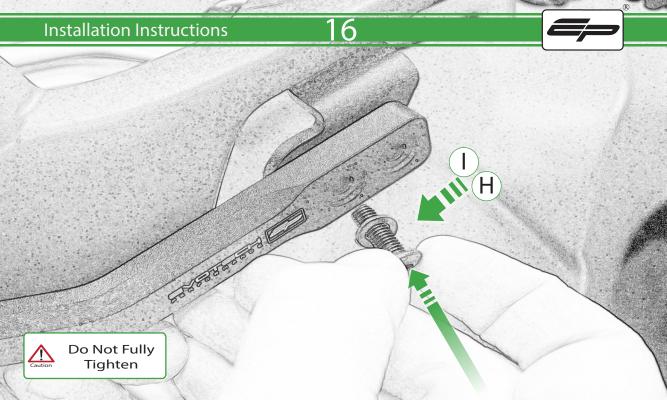


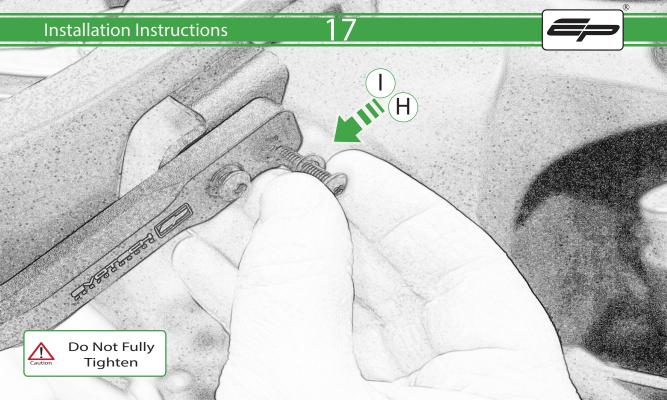

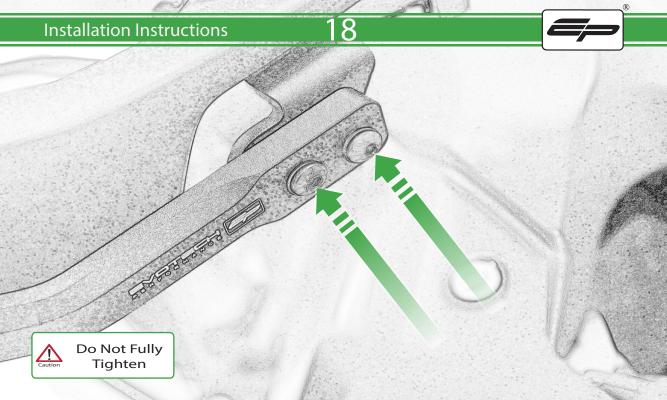

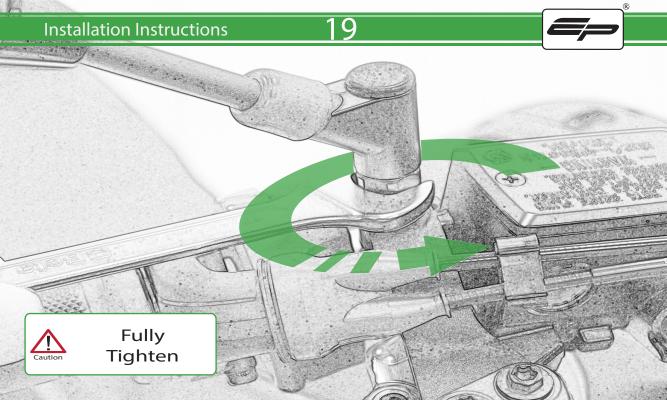


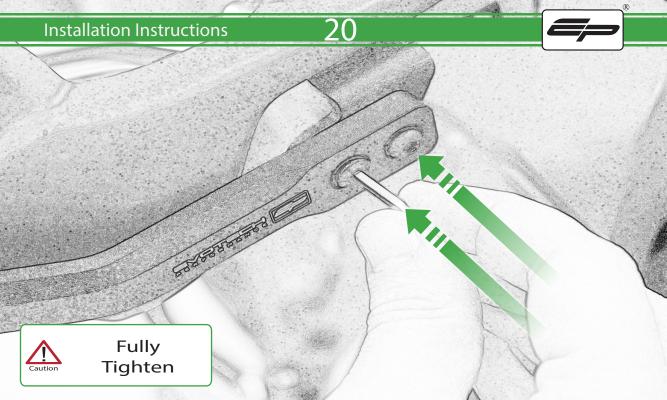

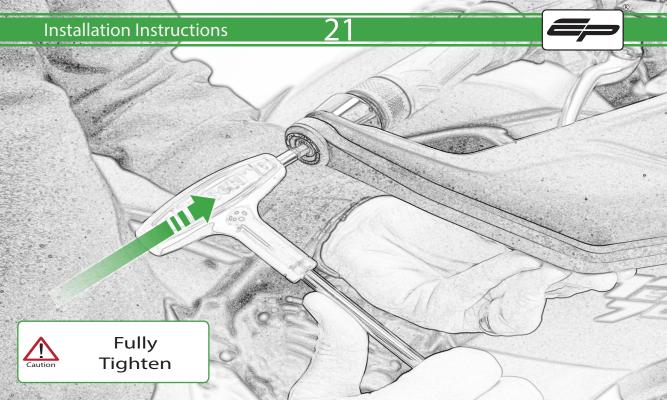

## **Installation Instructions**



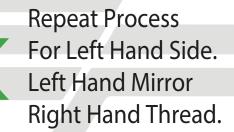







It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





www.evotech-performance.com