



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Honda CBR1000RR-R / SP Brake Protector Kit


Installation Instructions





Kit Contents PRN014778-014779

- (A) 1 x Bar End
- (B) 1 x M6 x 50mm Caphead
- (C) 1 x M6 x 90mm Caphead
- (D) 1 x Brake Protector Bracket
- (E) 1 x Bar End Inner
- (F) 1 x Bar End Outer
- (G) 1 x Collet
- (H) 1 x O-Ring
- (I) 1 x M6 Cone

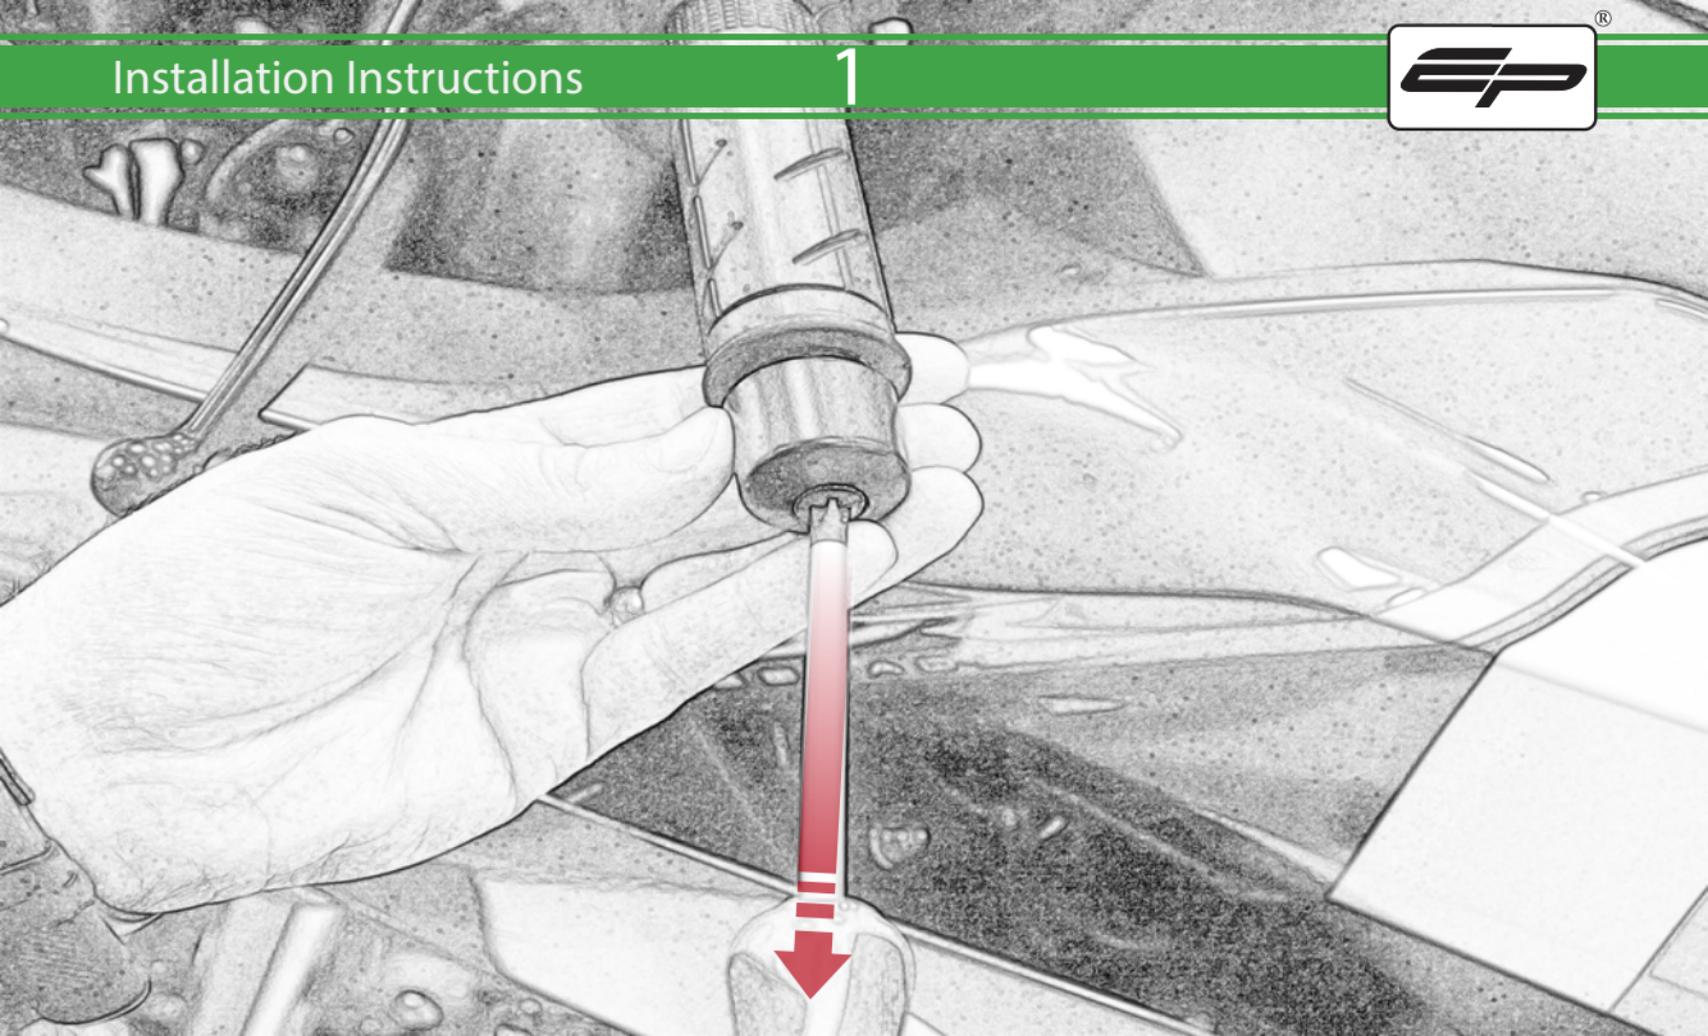

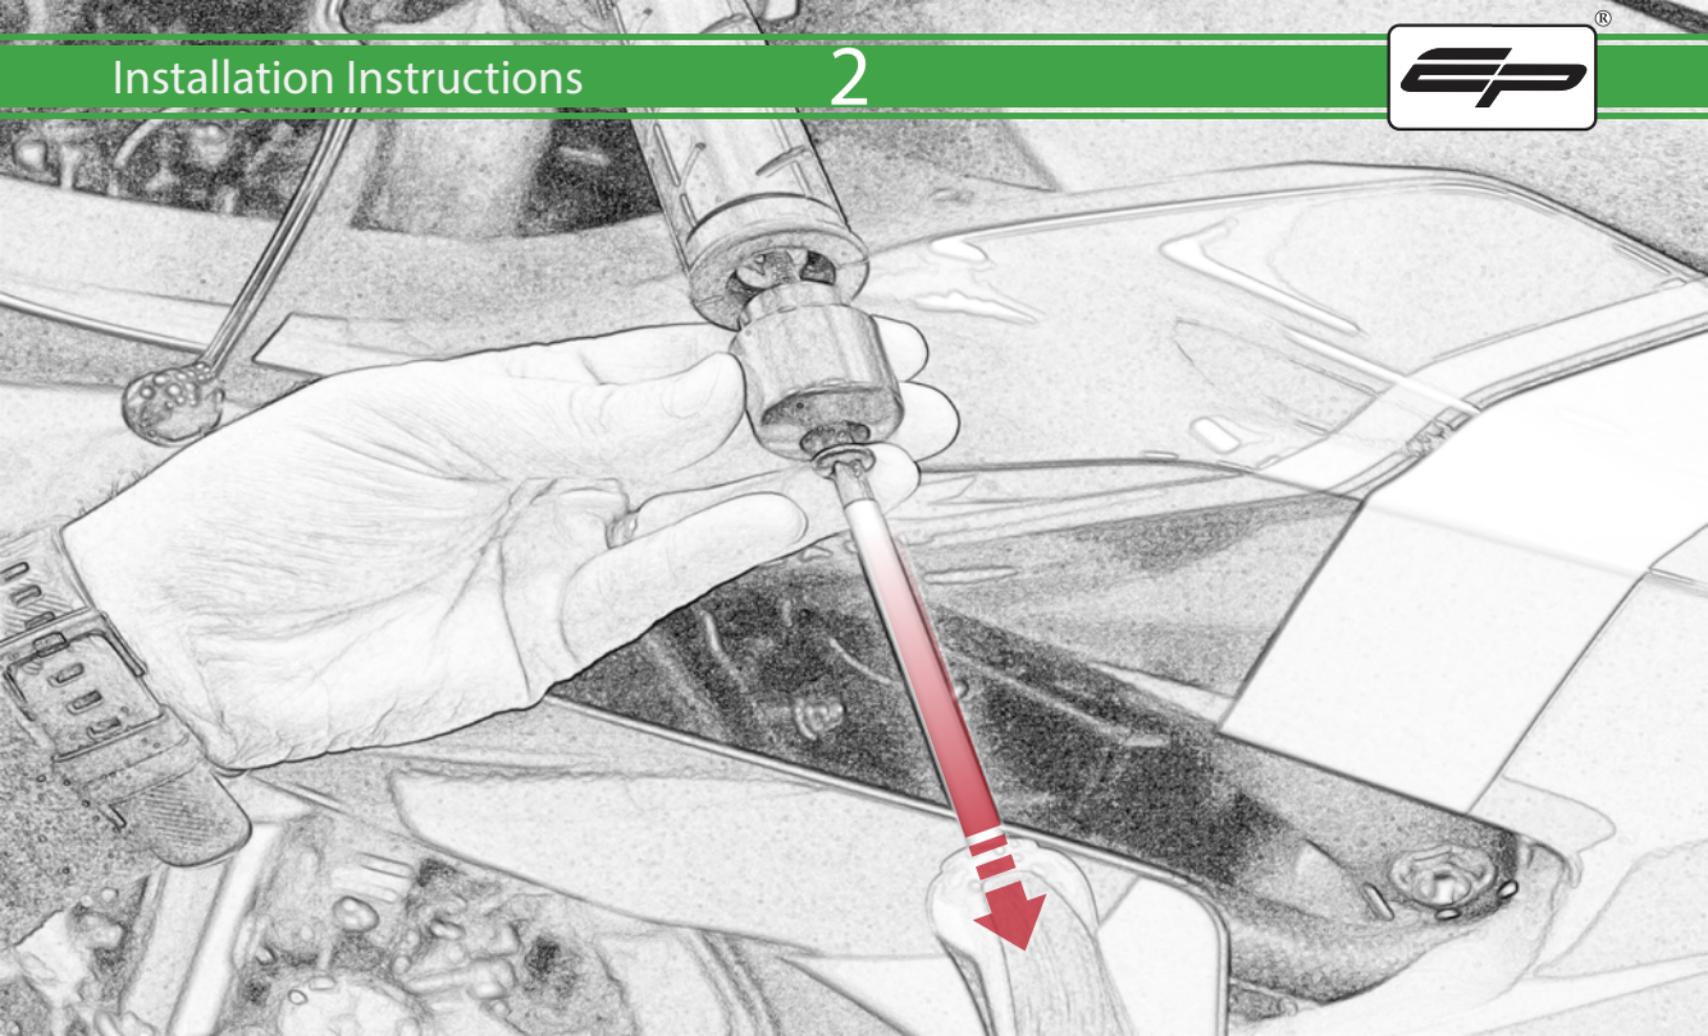


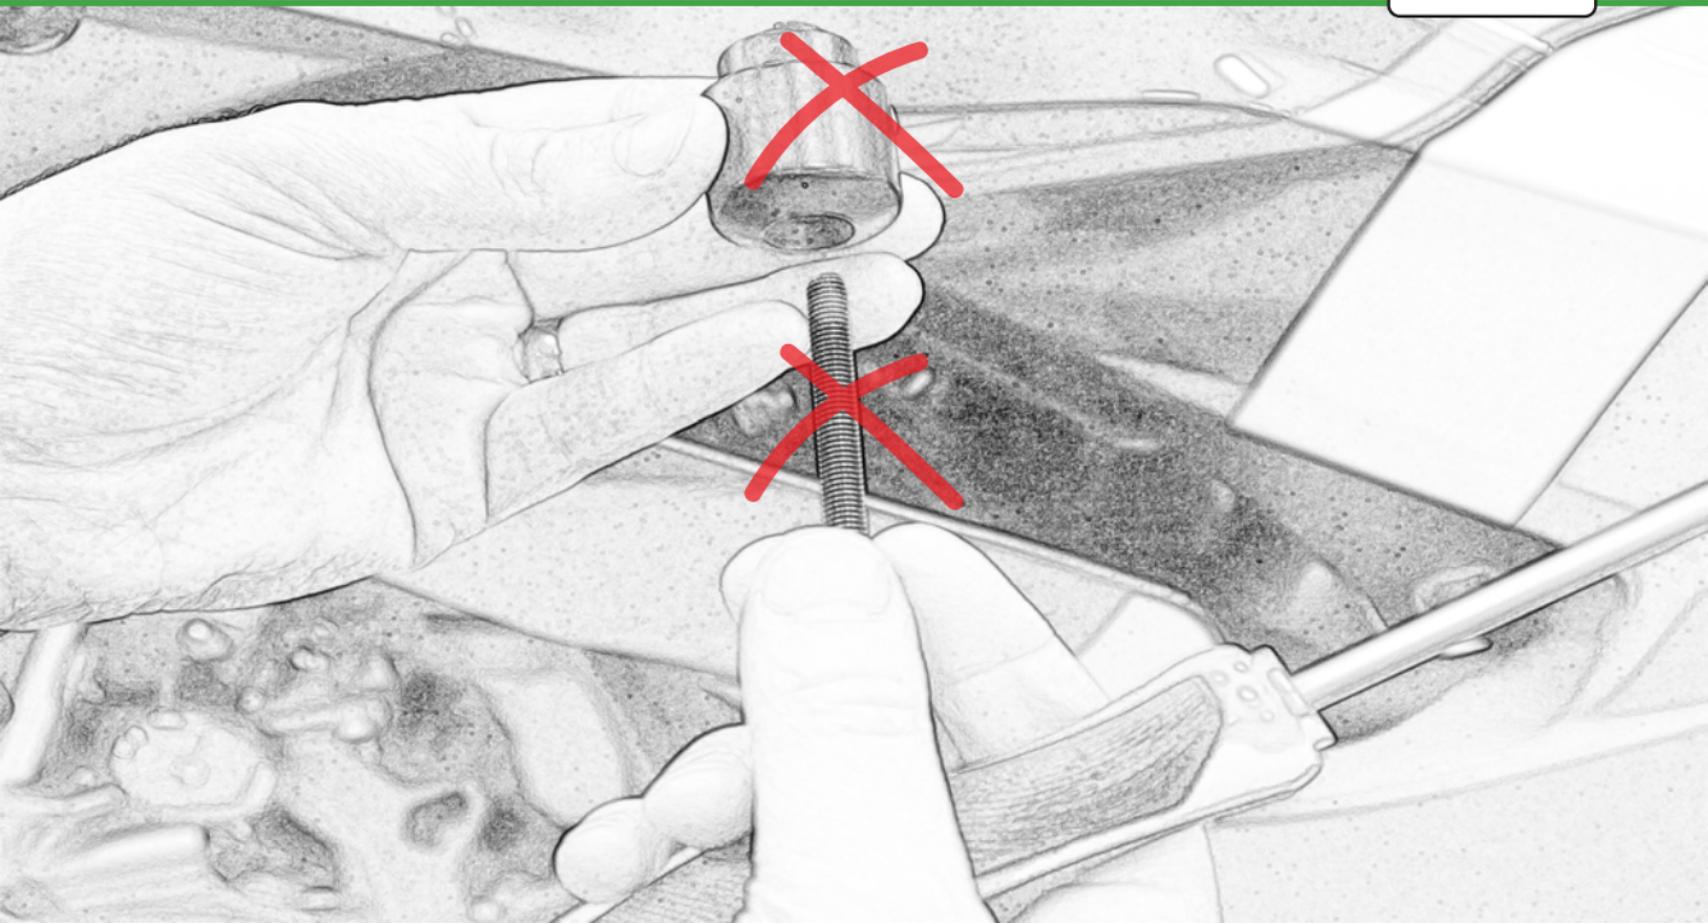


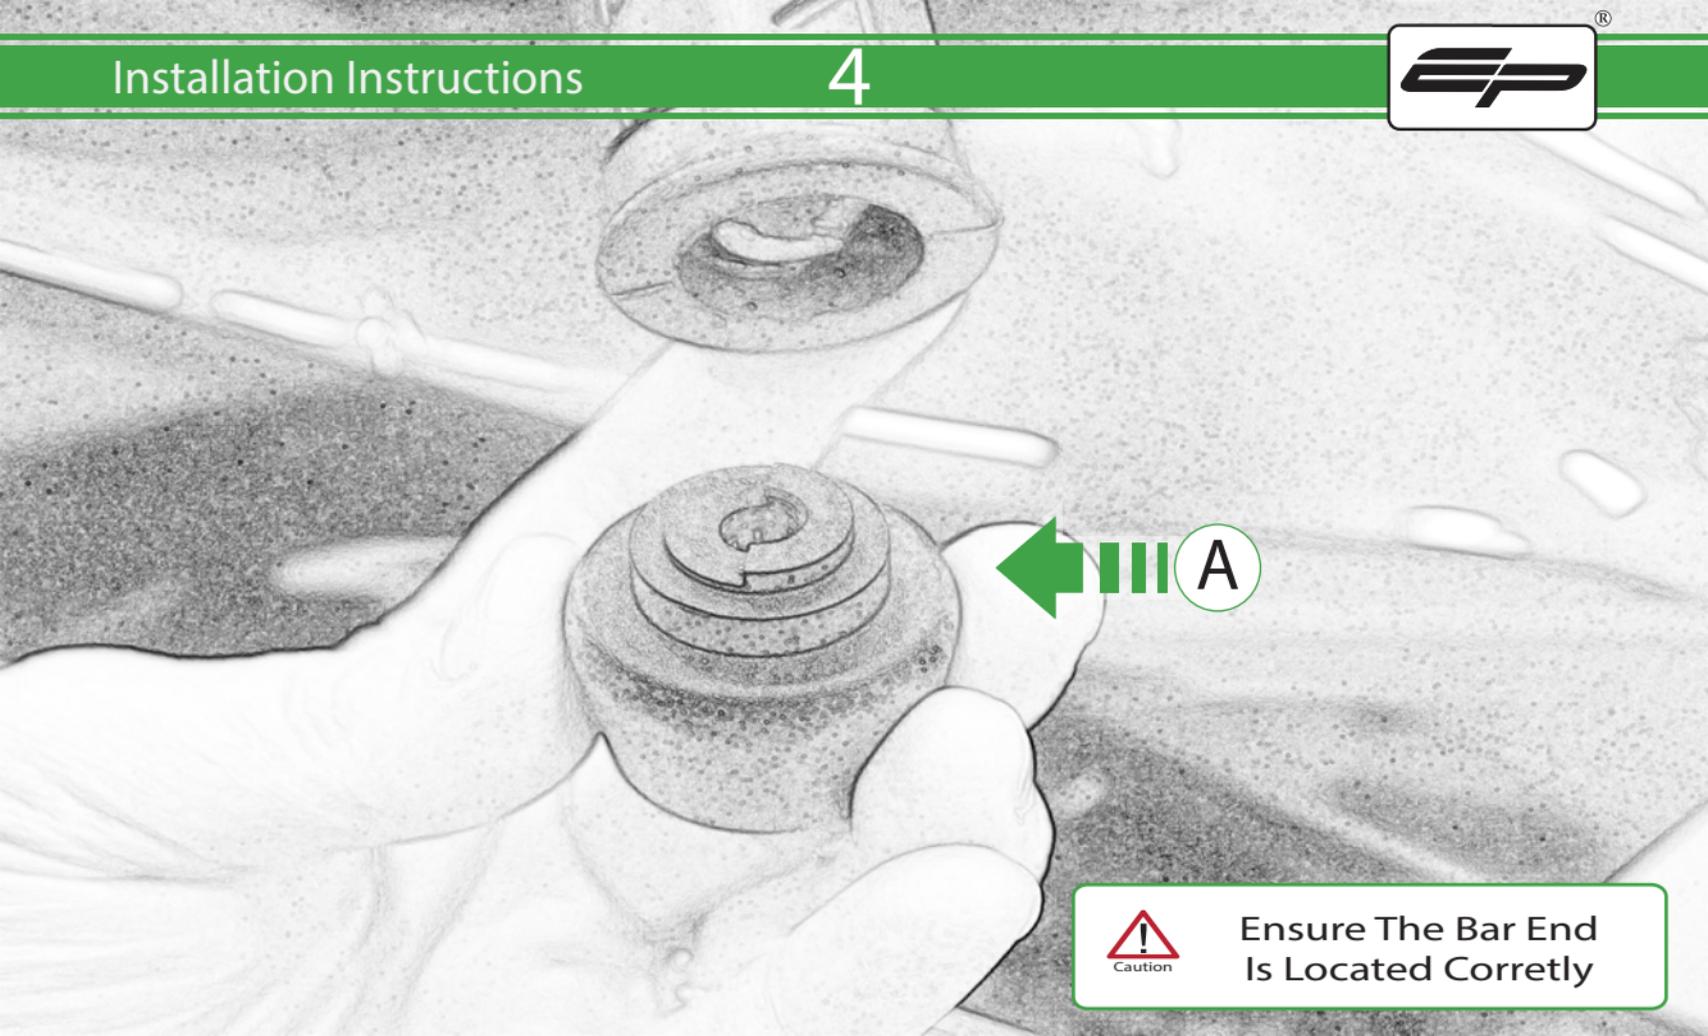



Caution

Ensure The Bar End
Is Located Corretly

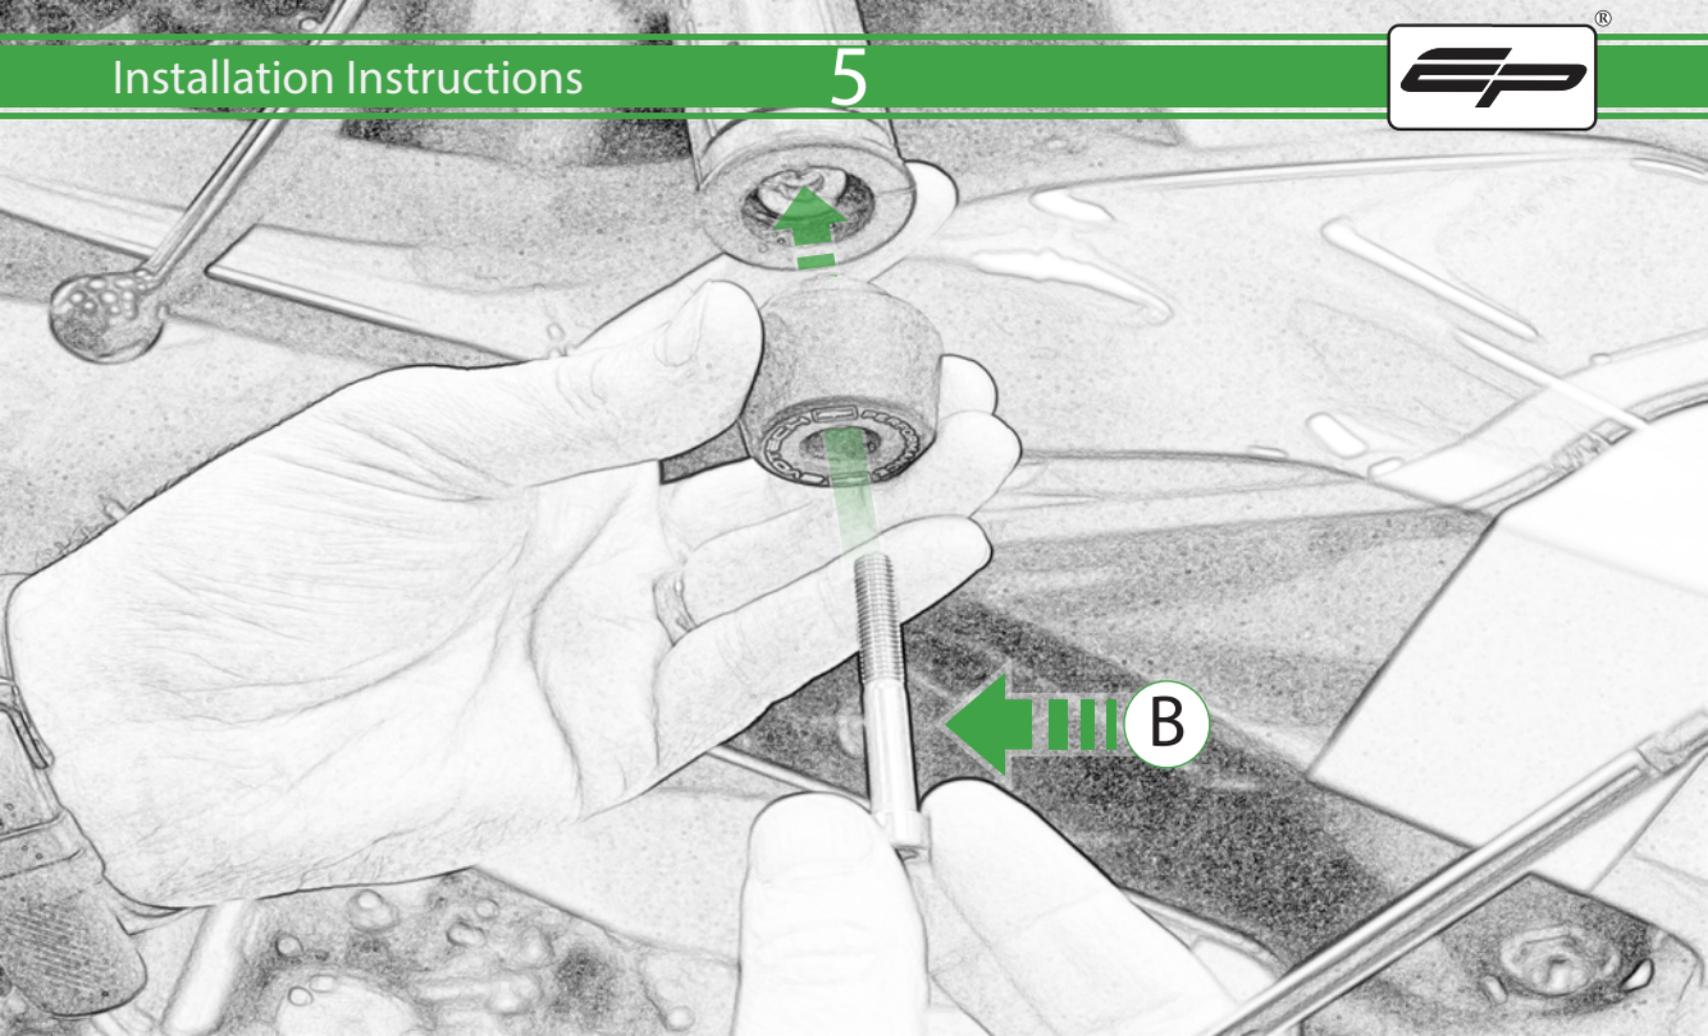


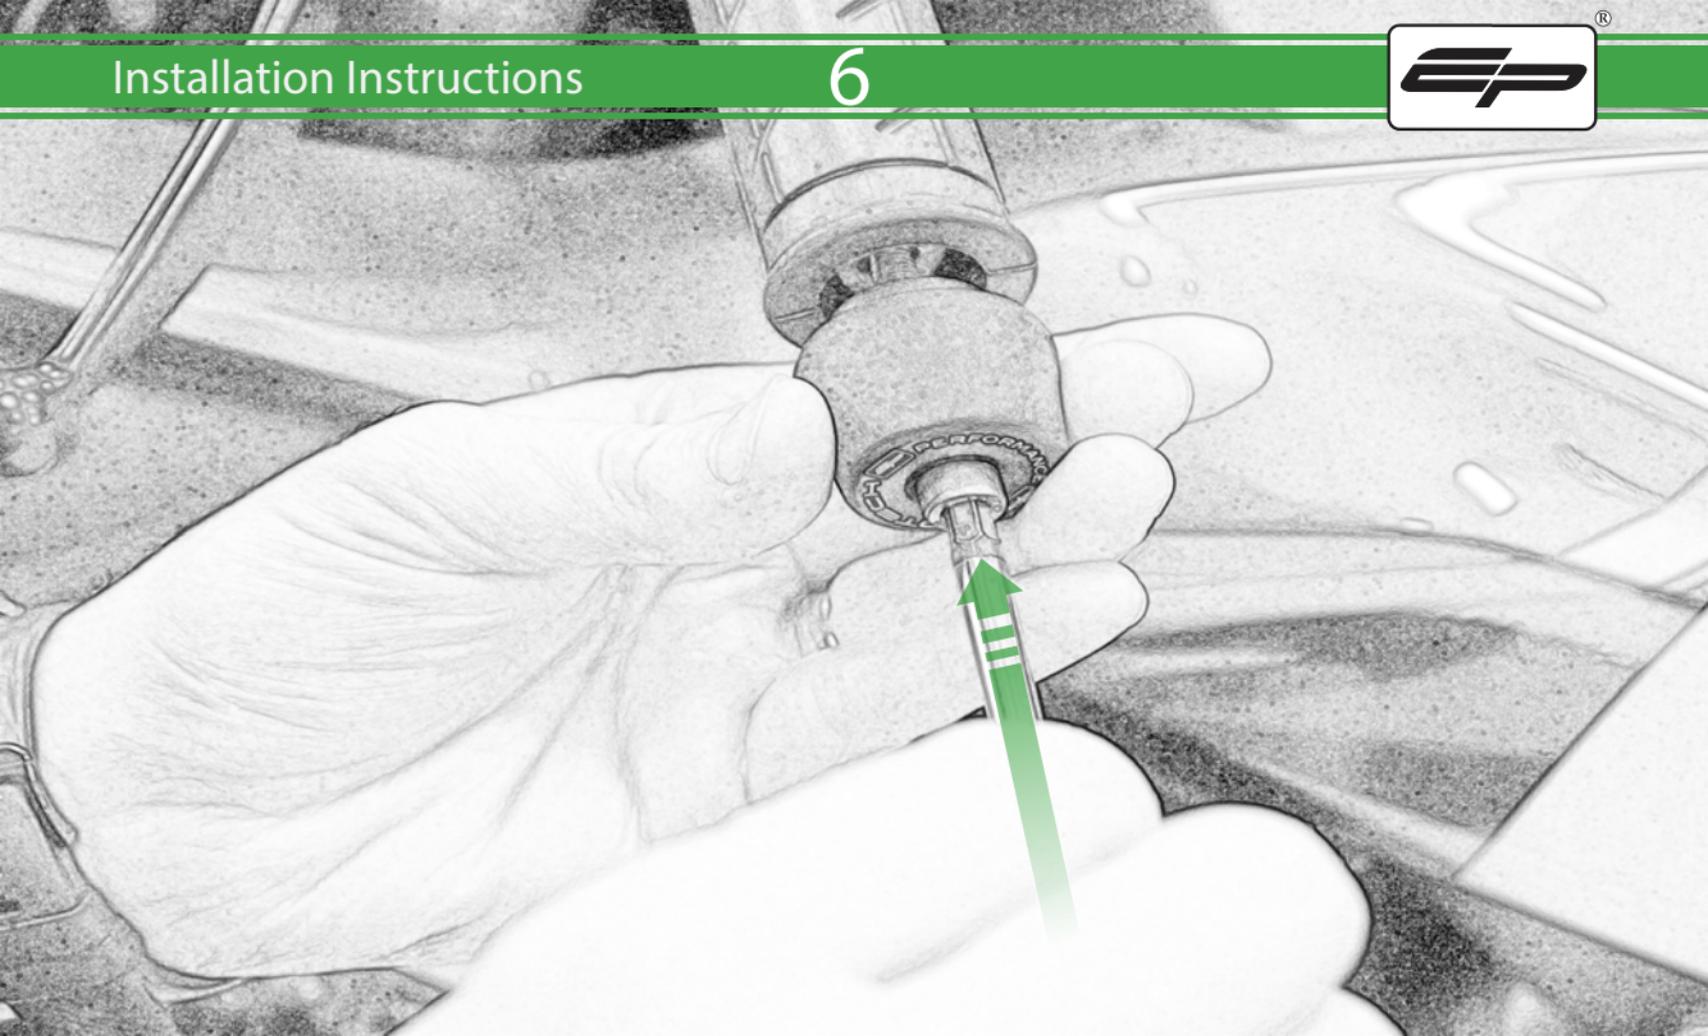


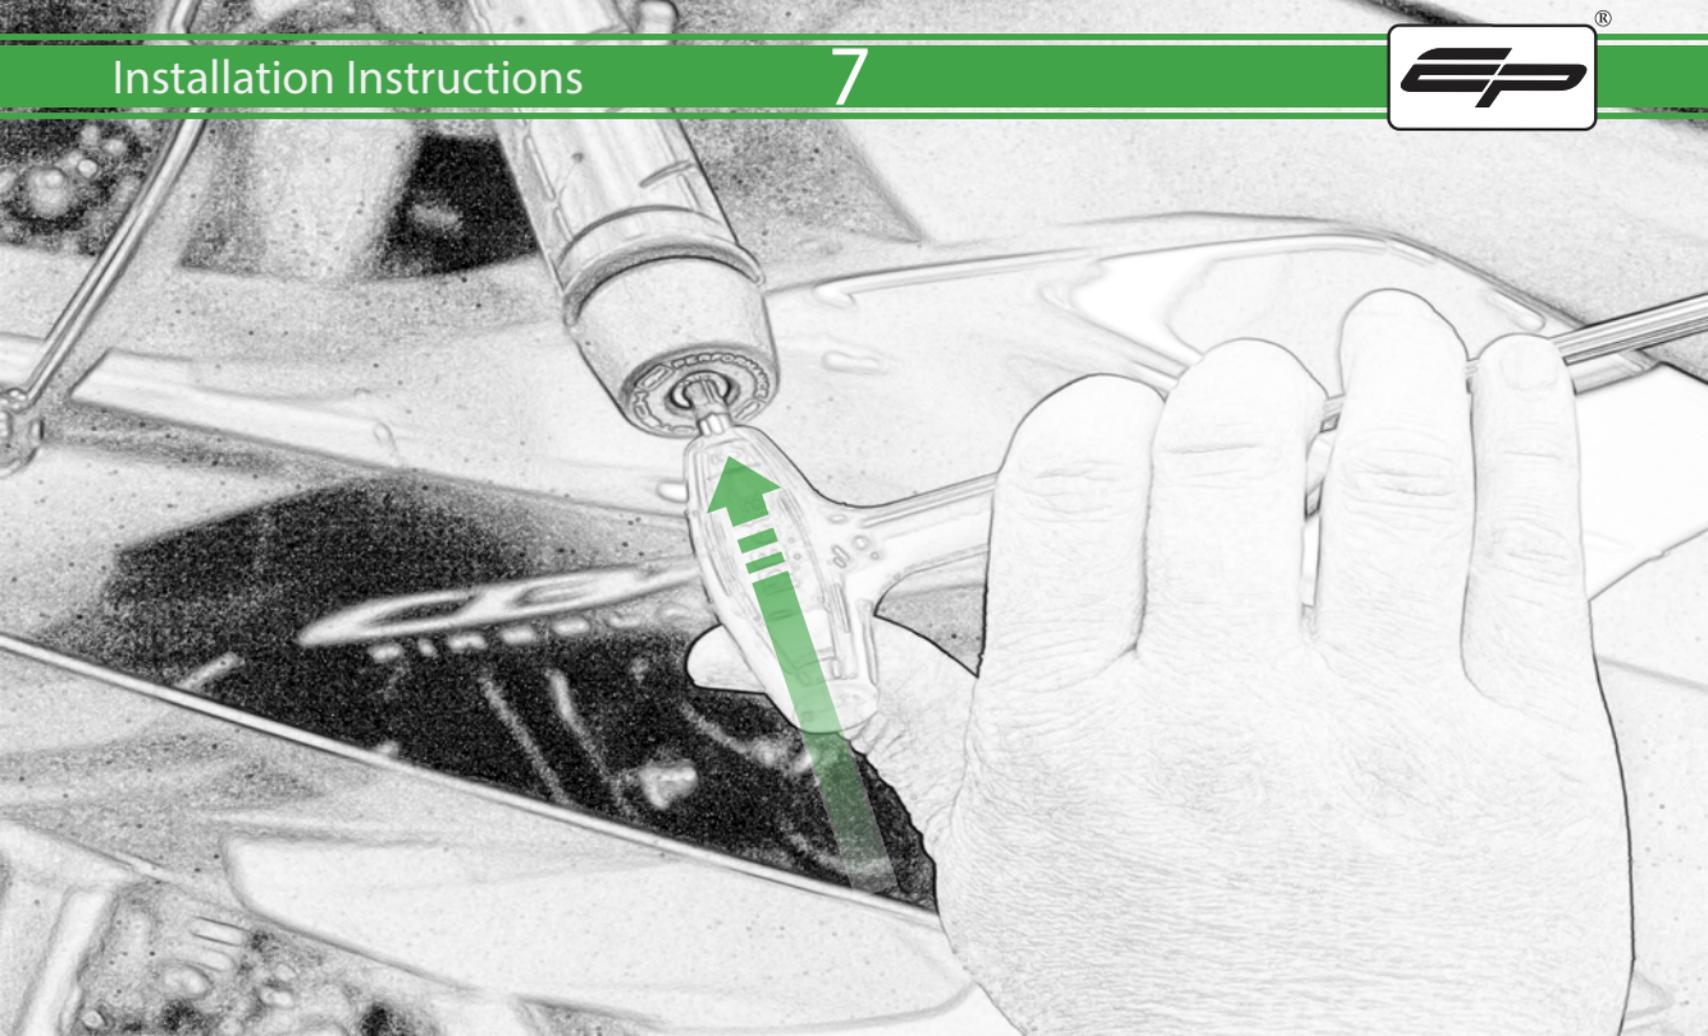


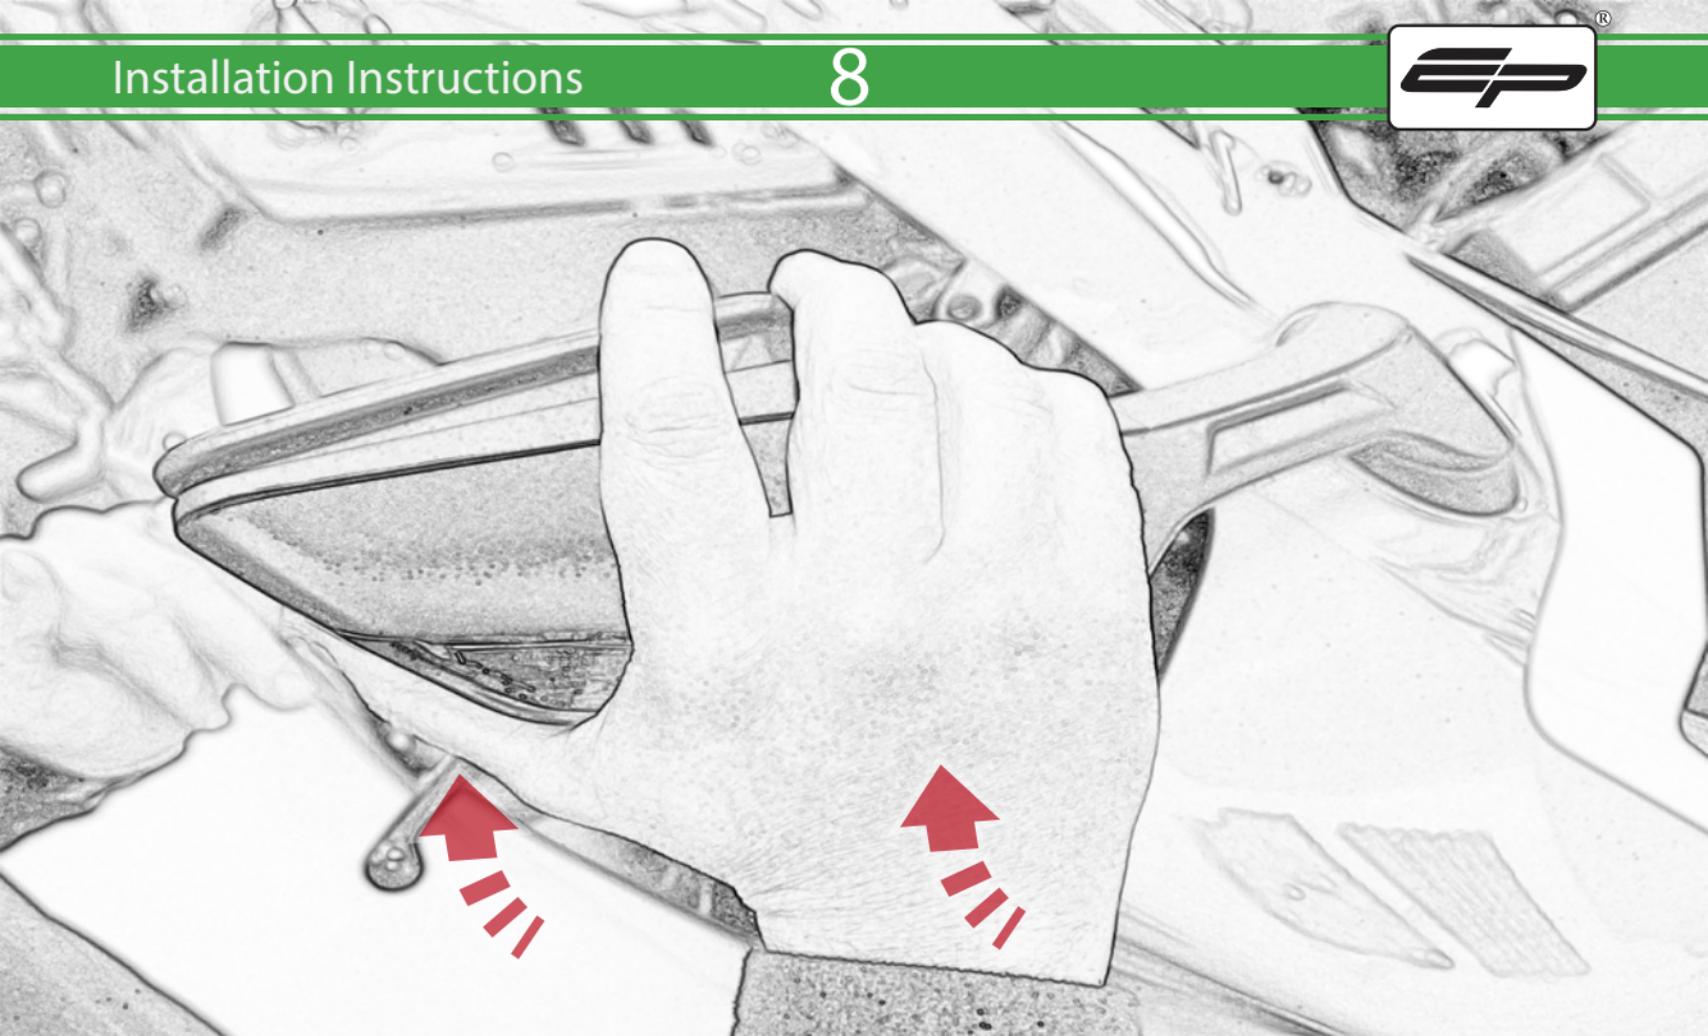





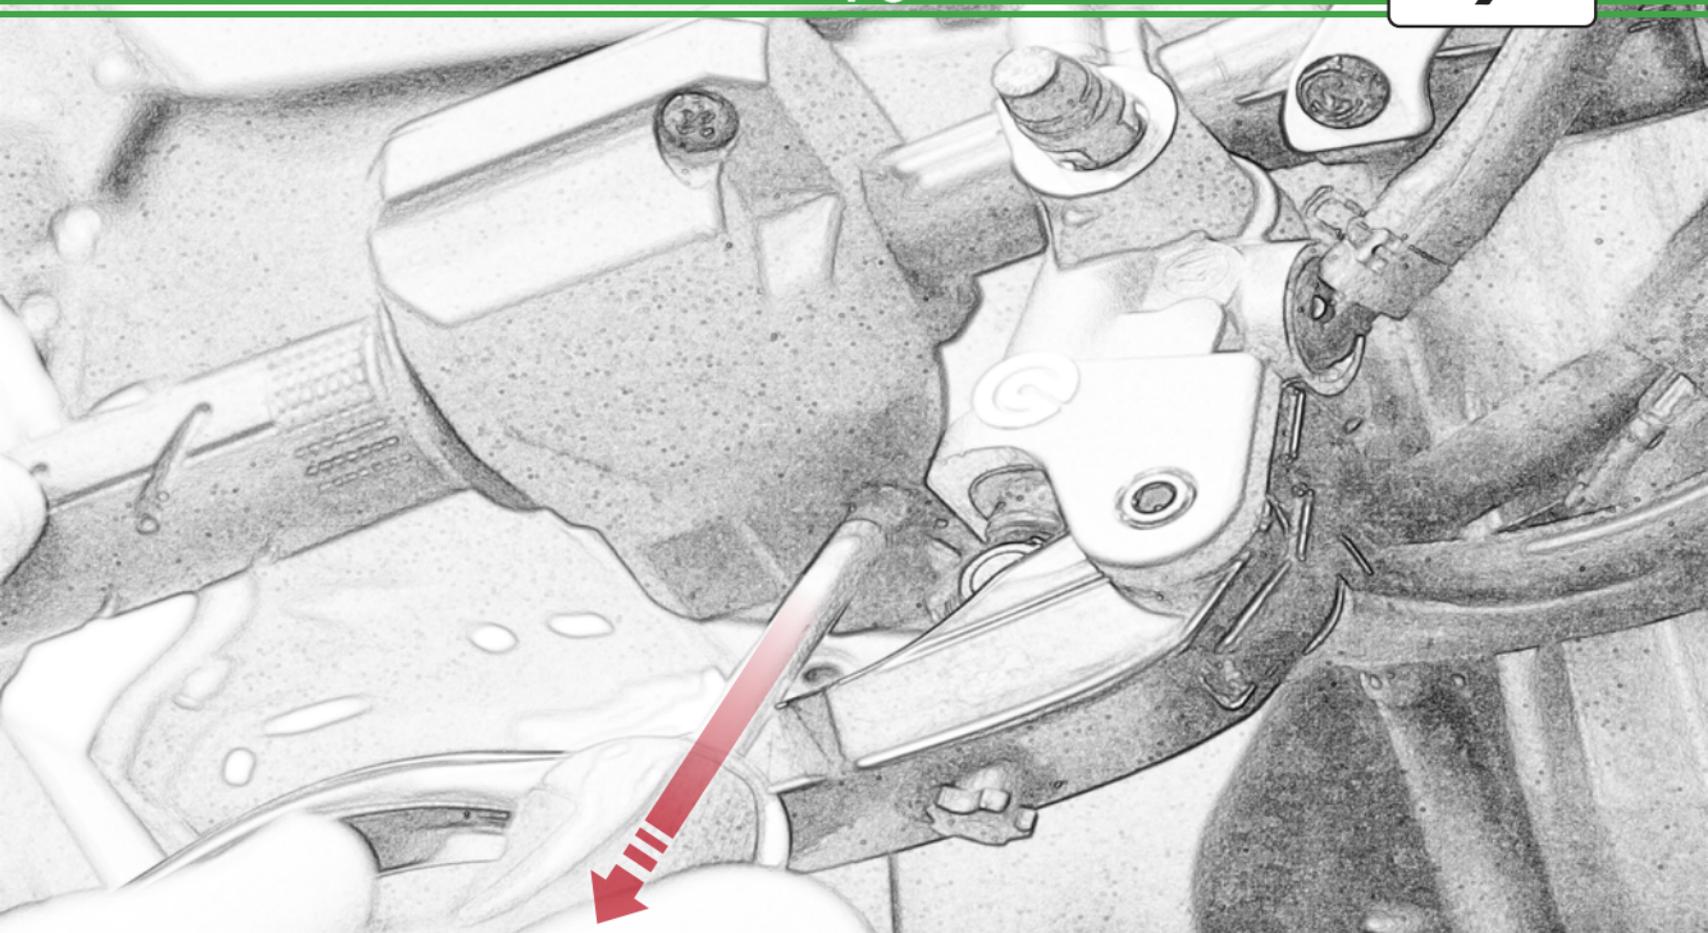


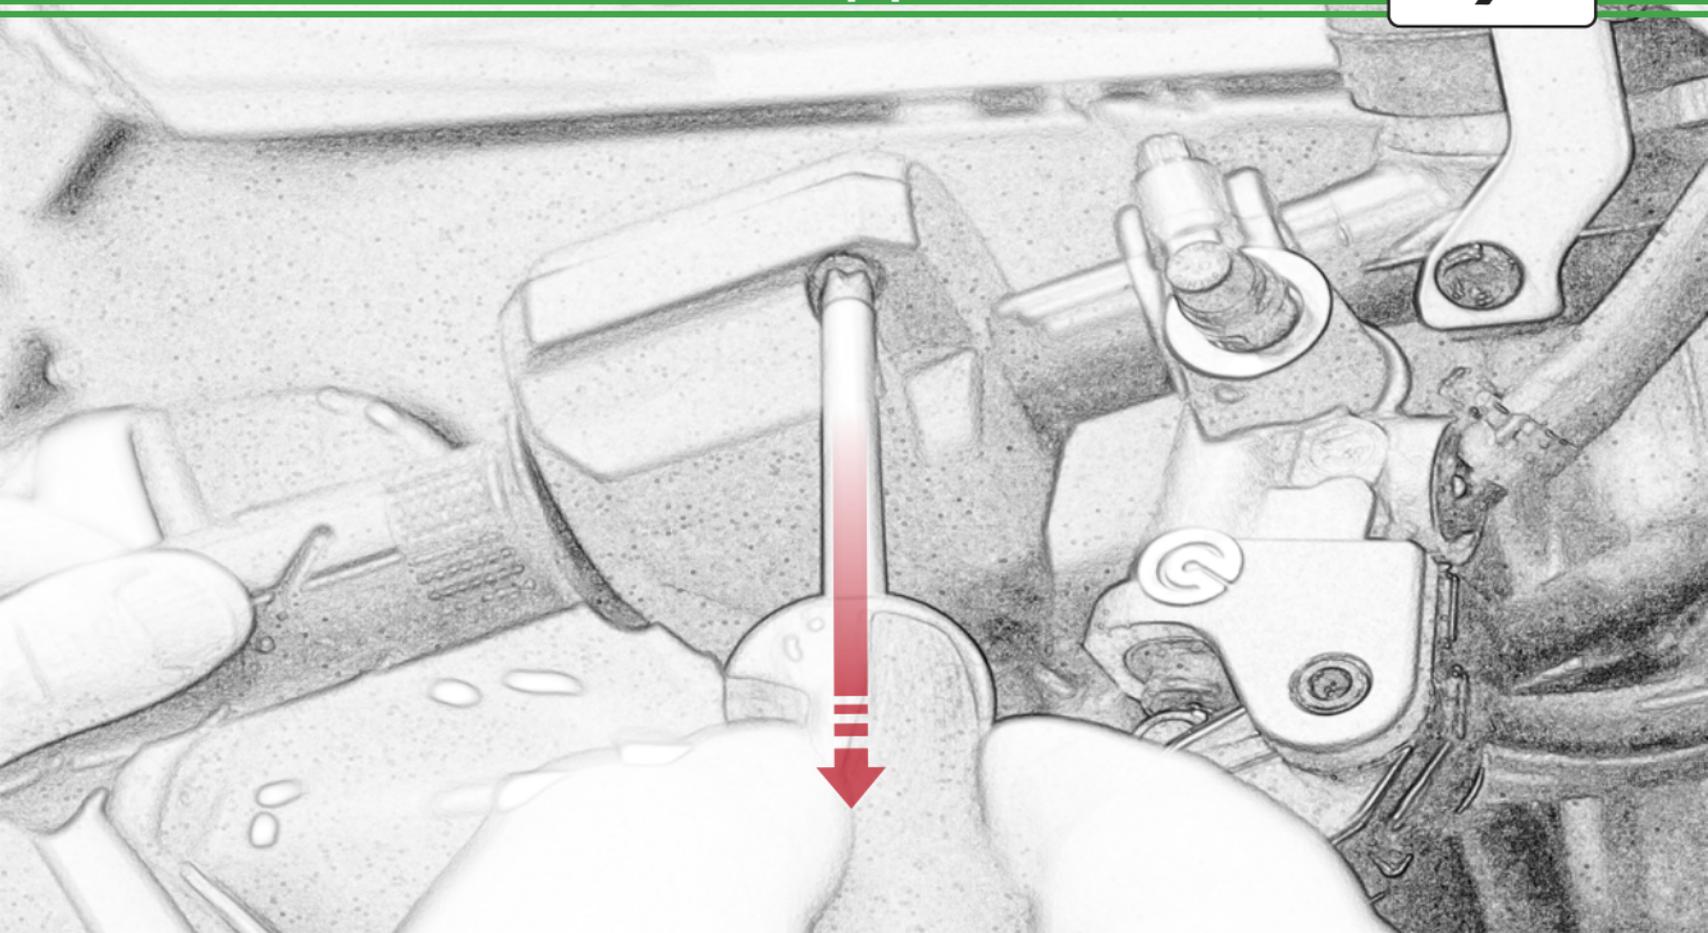

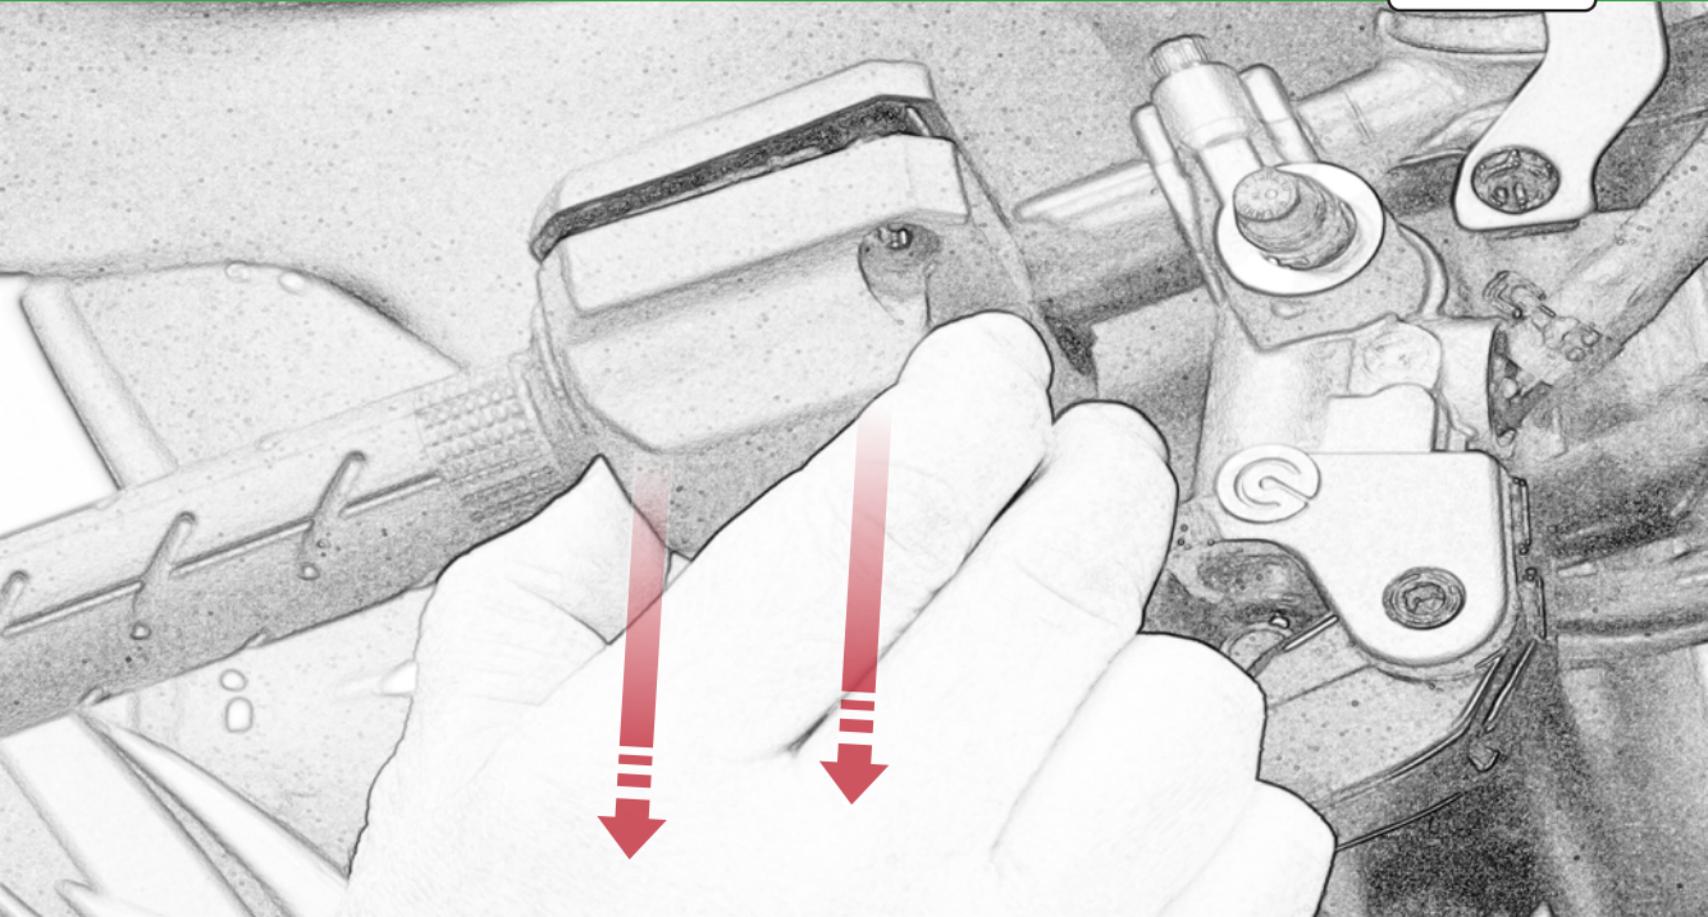


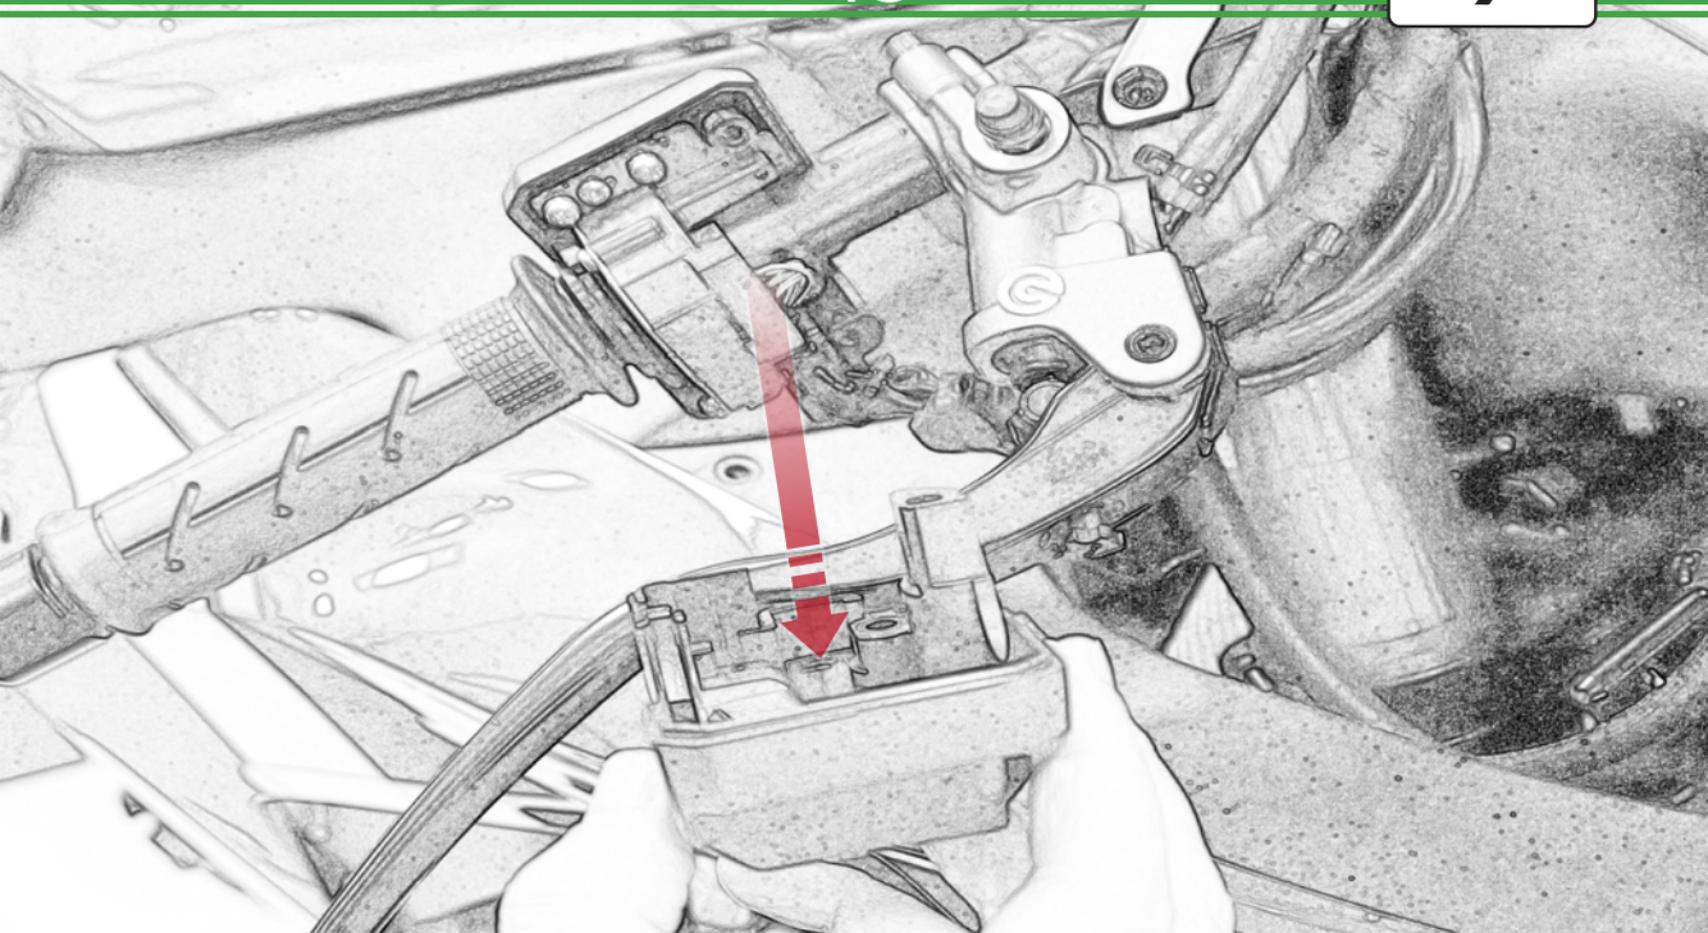


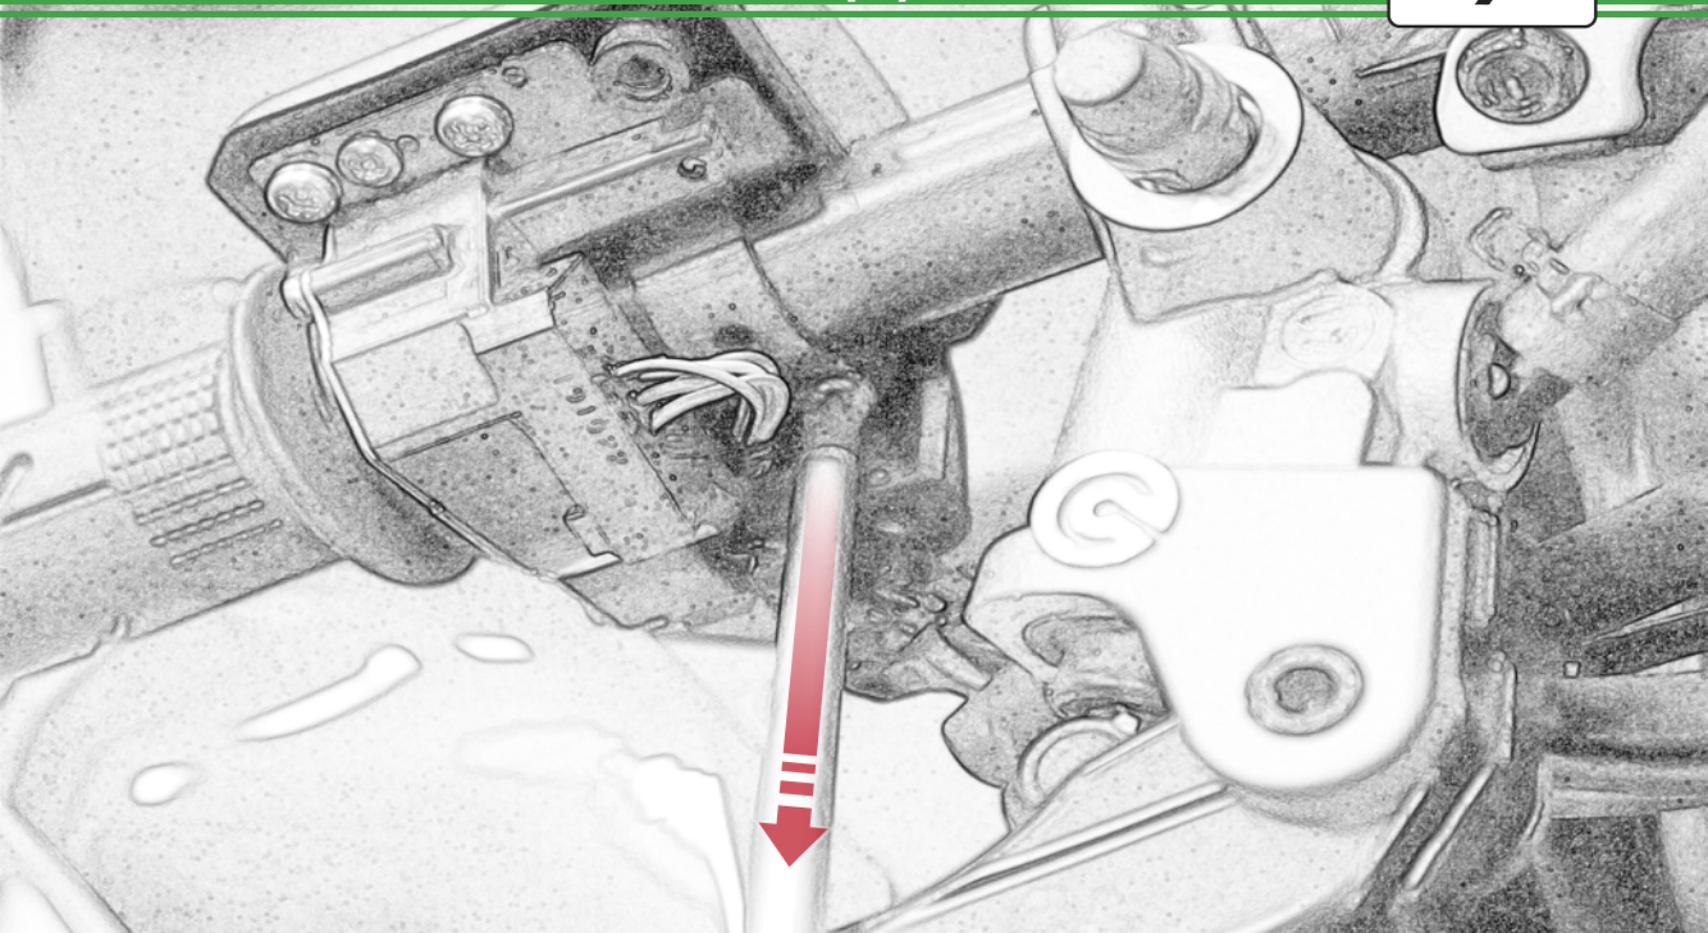

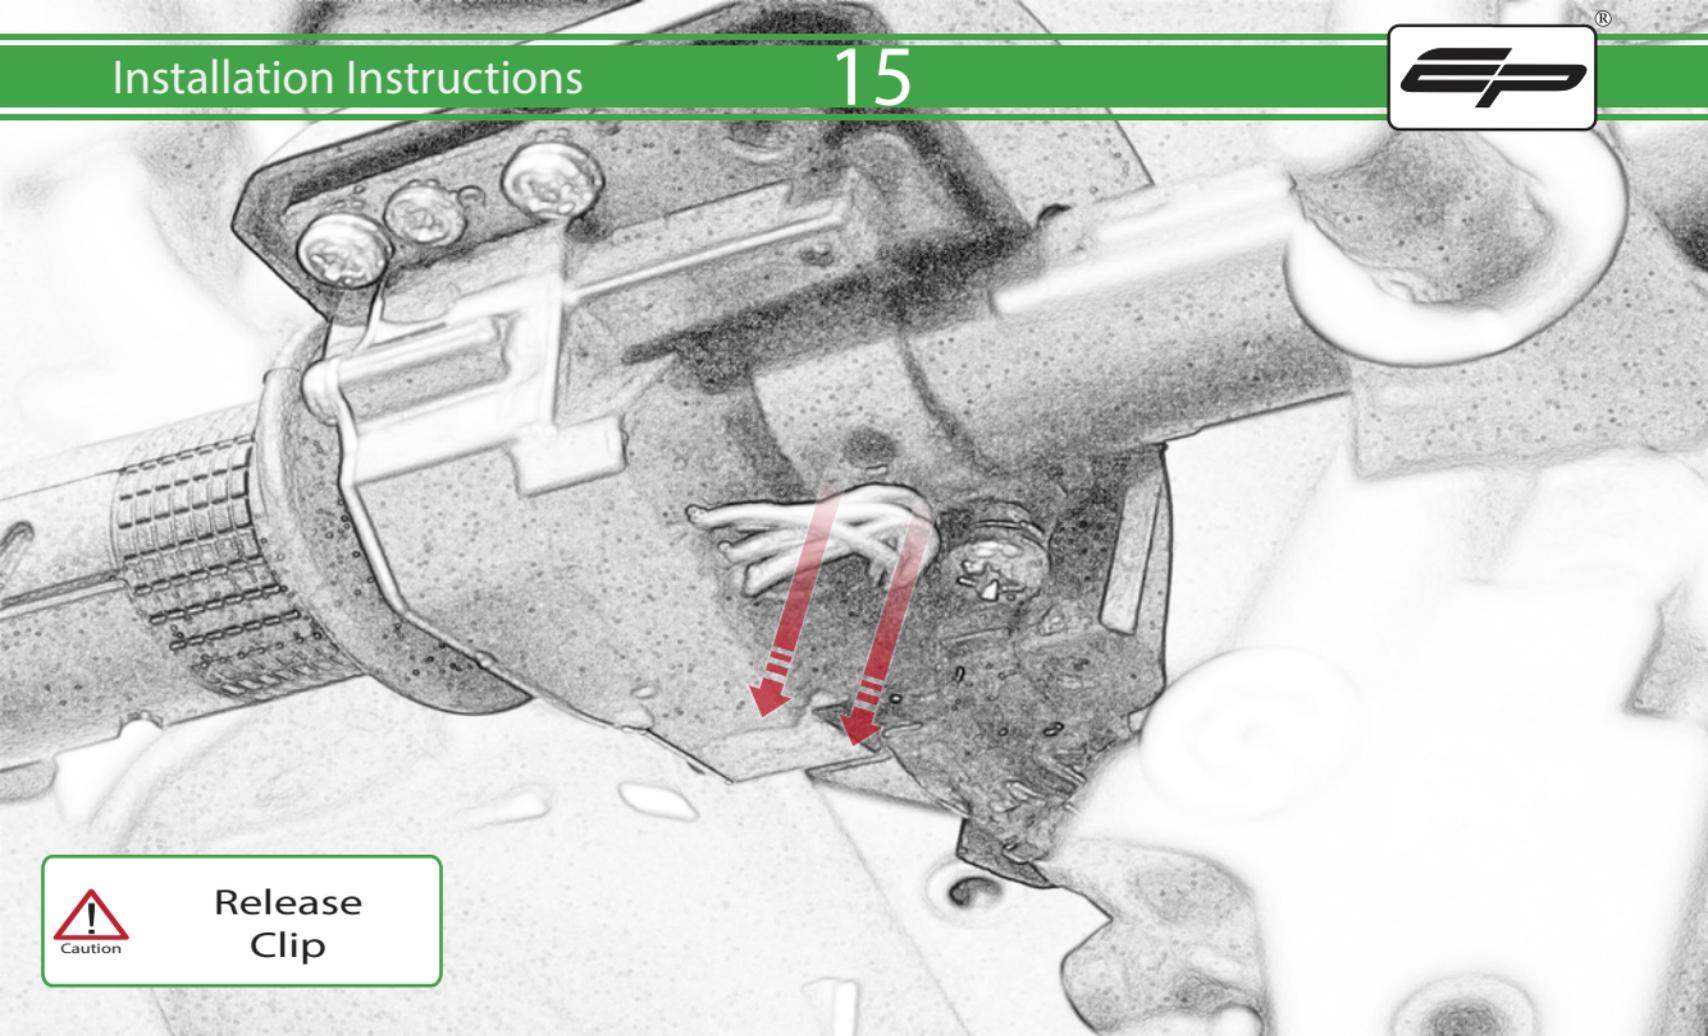


 **Release
Clip**

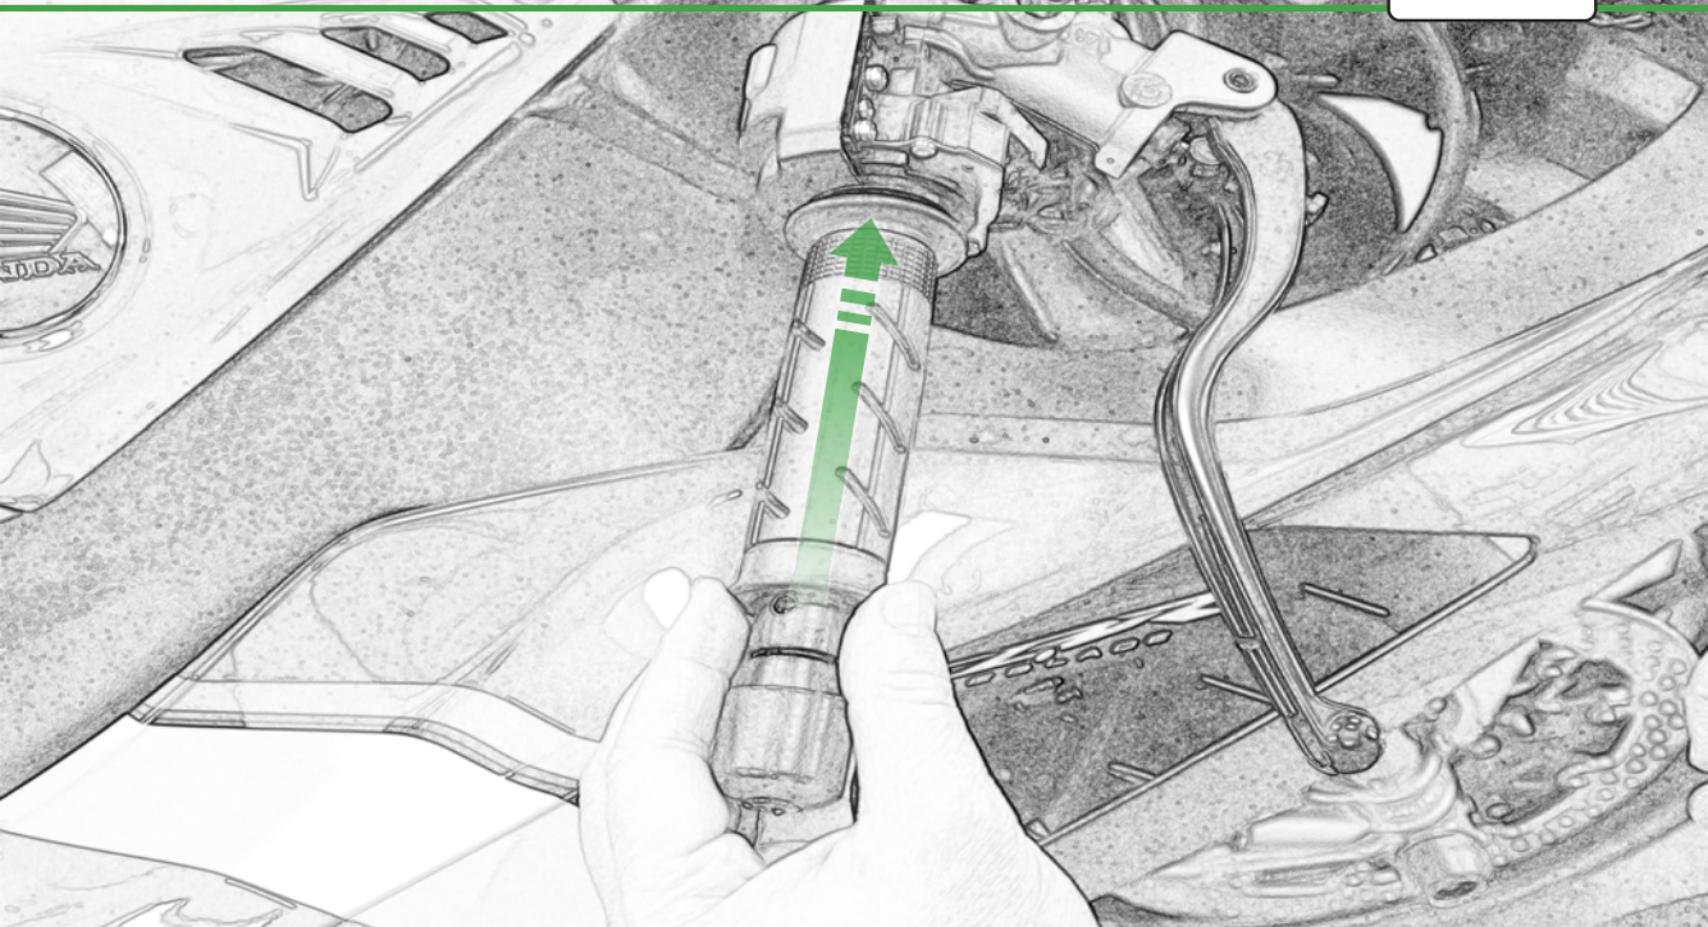

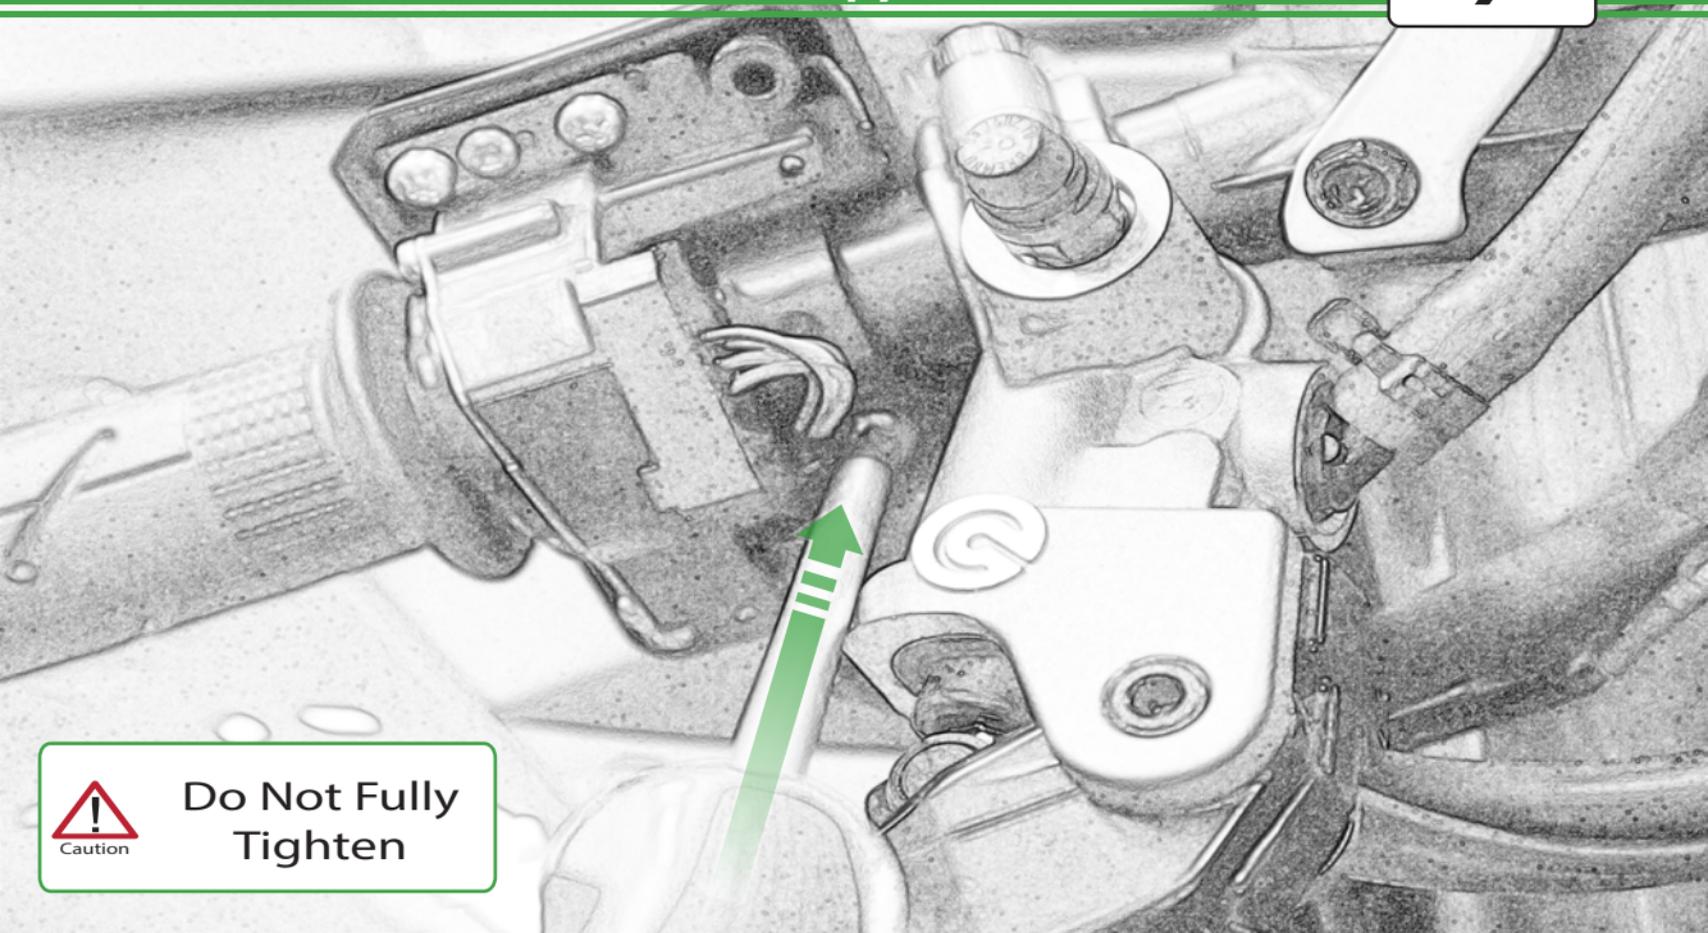



Caution


Do Not Fully
Tighten

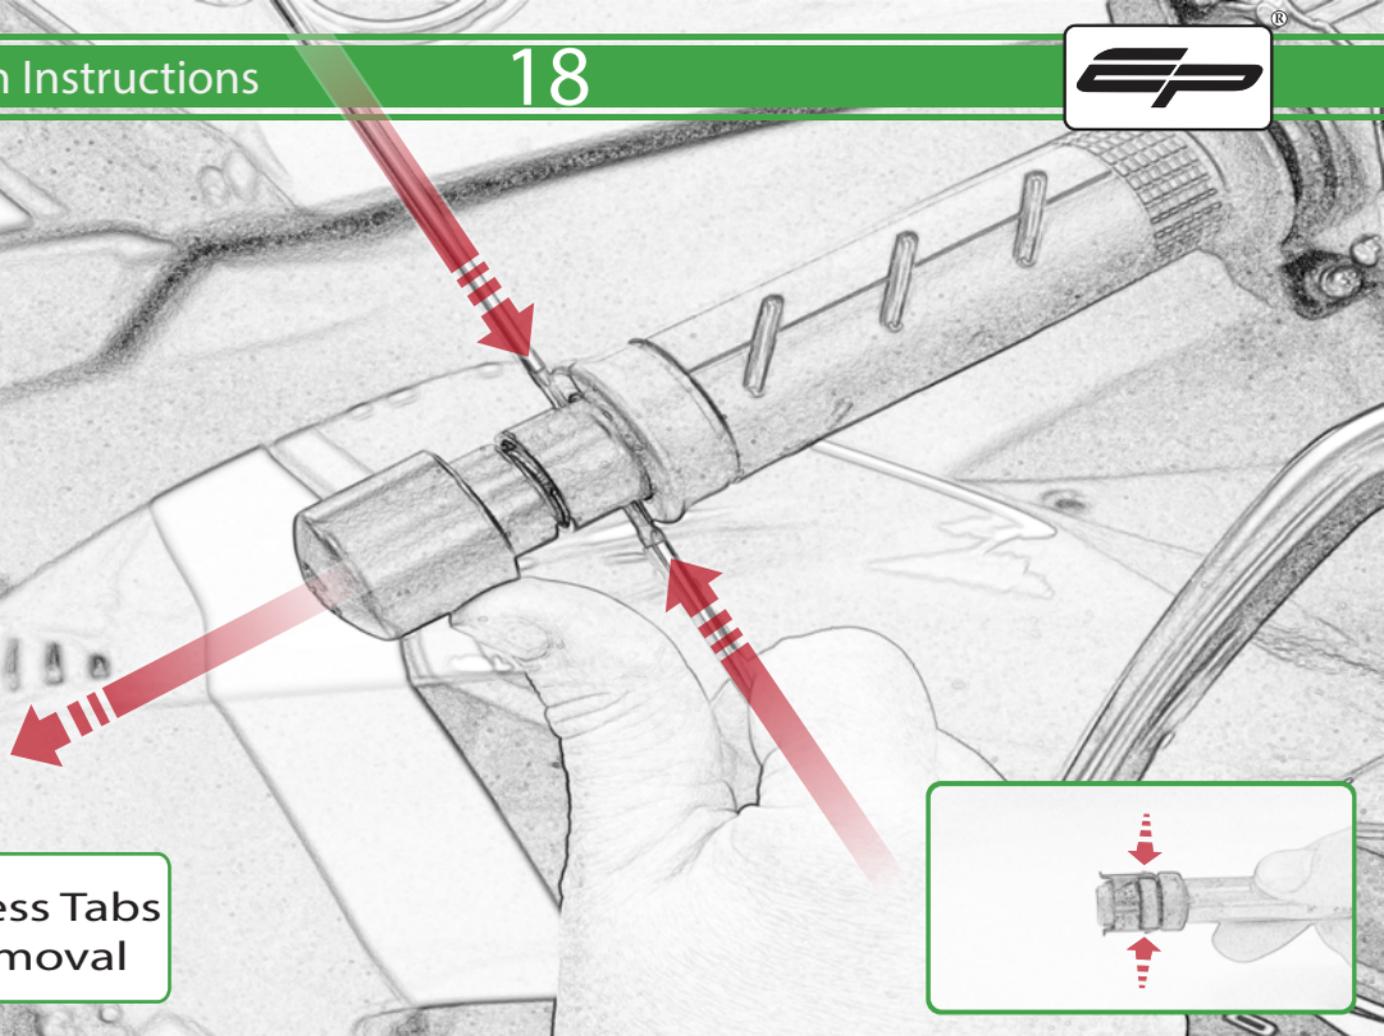



Caution
Compress Tabs
For Removal

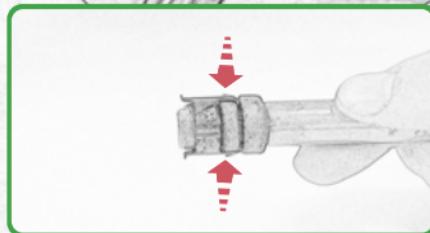


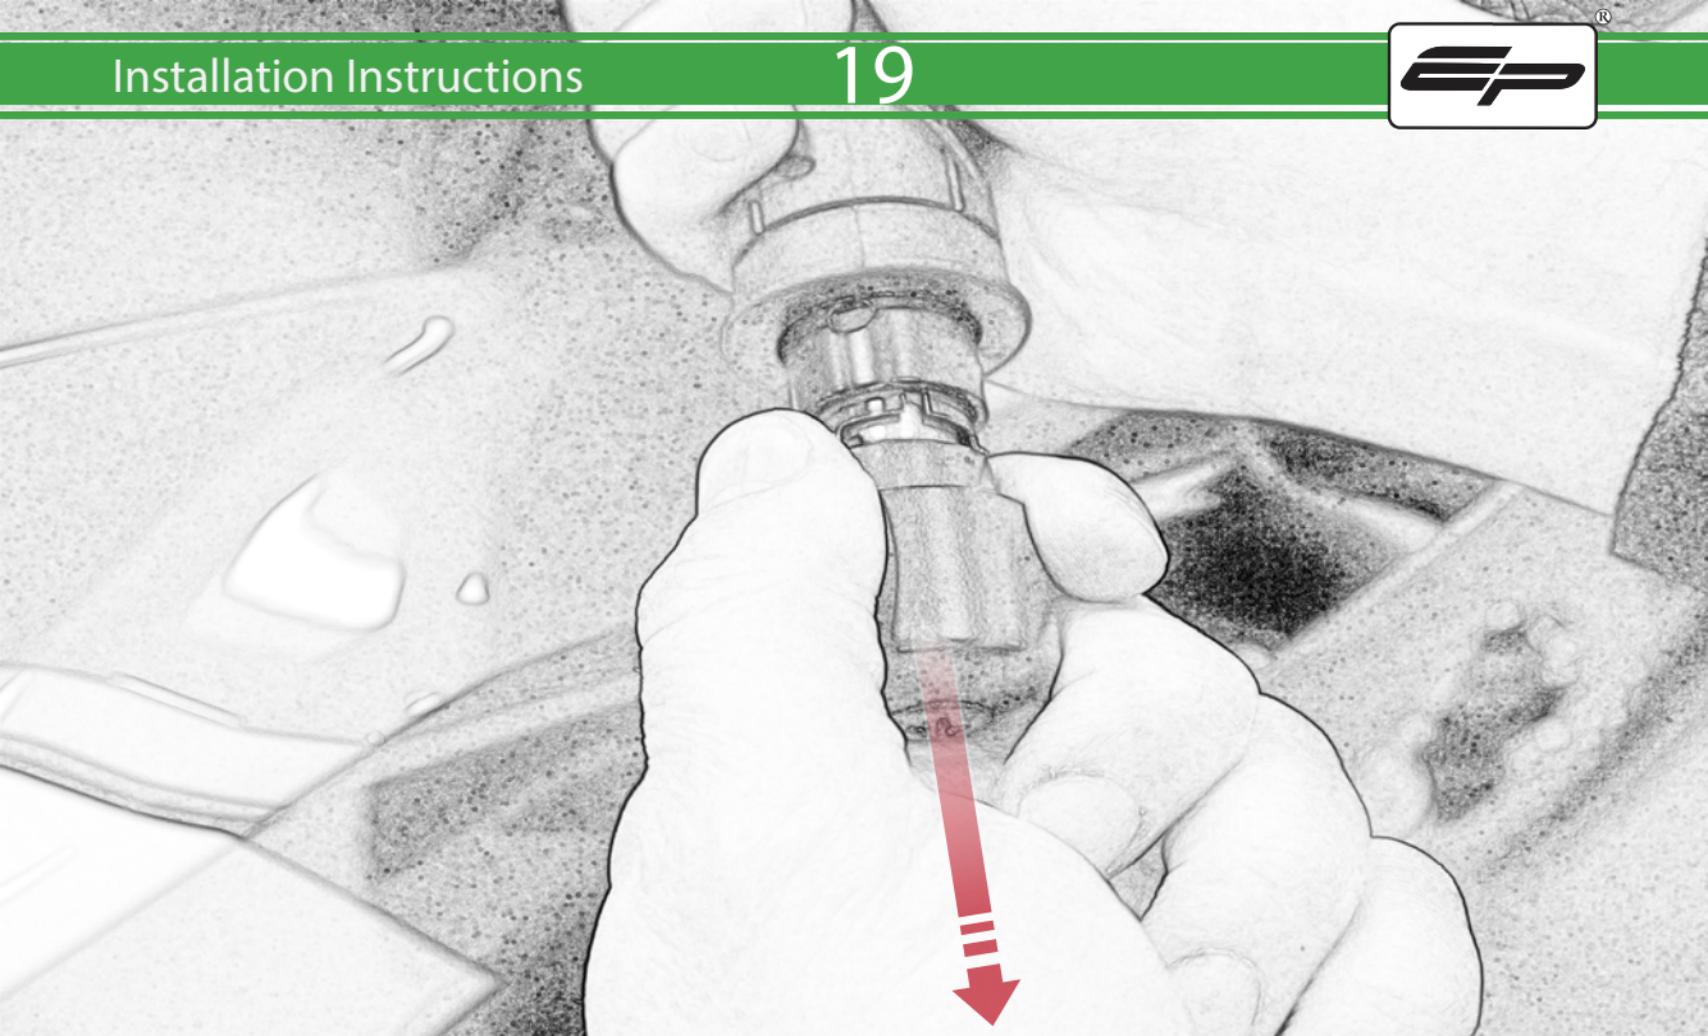

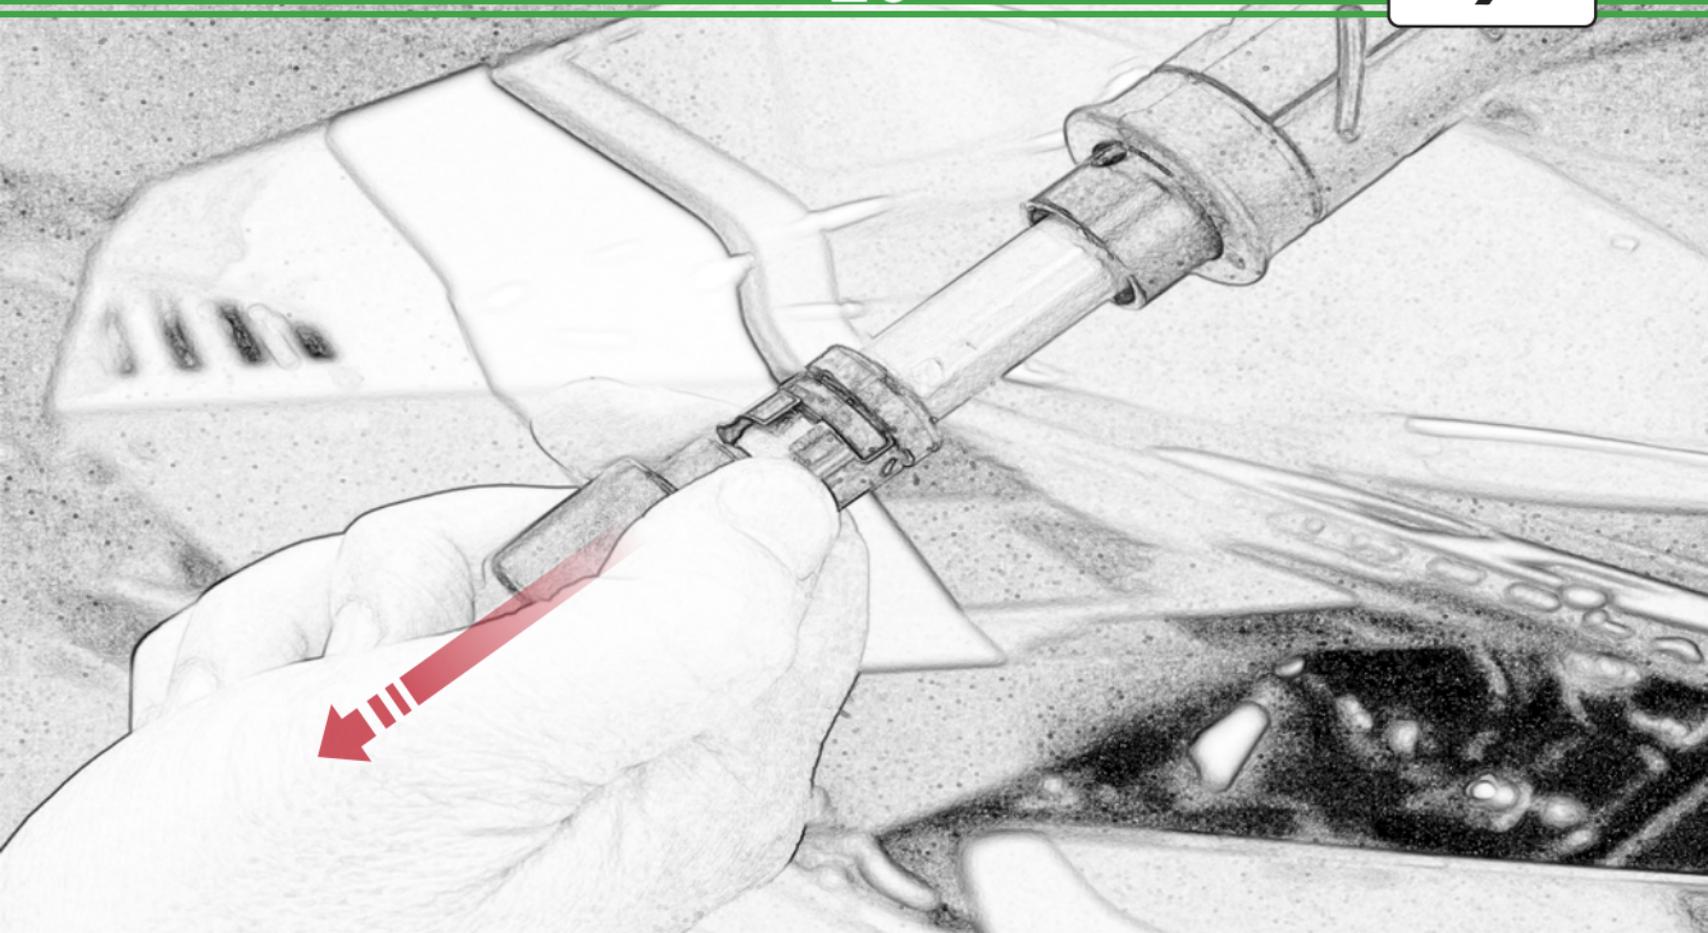


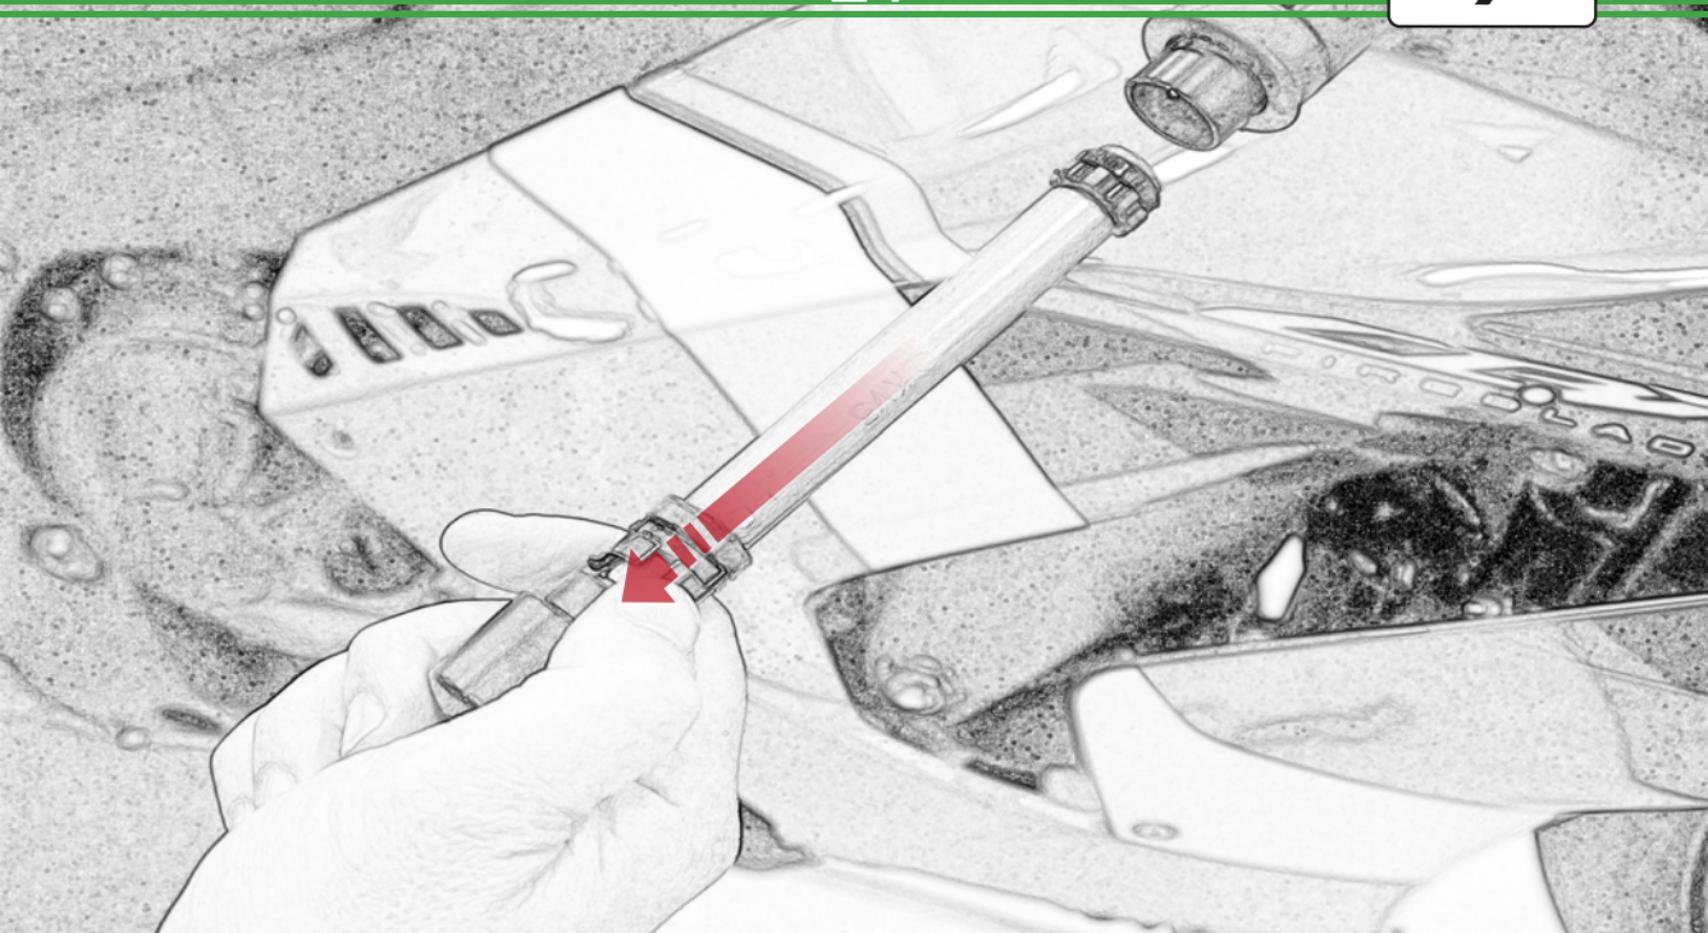


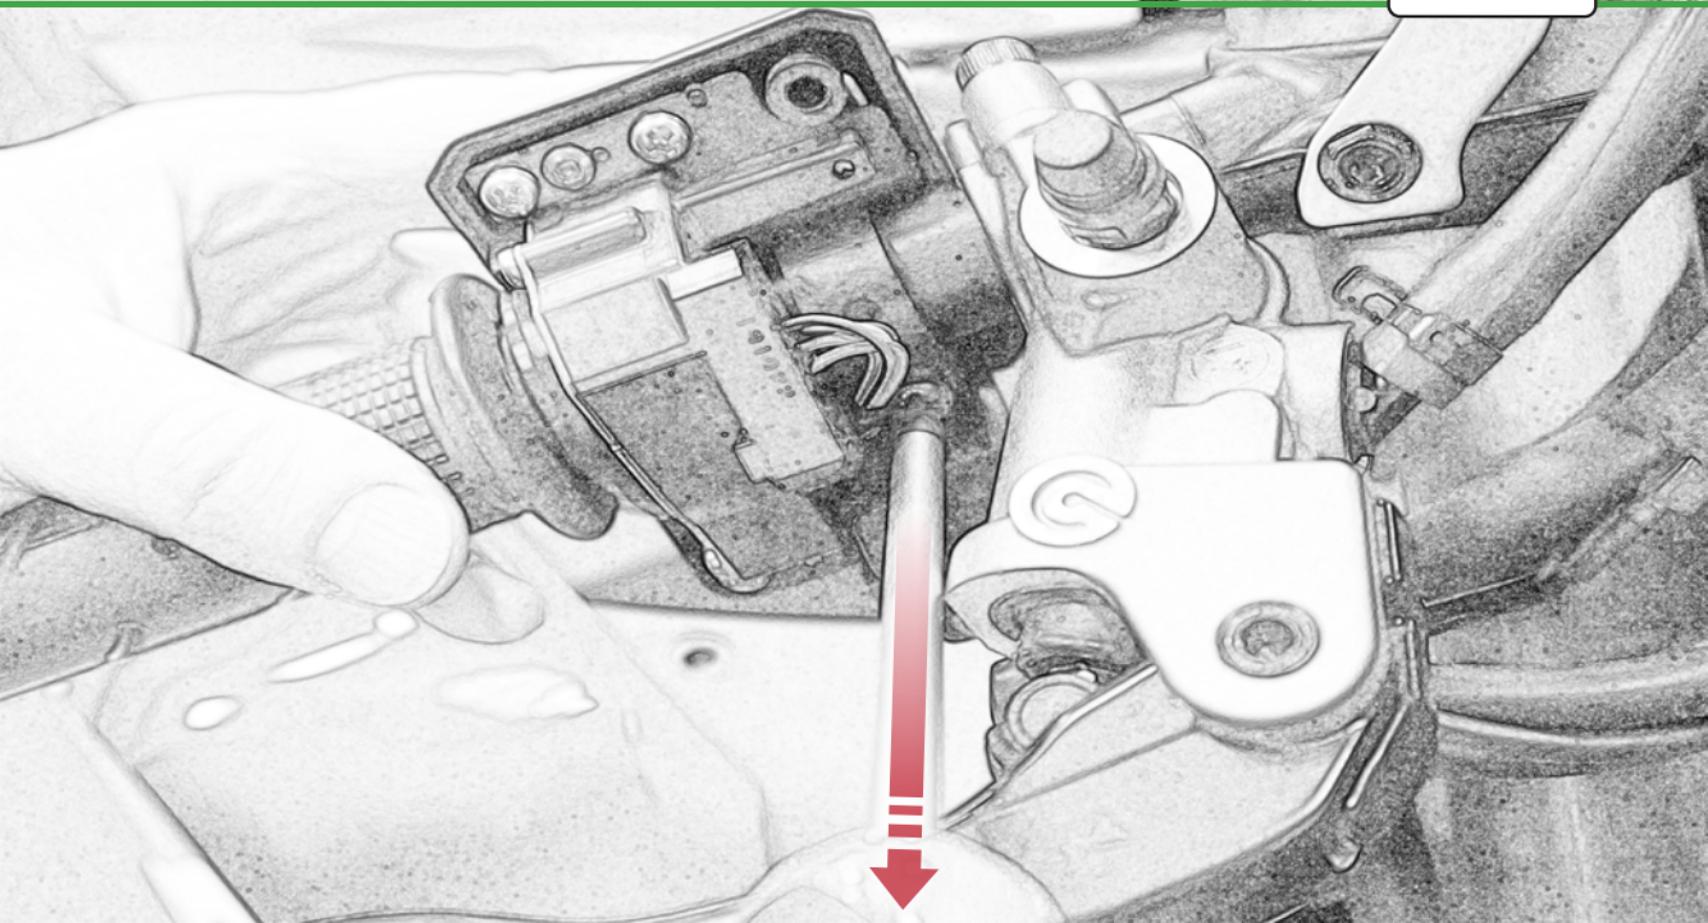

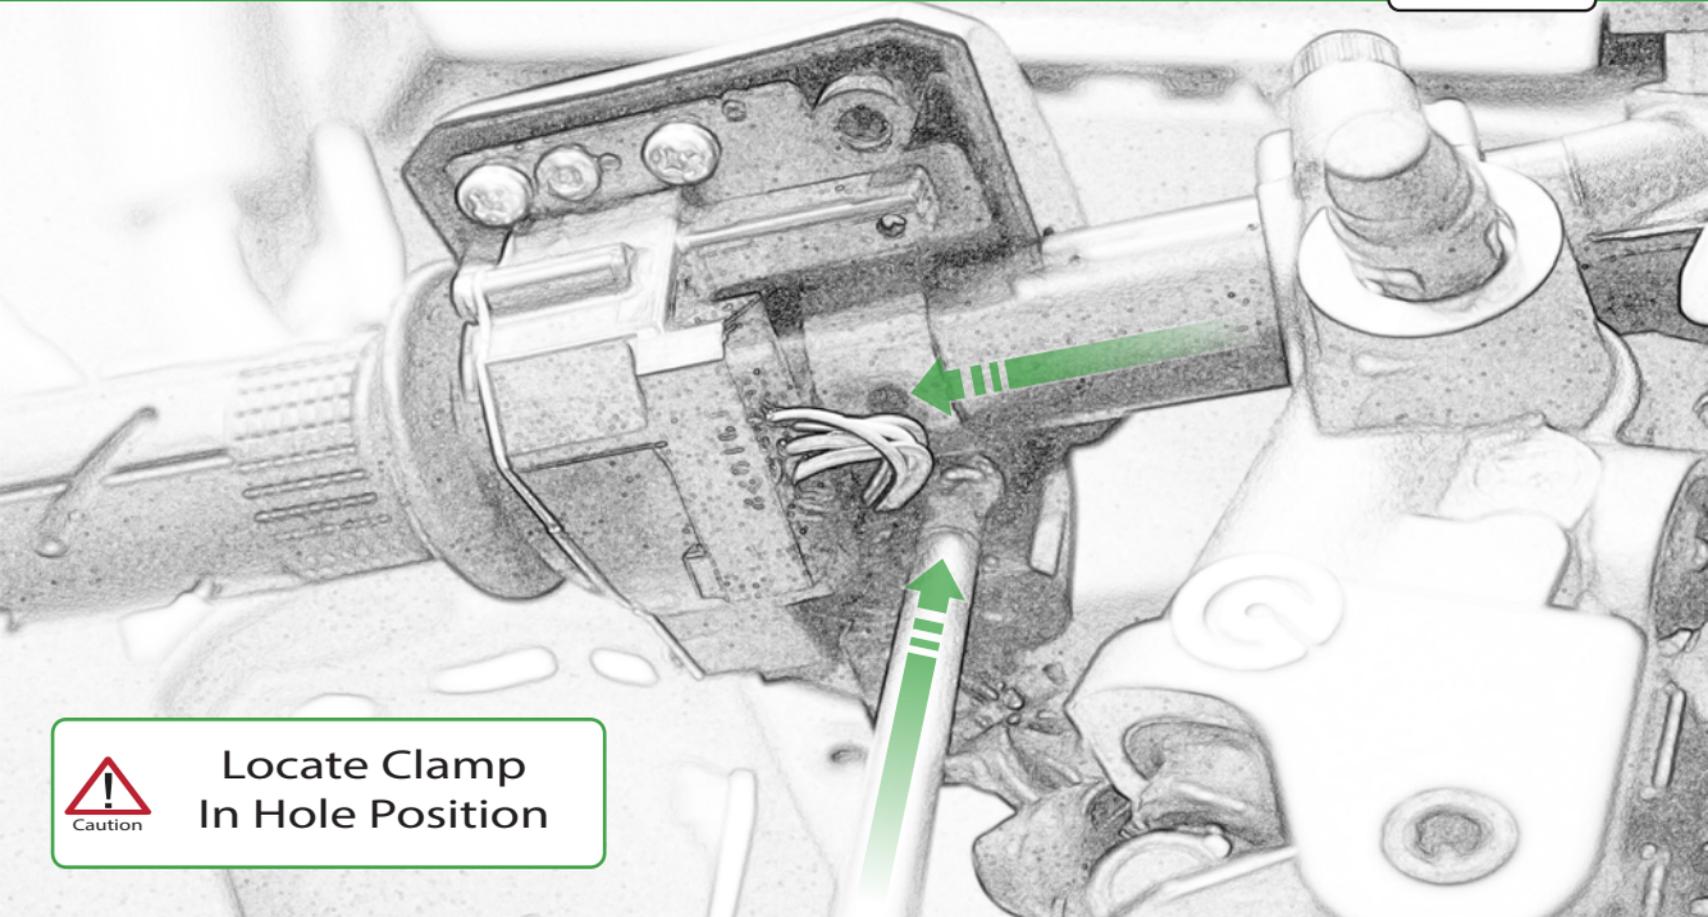


Locate Clamp
In Hole Position

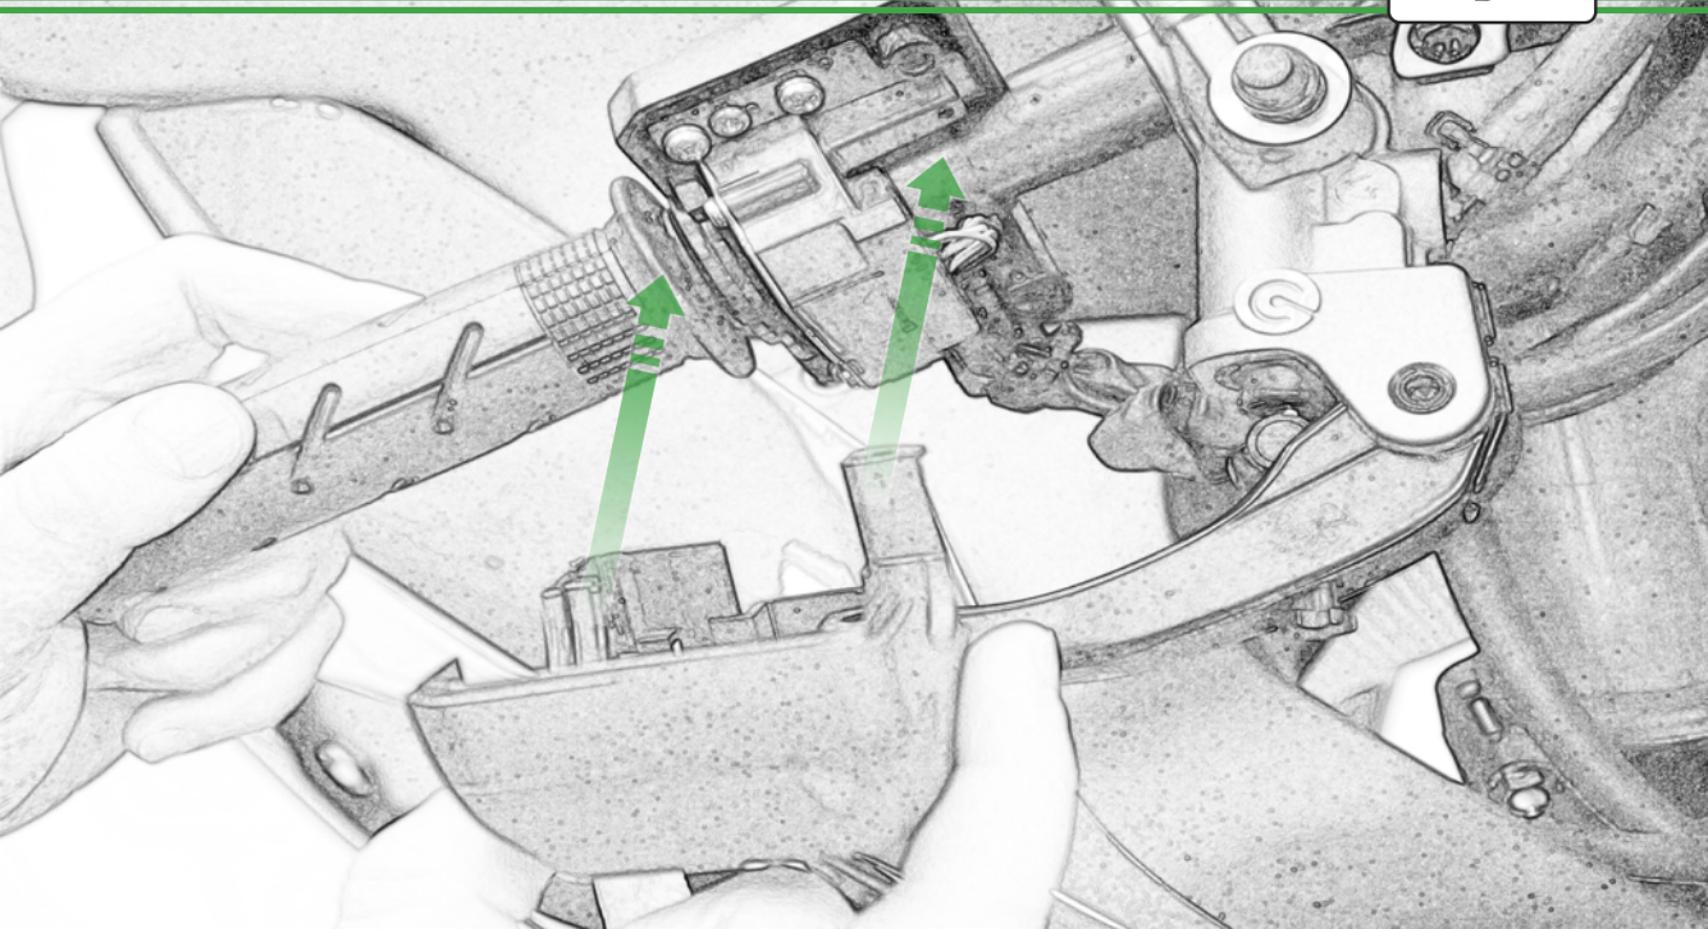


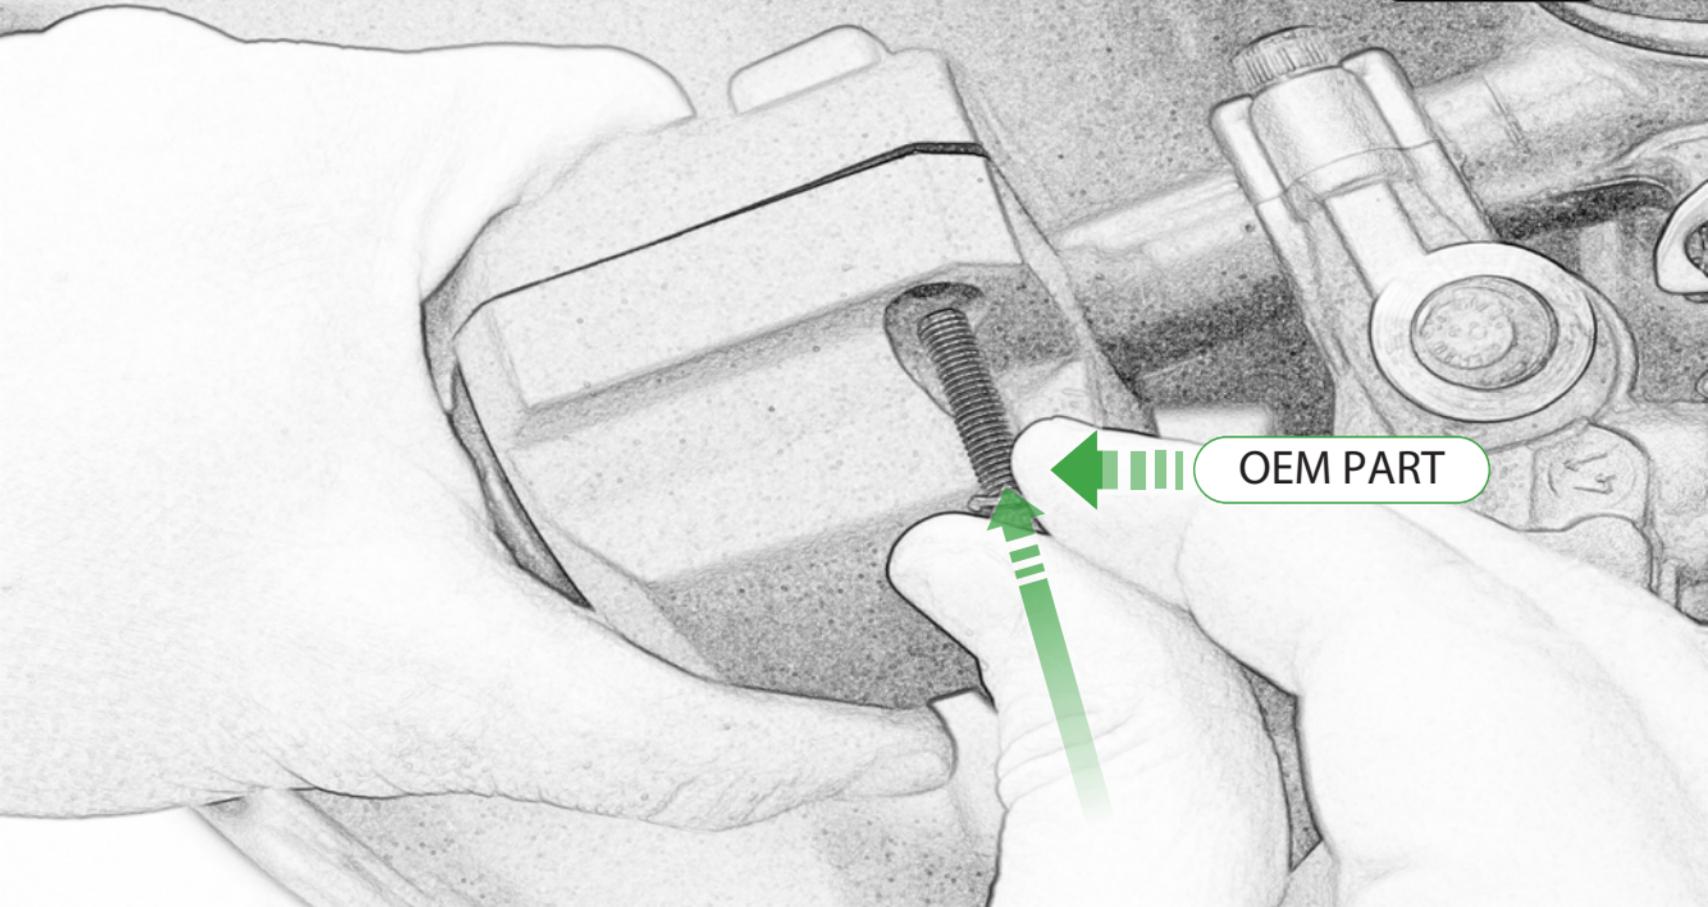



OEM PART

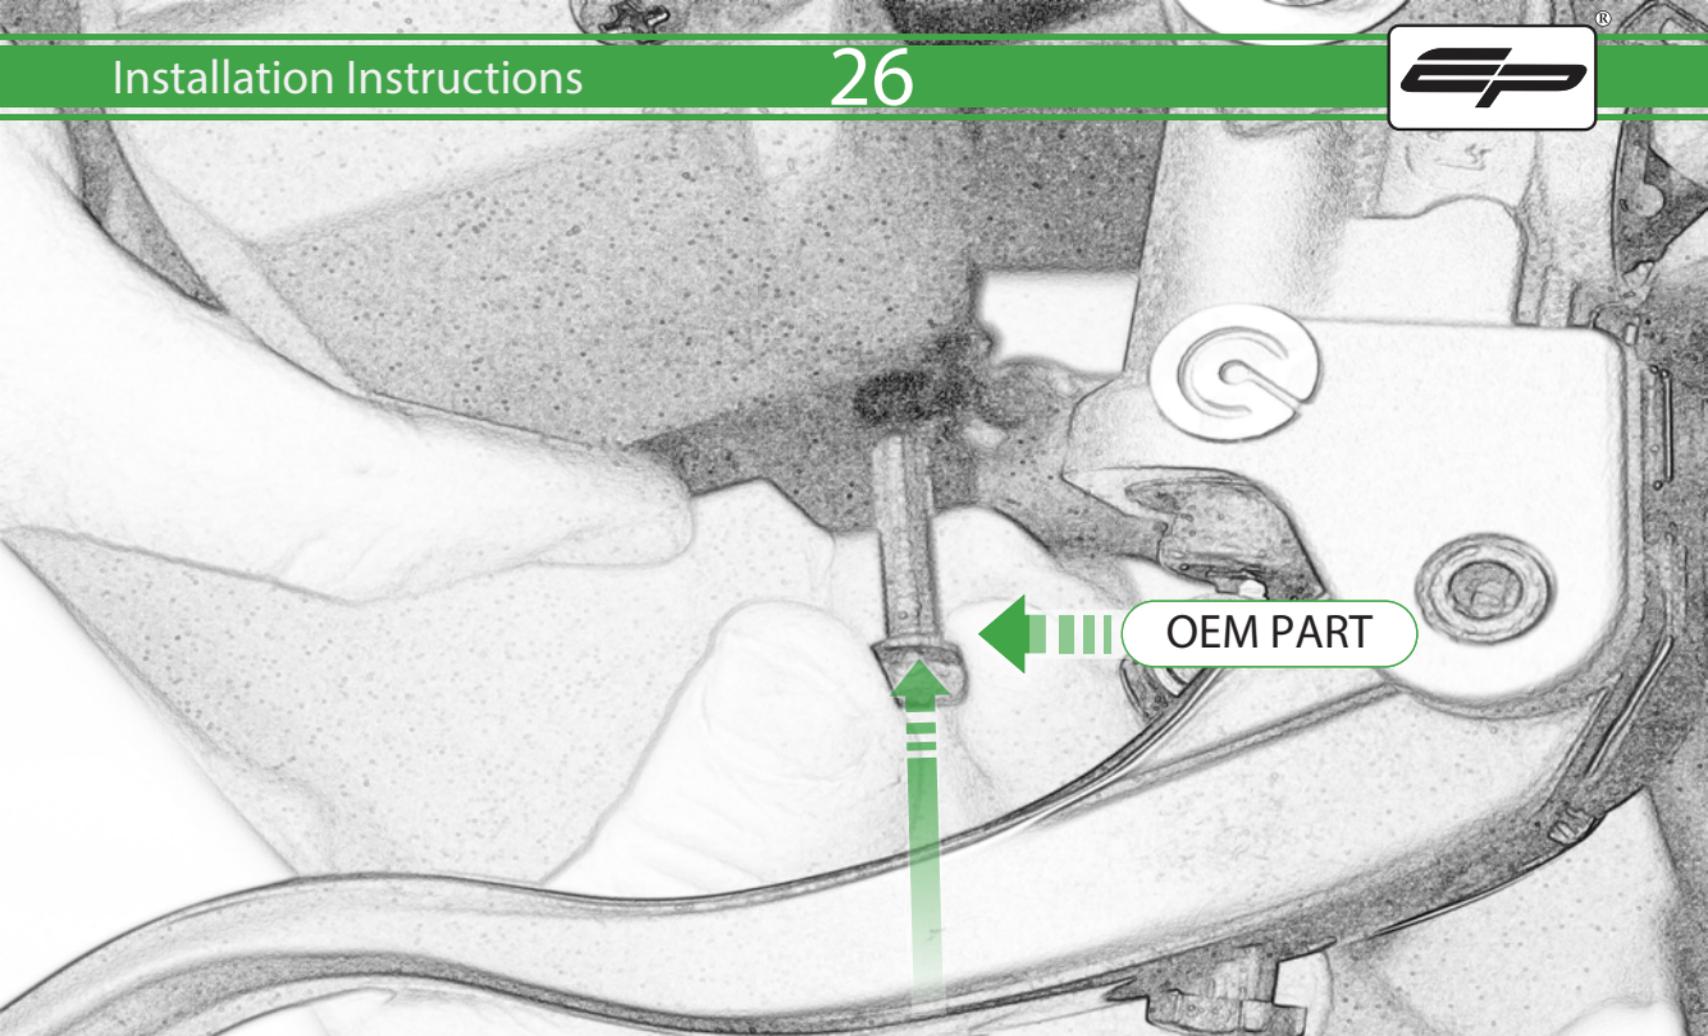


OEM PART

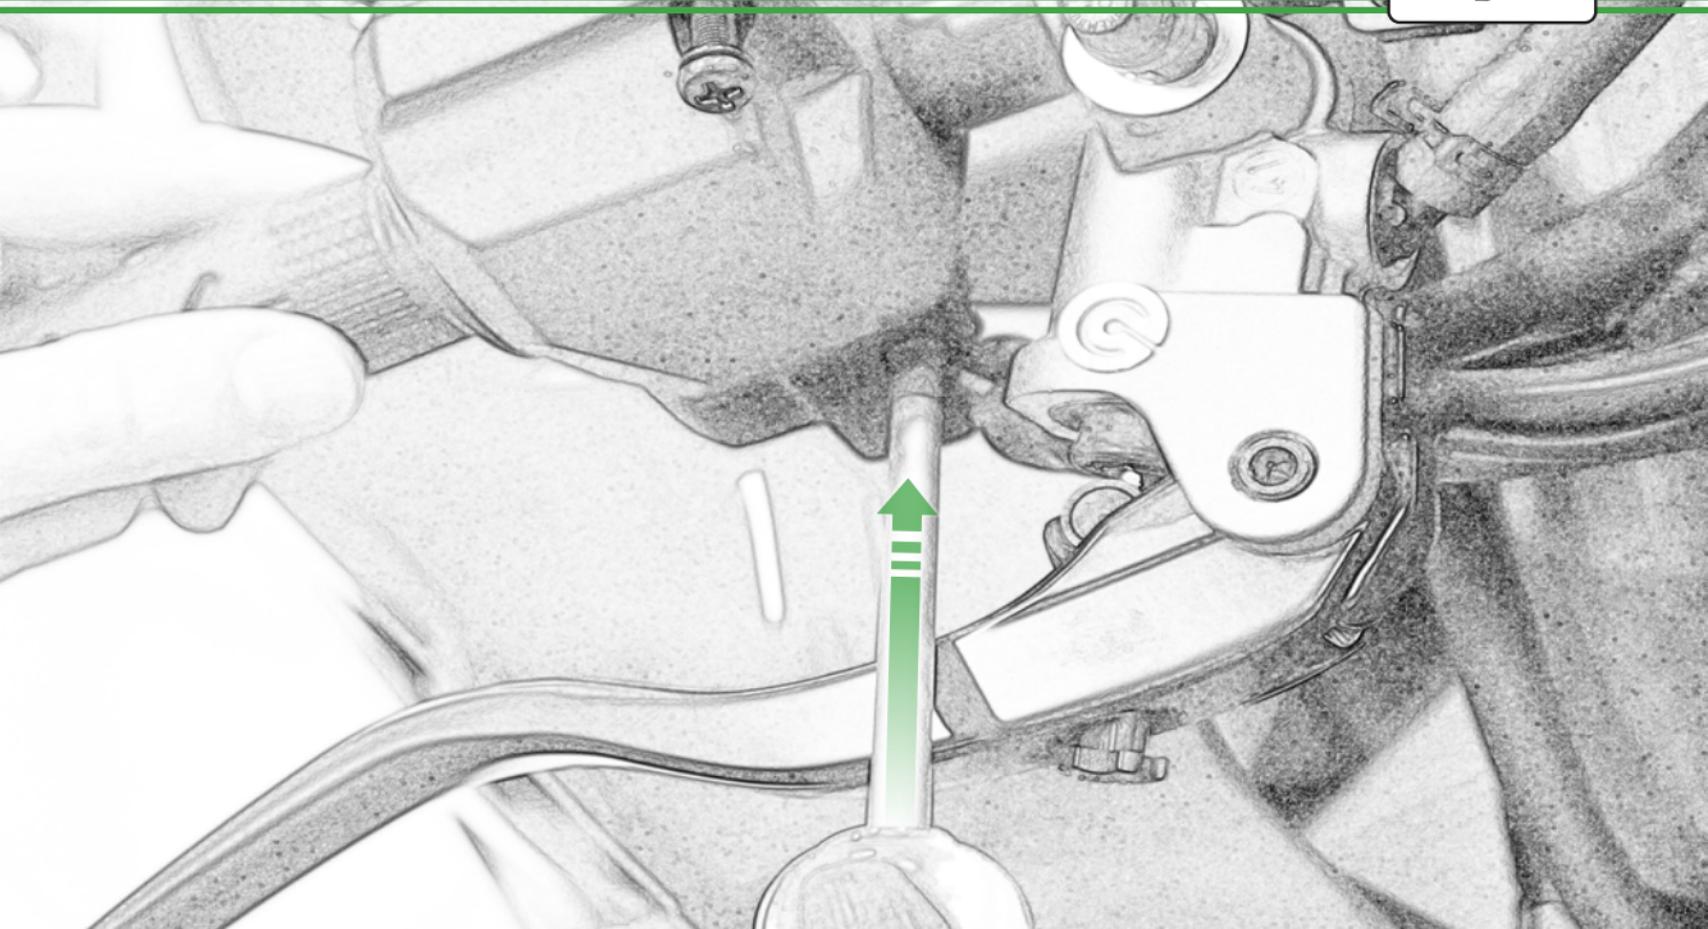


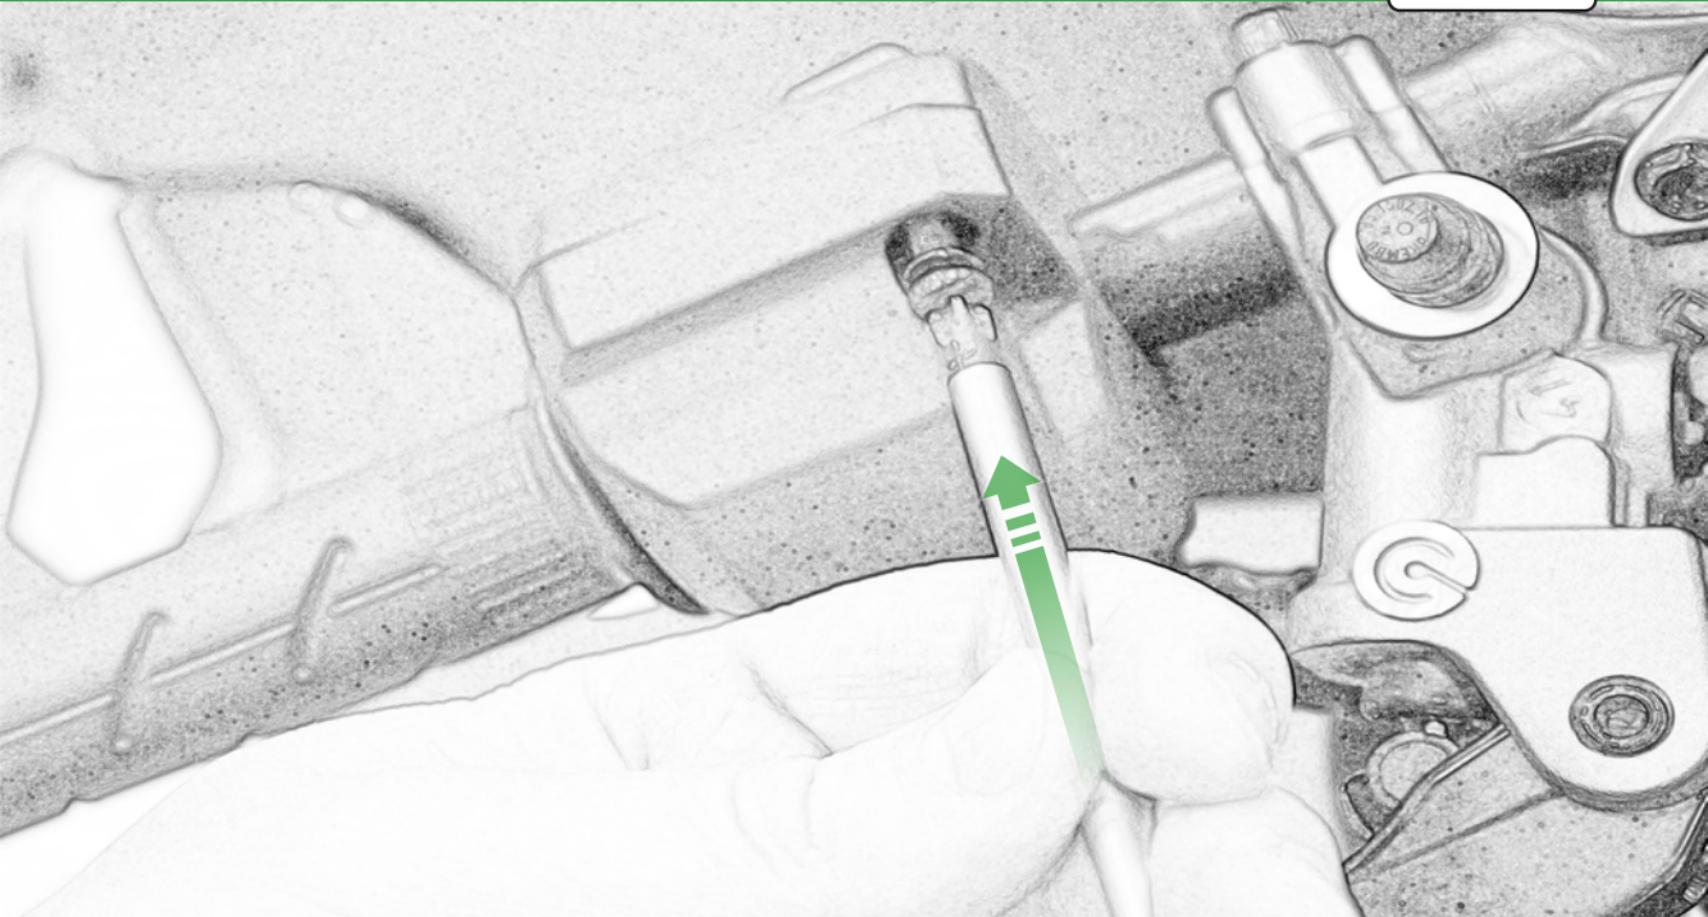


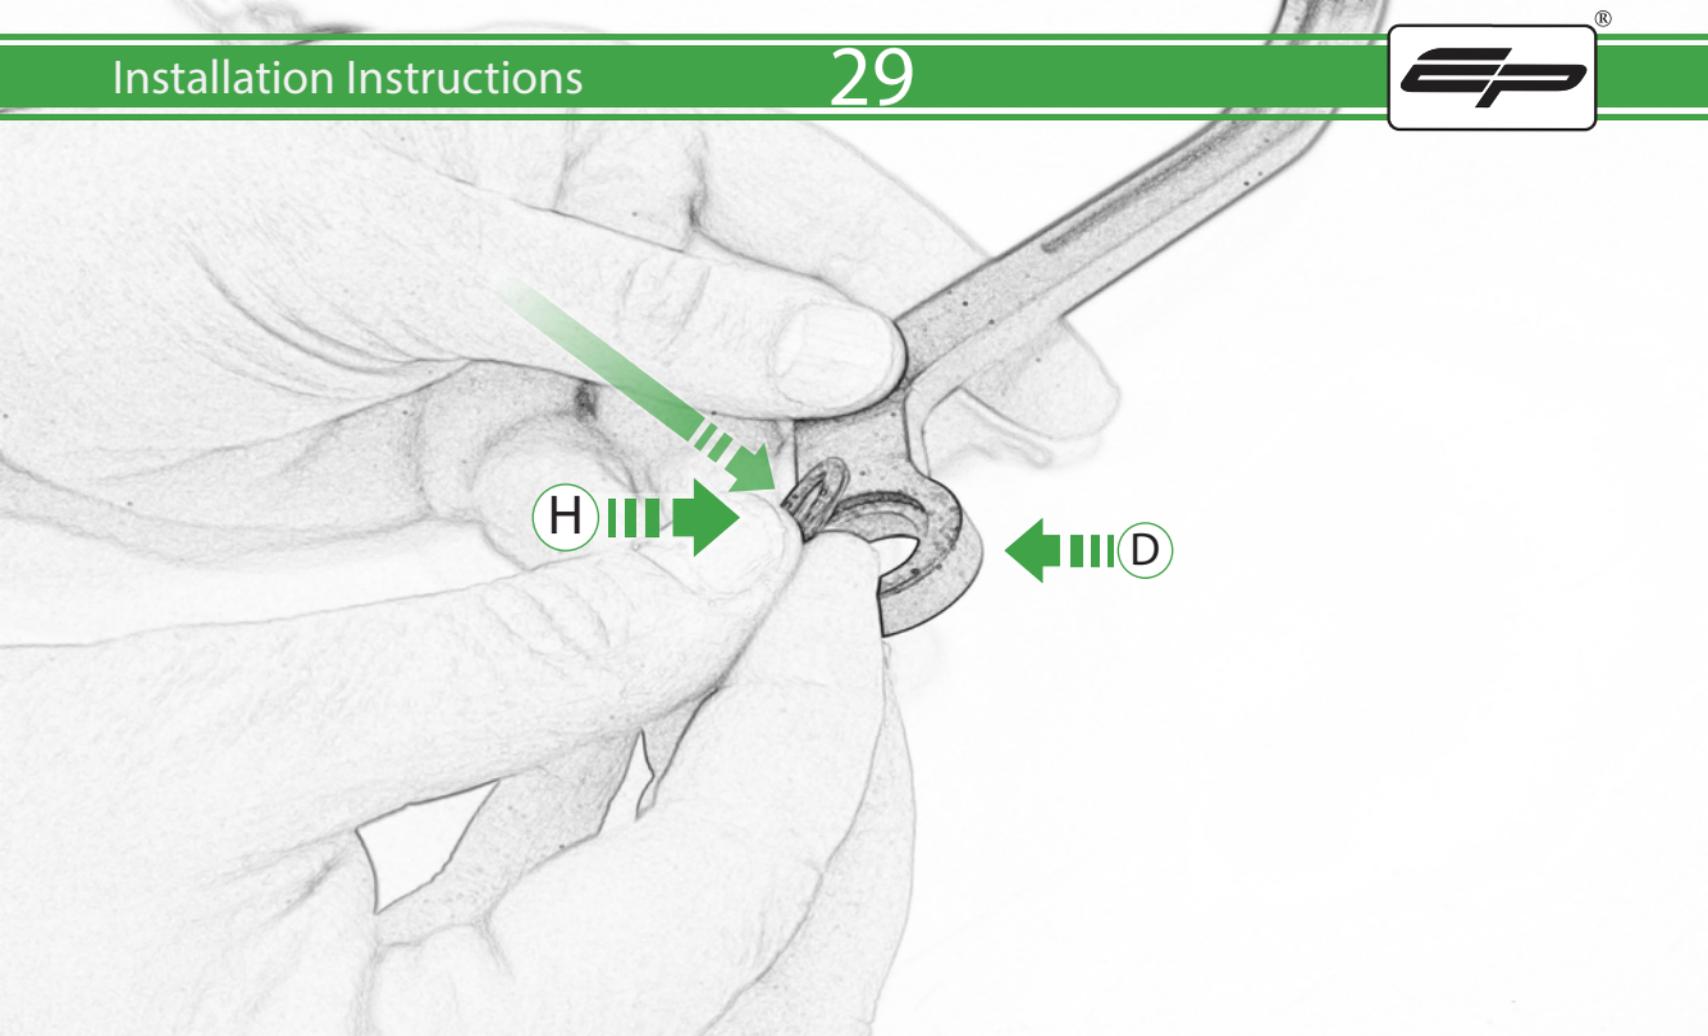




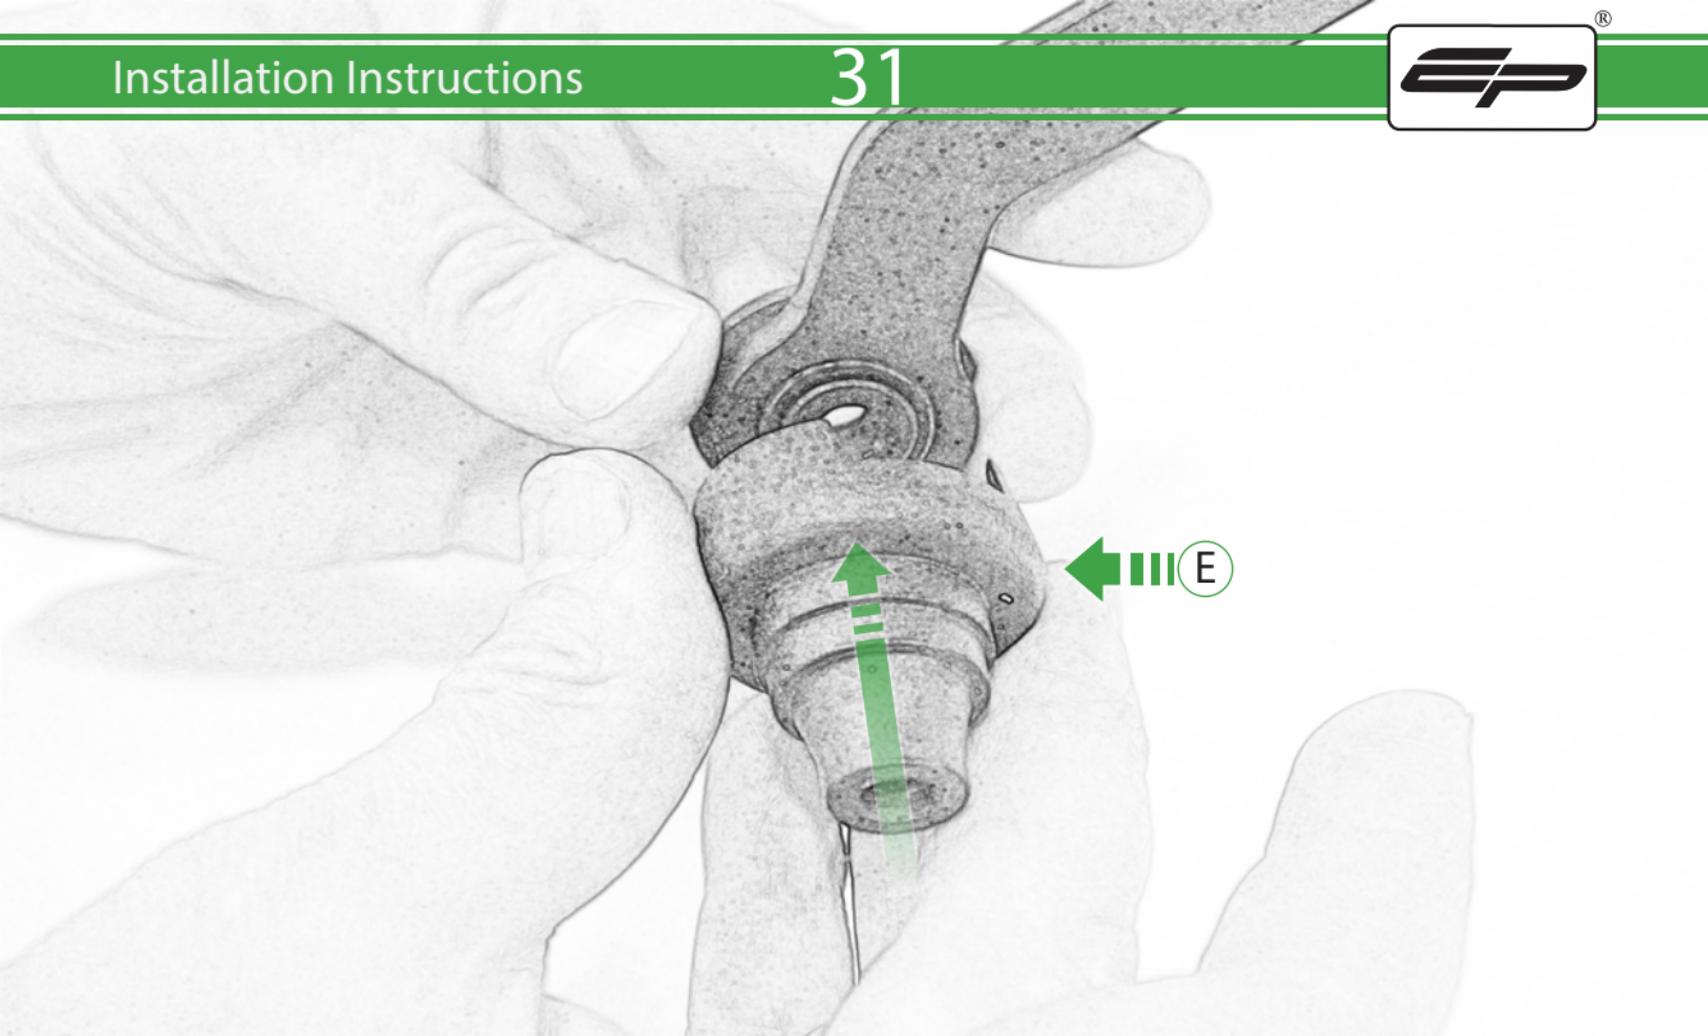


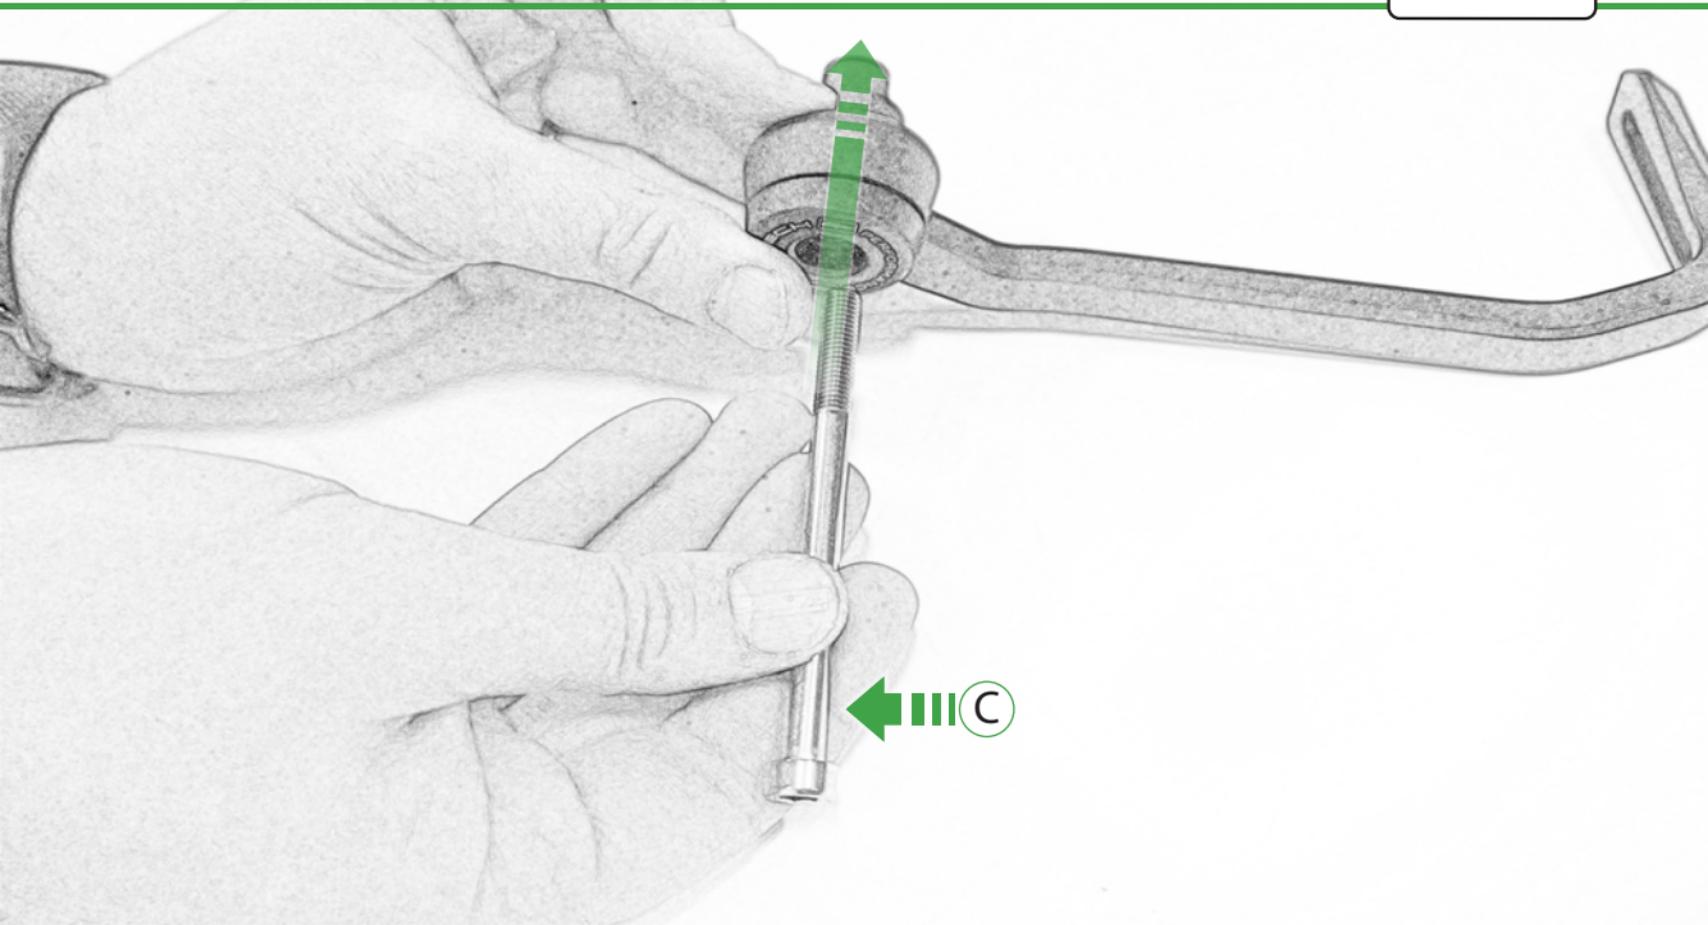


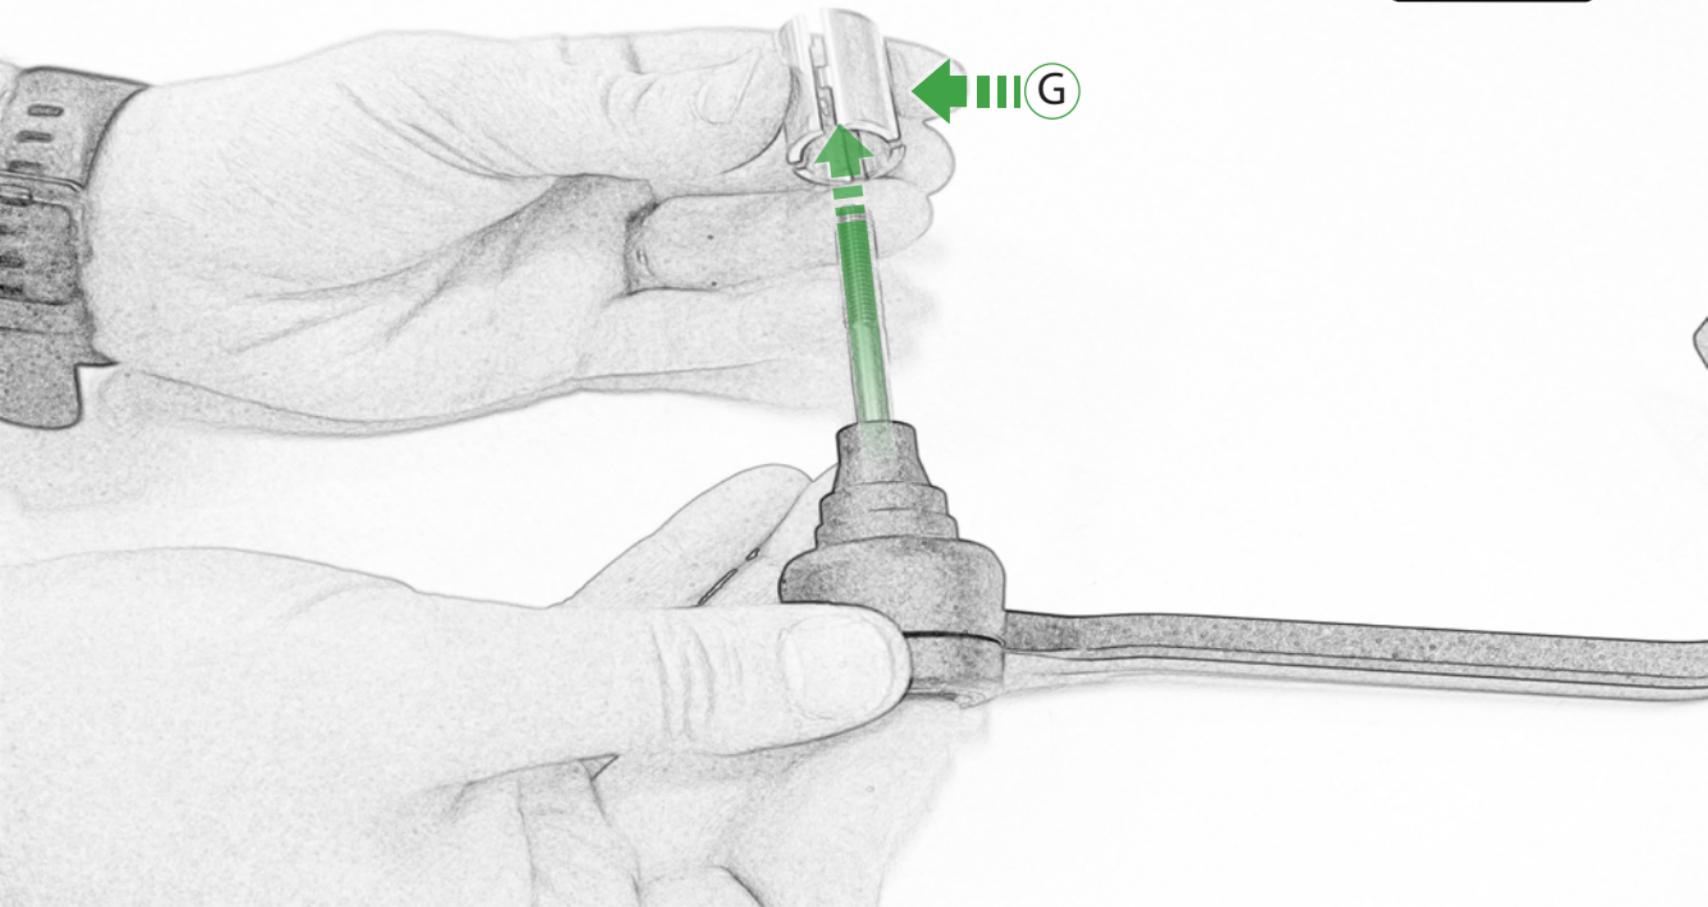

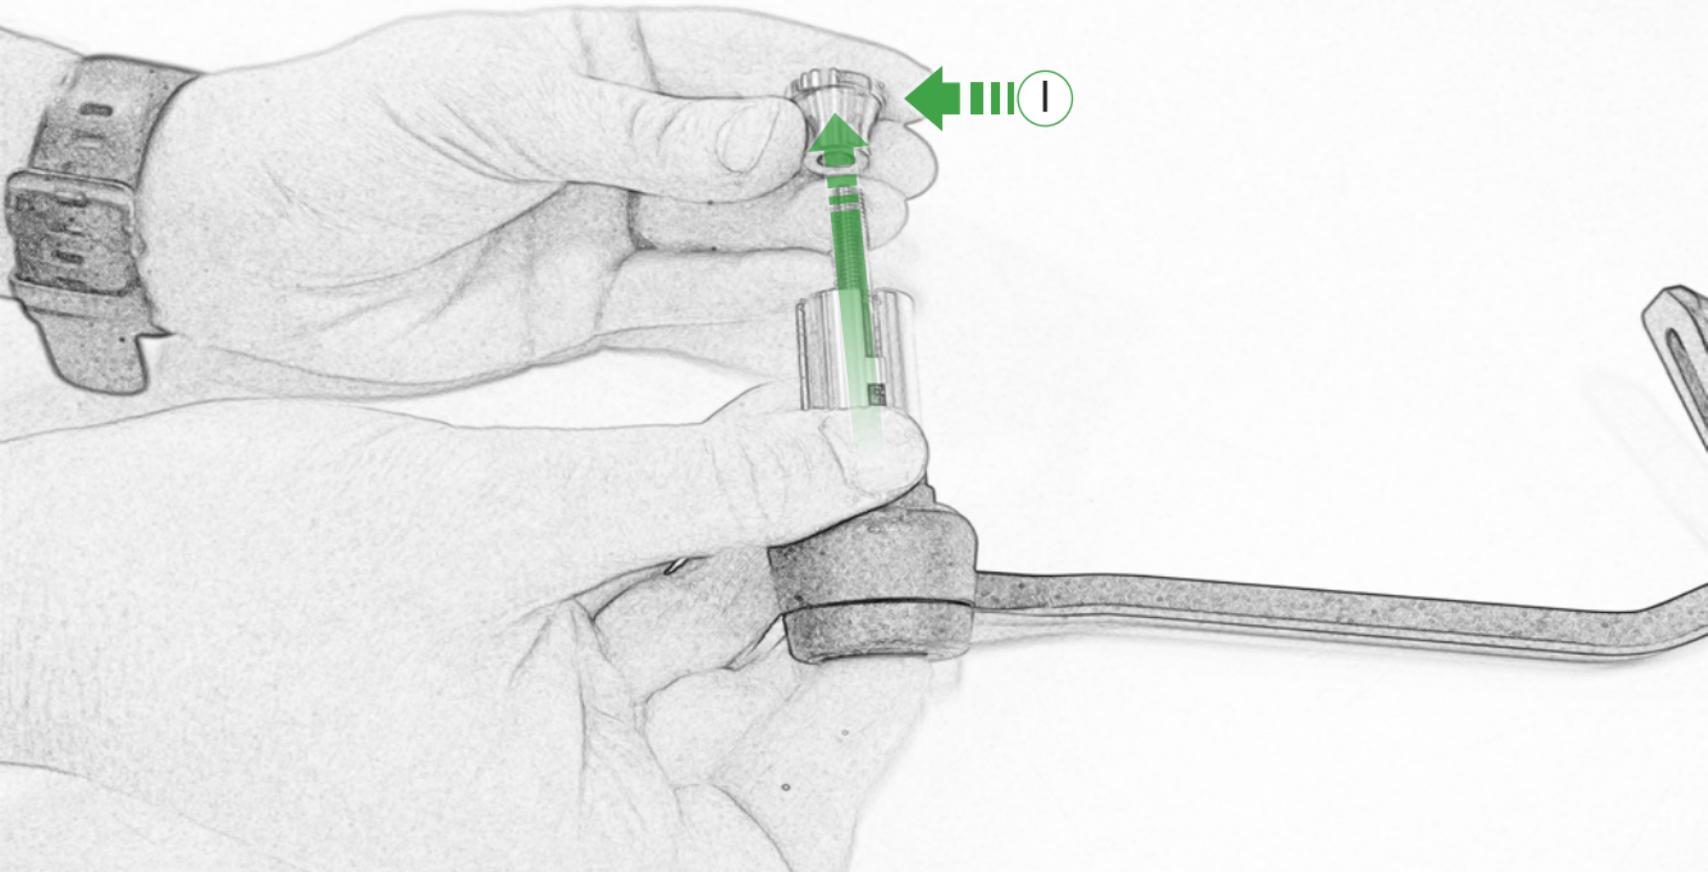




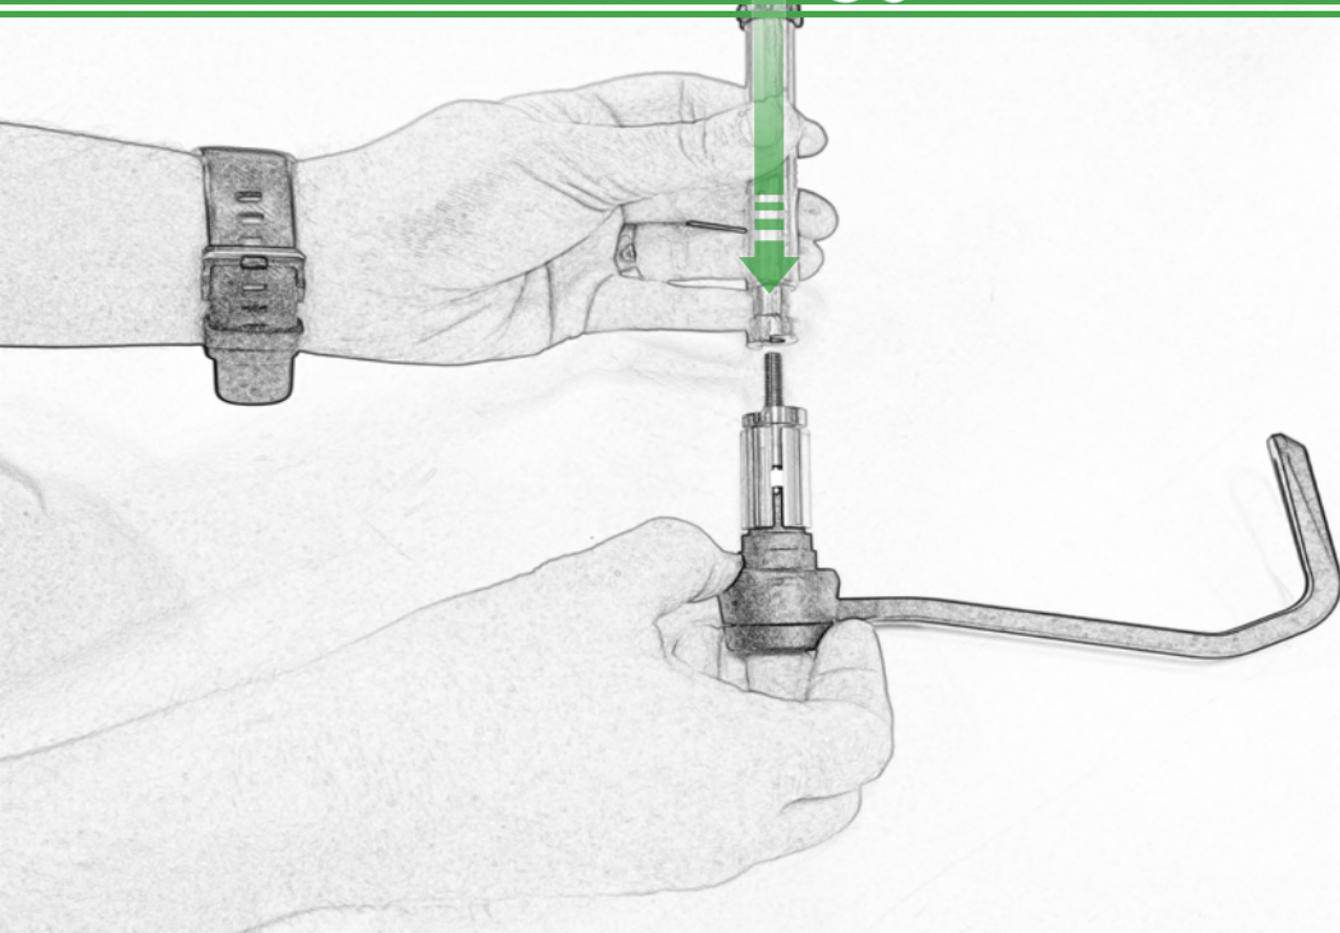

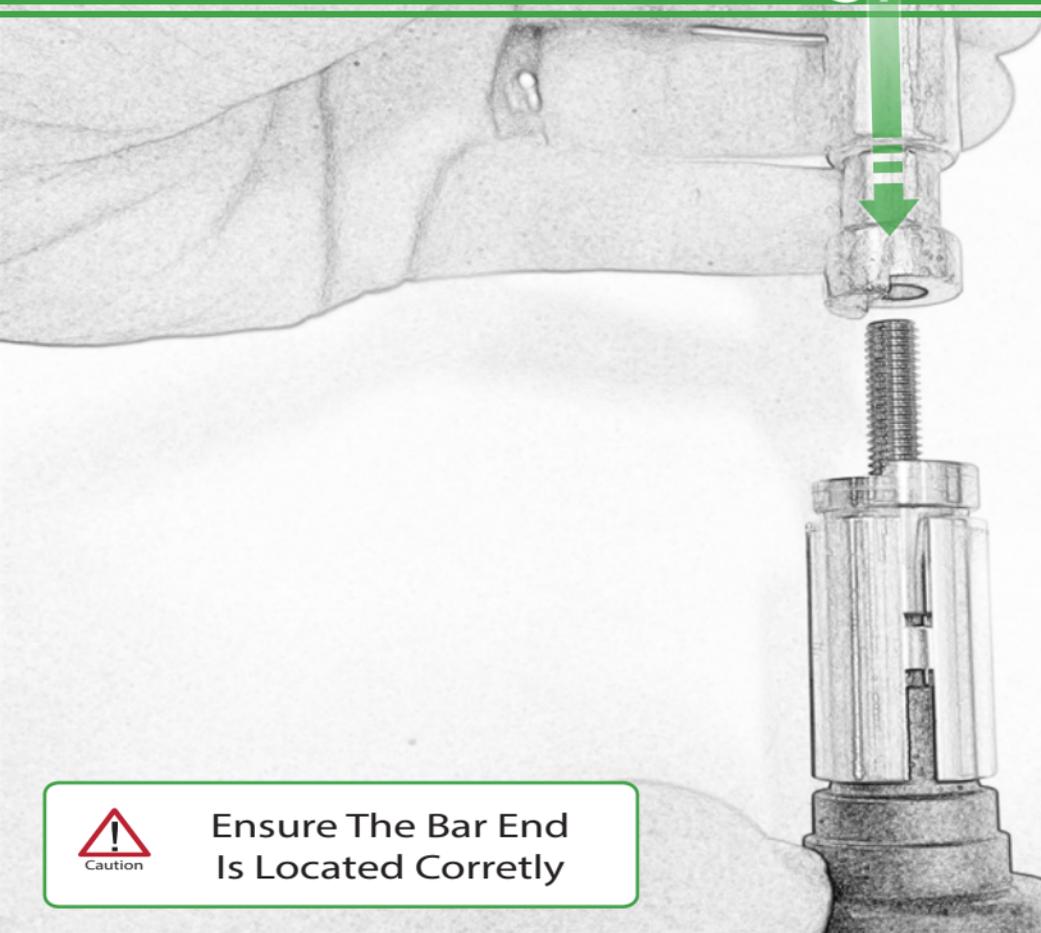



Caution

Ensure The Bar End
Is Located Corretly

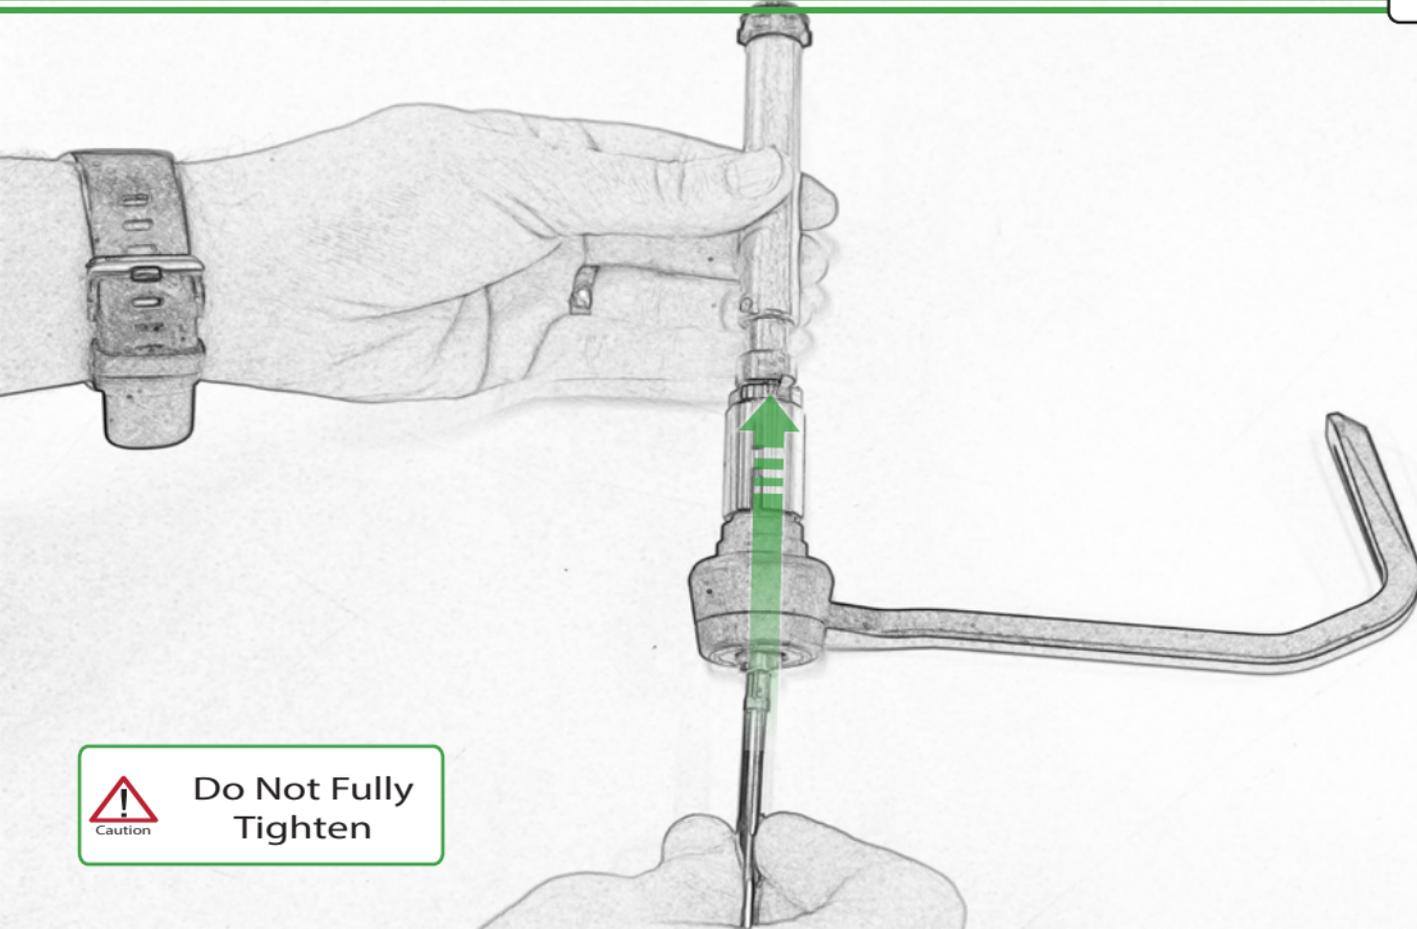


 **Do Not Fully Tighten**
Caution

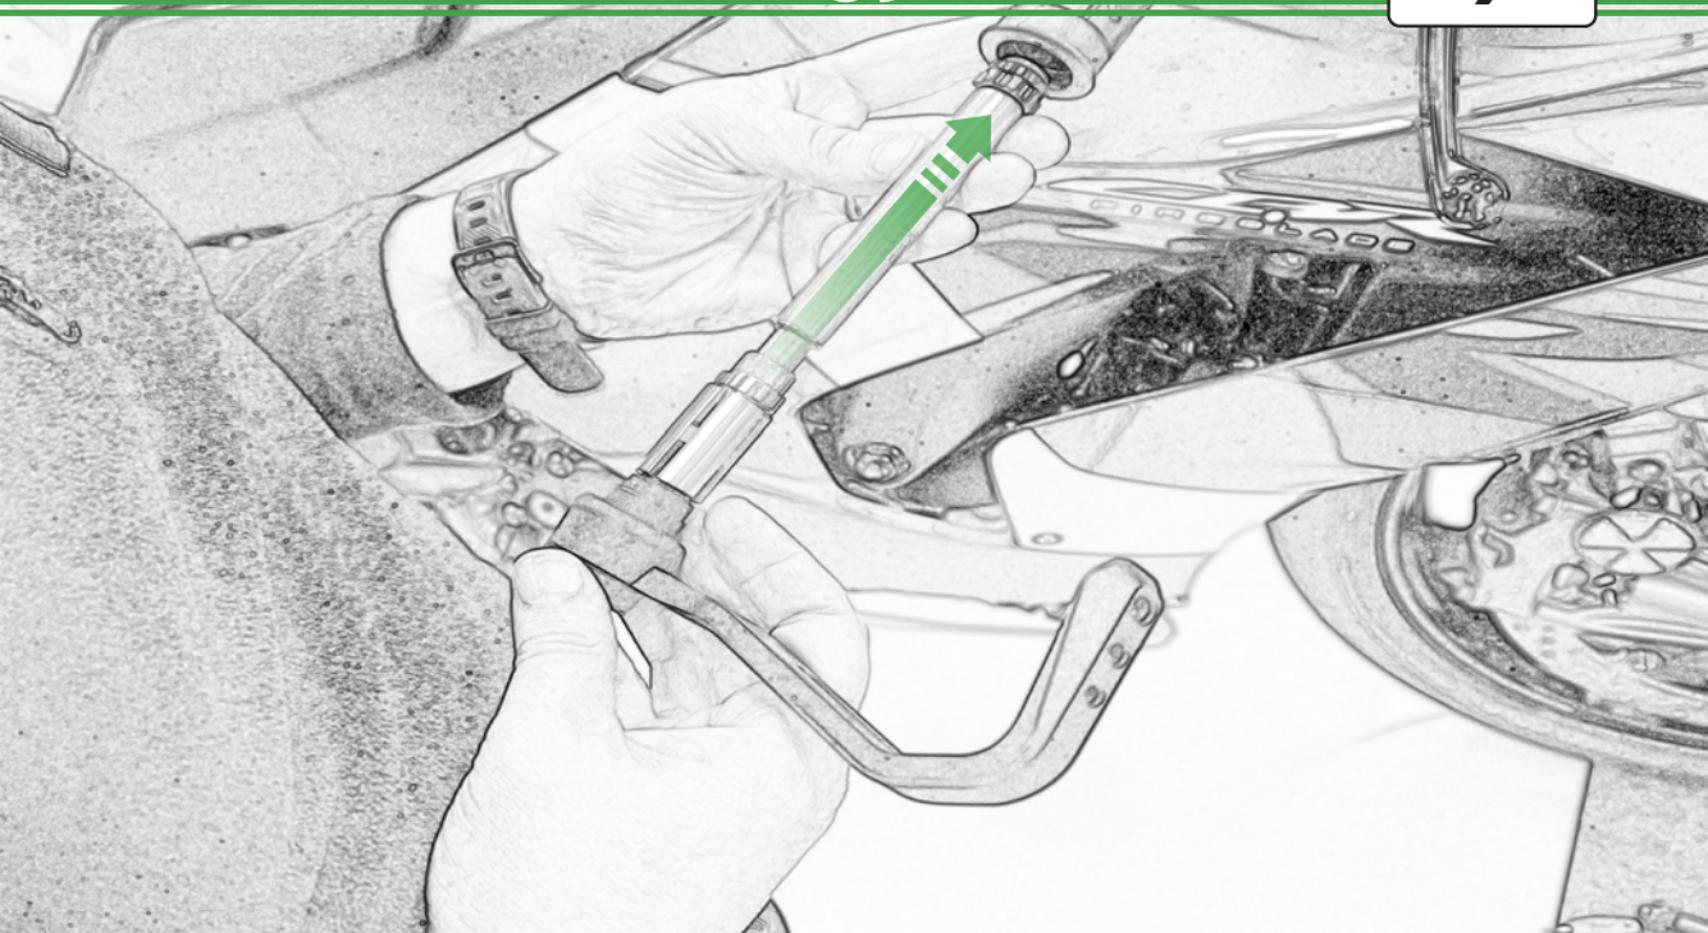

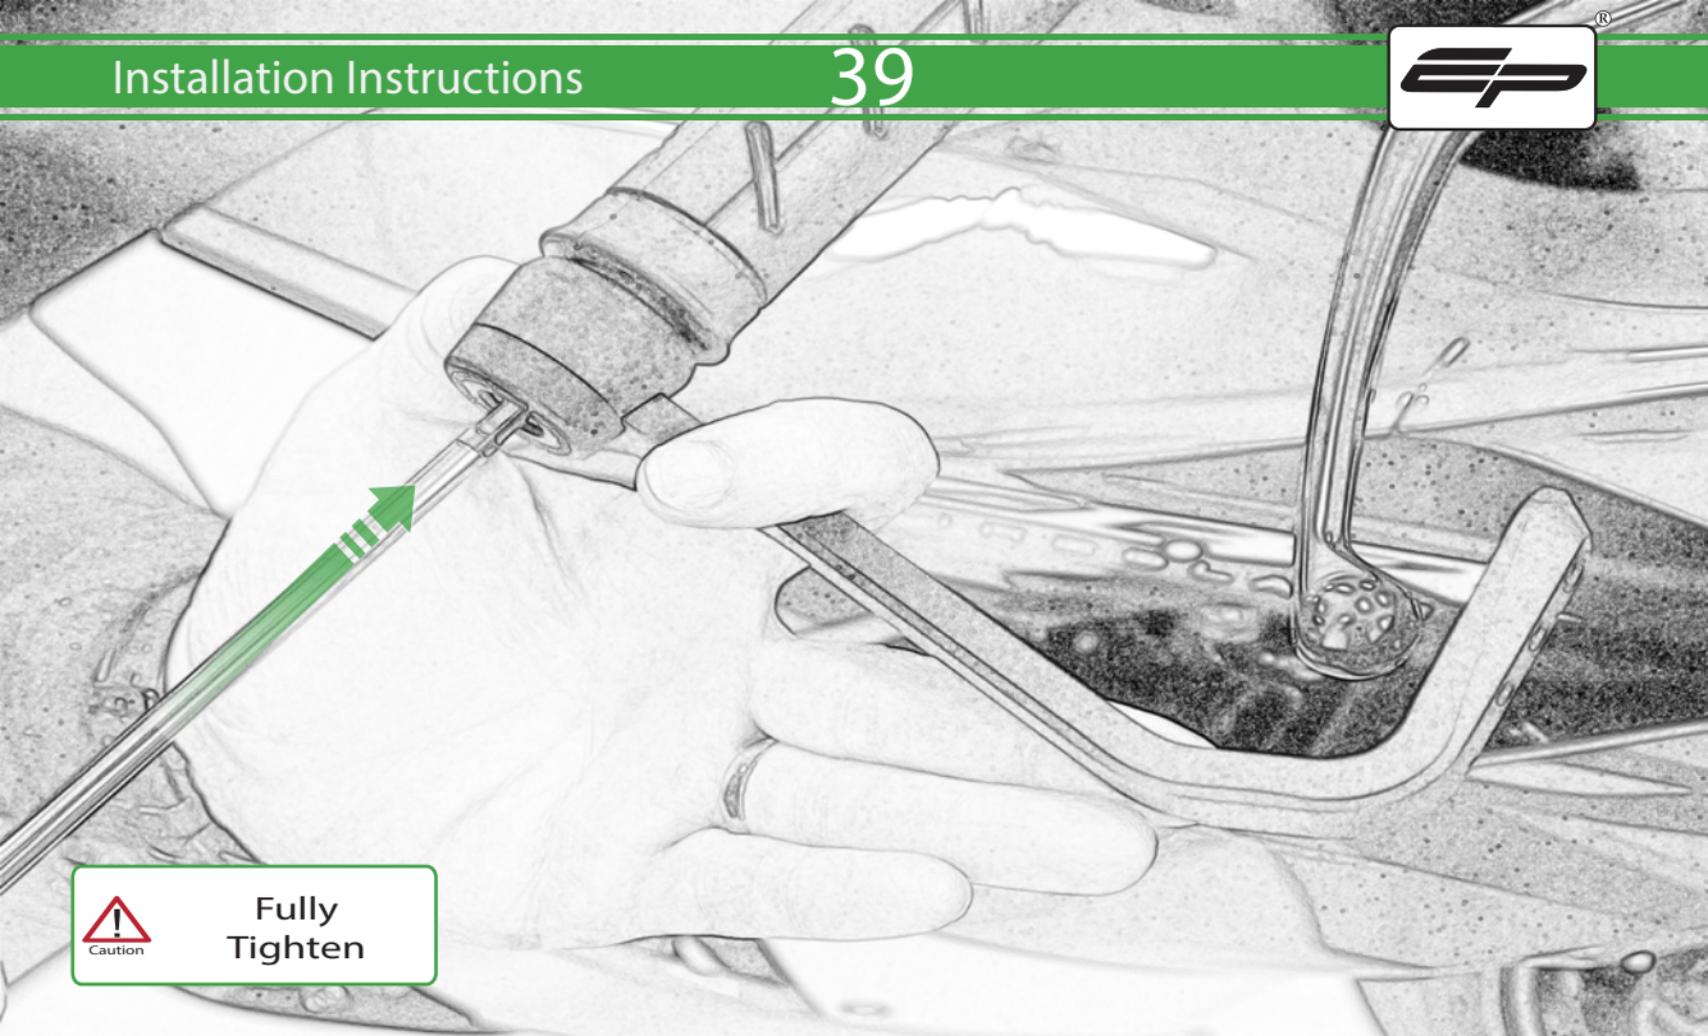

Caution

Fully
Tighten

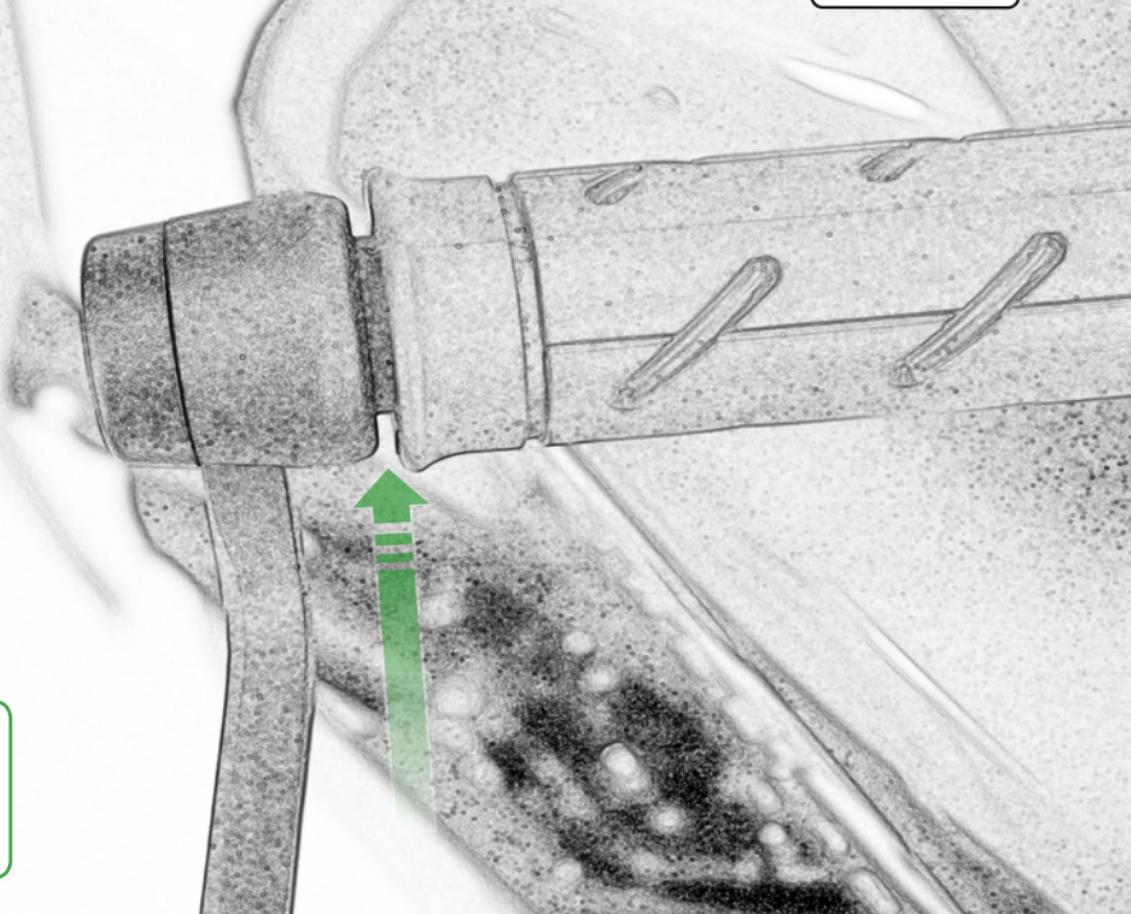

Caution

Minimum
Gap 2.5mm



**Test Throttle
For Free Play**



ESSENTIAL CHECKS



Please ensure the throttle grip has sufficient clearance between the brake lever protector / bar end weight before riding. It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com