



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Triumph Scrambler XC / XE Radiator Guard


Installation Instructions





Kit Contents

- (A) 1 x Neoprene Strip
- (B) 4 x Rubber Bung
- (C) 6 x M4 x 6mm Button Head Bolt

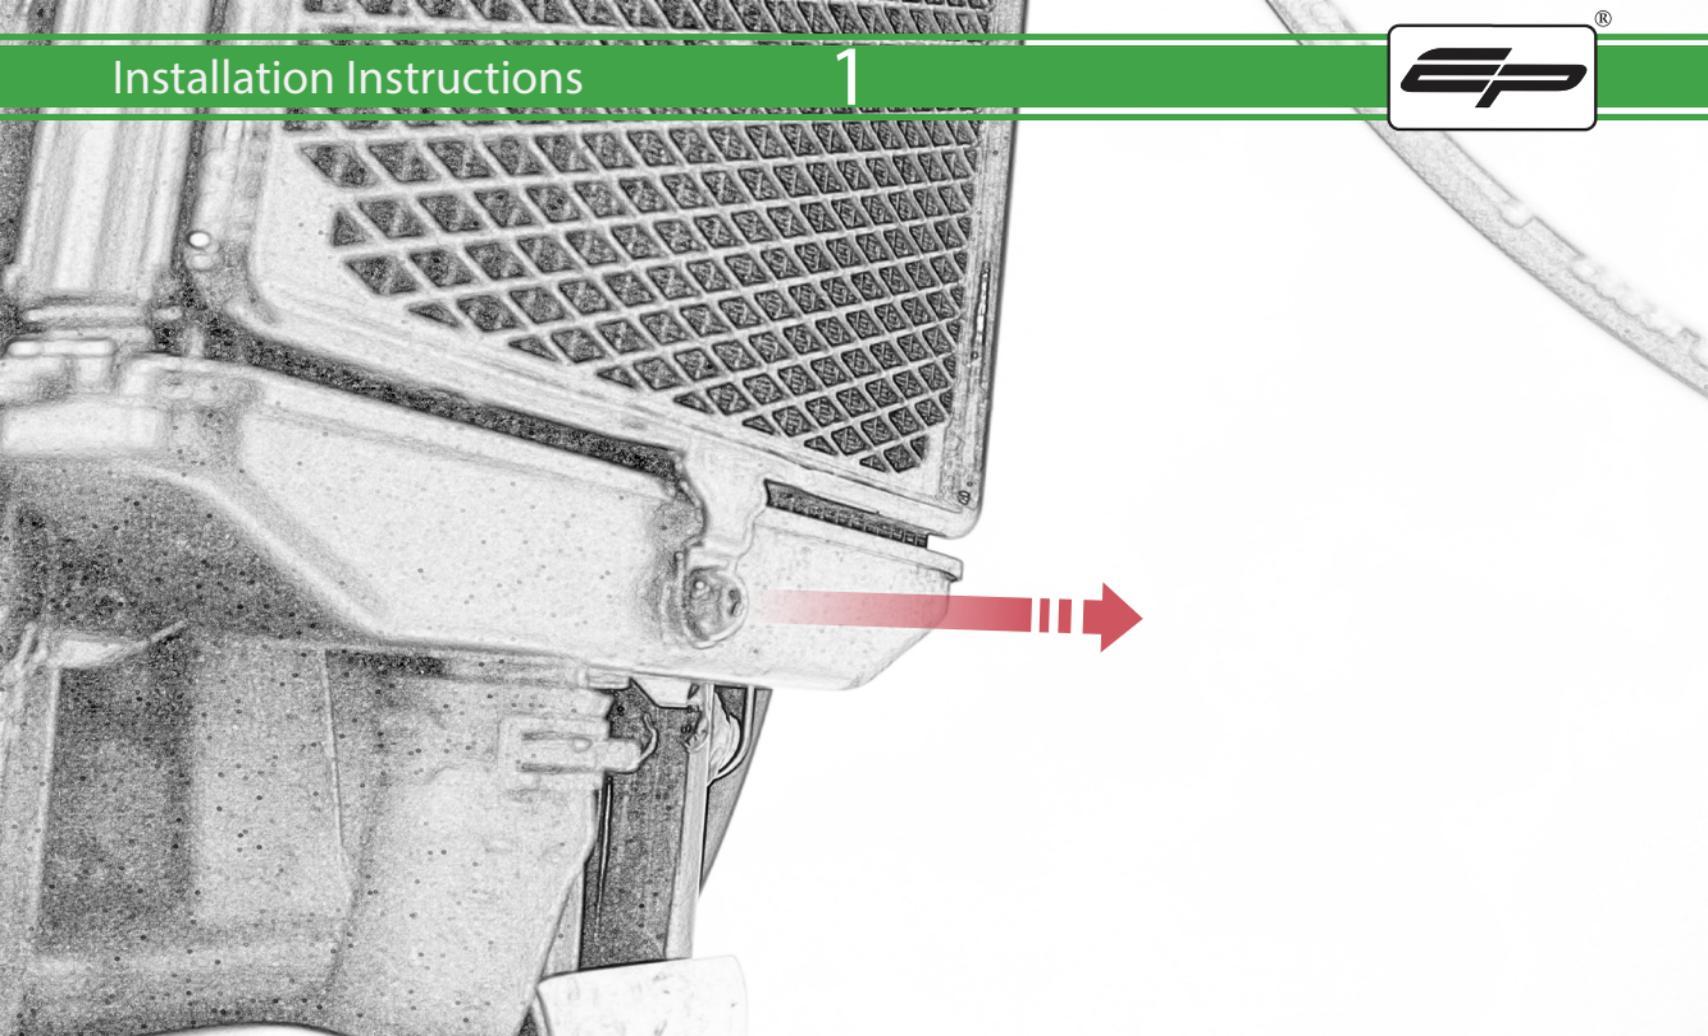

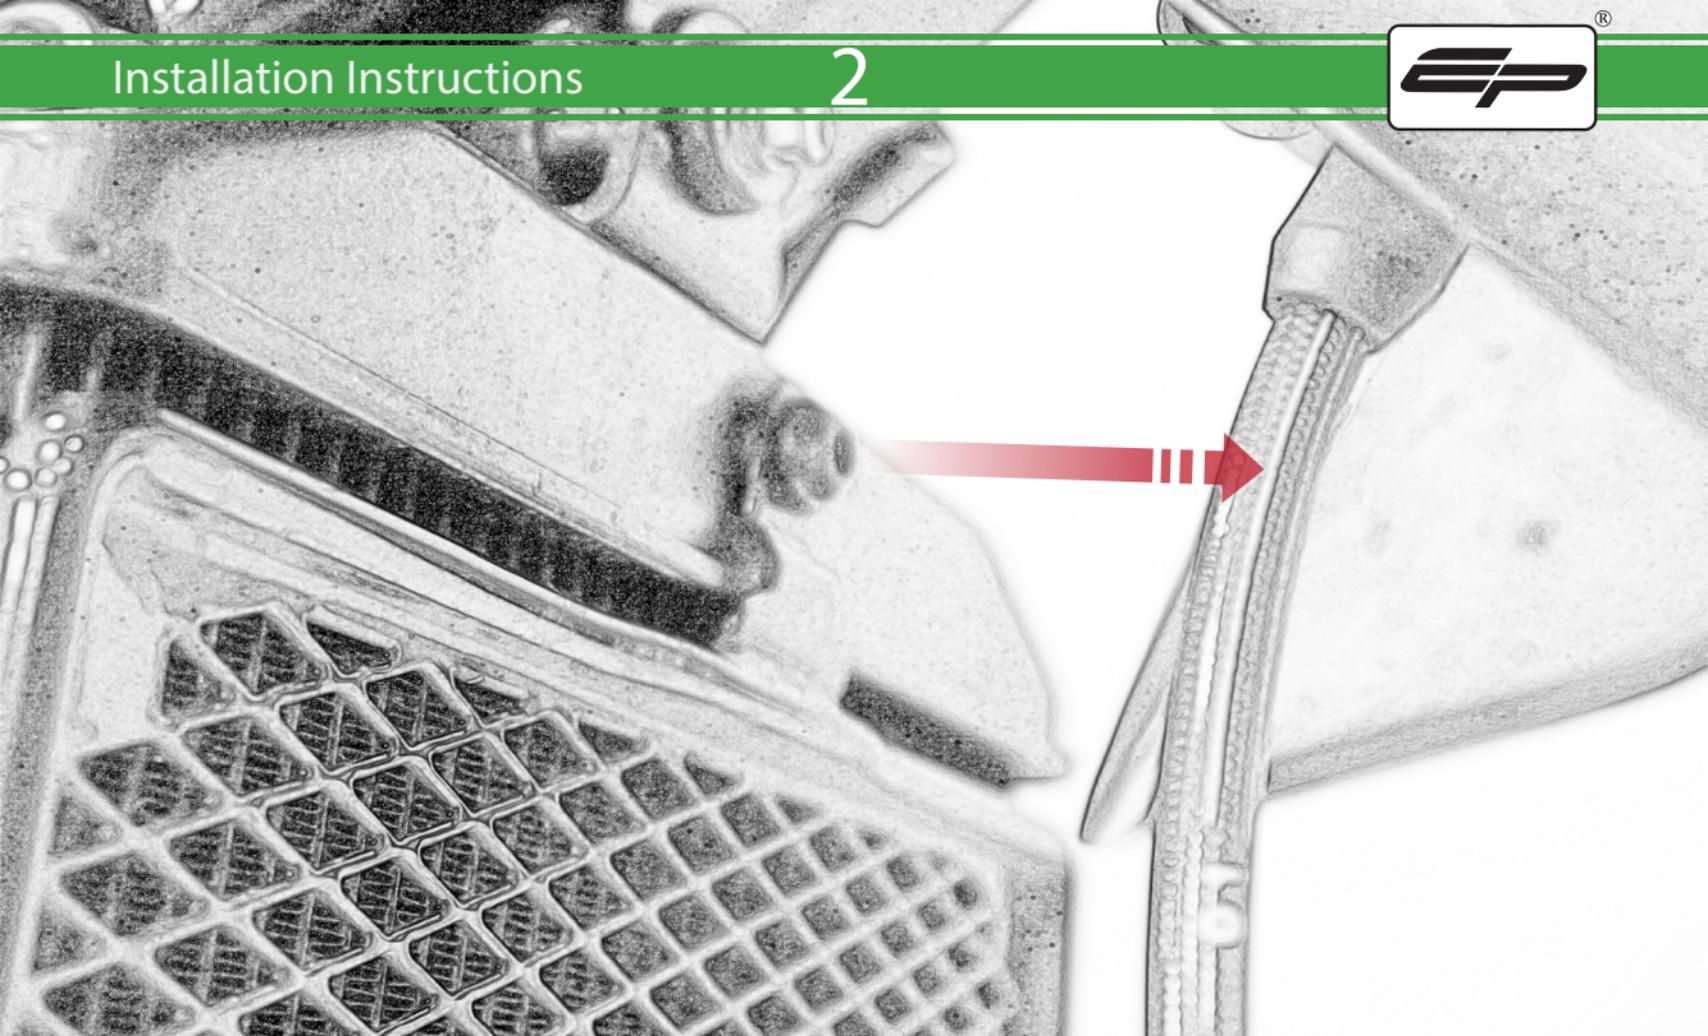


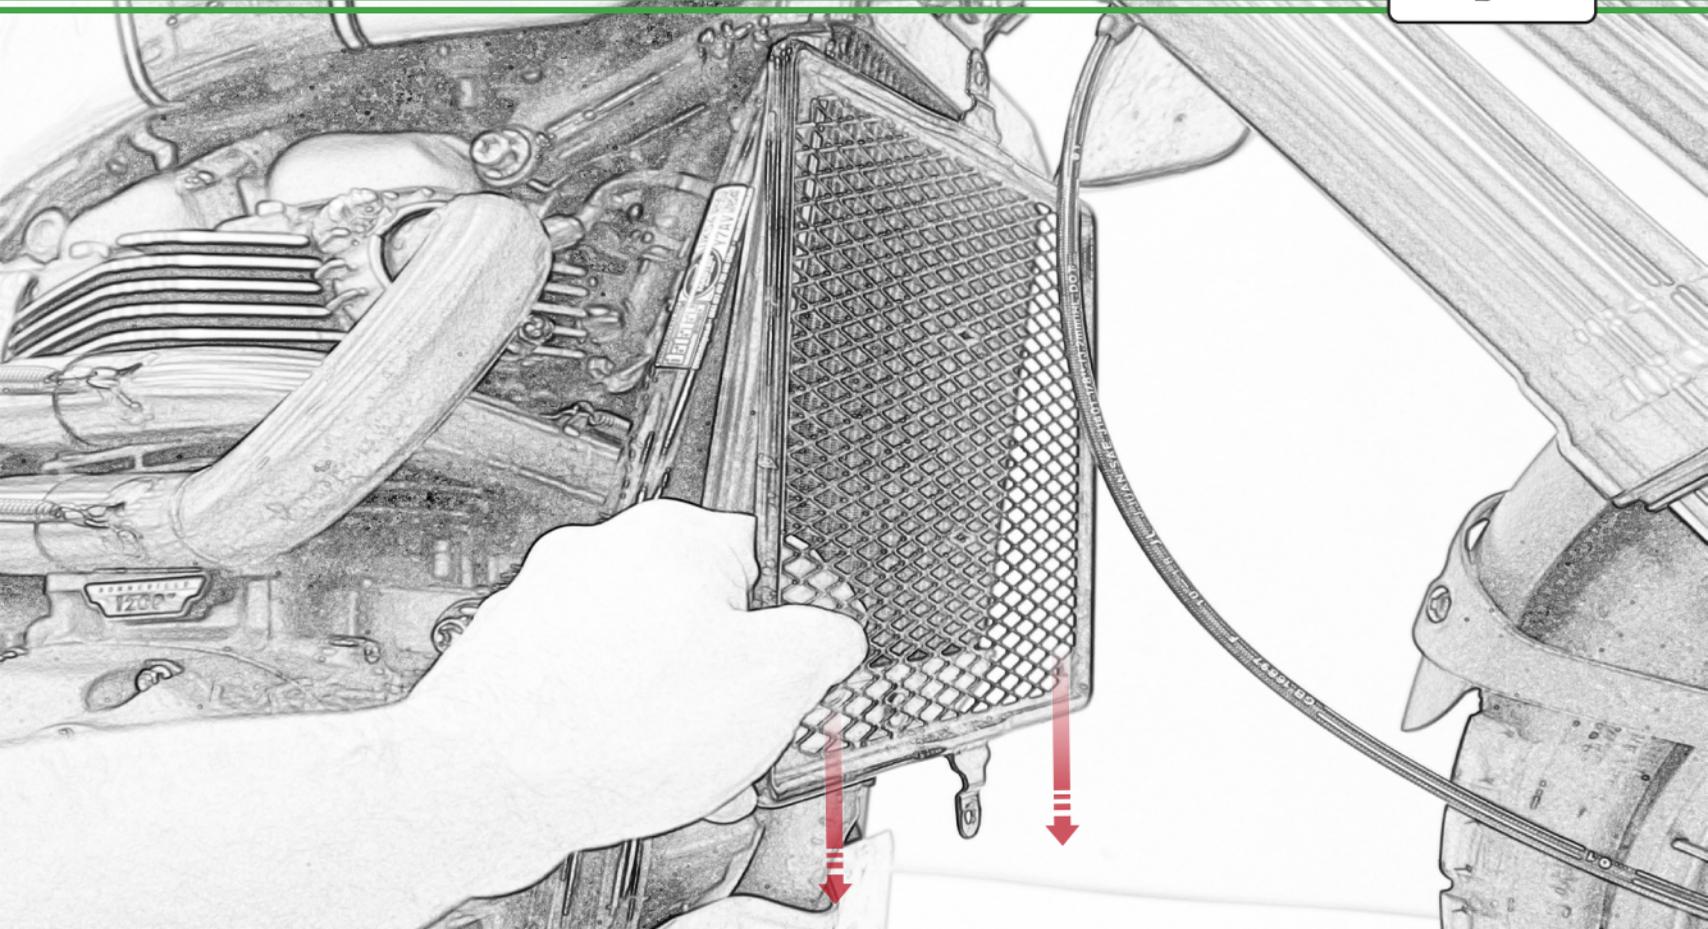


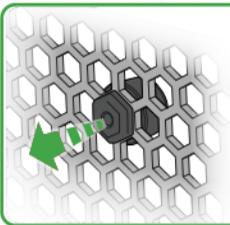


Locate round holes amongst hexagons.


Push Rubber Spacer through from the back of the guard so Hexagonal shape sits on the front face

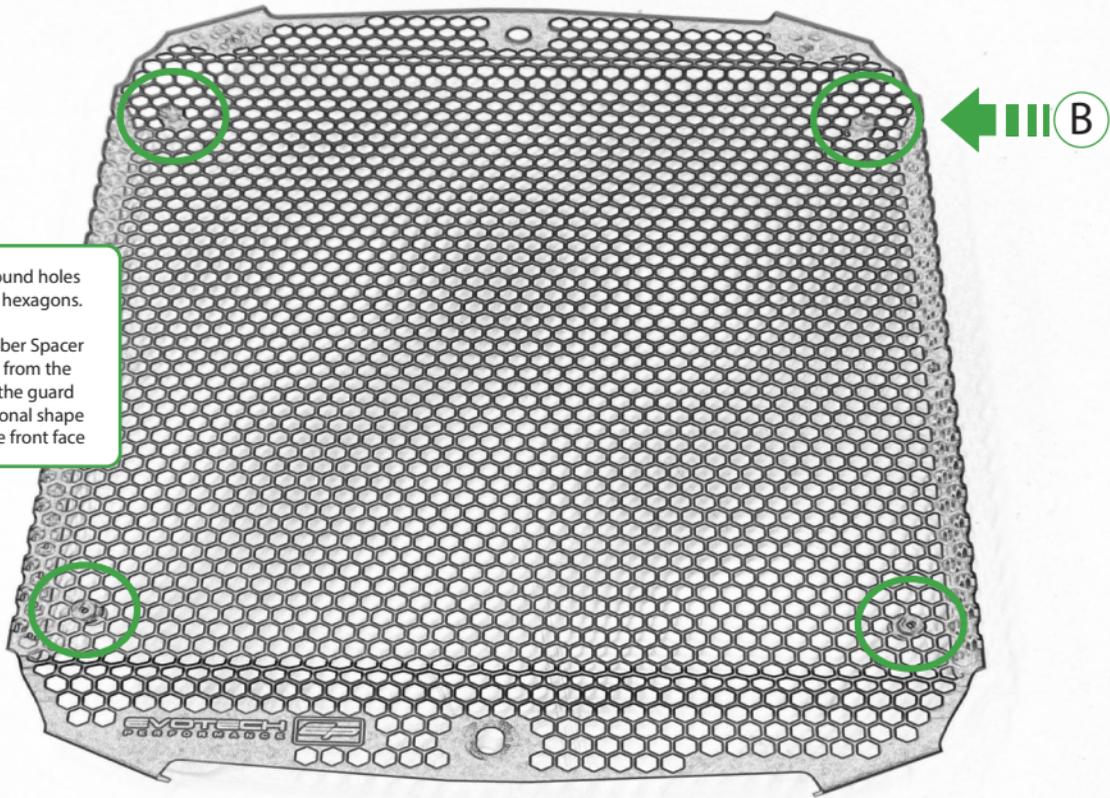


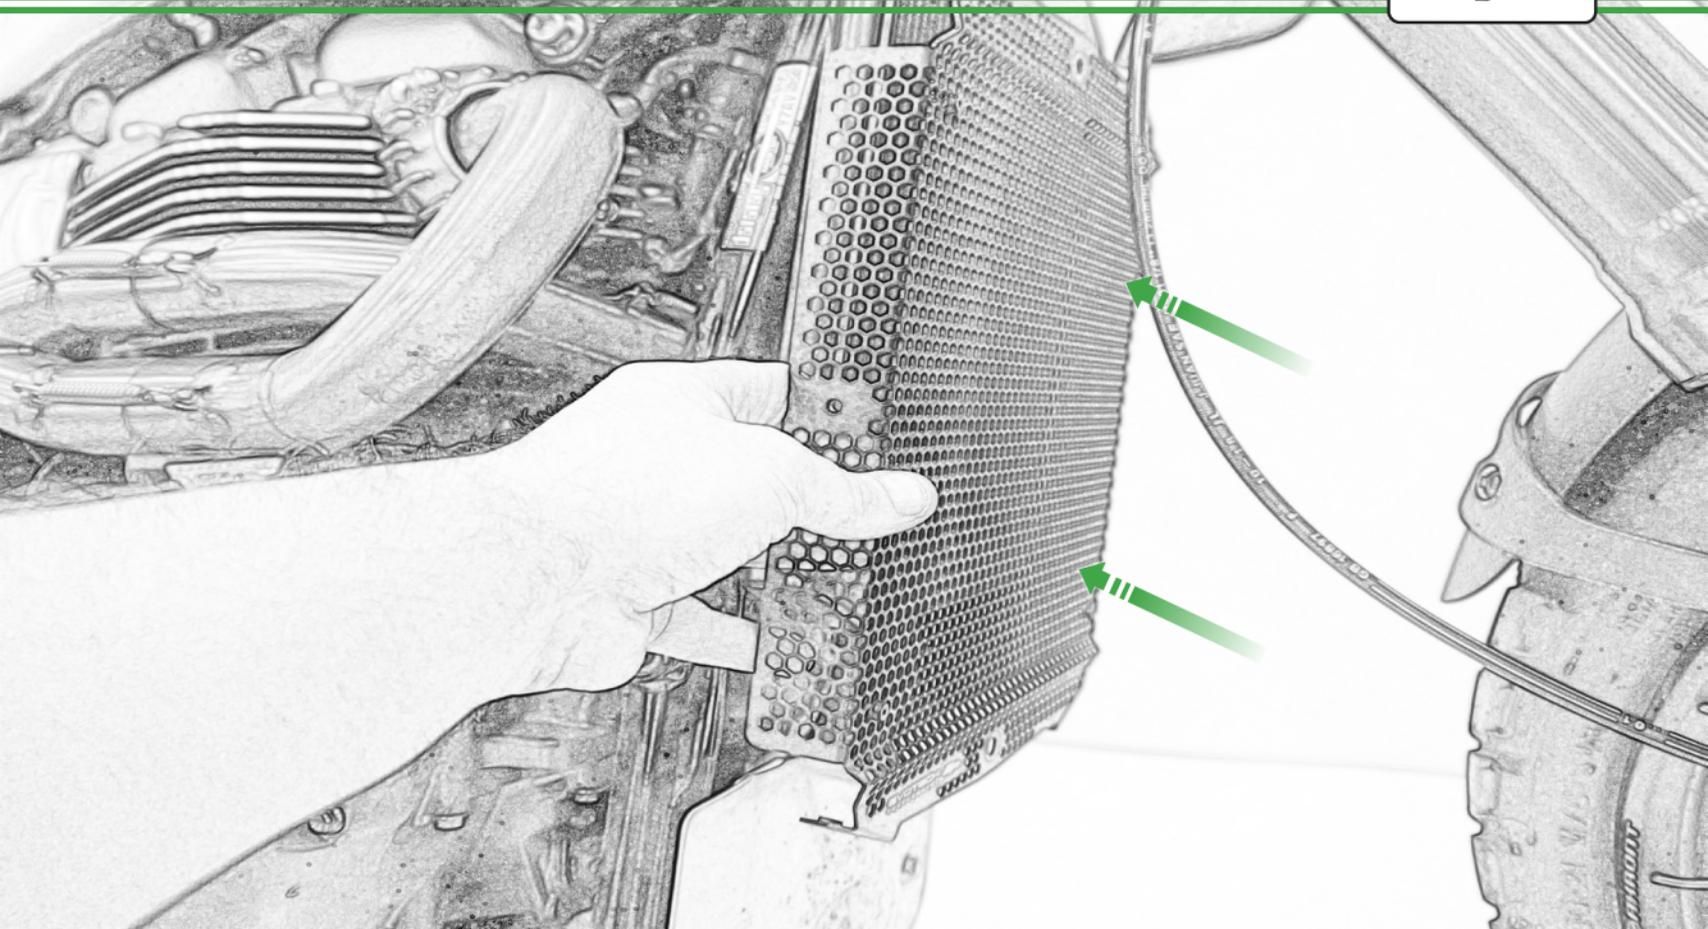


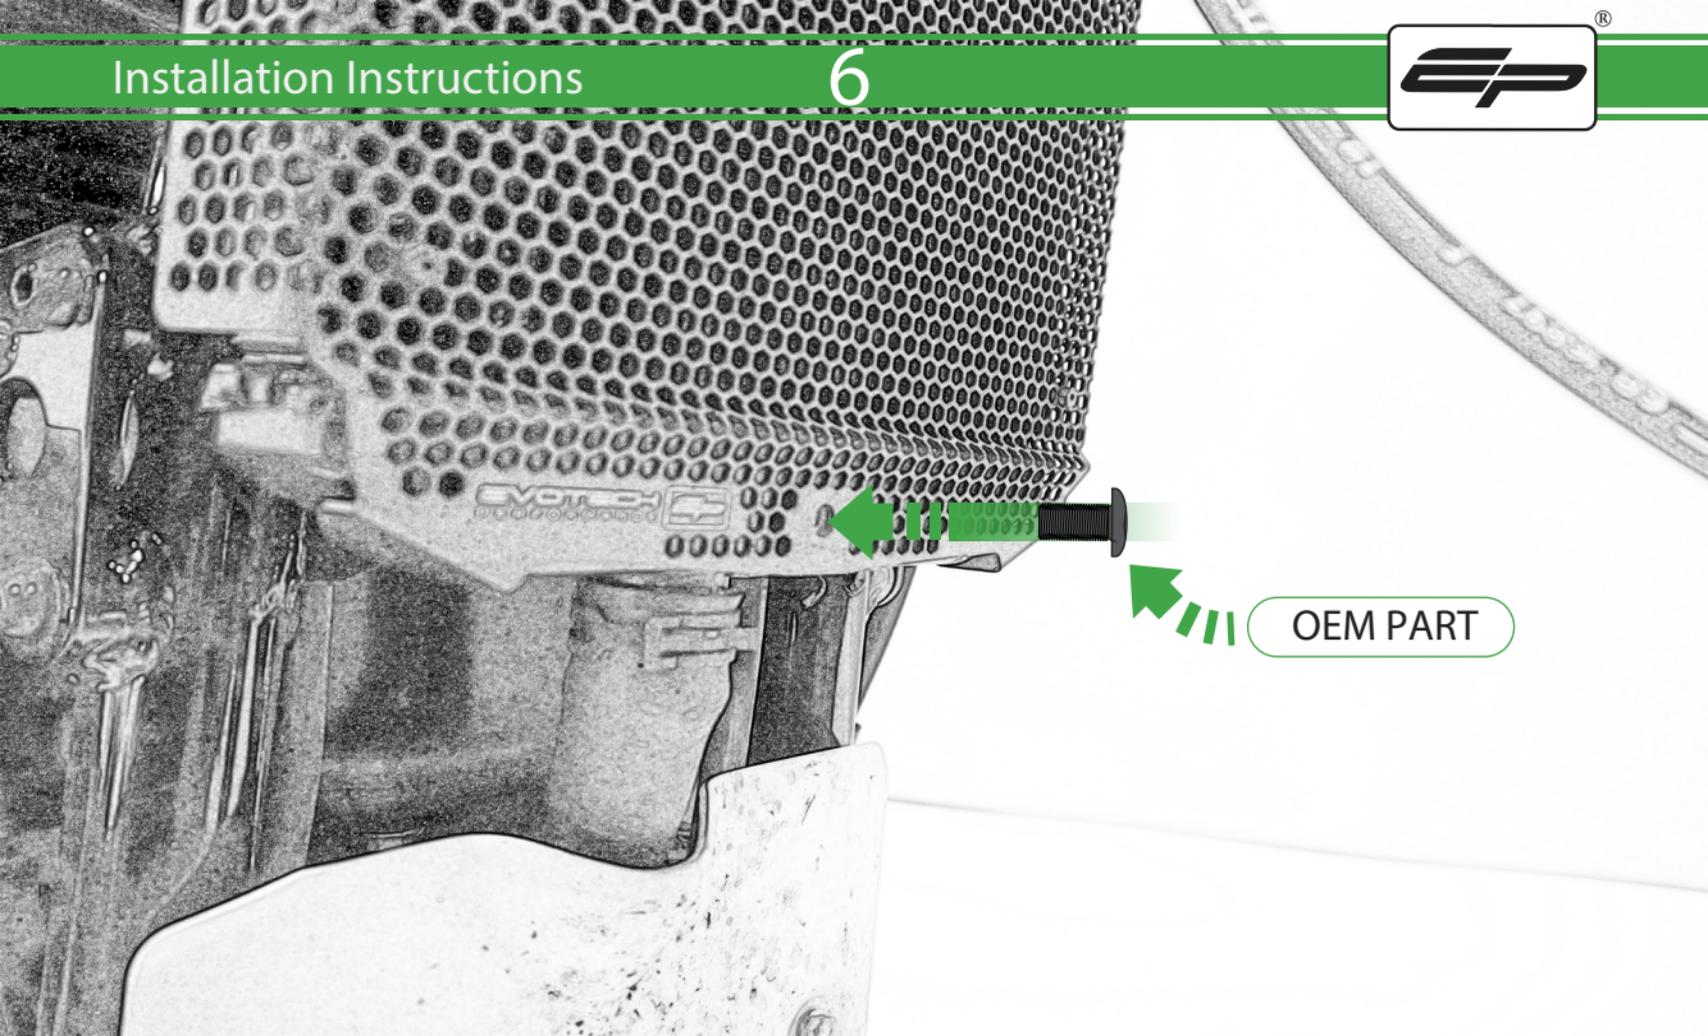


OEM PART

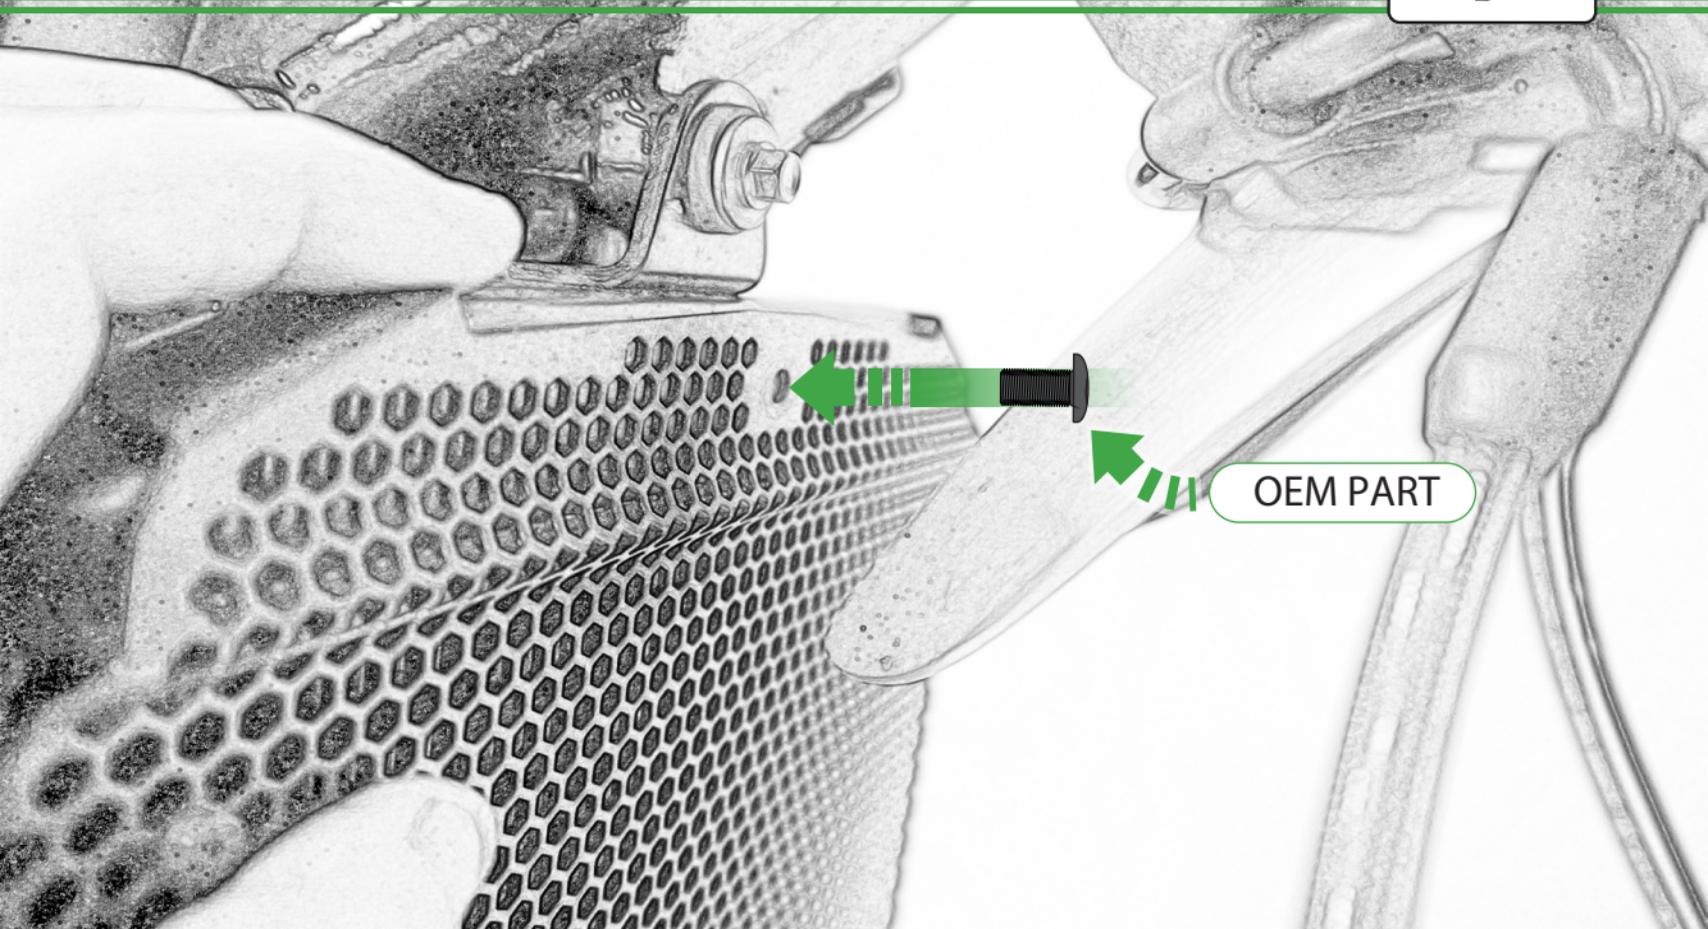


OEM PART

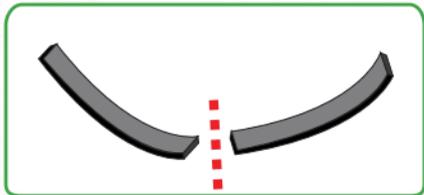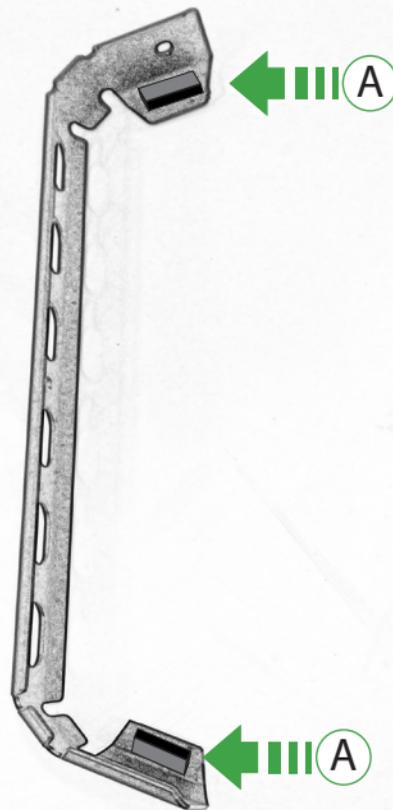

Repeat
Both Sides

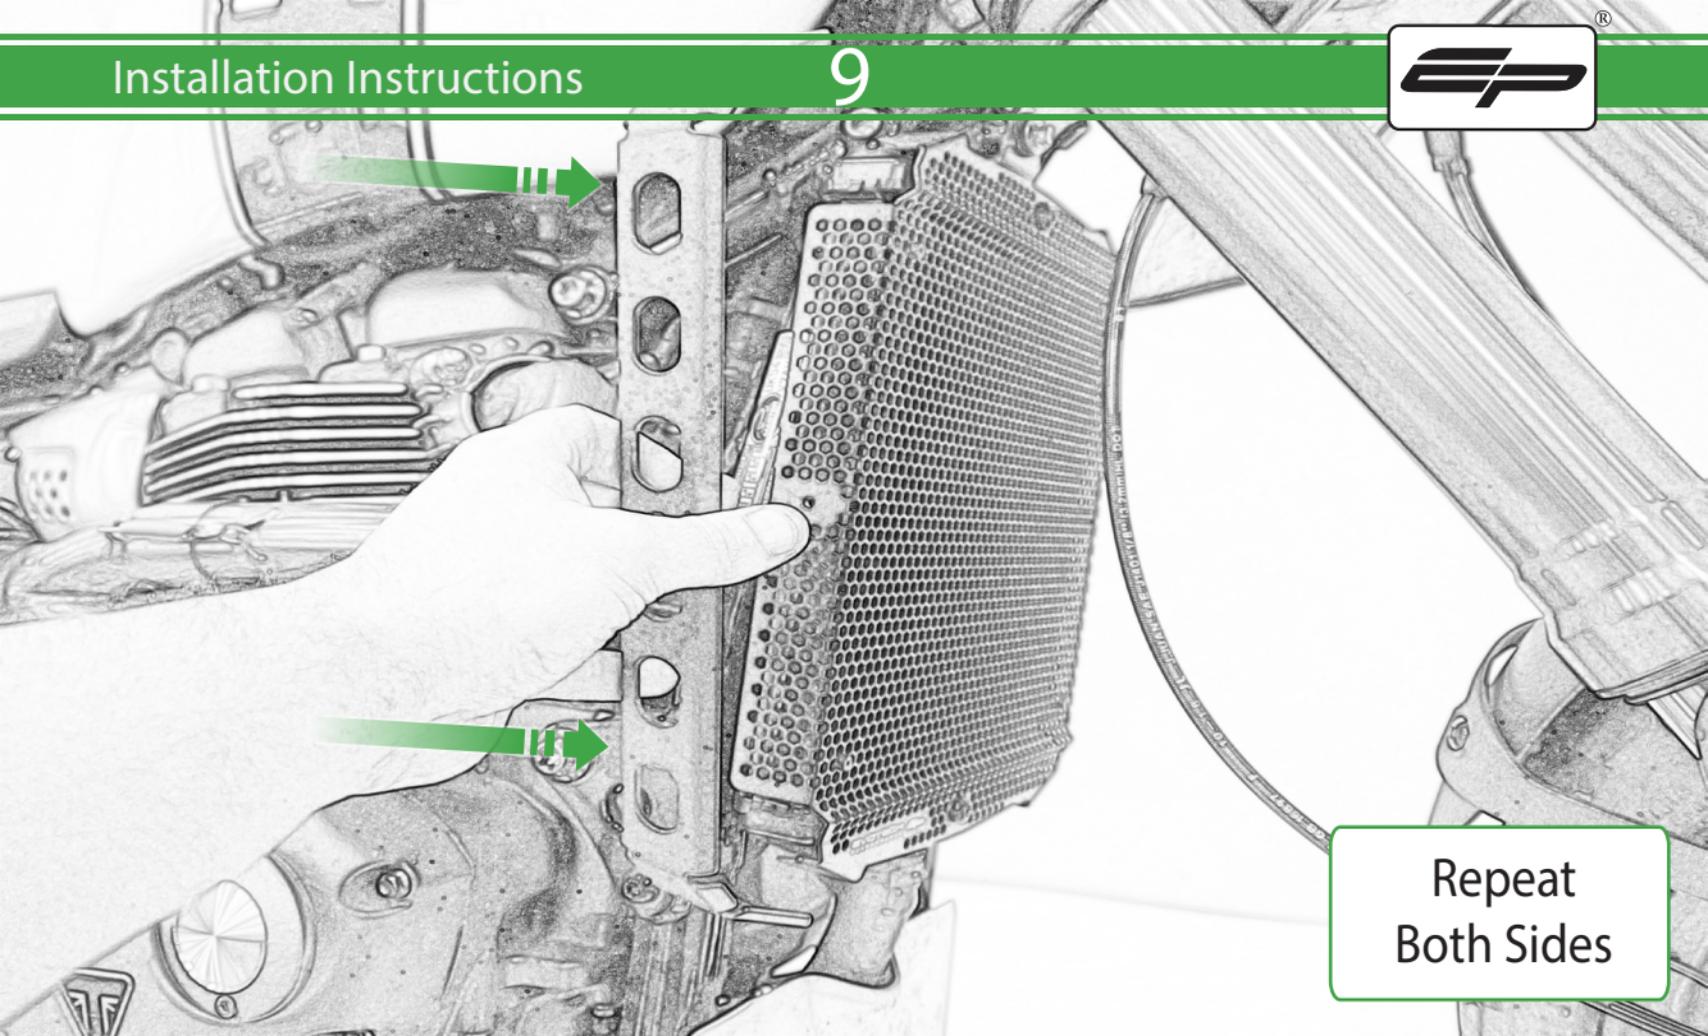


Repeat
Both Sides

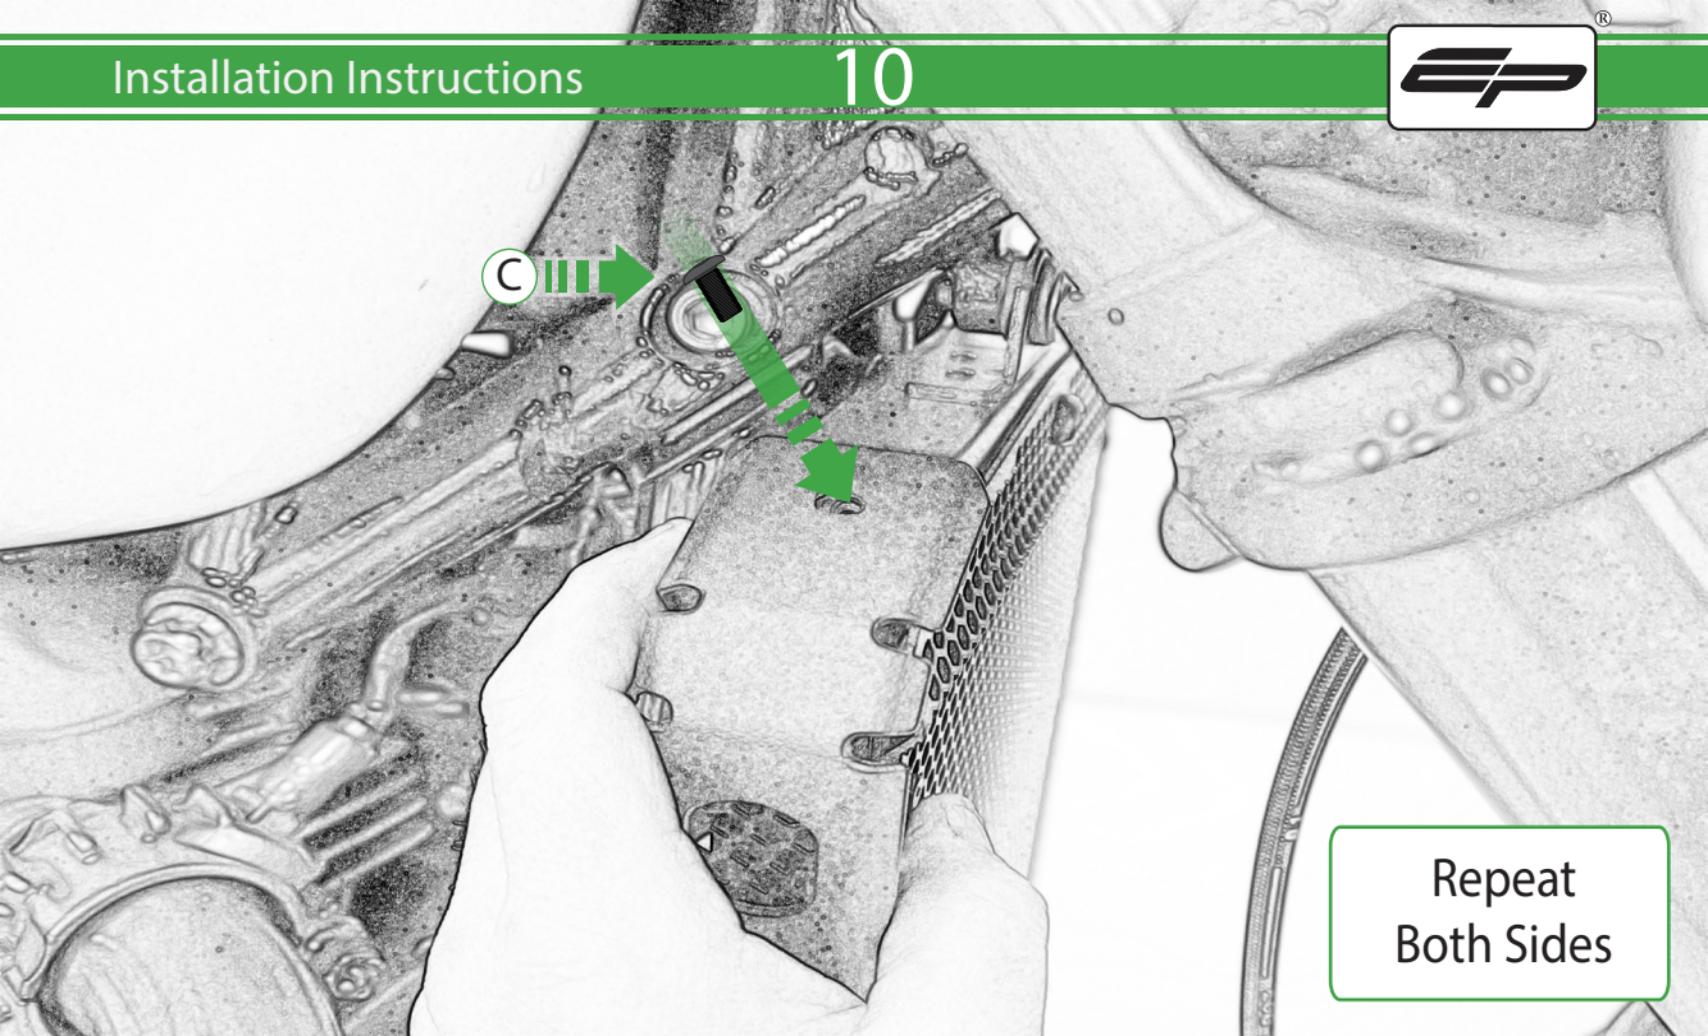

C

Repeat
Both Sides

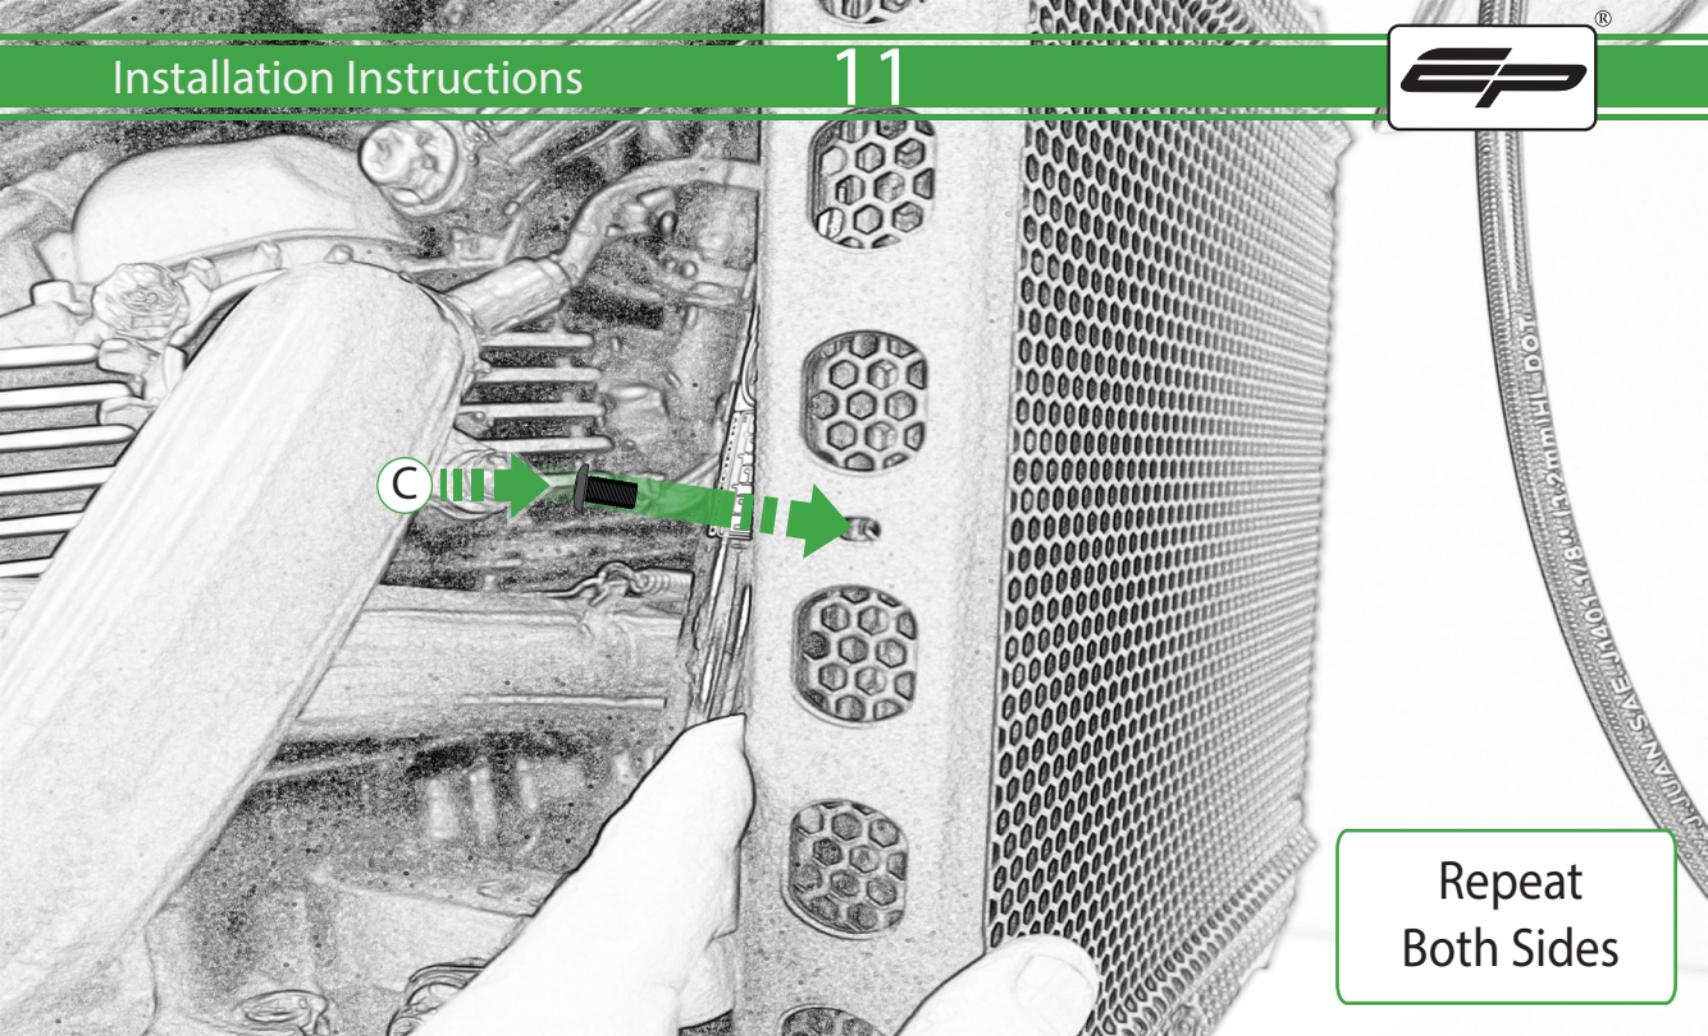

Repeat
Both Sides



Repeat
Both Sides



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that dirt and debris have not become trapped between the guard and the radiator/oil cooler. Such dirt and debris would reduce the cooling efficiency of the radiator/oil cooler.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightened.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com