

EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com

Triumph Tiger 900 Hand Guards


Installation Instructions





Kit Contents PRN015011


- (A) 1 x L/H Main Bracket
- (B) 1 x L/H Mirror Bracket
- (C) 1 x R/H Main Bracket
- (D) 1 x R/H Mirror Bracket
- (E) 2 x Bar End Inner
- (F) 2 x Bar End Outer
- (G) 2 x M6 x 35 Caphead
- (H) 2 x Mirror Washer
- (I) 4 x M5 x 16 Button head Bolts
- (J) 4 x M5 Washers


Installation Instructions

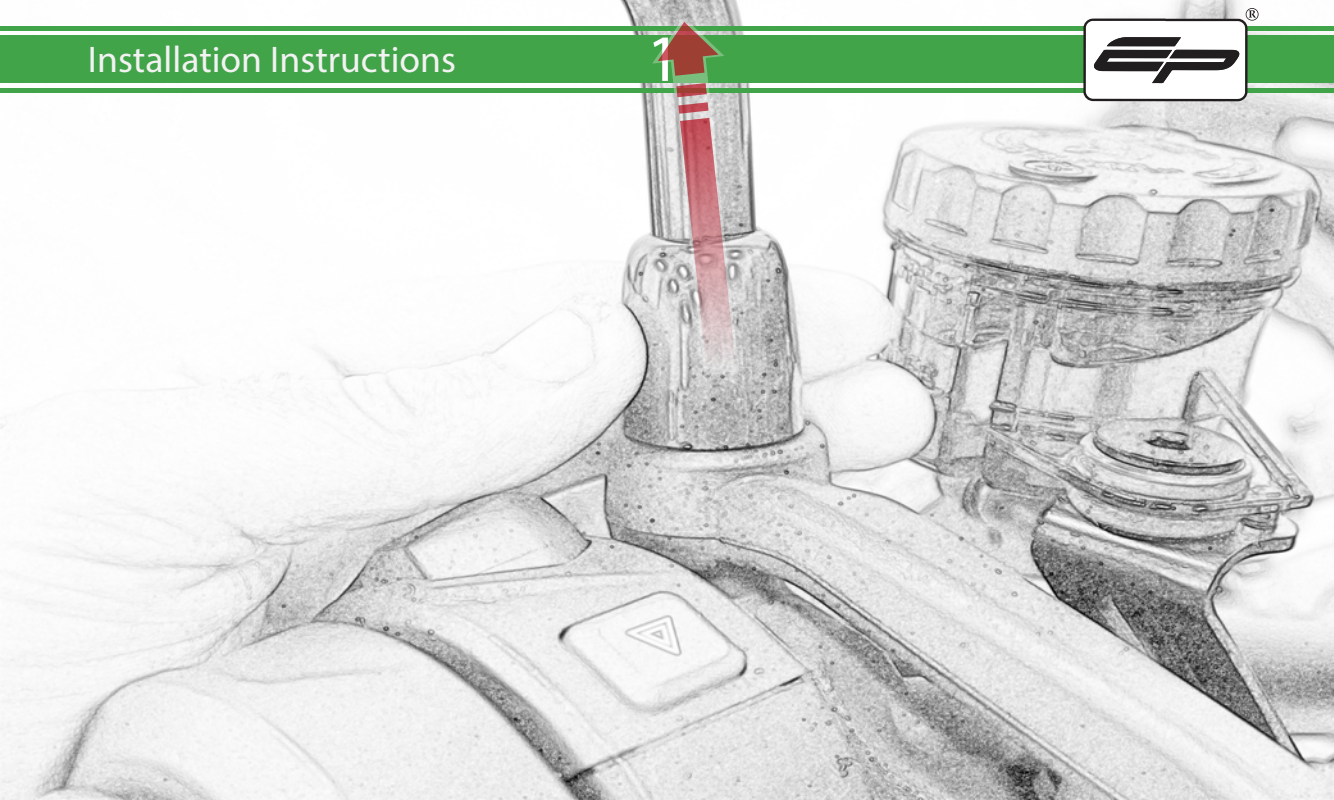


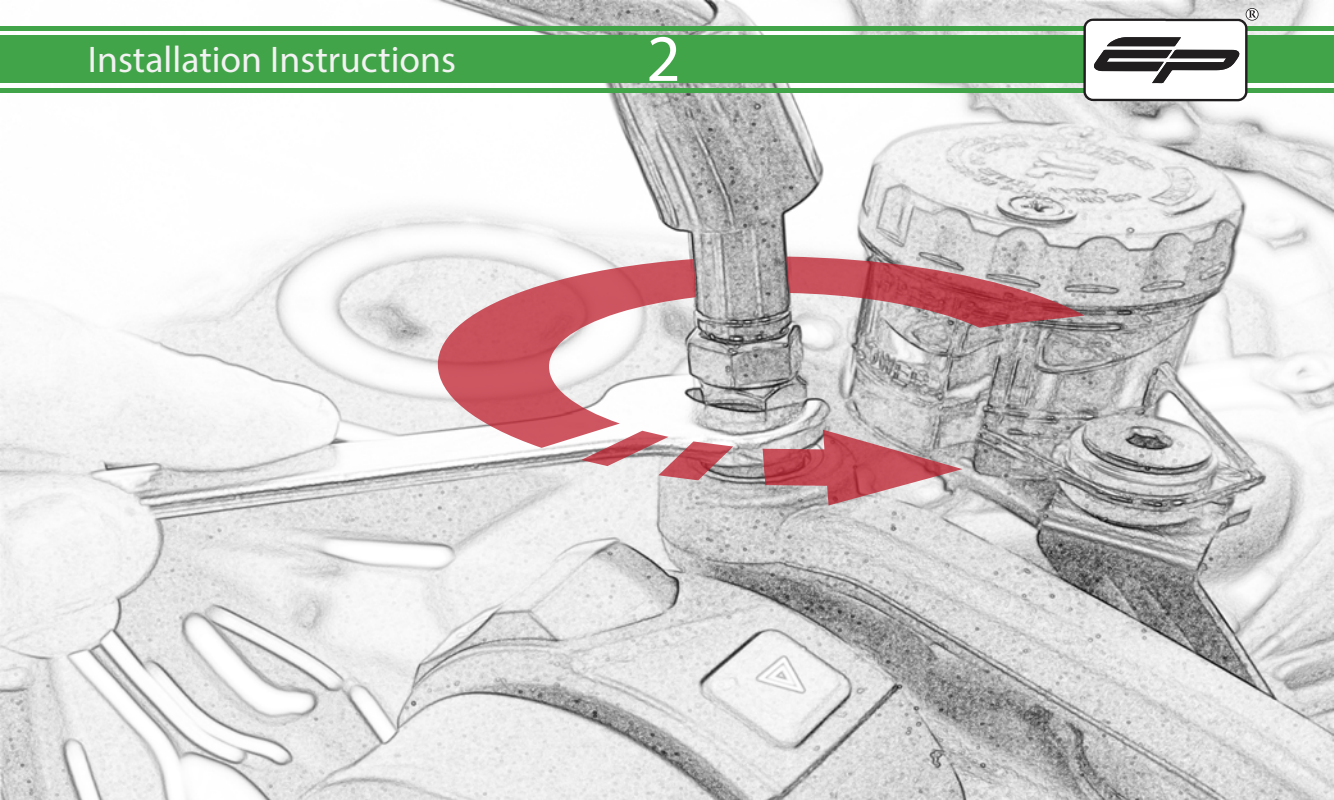


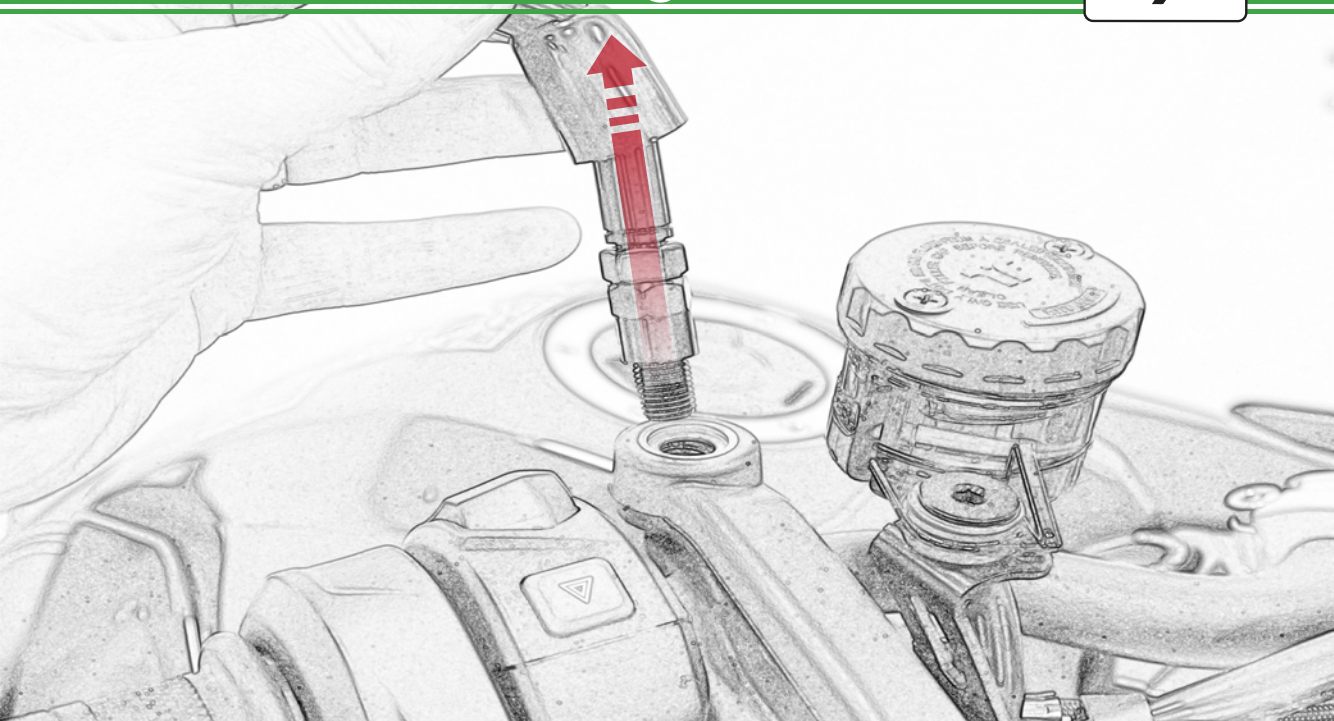


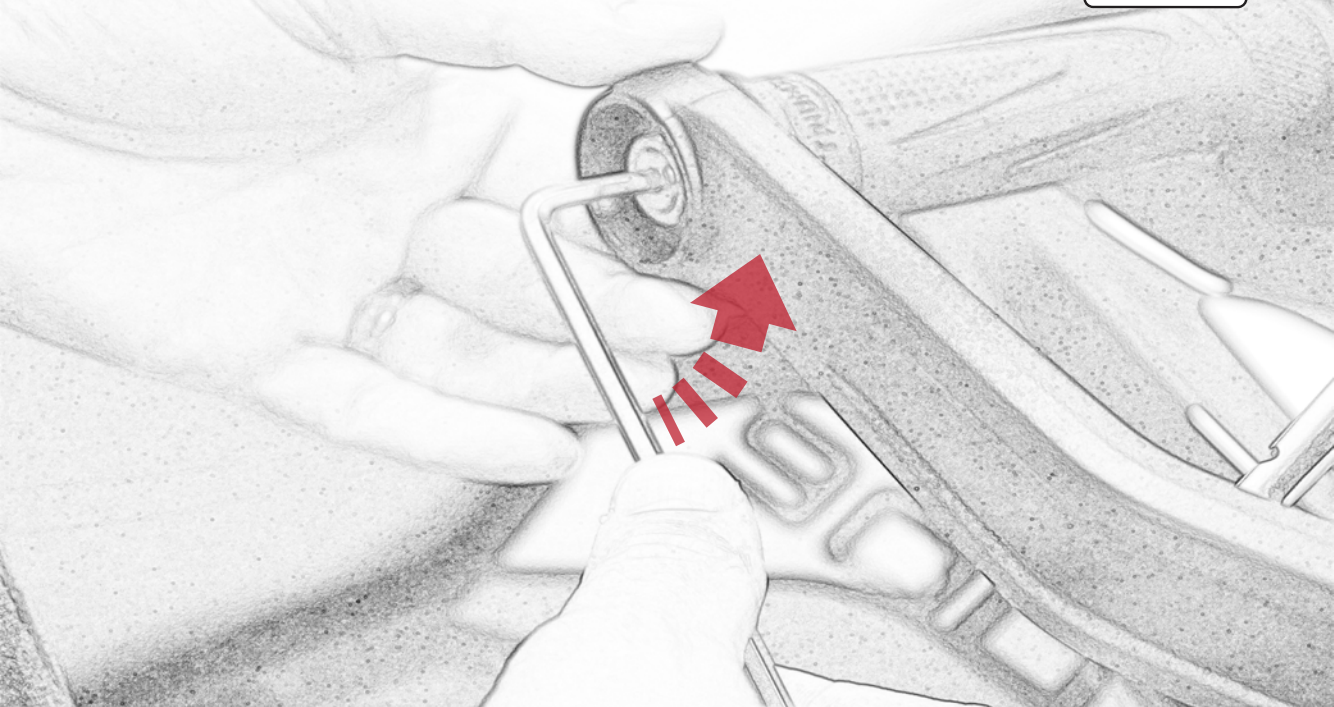

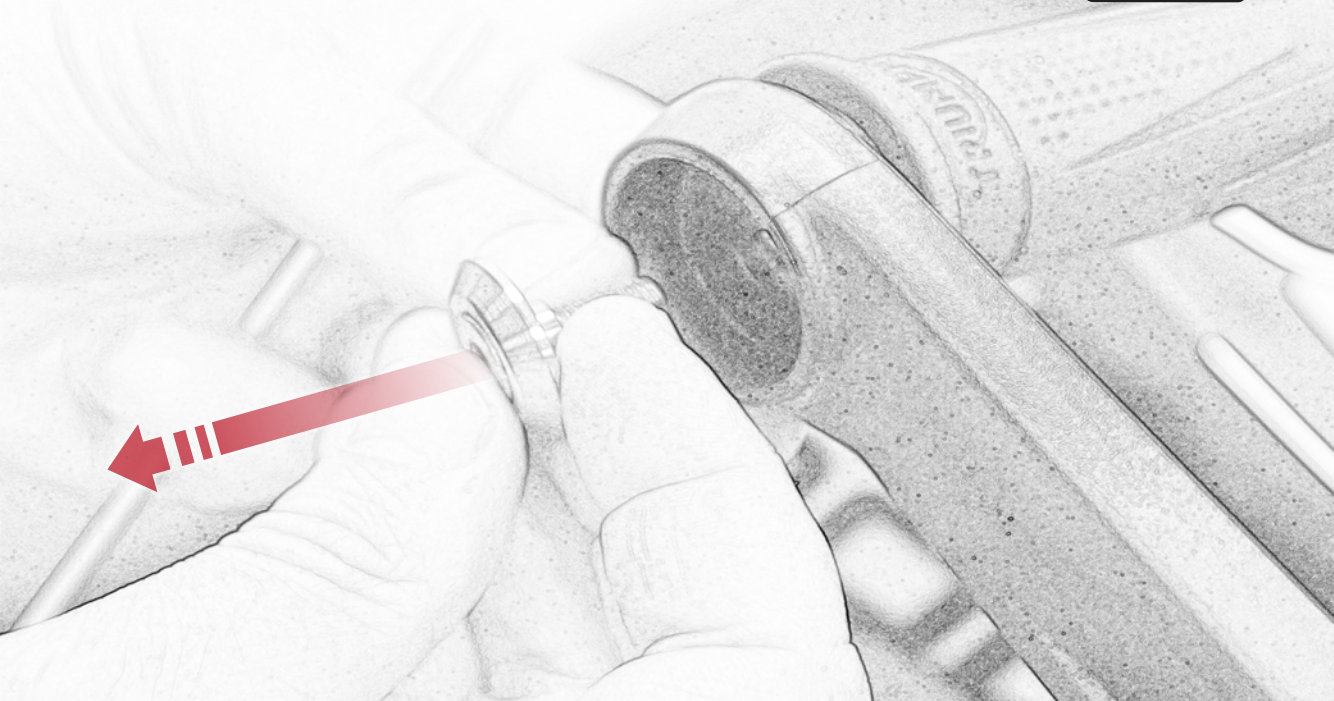


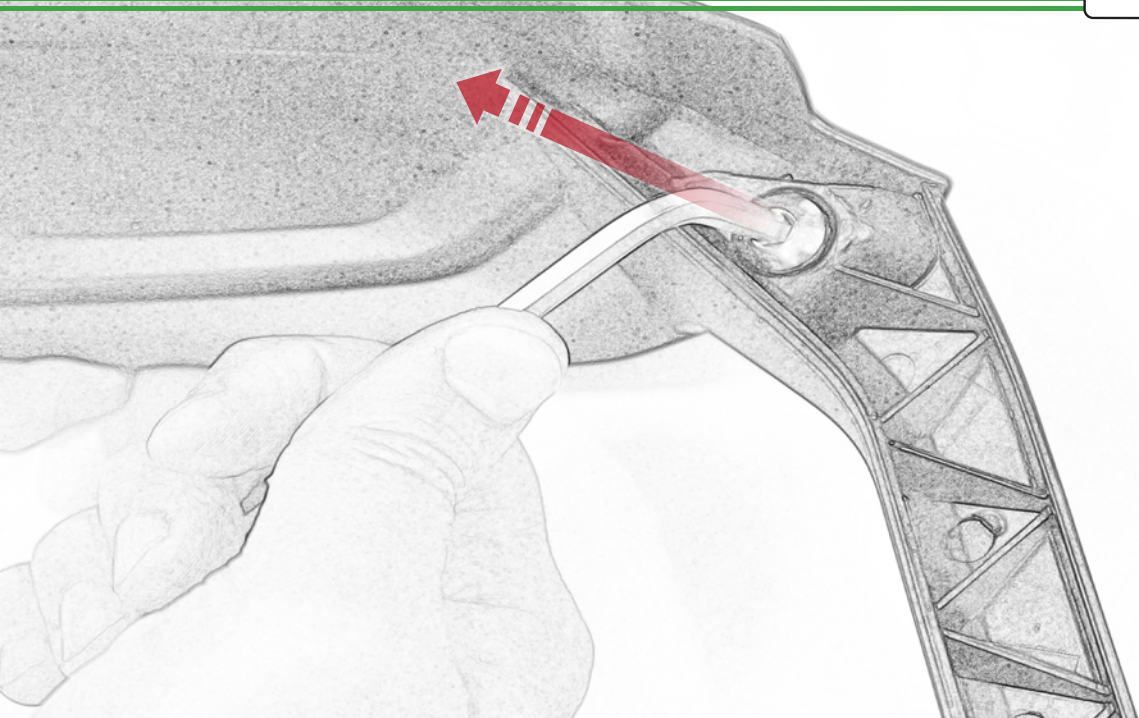


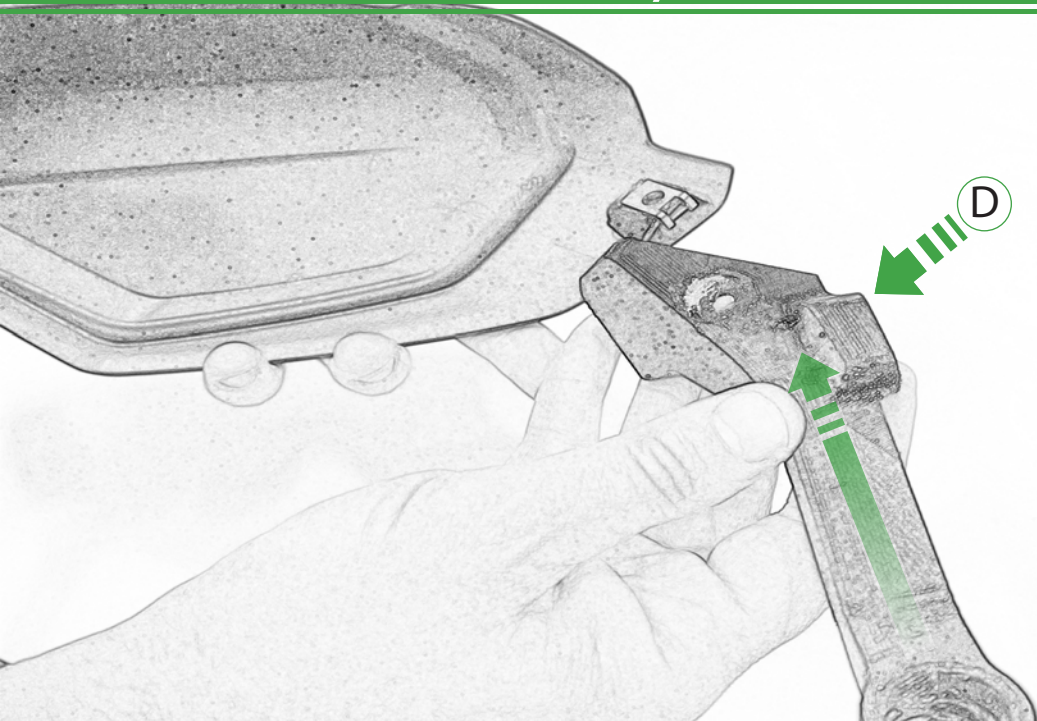


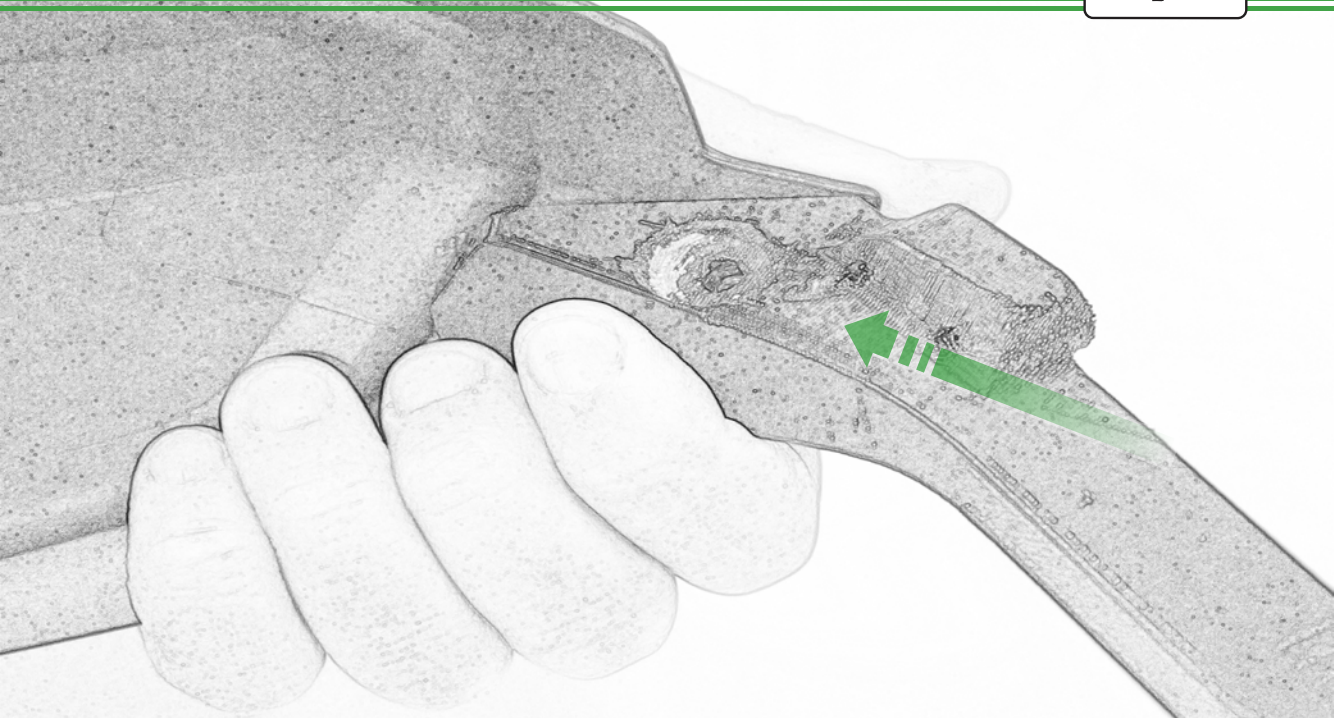


OEM PART

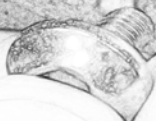

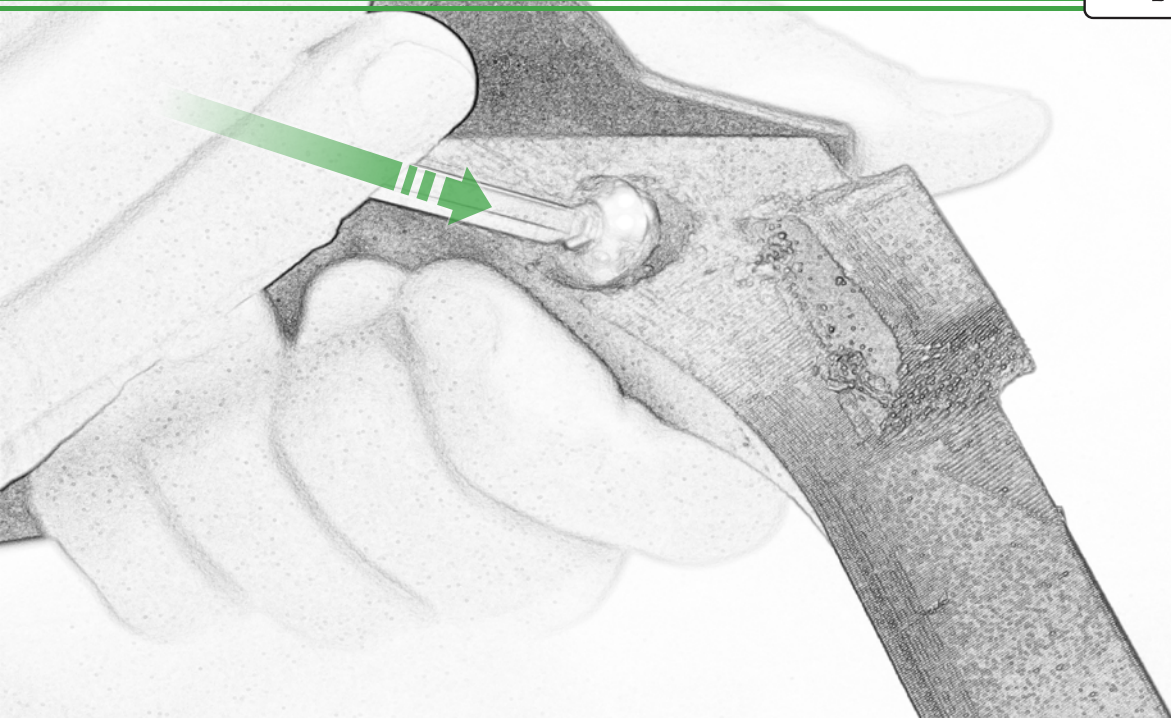


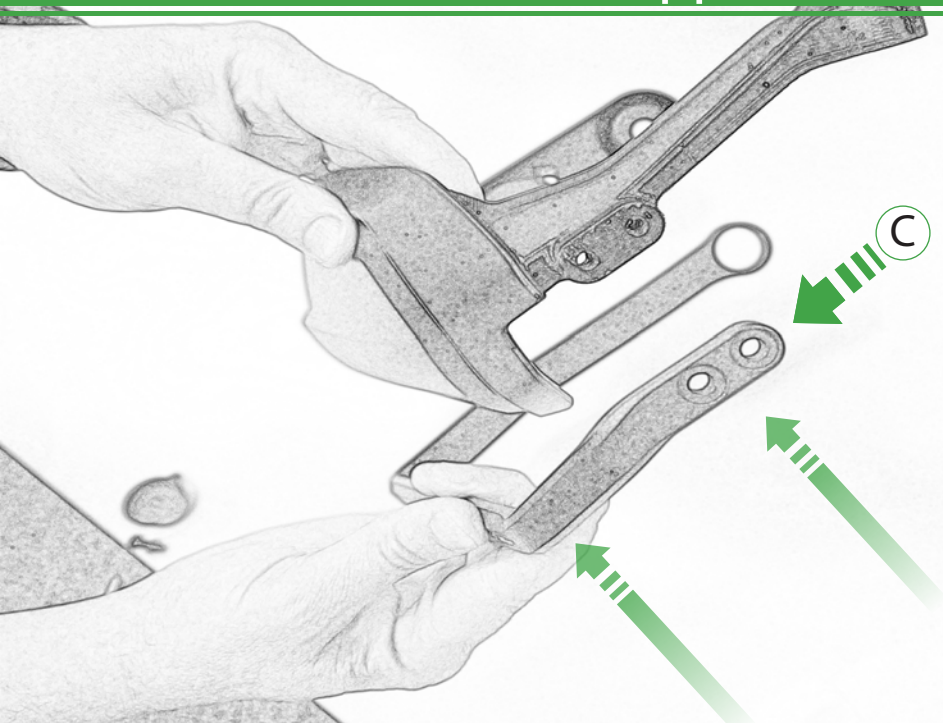


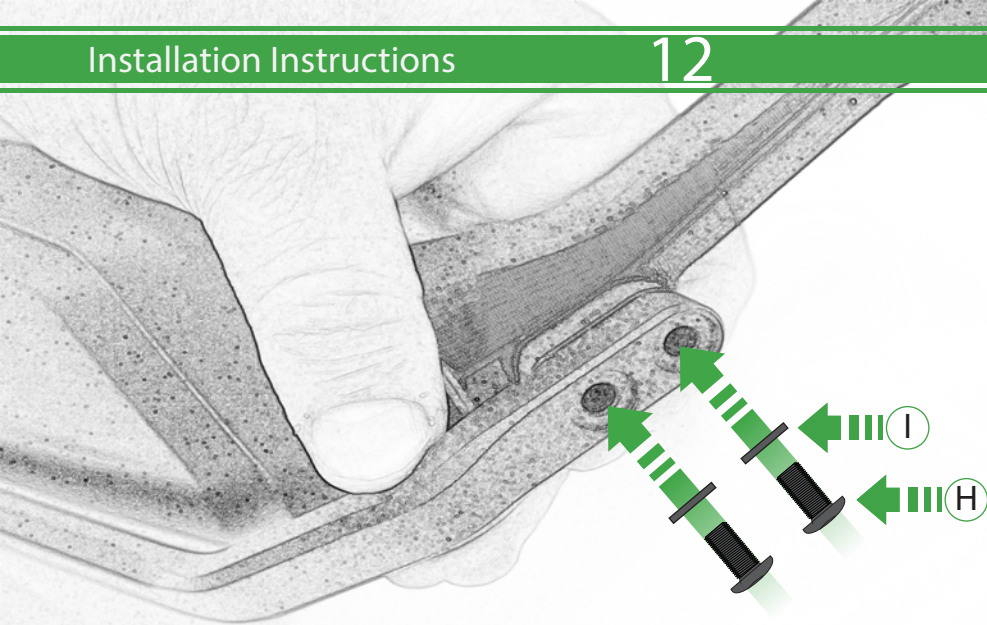


Caution


Do Not Fully
Tighten

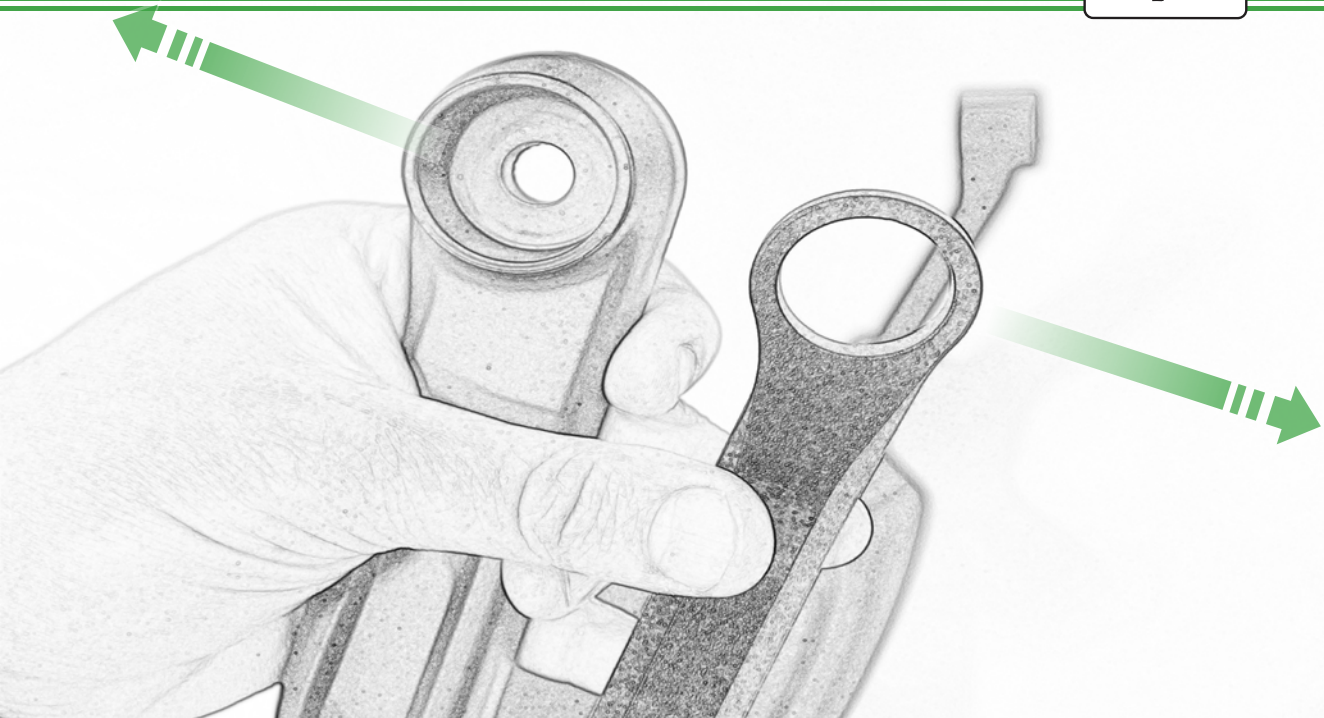

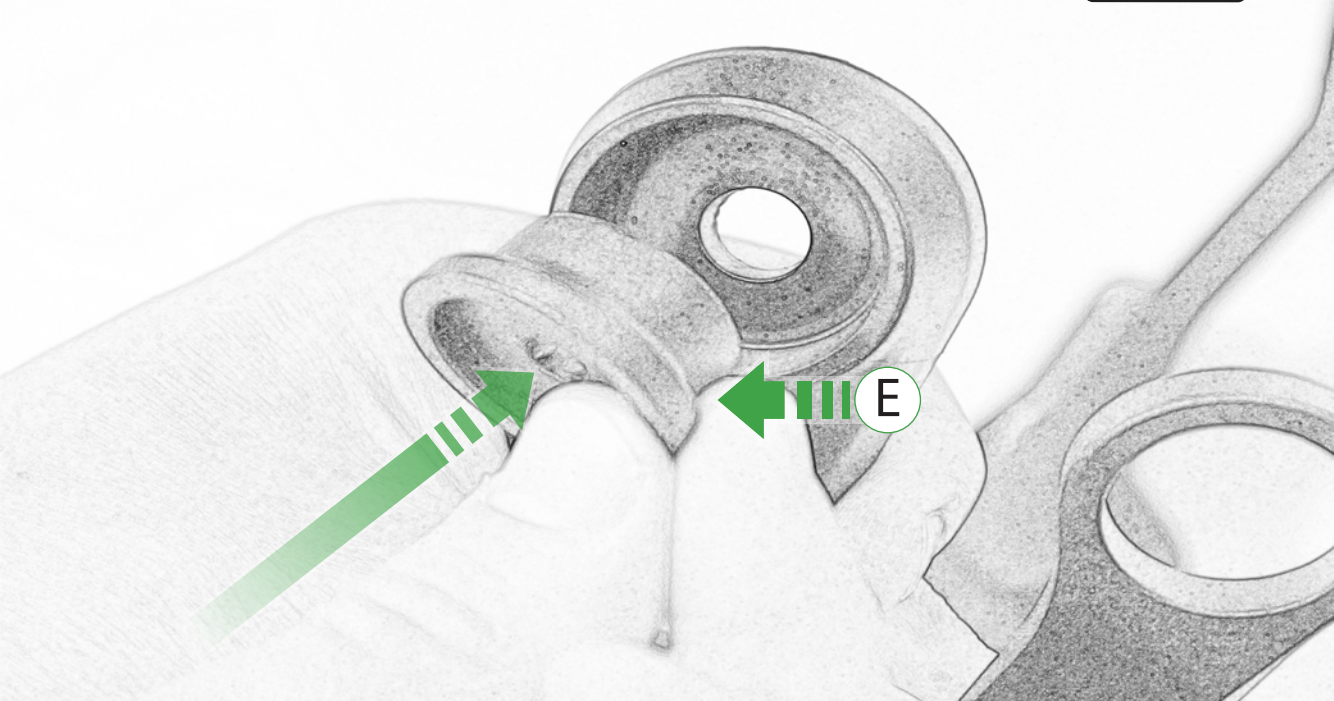





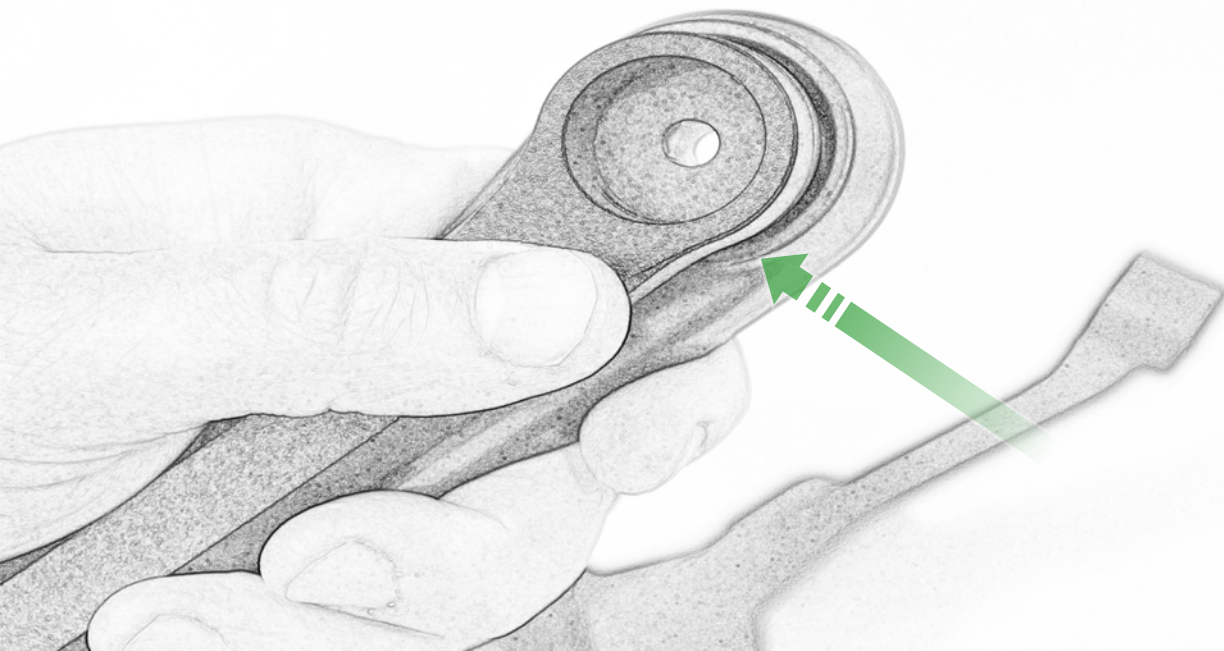

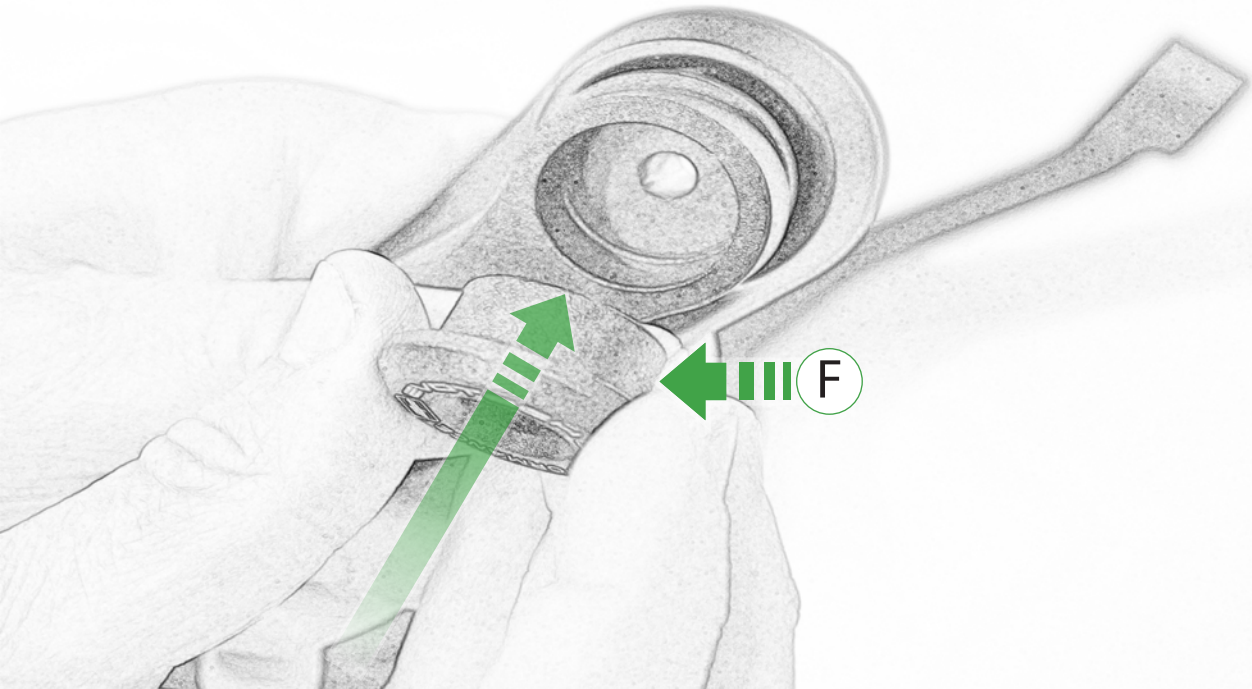




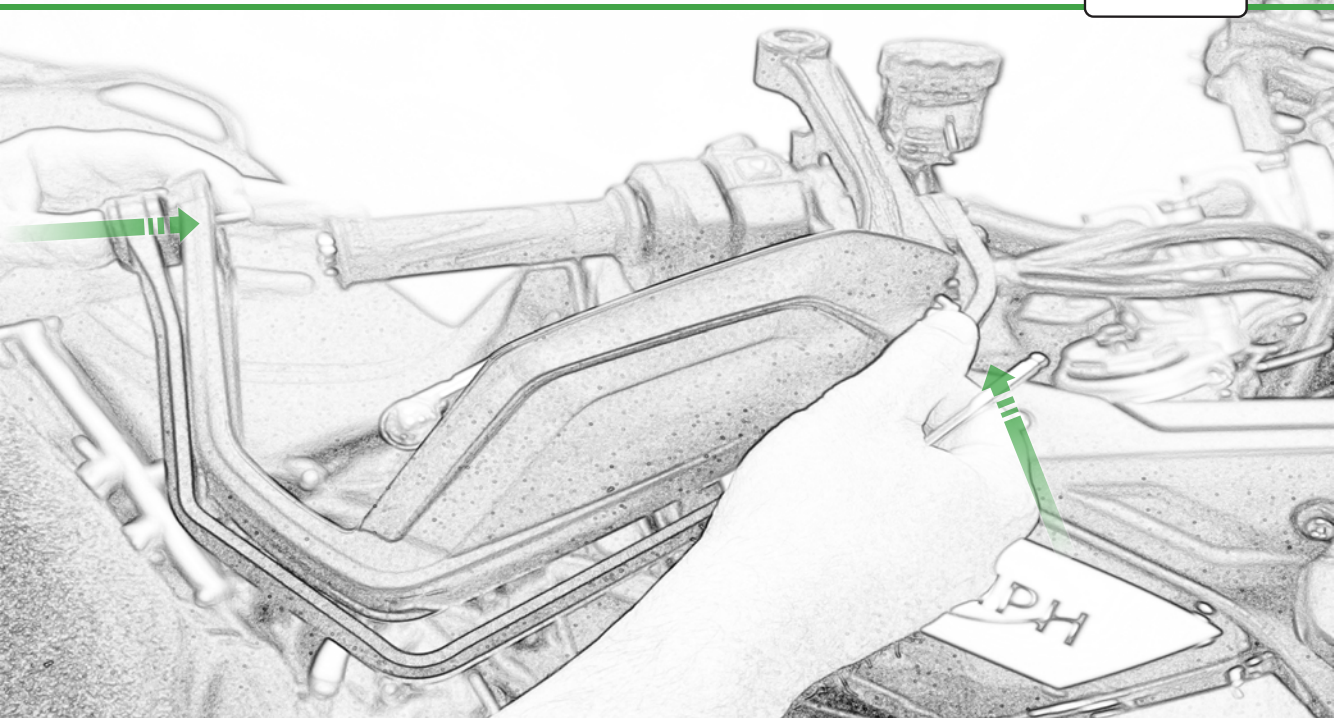


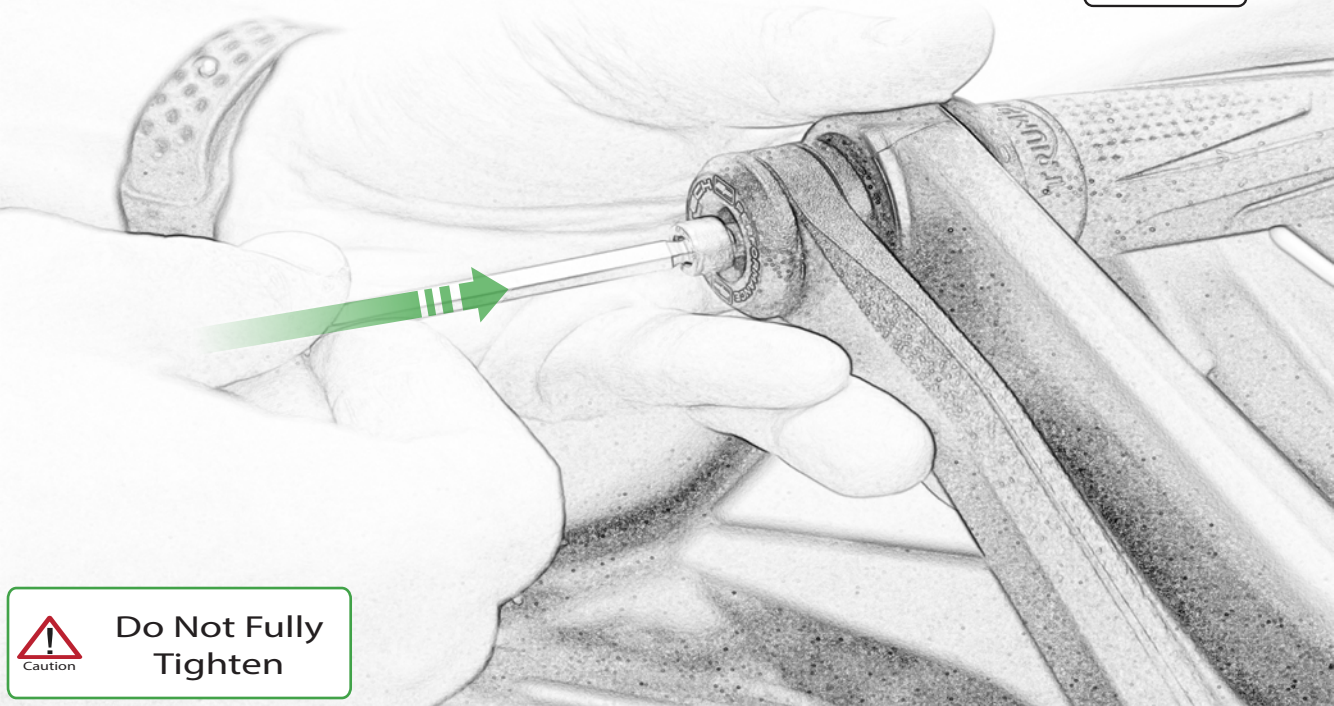

**Do Not Fully
Tighten**




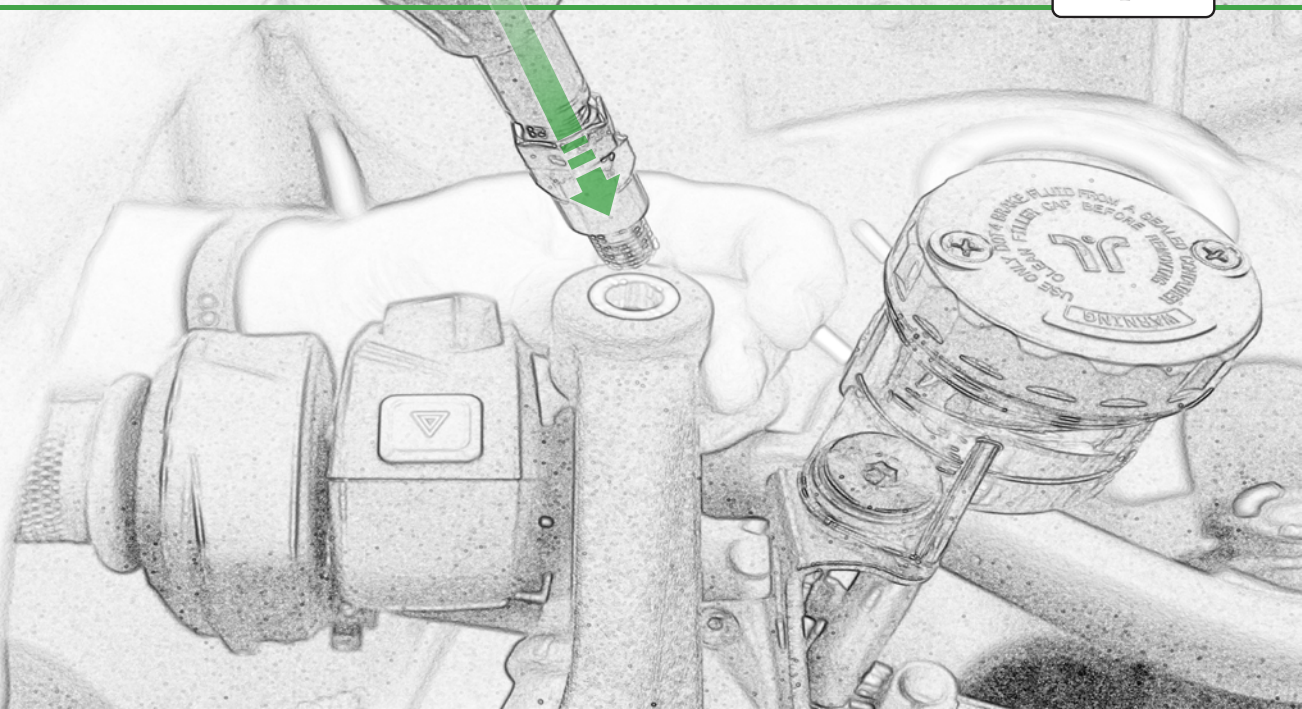

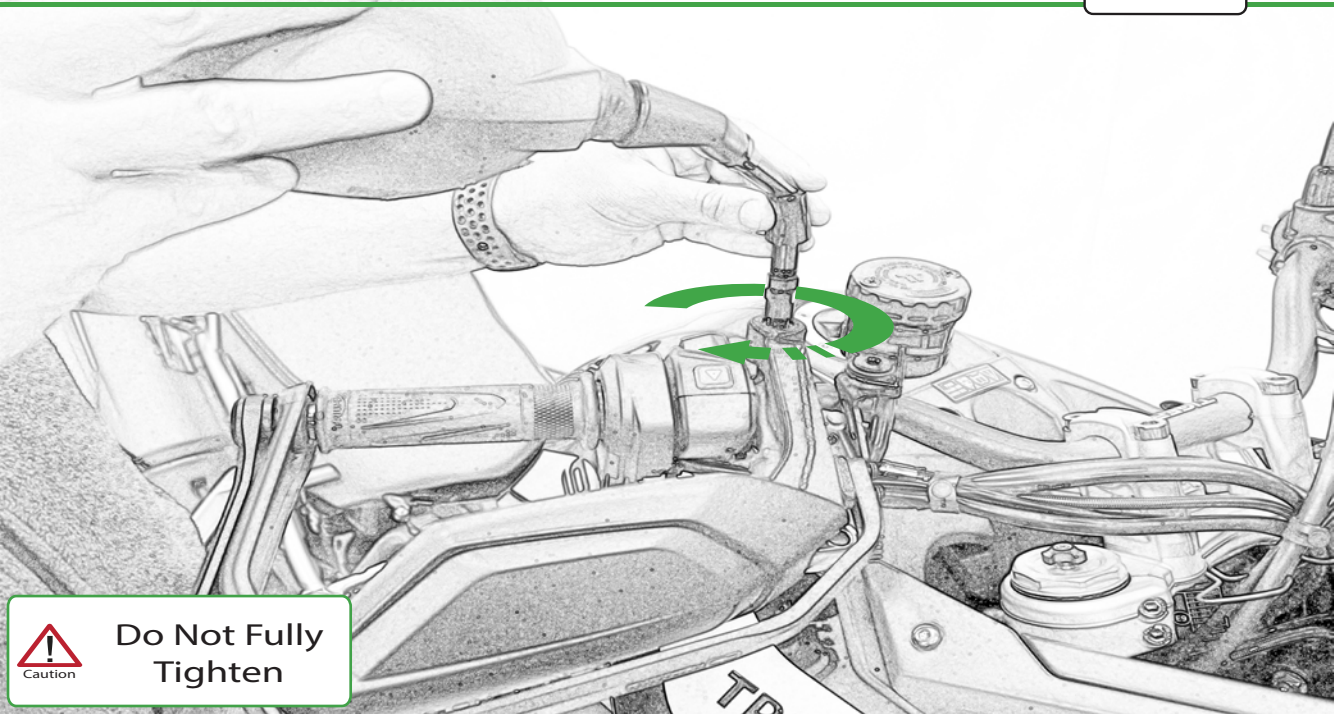


Caution


**Do Not Fully
Tighten**

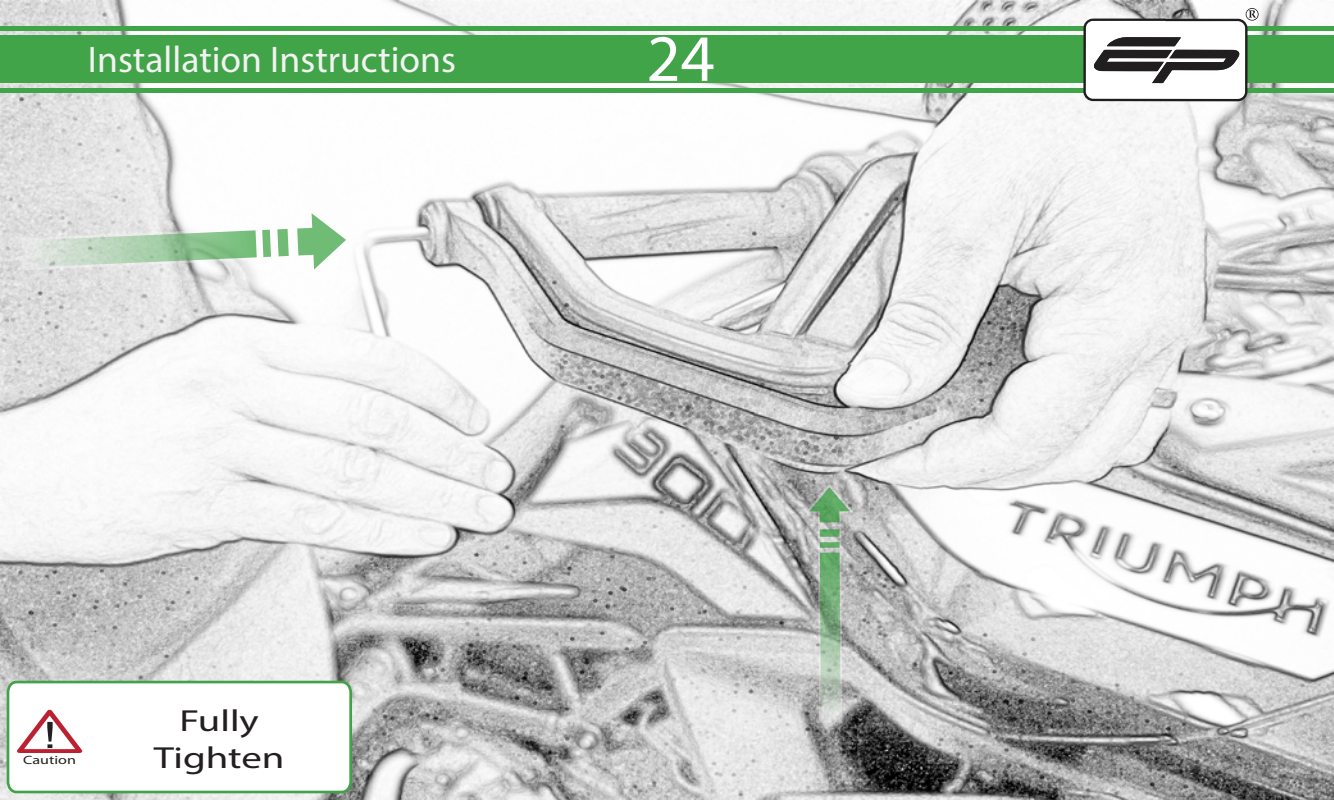


Fully
Tighten

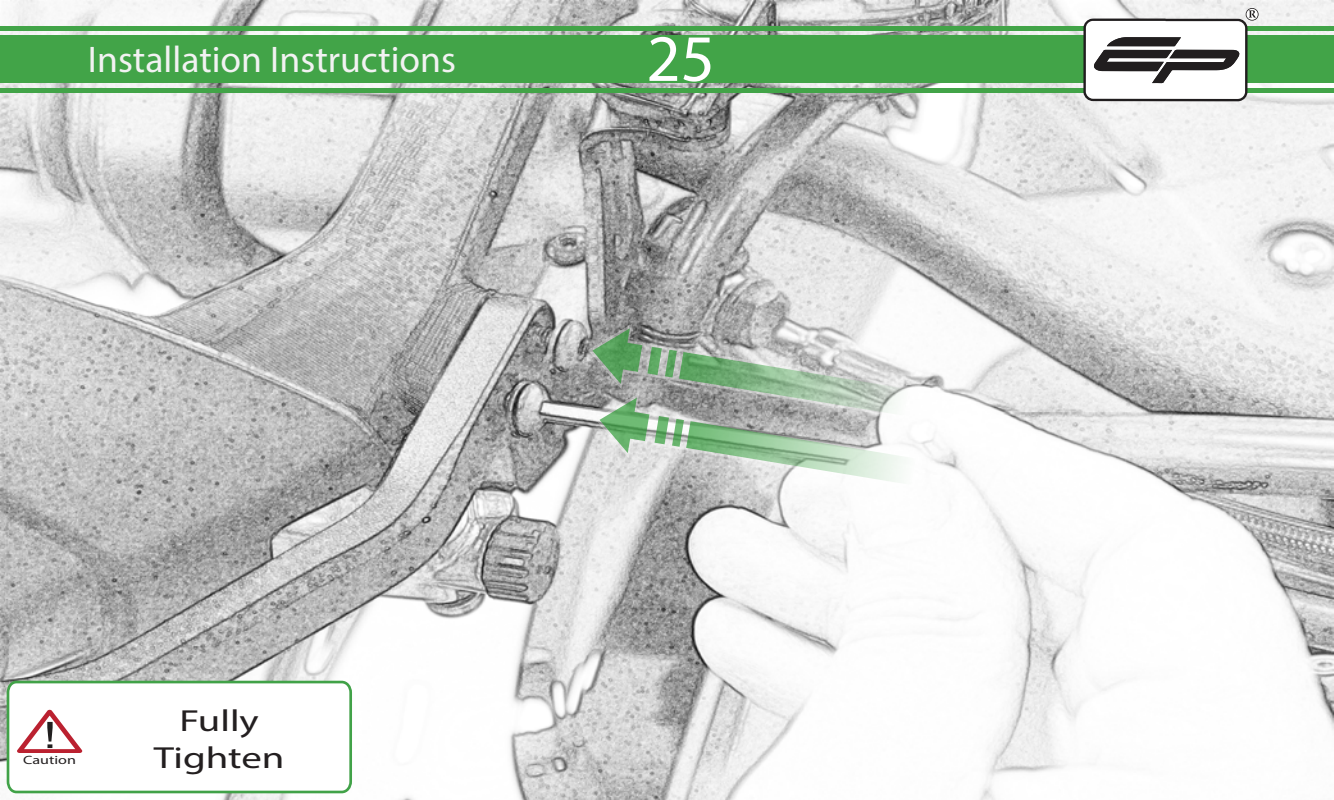

Fully
Tighten

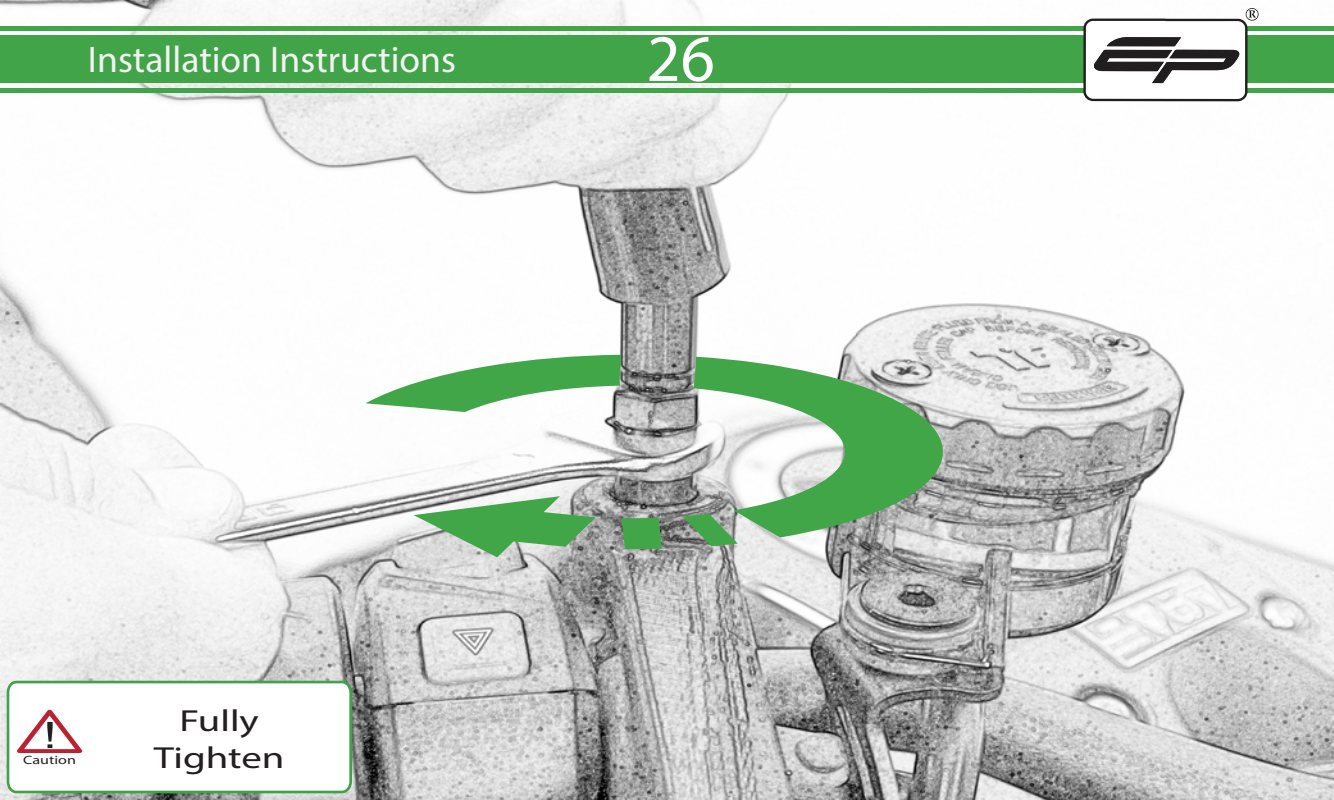

Fully
Tighten

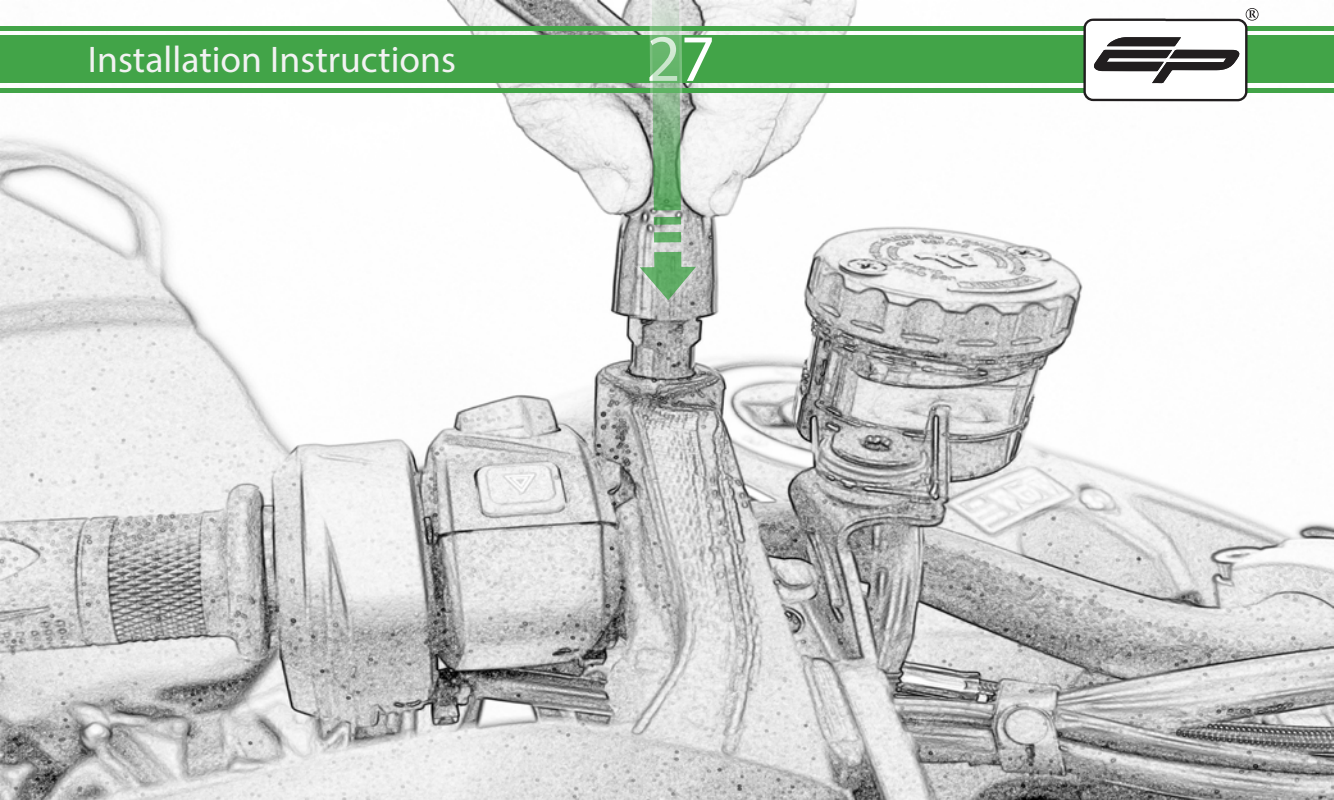





ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com