

www.evotech-performance.com
Triumph Tiger Sport 660
Crash Protection

Installation Instructions




Kit Contents PRN015353


- A 1 x L/H Front Frame Spacer
- B 1 x L/H Bracket
- © 1 x M12 x 85mm x 1.25mm
- D 1 x M10 x 110mm x 1.25mm
- **E** 1 x M10 x 40mm x 1.25mm
- © 1 x L/H Bobbin Spacer
- © 1 x R/H Bracket
- H 1 x R/H Front Frame Spacer
- 1 x R/H Rear Frame Spacer
- J 1 x M12 x 70mm x 1.25mm
- (K) 1 x M10 x 85mm x 1.25mm
- L 1 x M10 x 60mm x 1.25mm


- M R/H Bobbin Spacer
- N 2 x Poly Washer
- 0 2 x Bobbin Head
- P 2 x M12 Washer







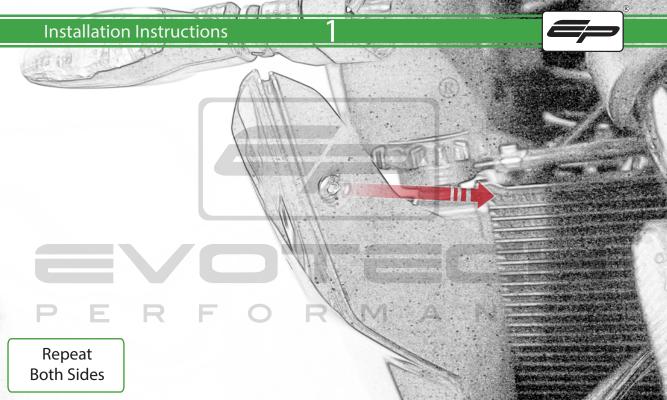


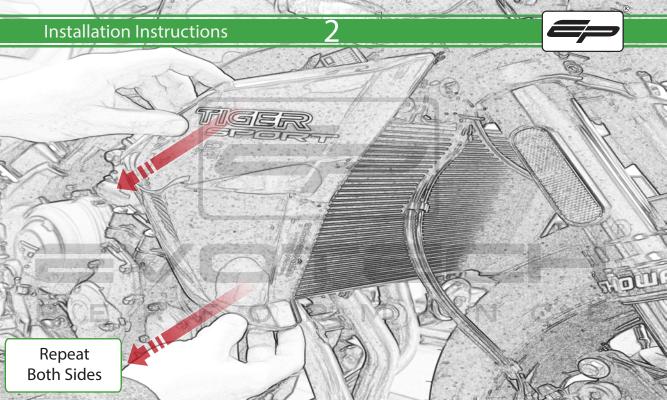


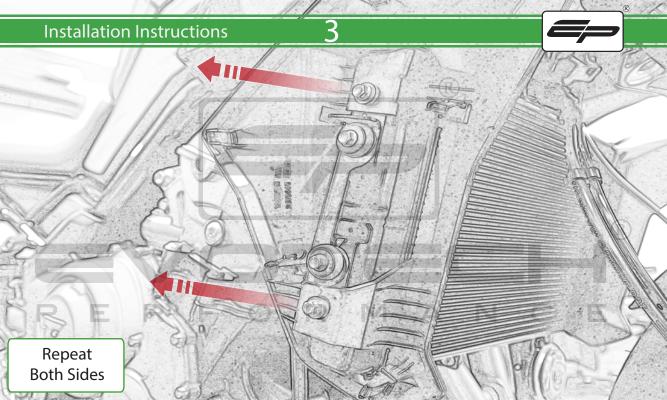


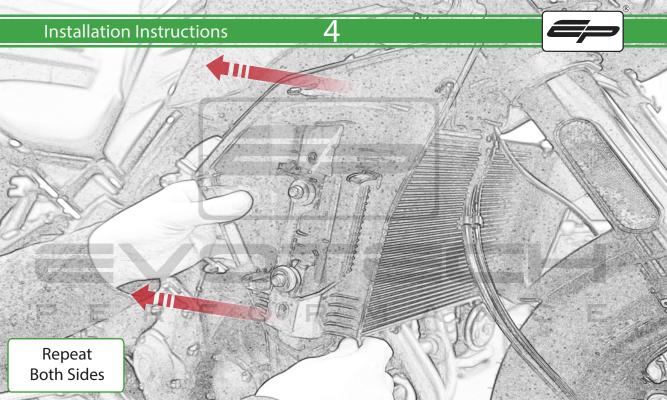


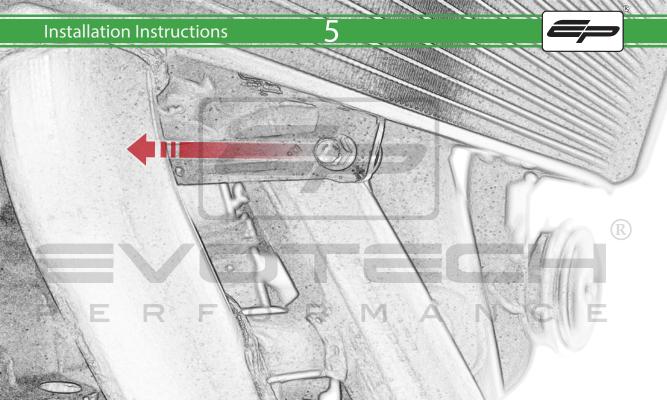


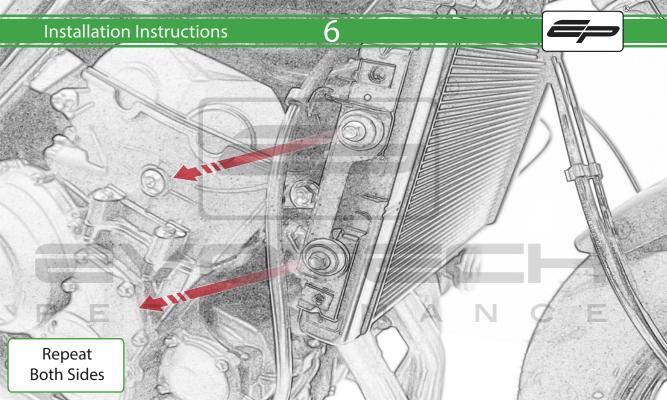


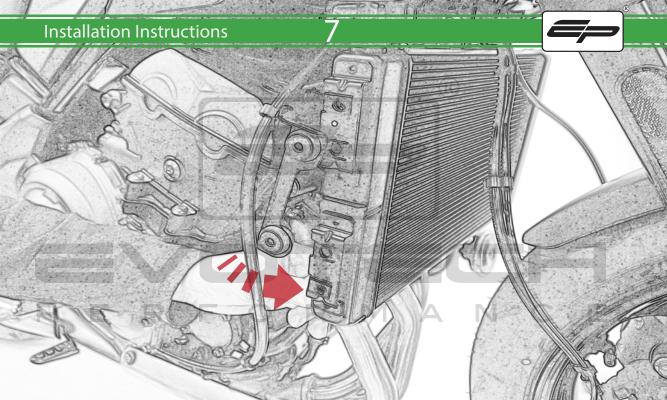


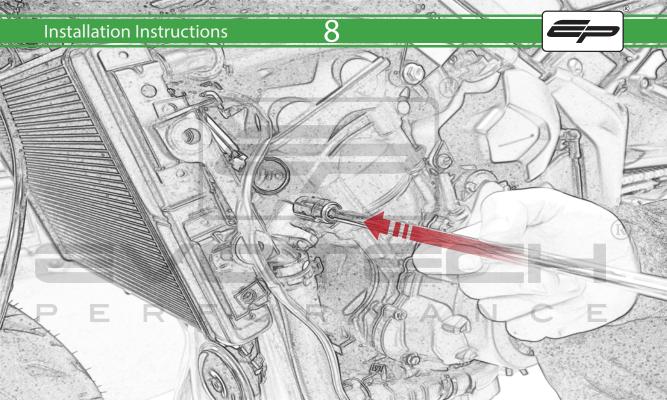


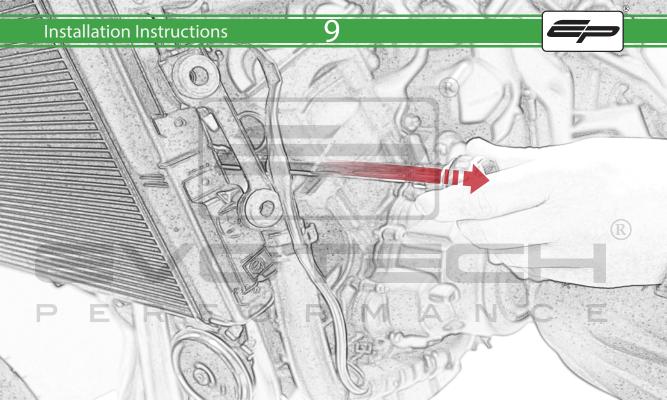


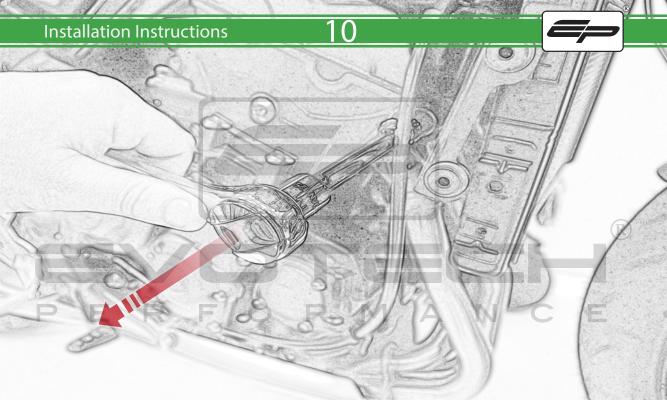


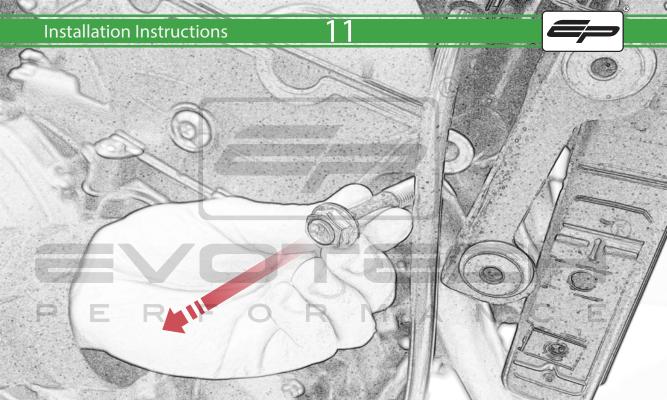

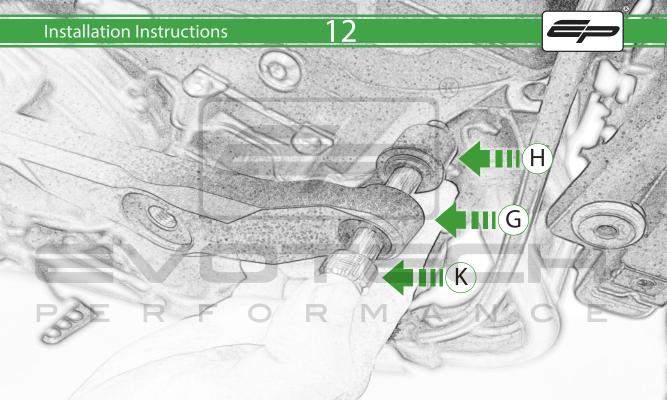

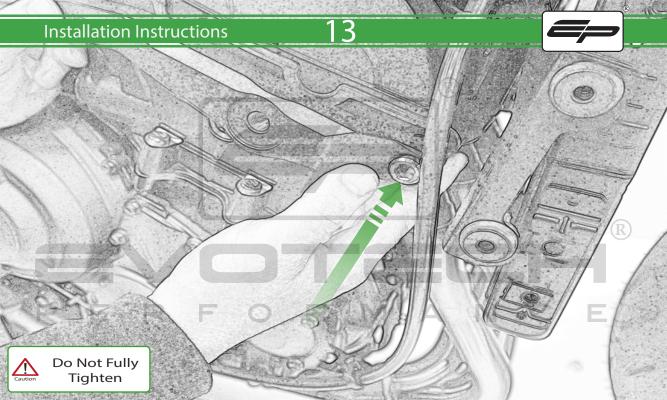


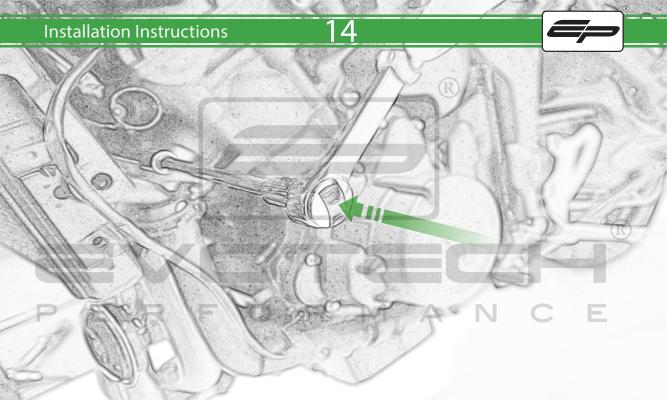

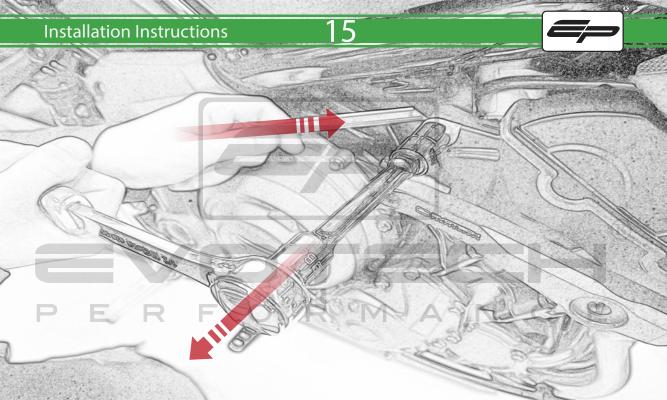








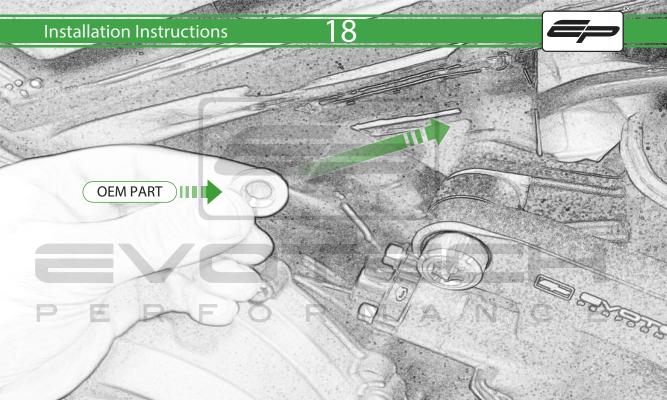



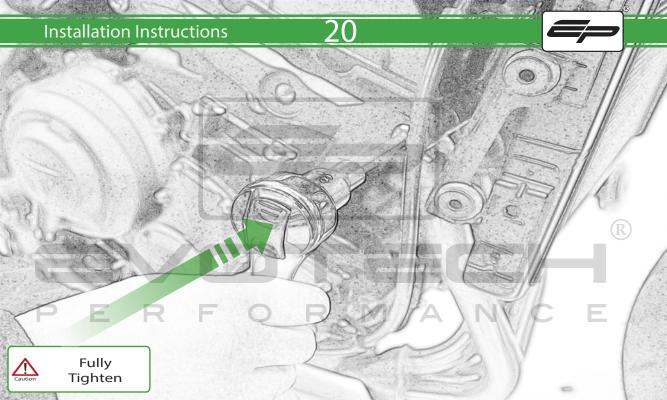


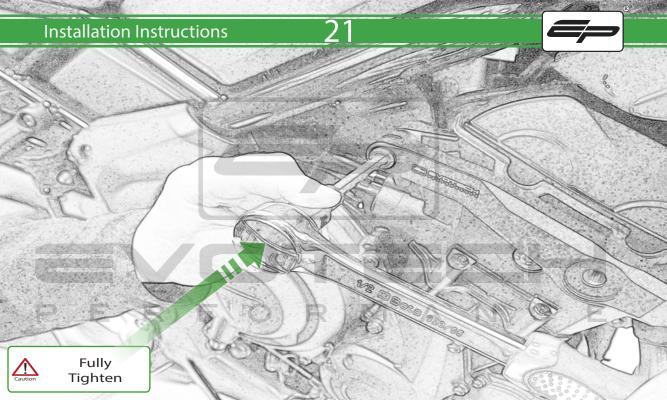

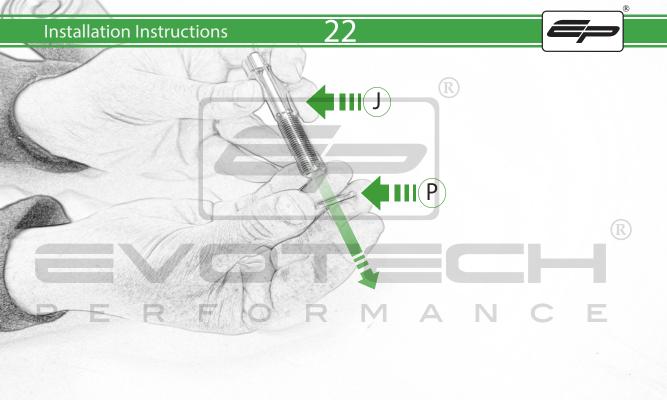



PERFORMANCE




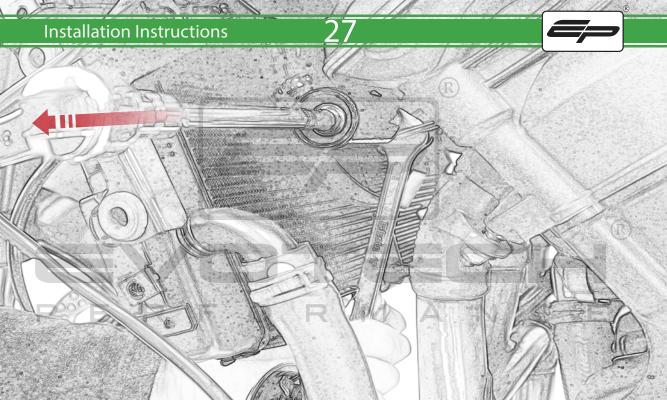





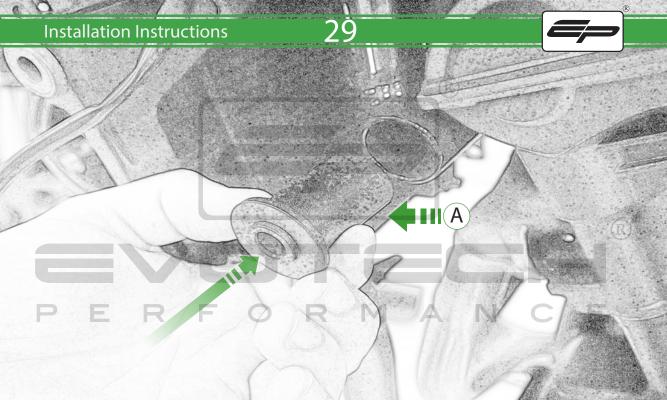


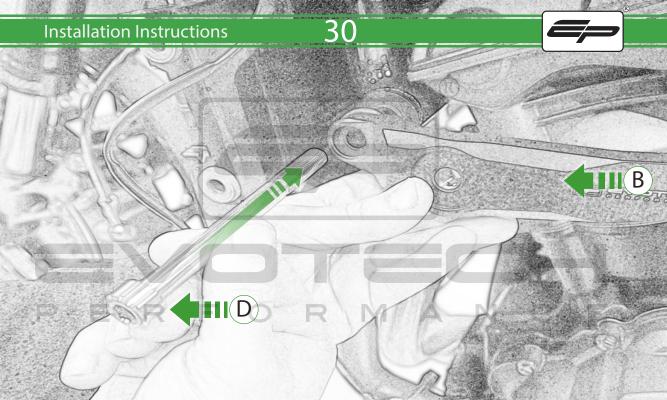

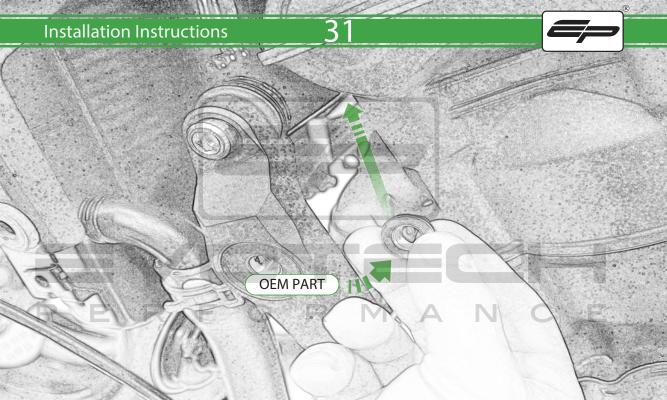

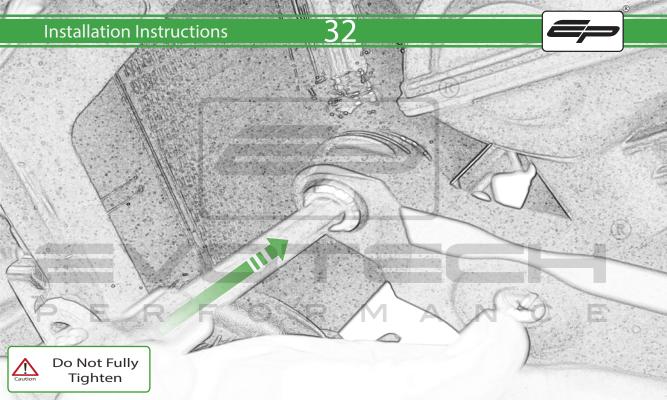

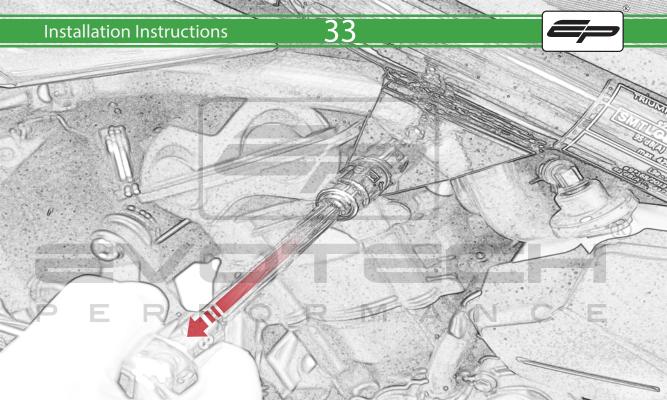

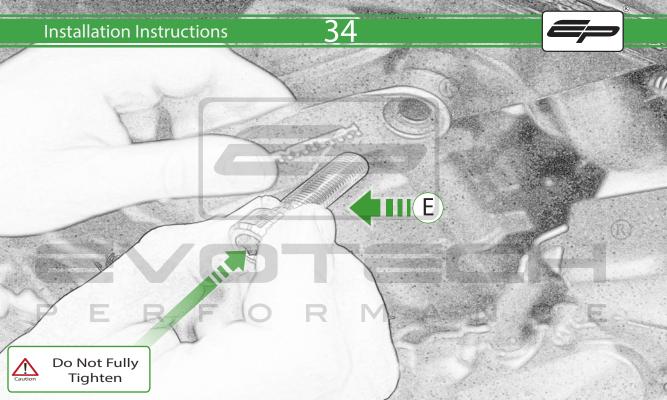







37



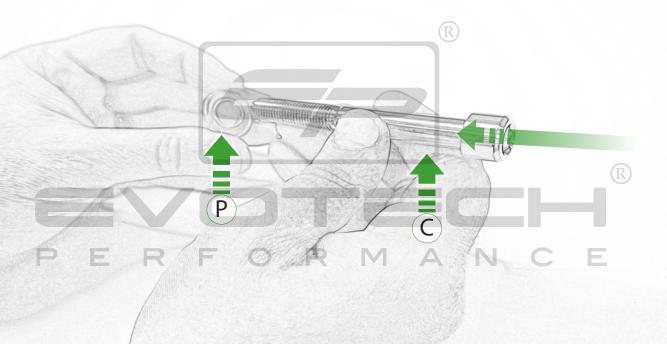



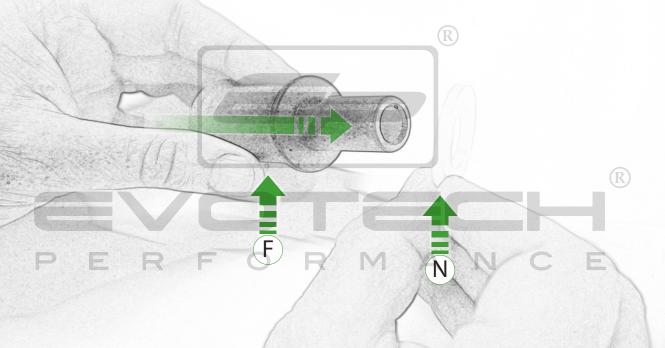


39







40



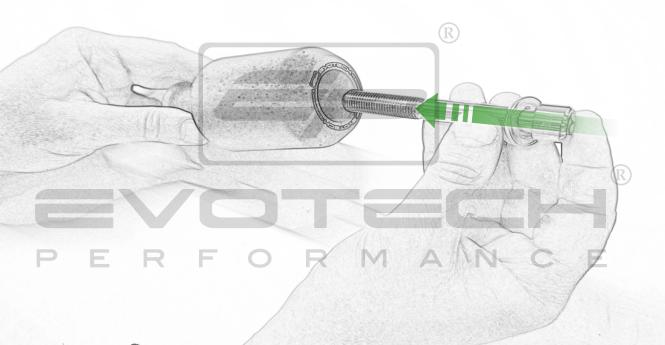

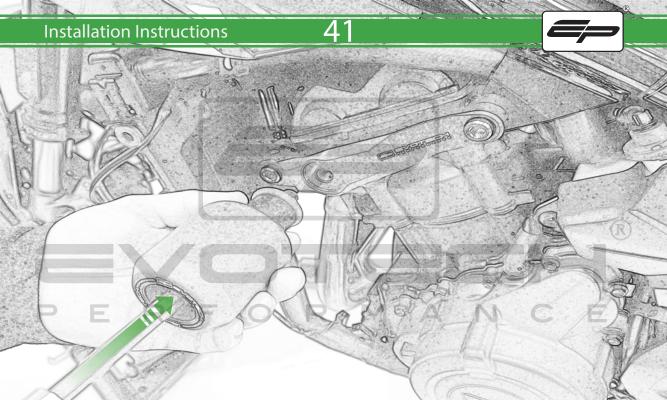

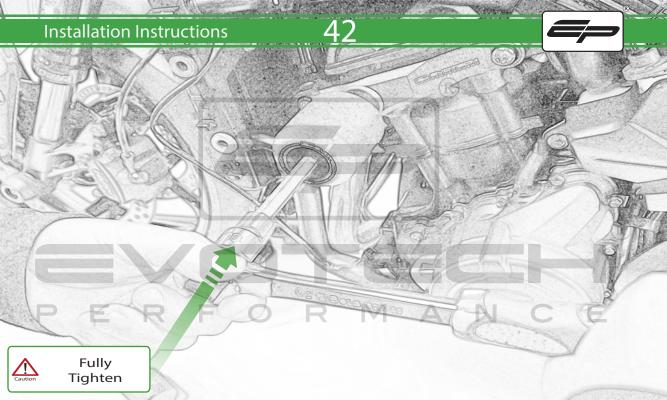









ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



www.evotech-performance.com