



EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com


Triumph Trident Tail Tidy Installation Instructions




Kit Contents PRN015396


- Ⓐ 1 x BMW Light
- Ⓑ 1 x Connector Type 25
- Ⓒ 1 x Connector Type 23
- Ⓓ 1 x M8 x 20mm Button Head Bolts
- Ⓔ 1 x M5 x 16mm Button Head Bolts
- Ⓕ 1 x M5 Washer
- Ⓖ 1 x Back Spacer
- Ⓗ 1 x Front Spacer
- Ⓘ 1 x Support Bracket
- Ⓙ 1 x Number Plate Bracket
- Ⓚ 1 x Main Right Body
- Ⓛ 1 x Main Left Body
- Ⓜ 4 x M6 Flange Nut
- Ⓝ 6 x M6 x 16 Button Head Bolts


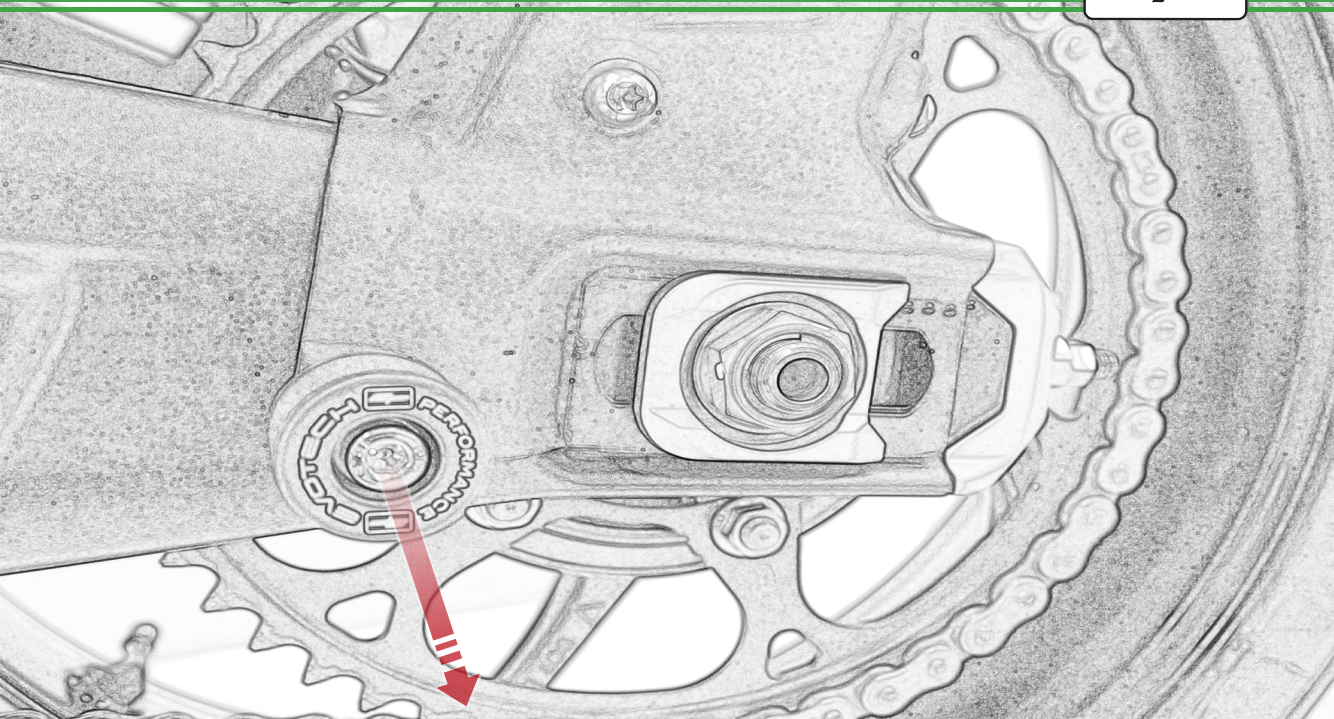



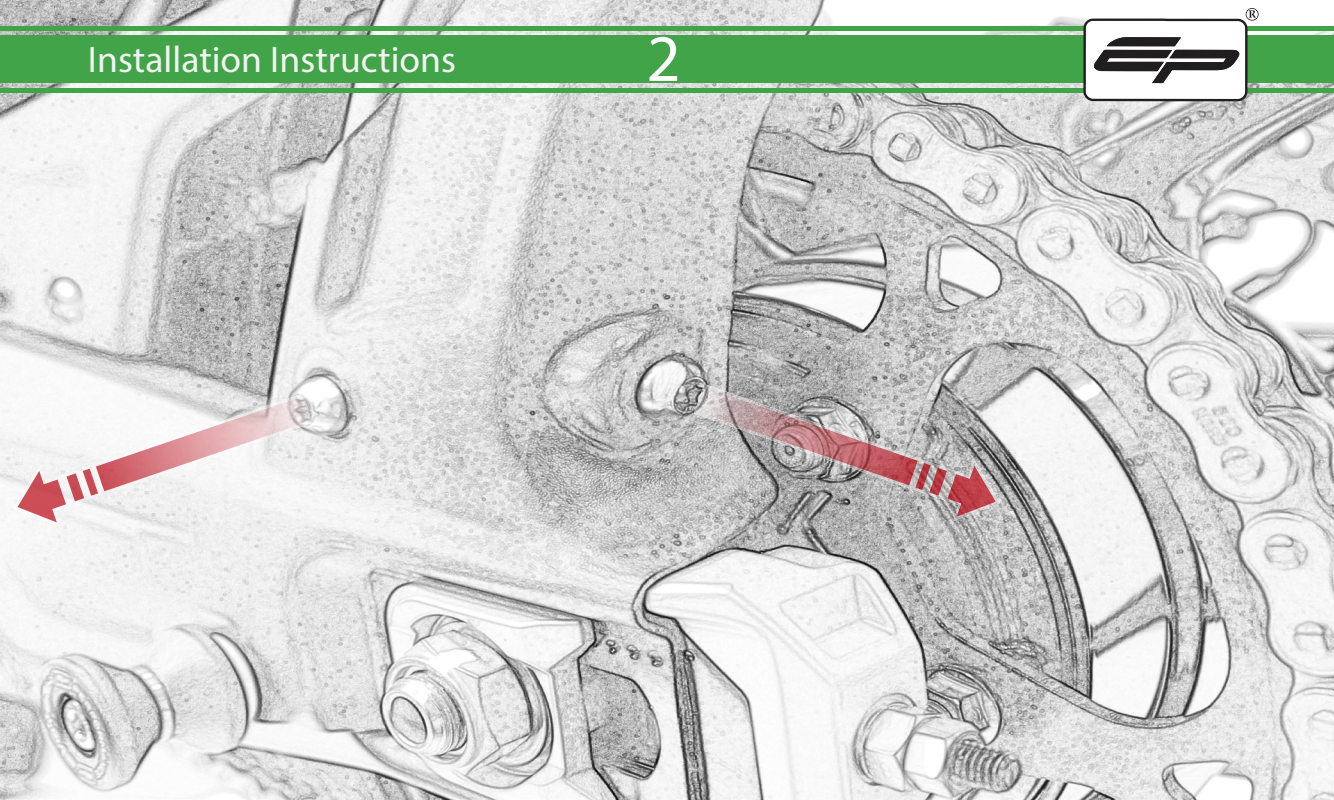





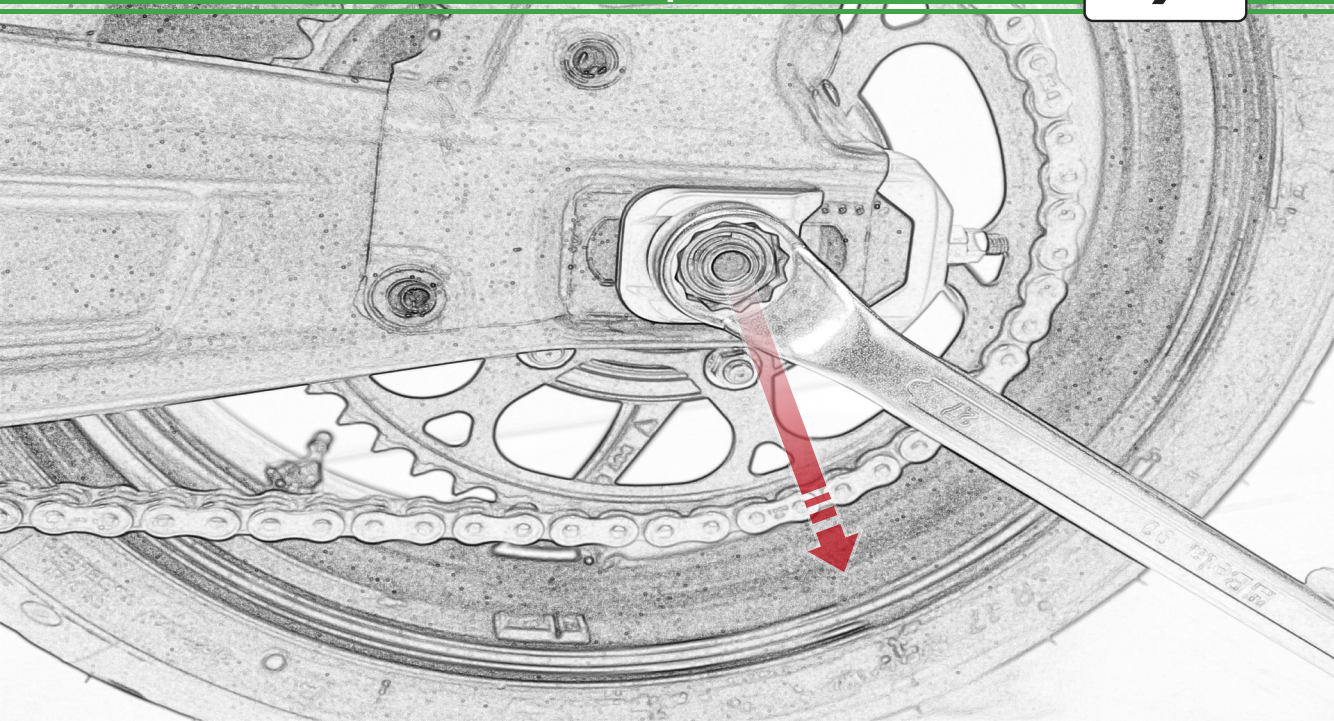


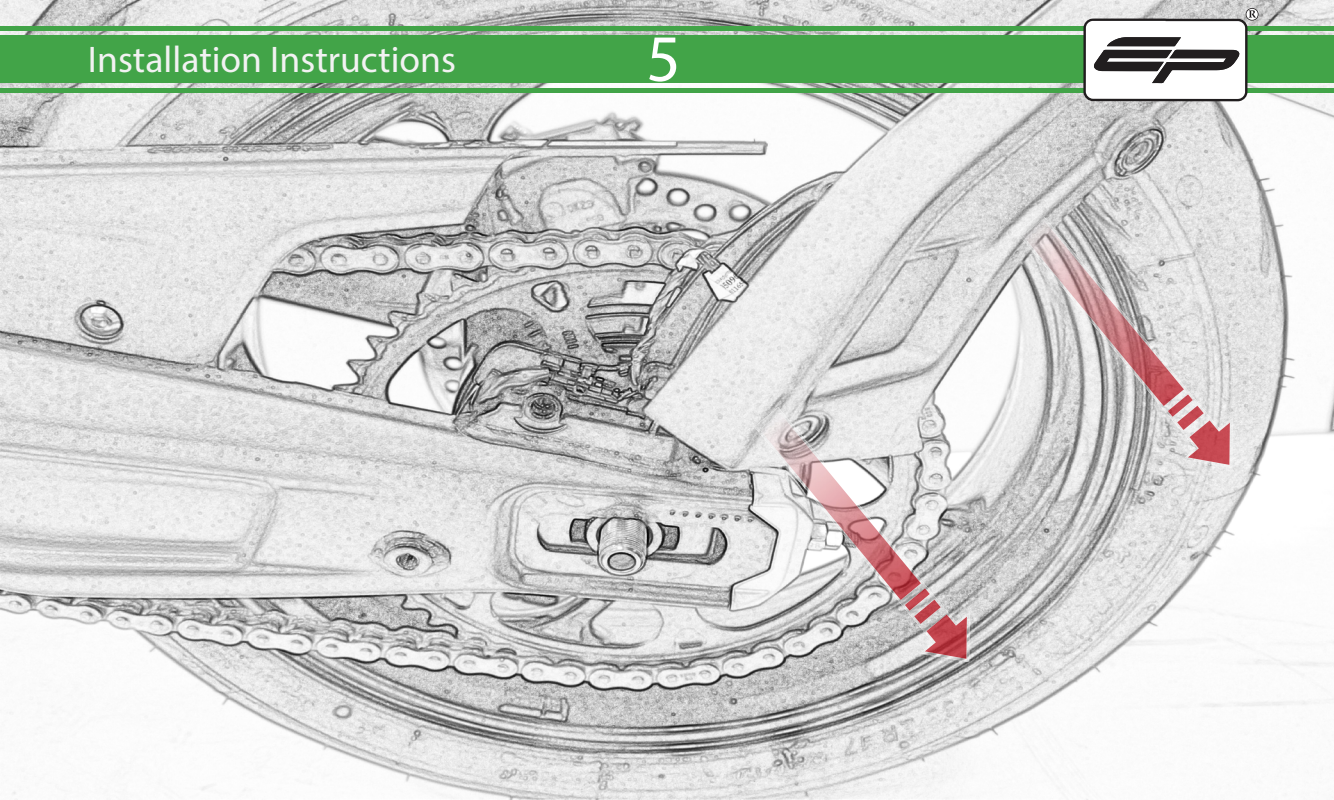


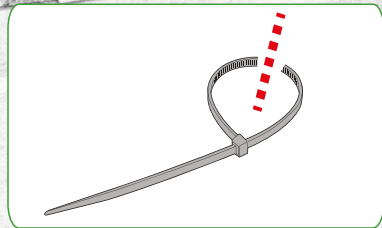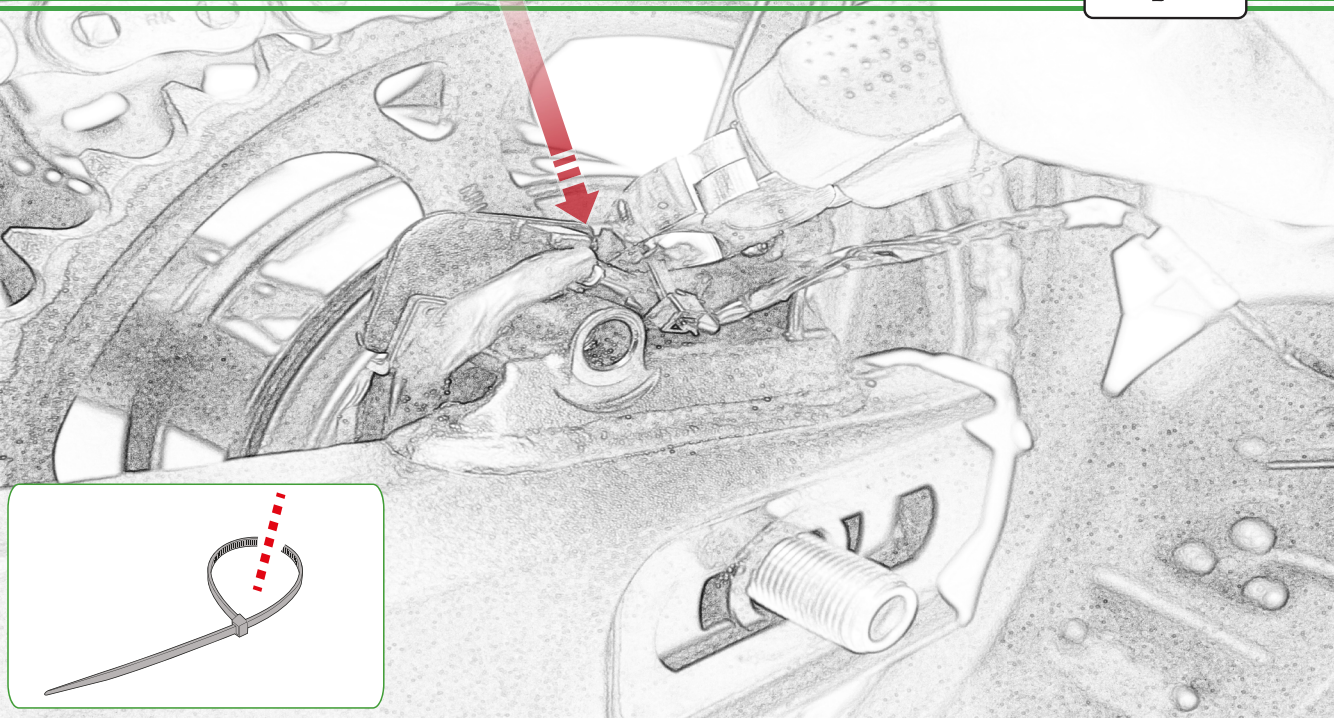


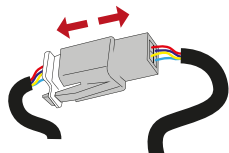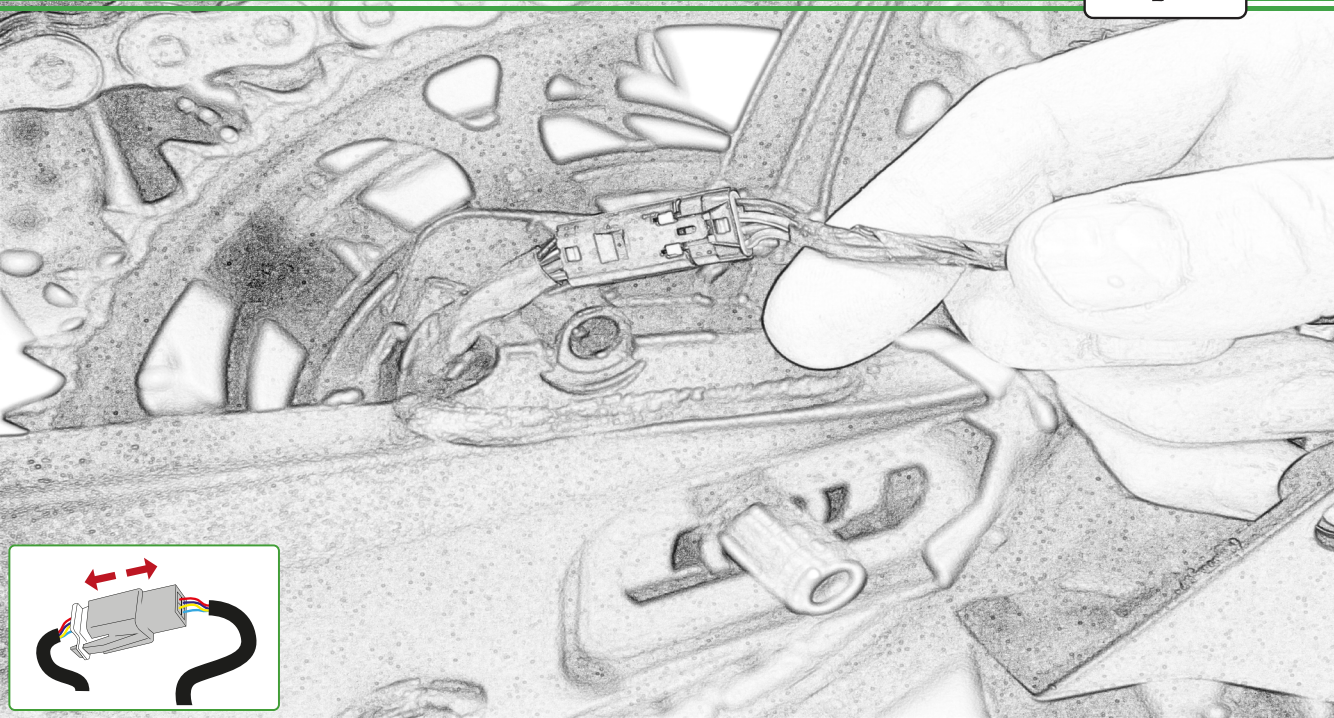


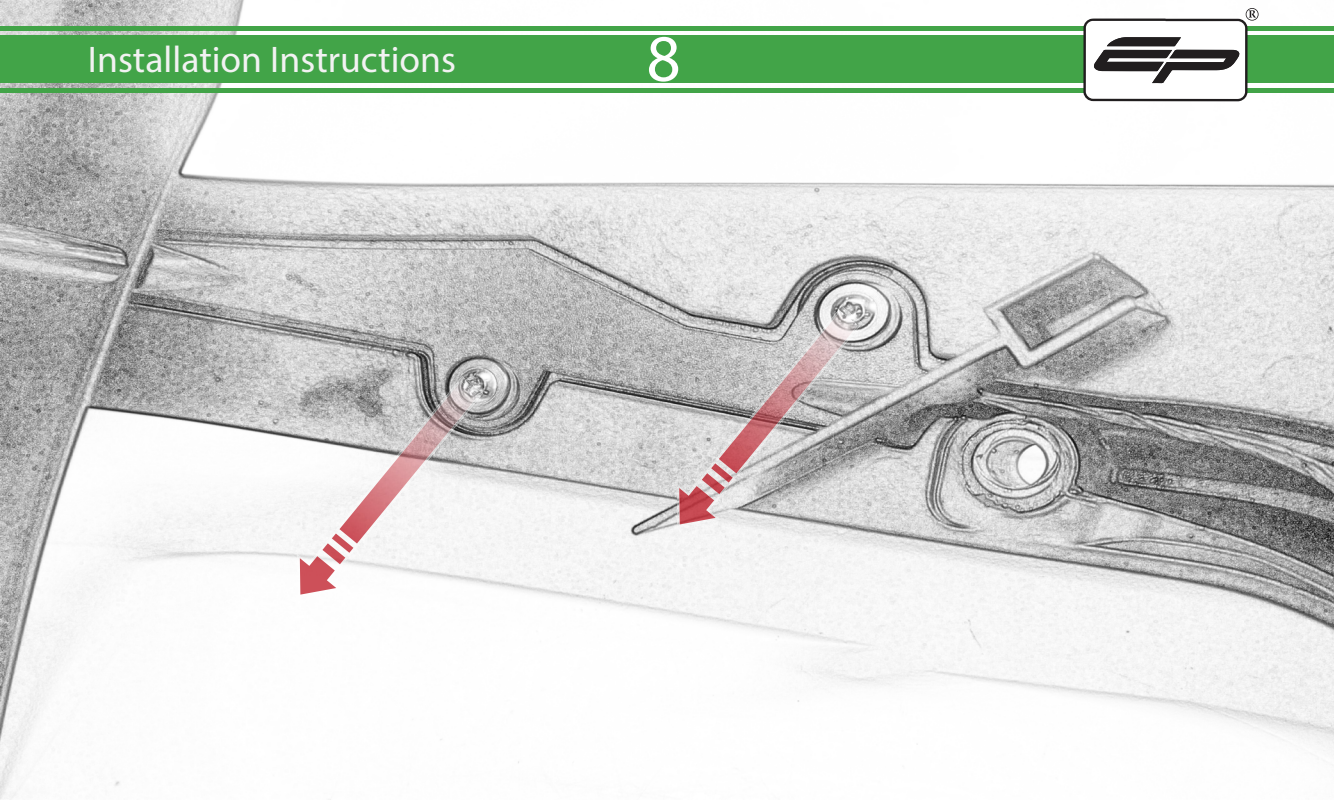


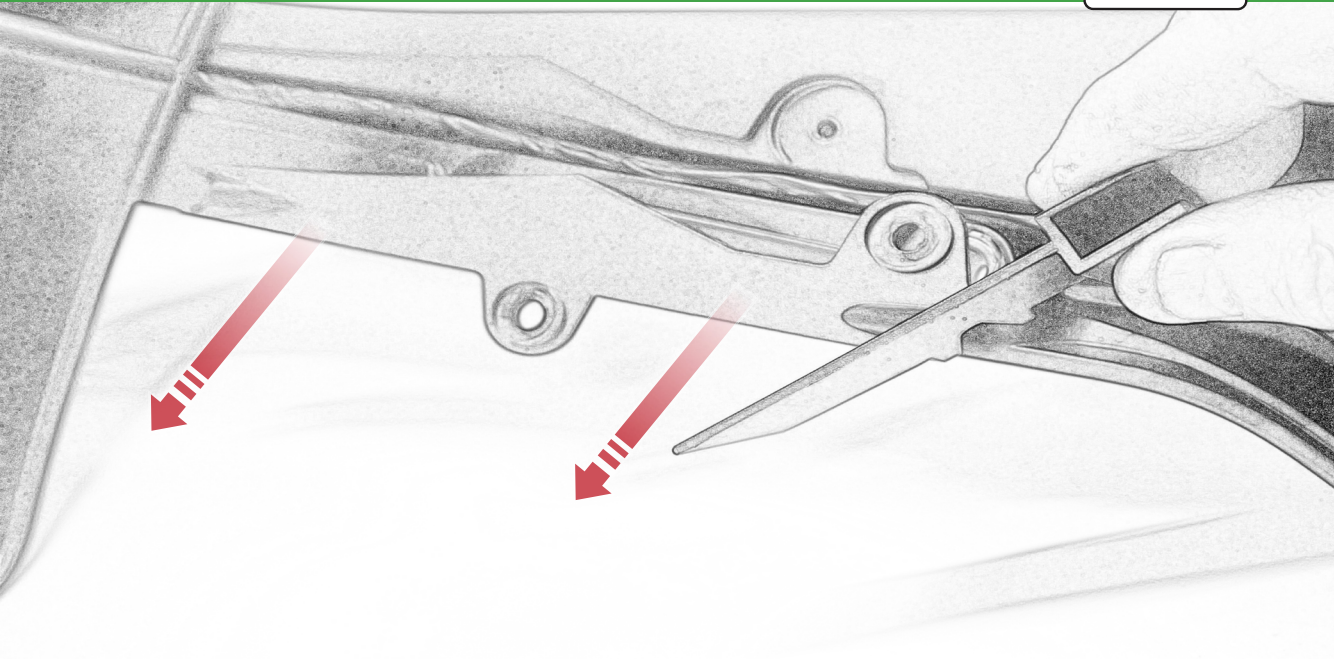


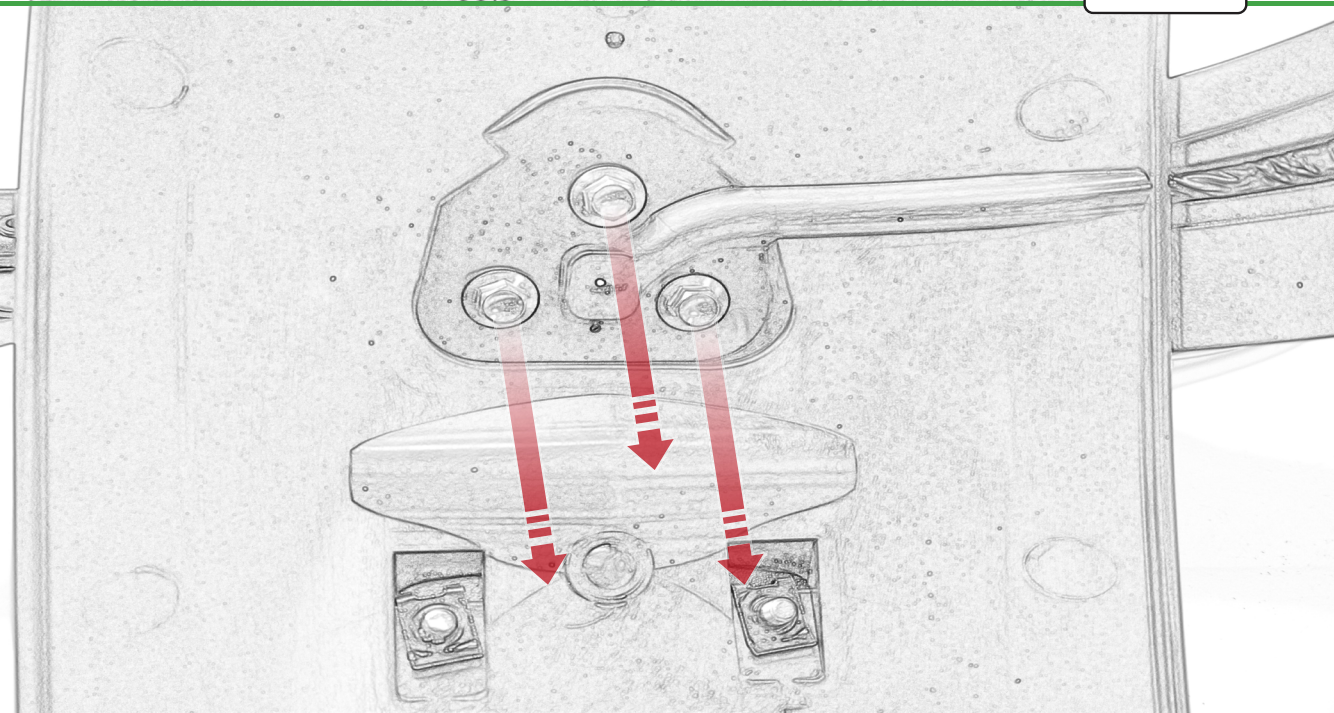

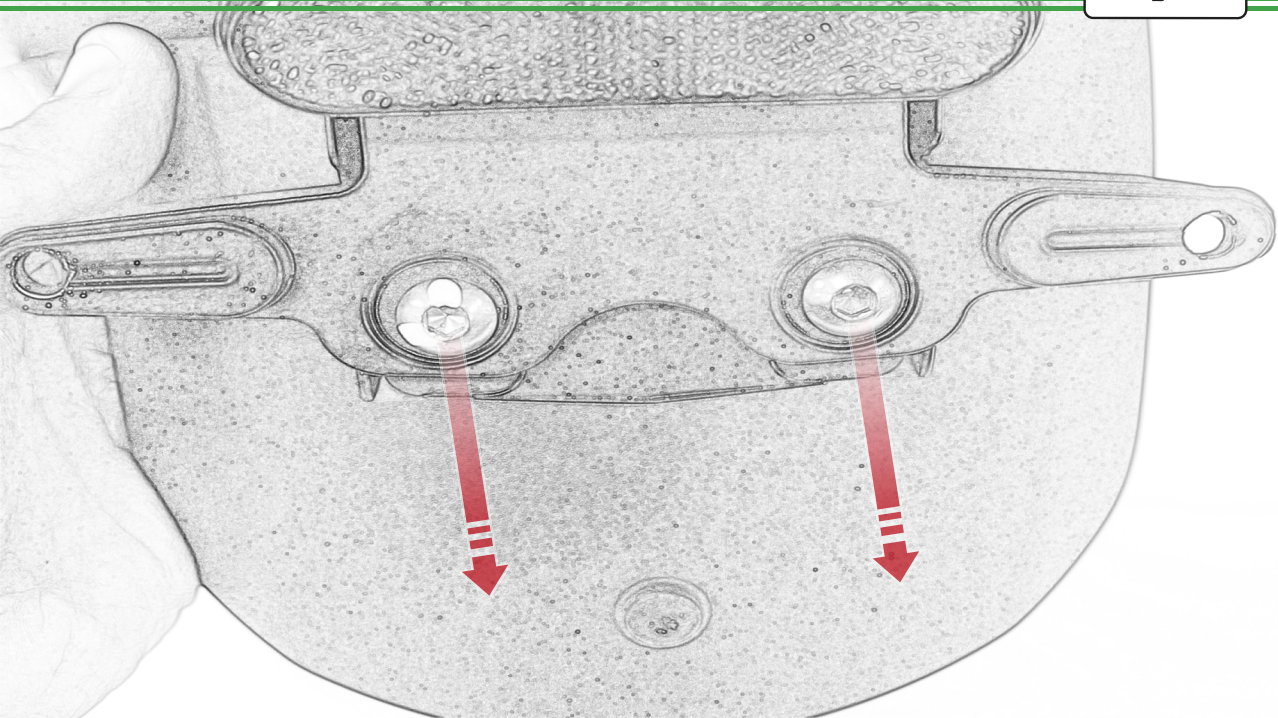


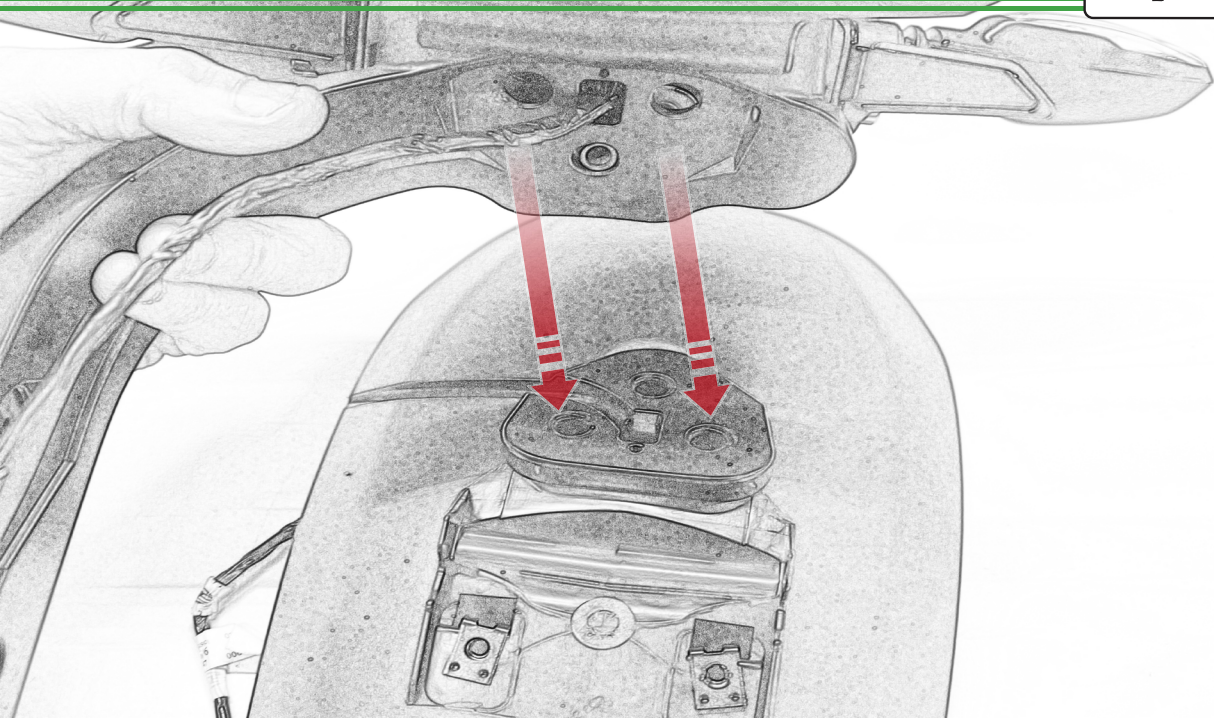


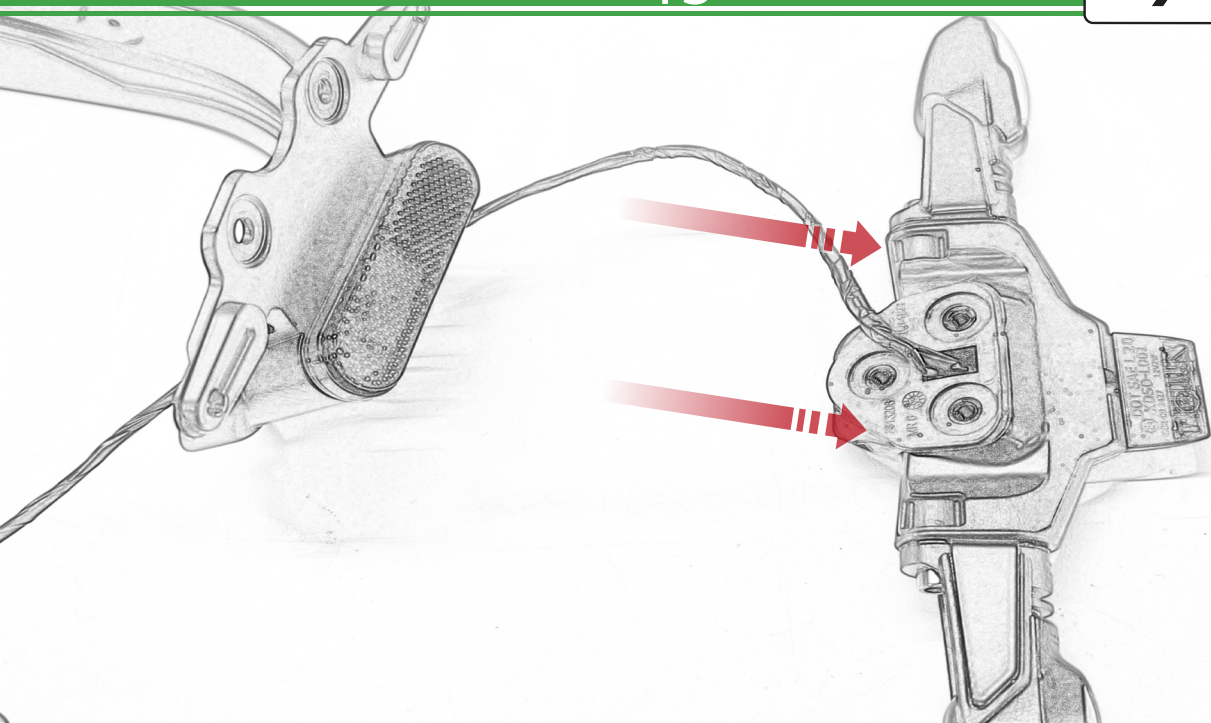


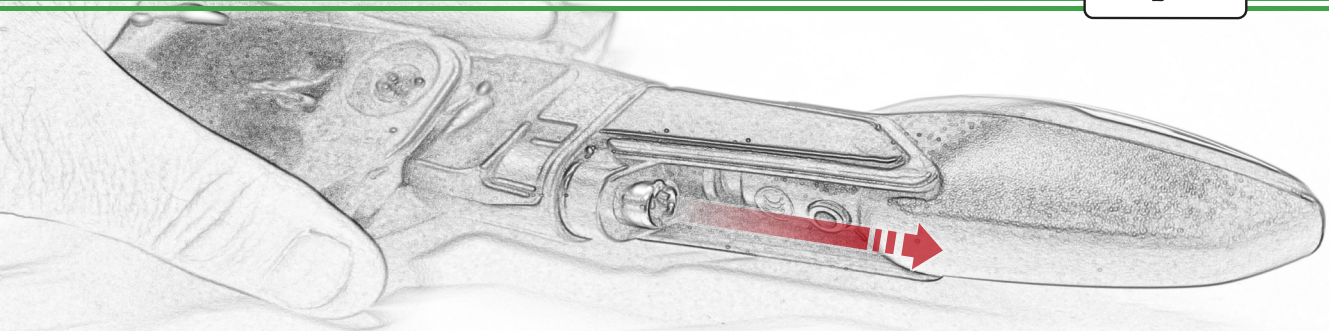


Repeat
Both Sides

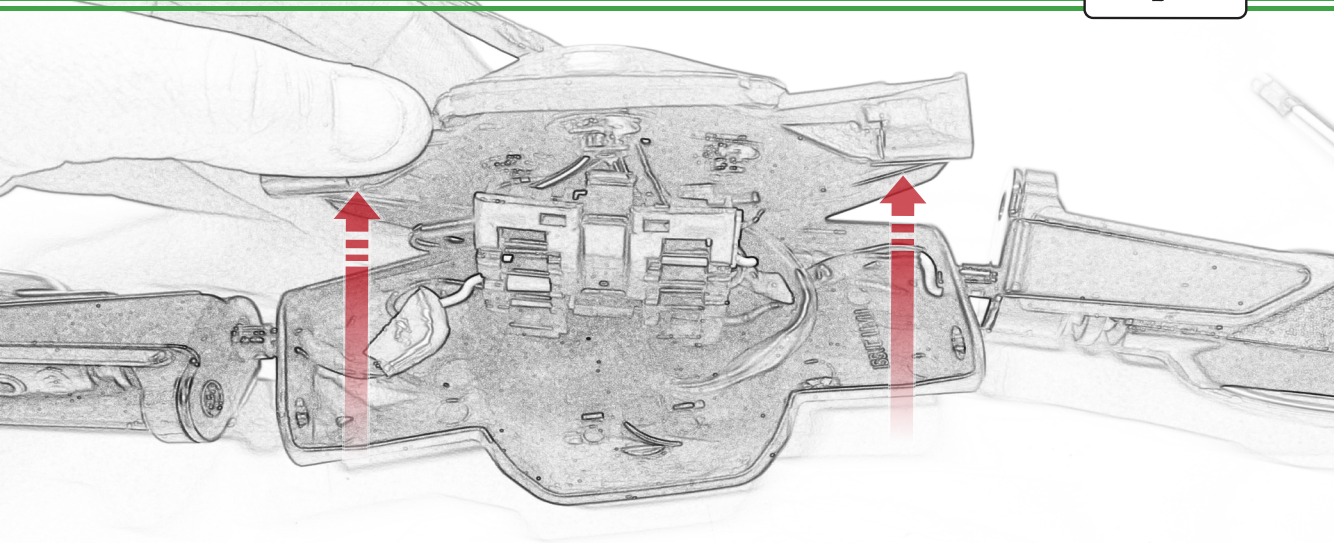


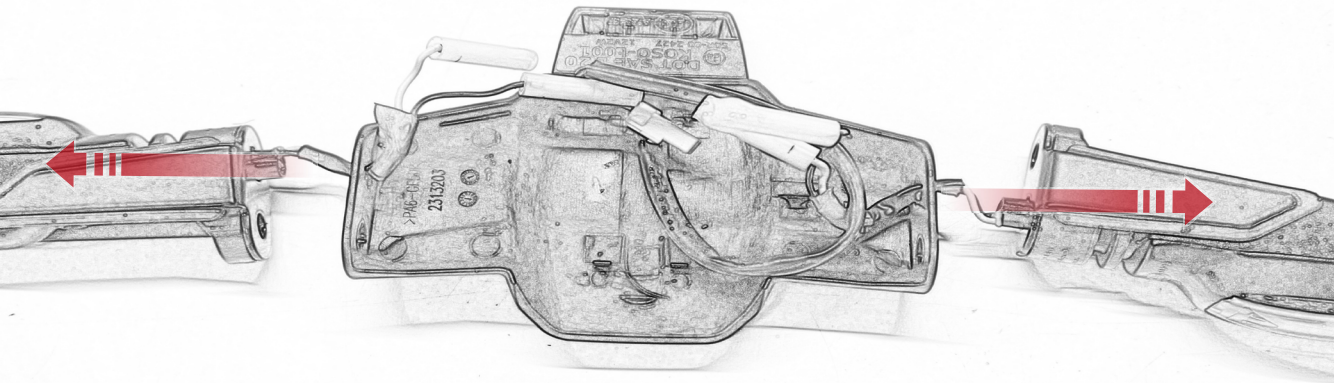


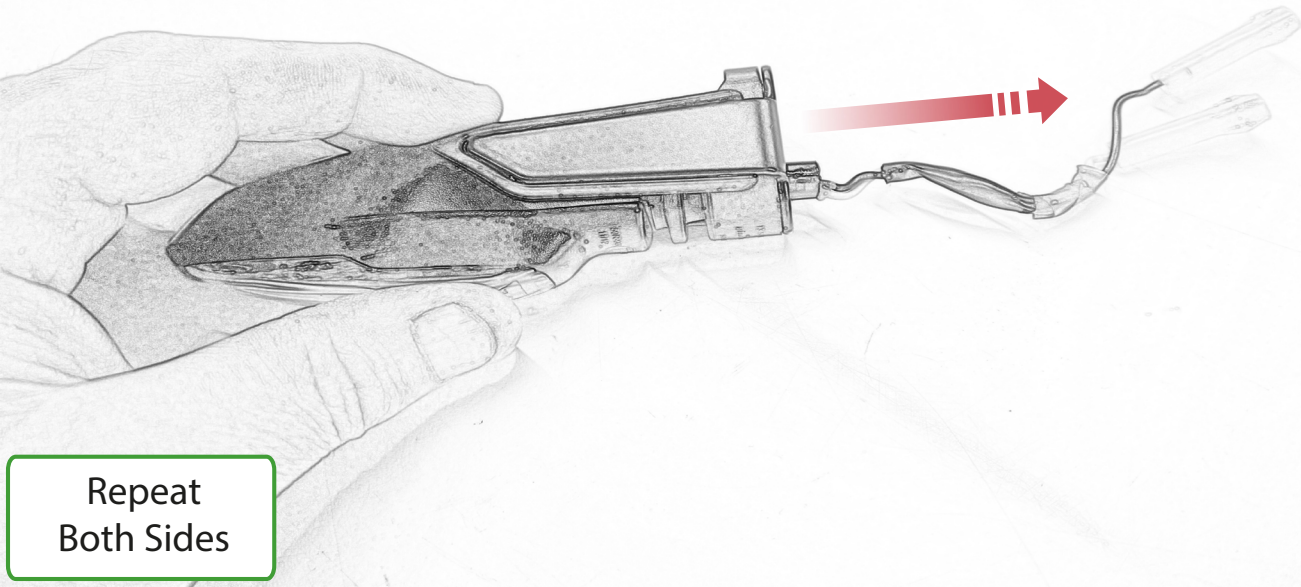



Repeat
Both Sides

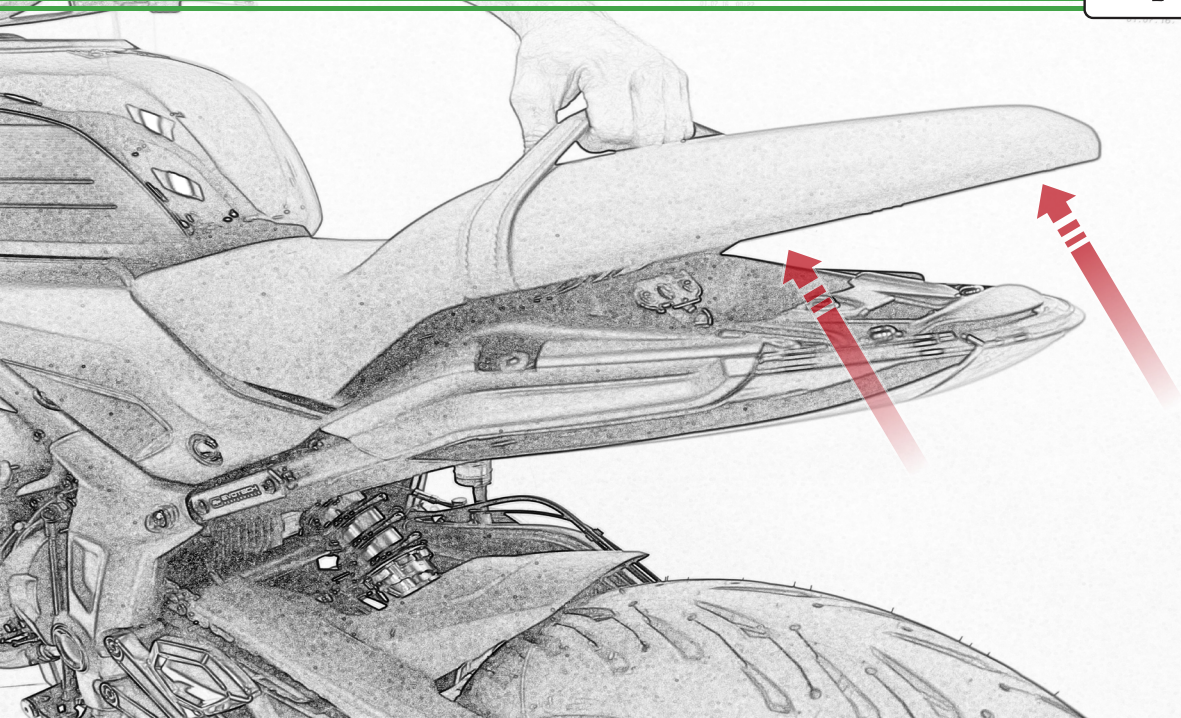


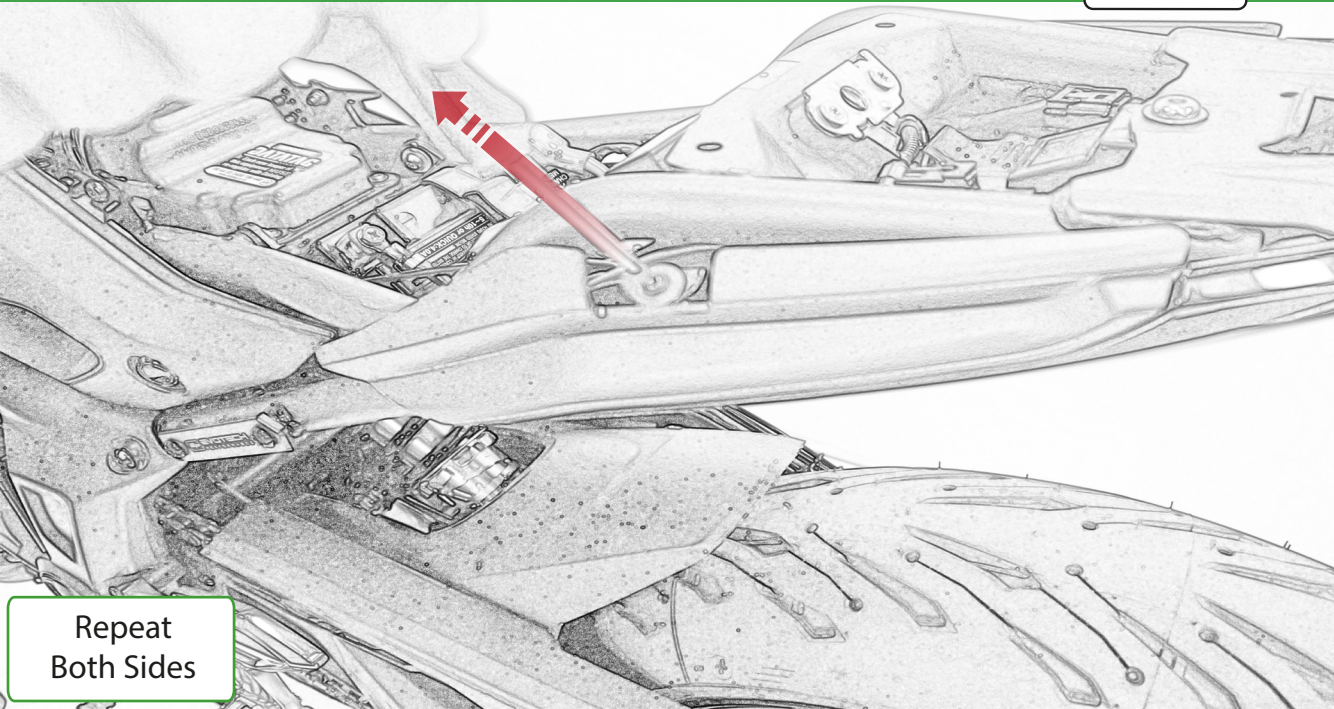


Repeat
Both Sides

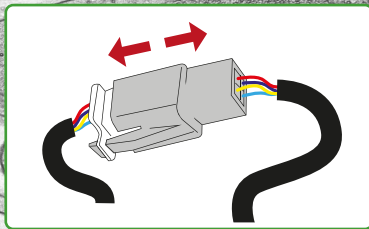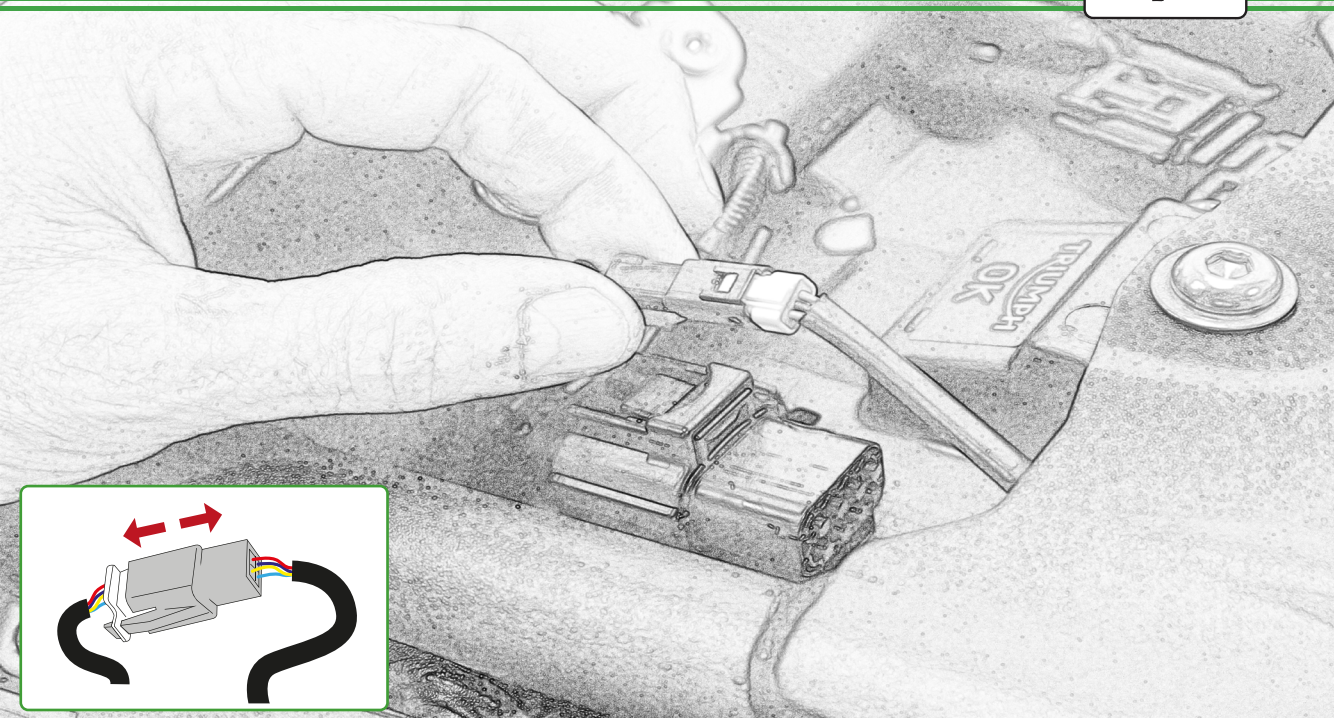

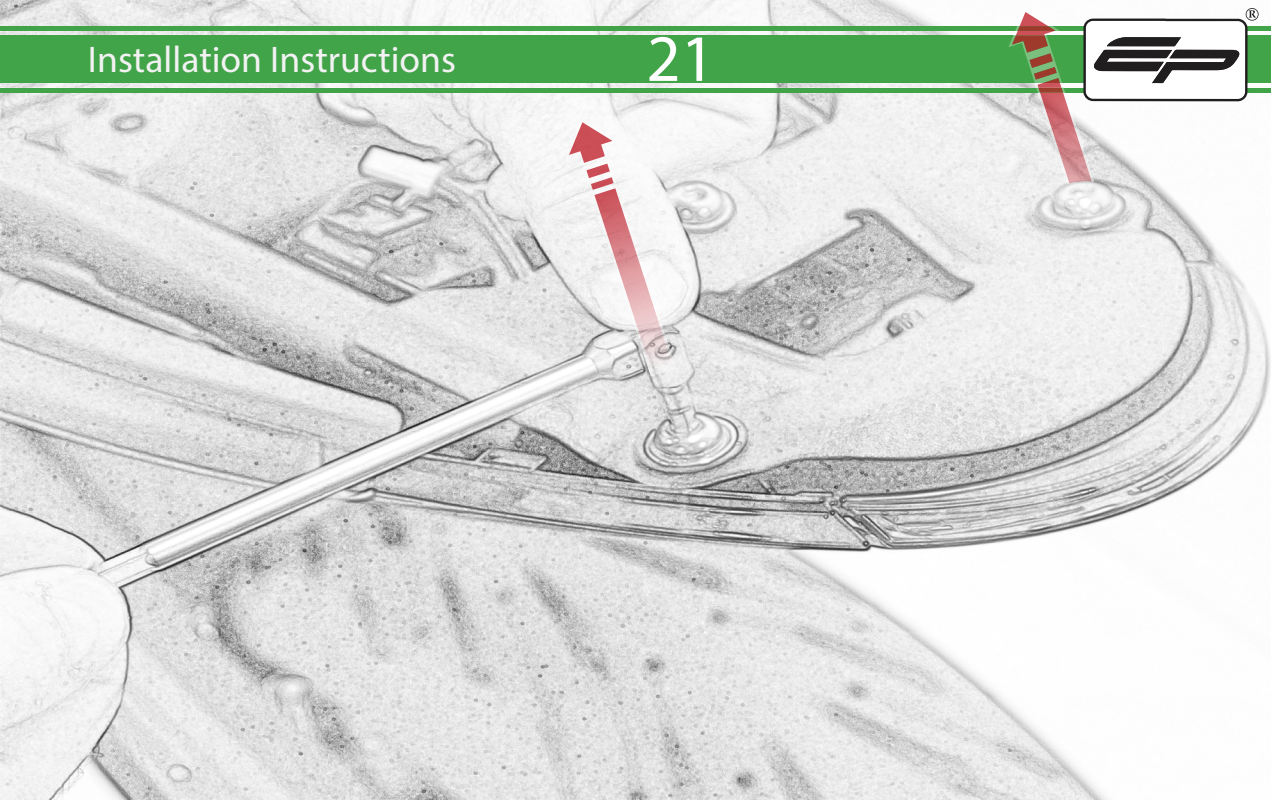


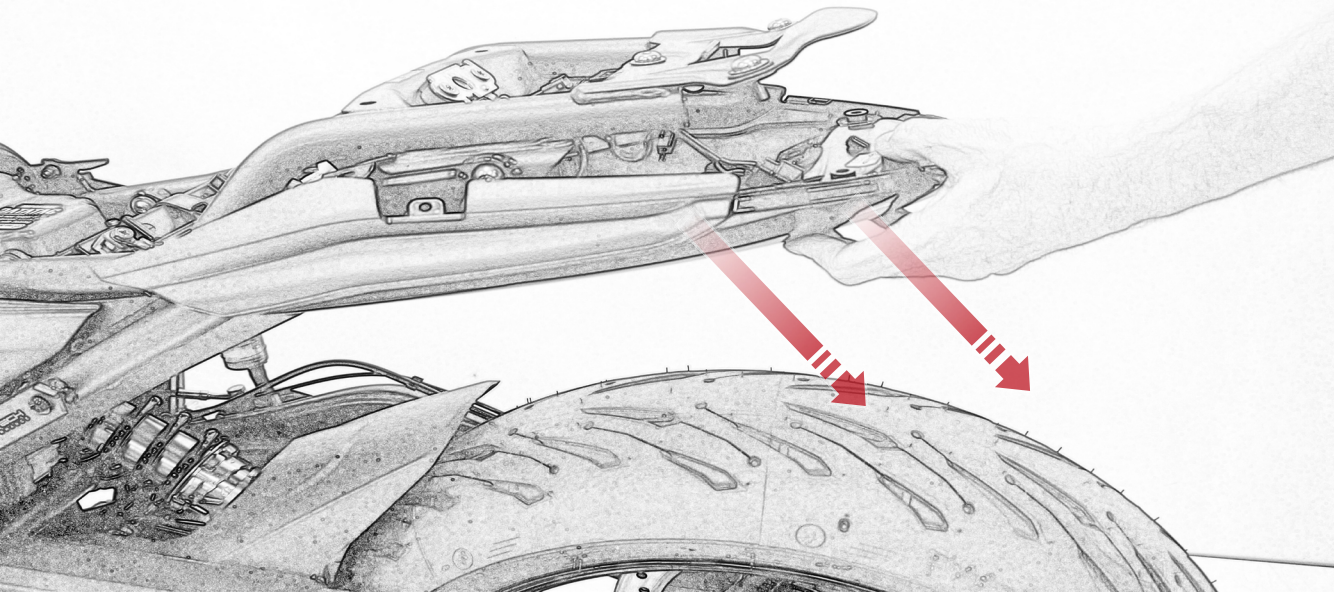


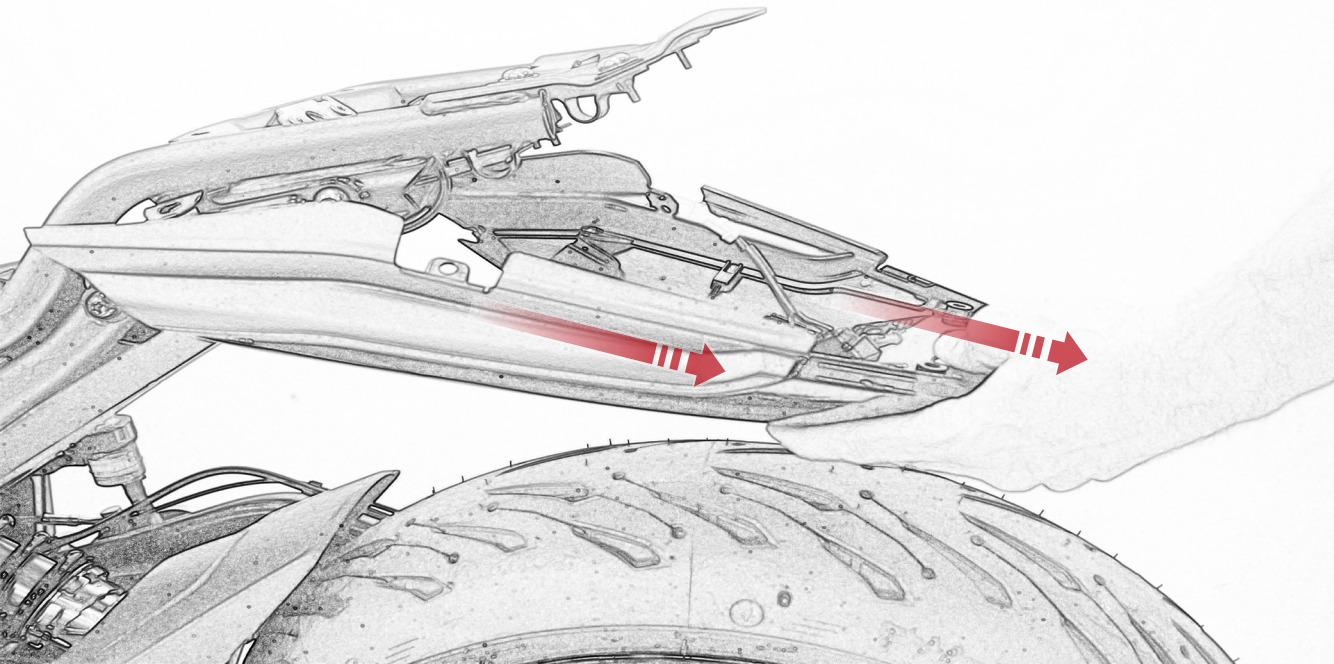





Release
Tab

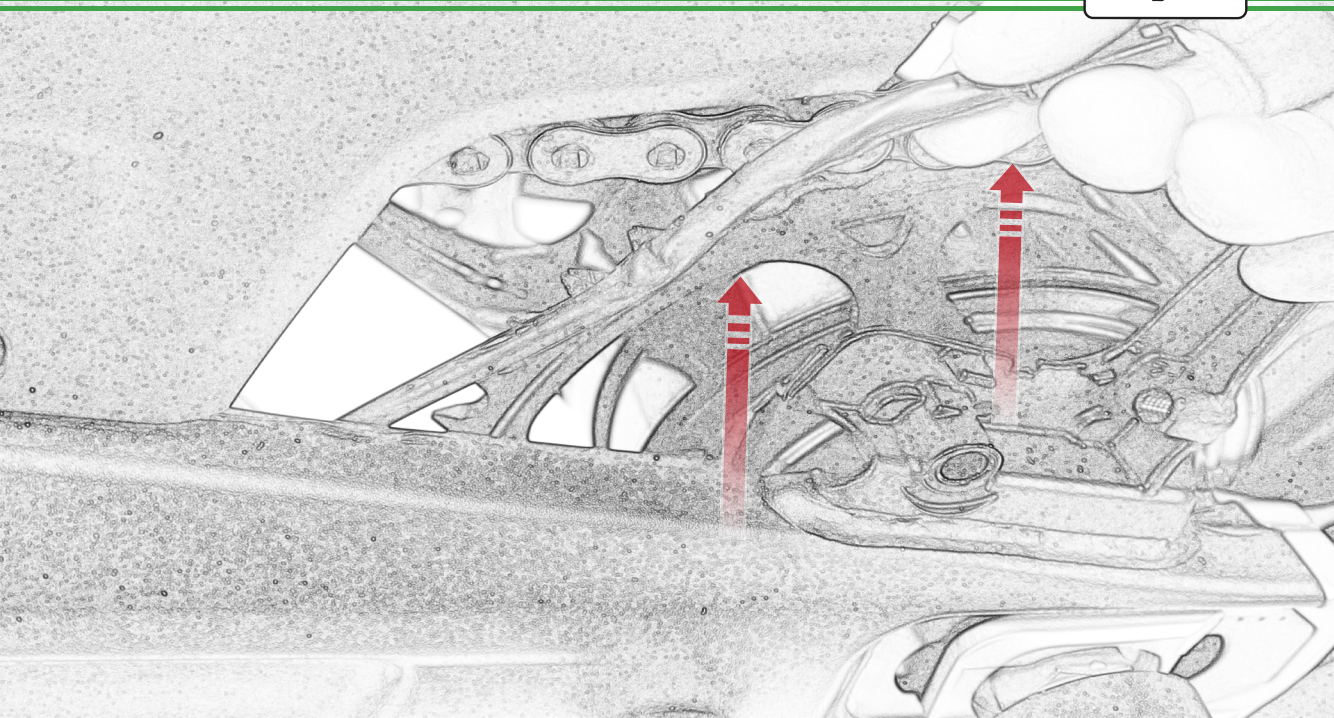


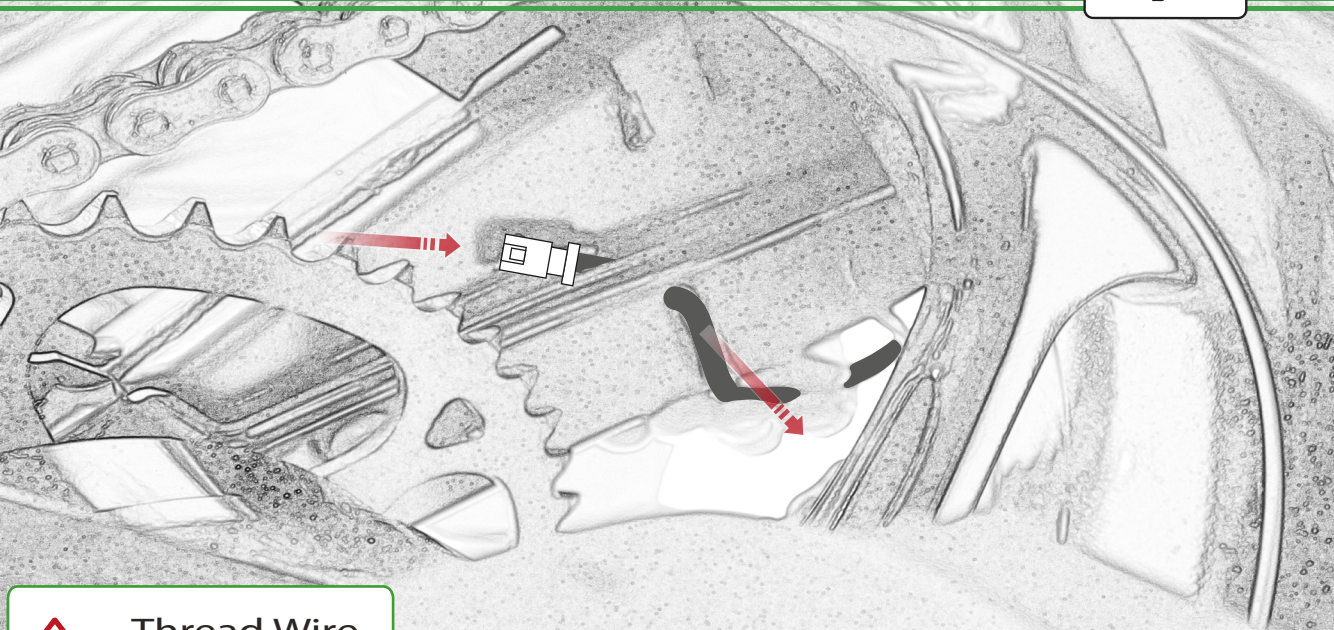



**Thread Wire
Behind Cover**


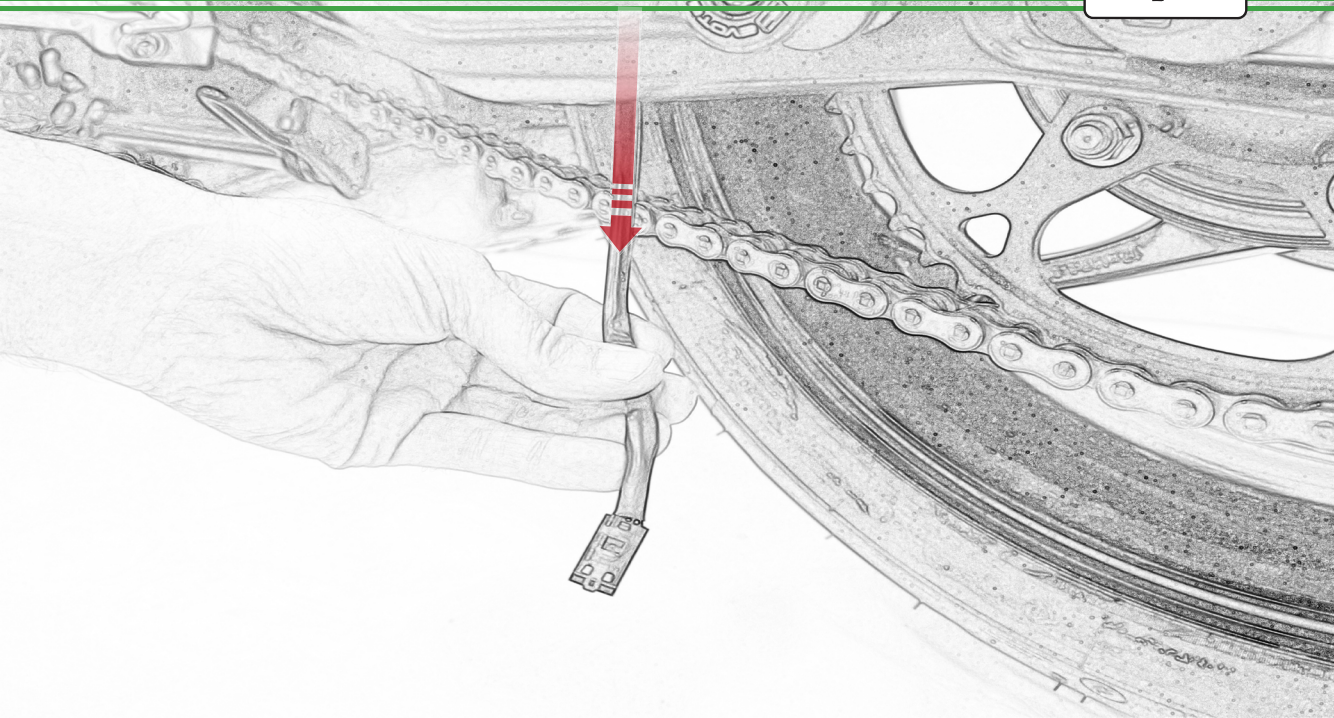



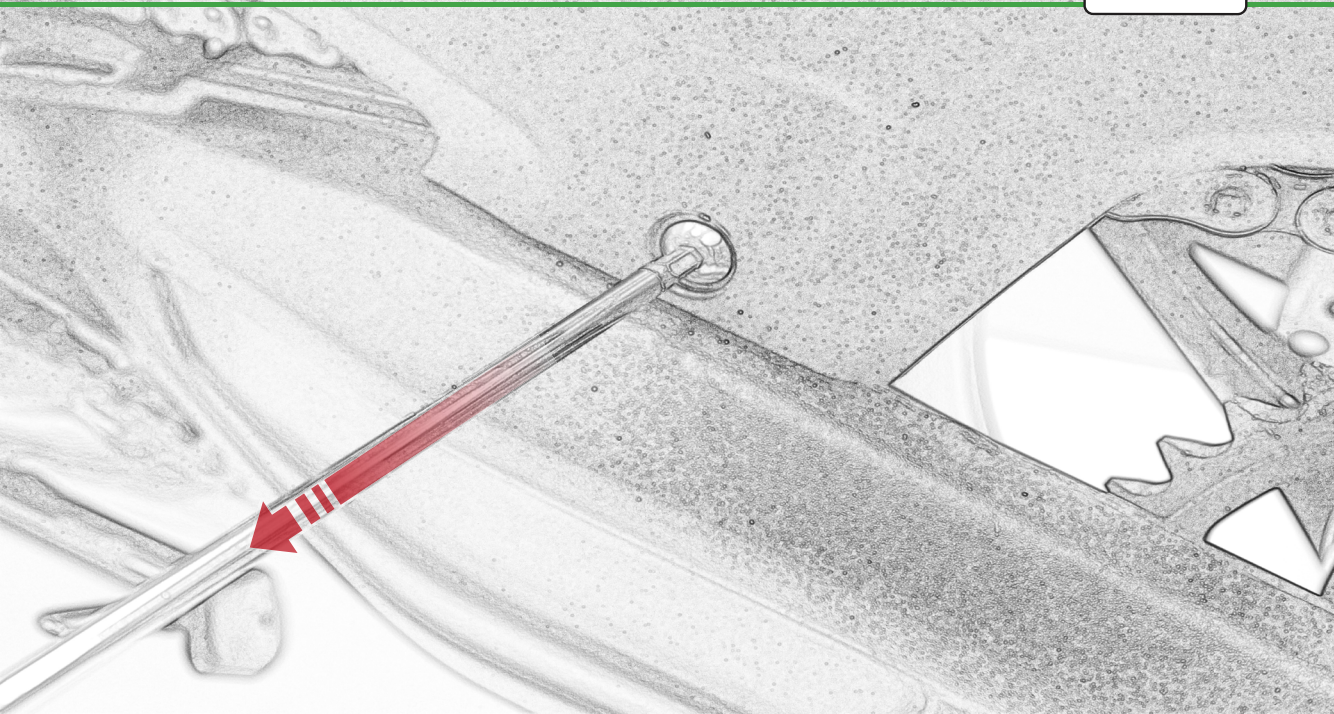



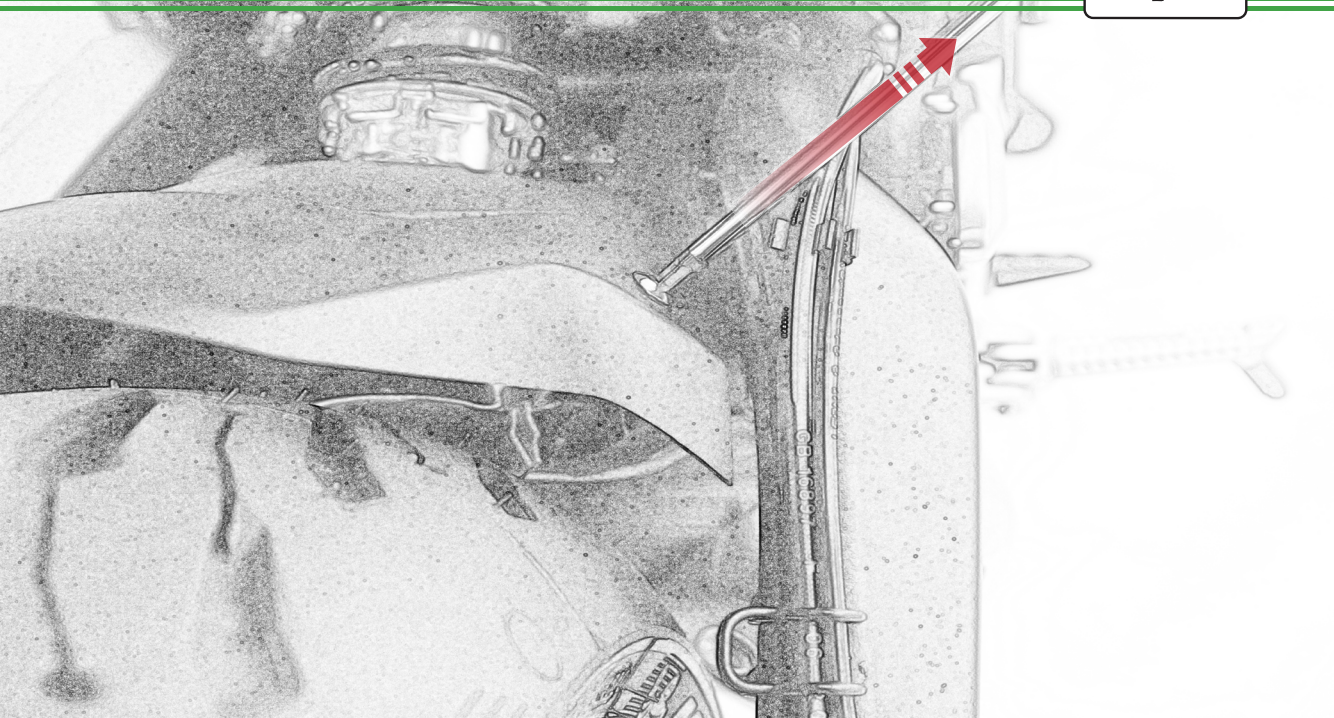


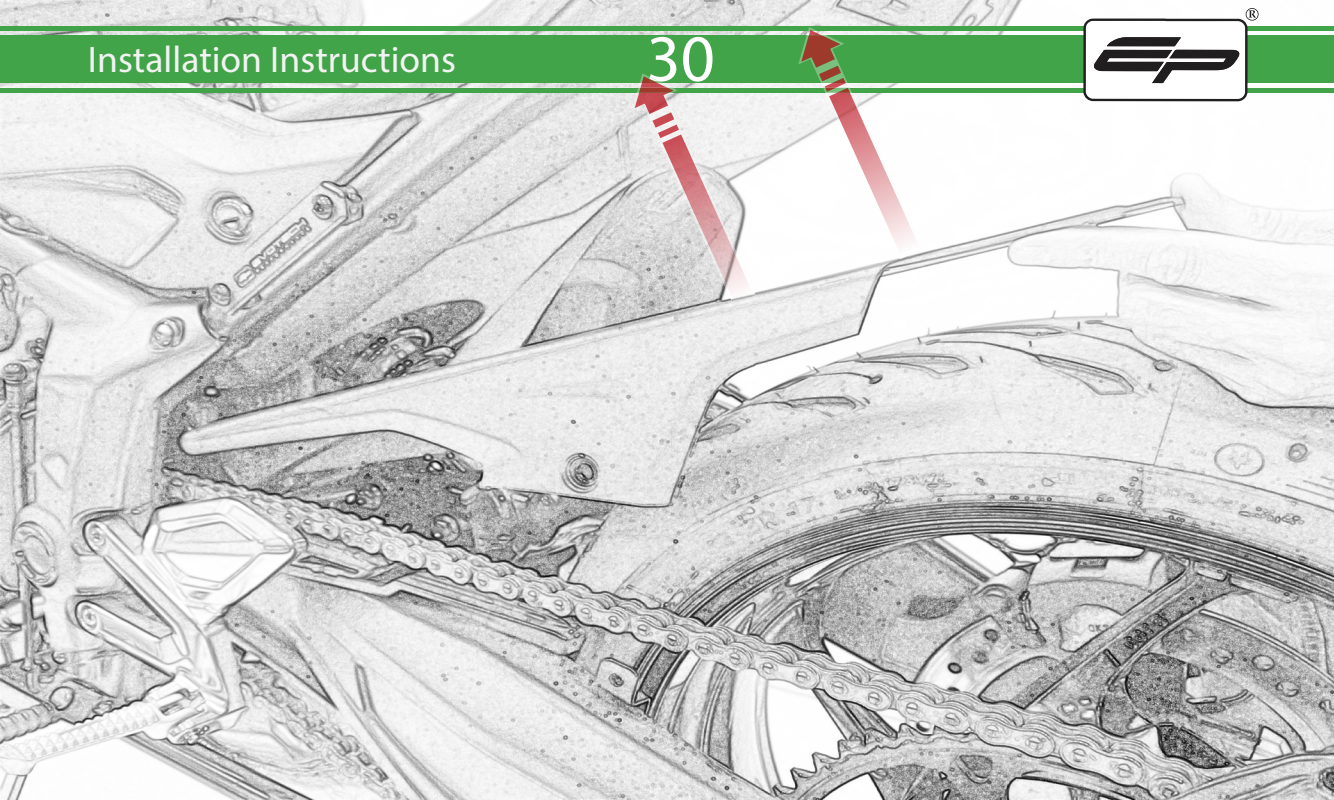


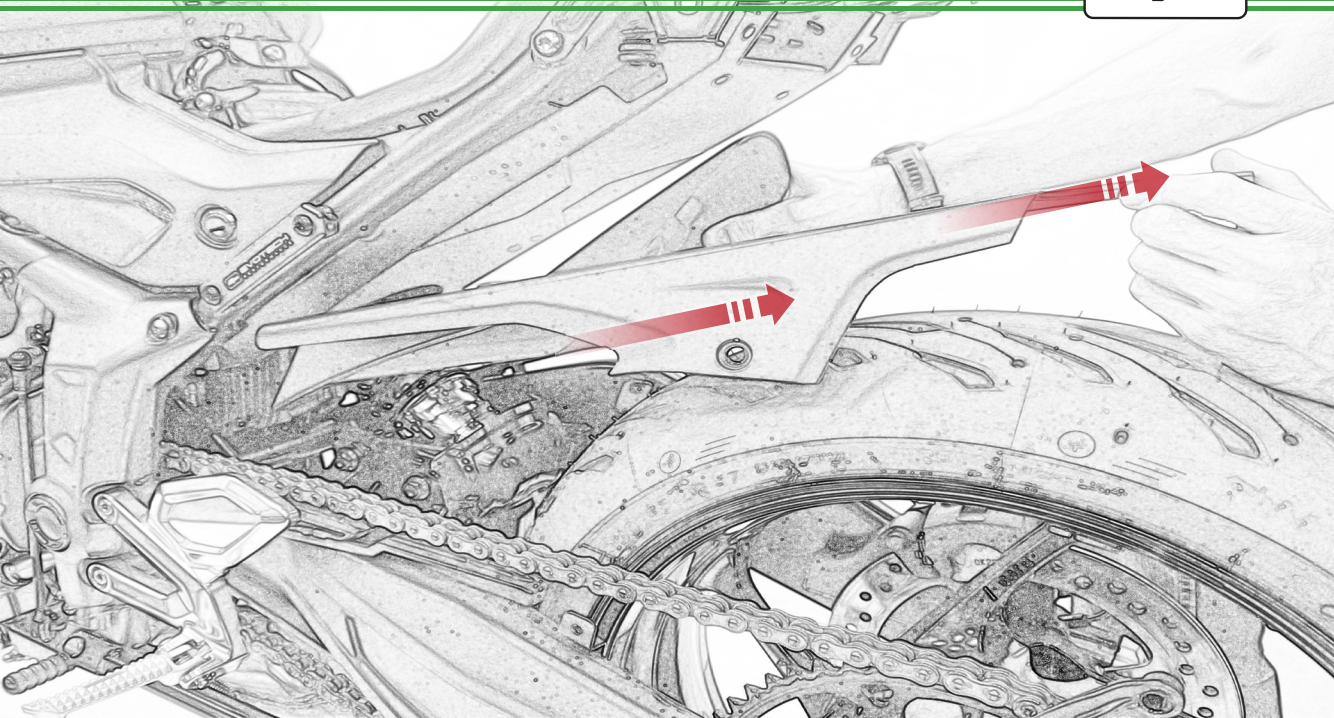

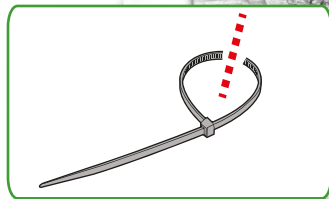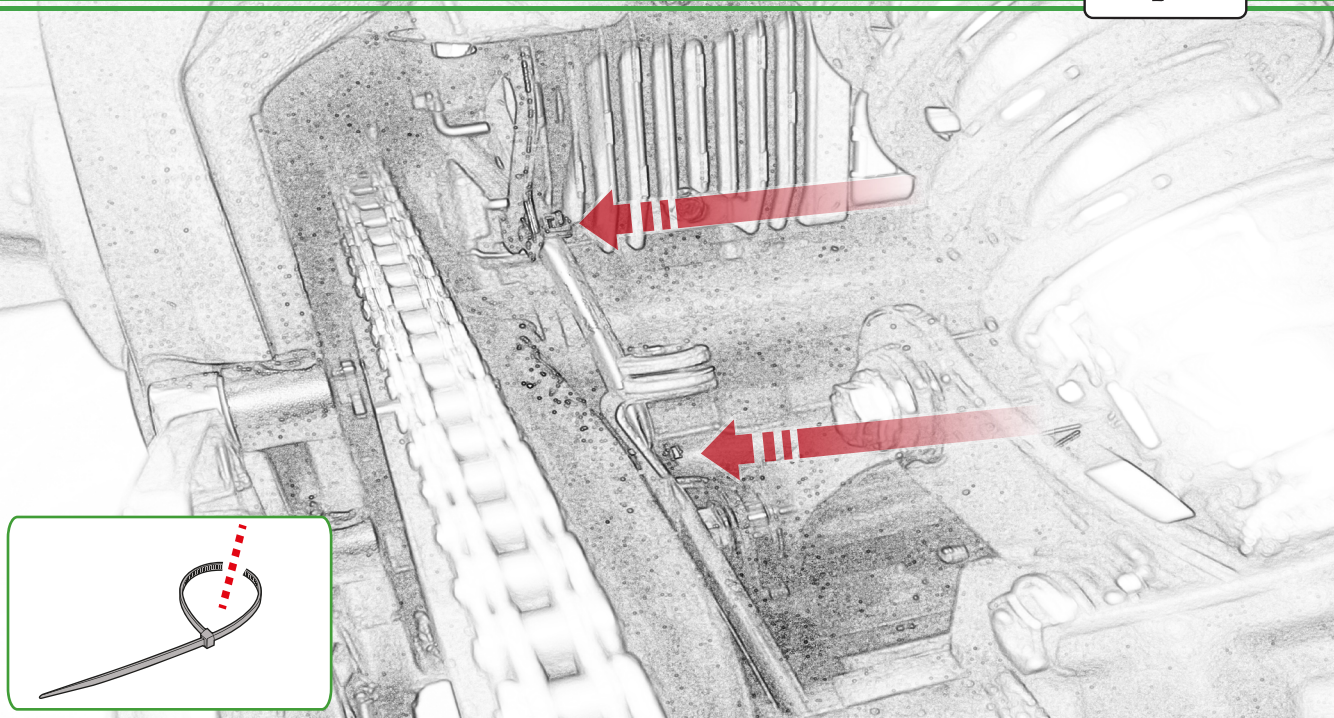


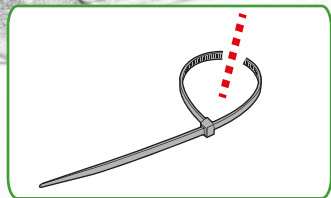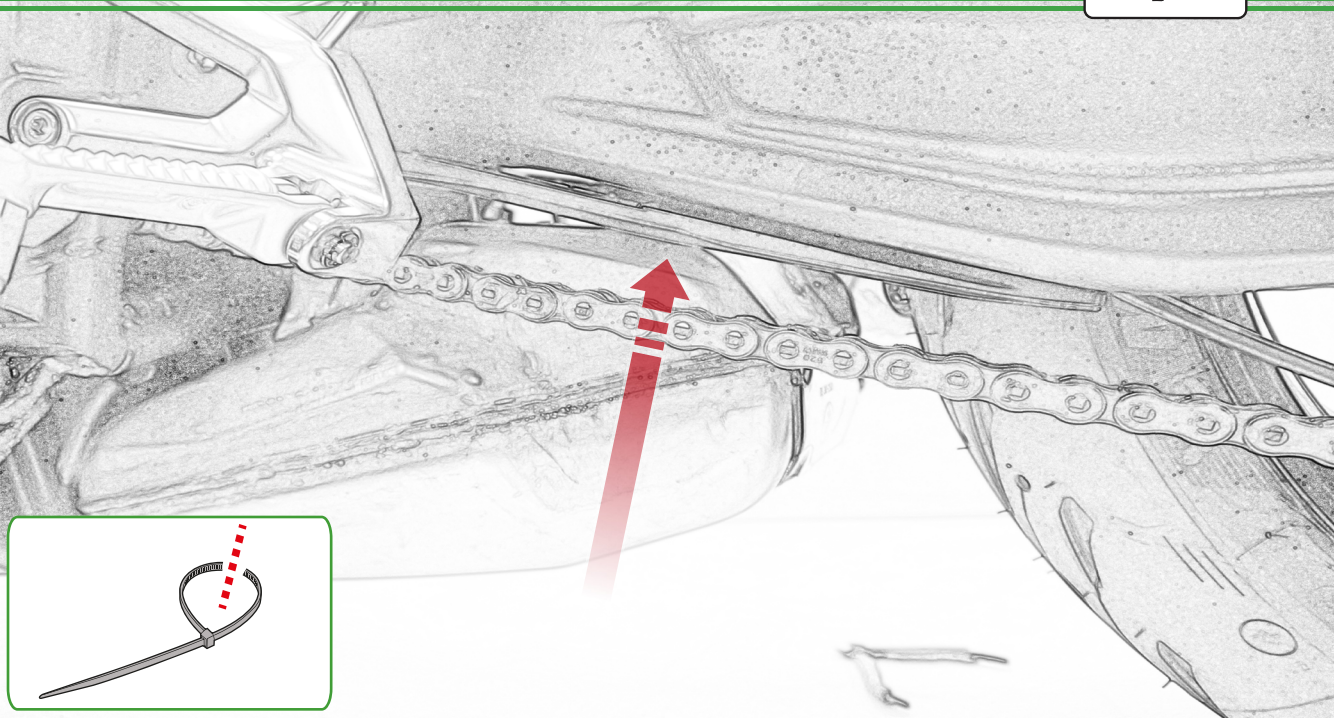


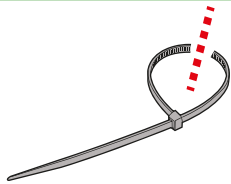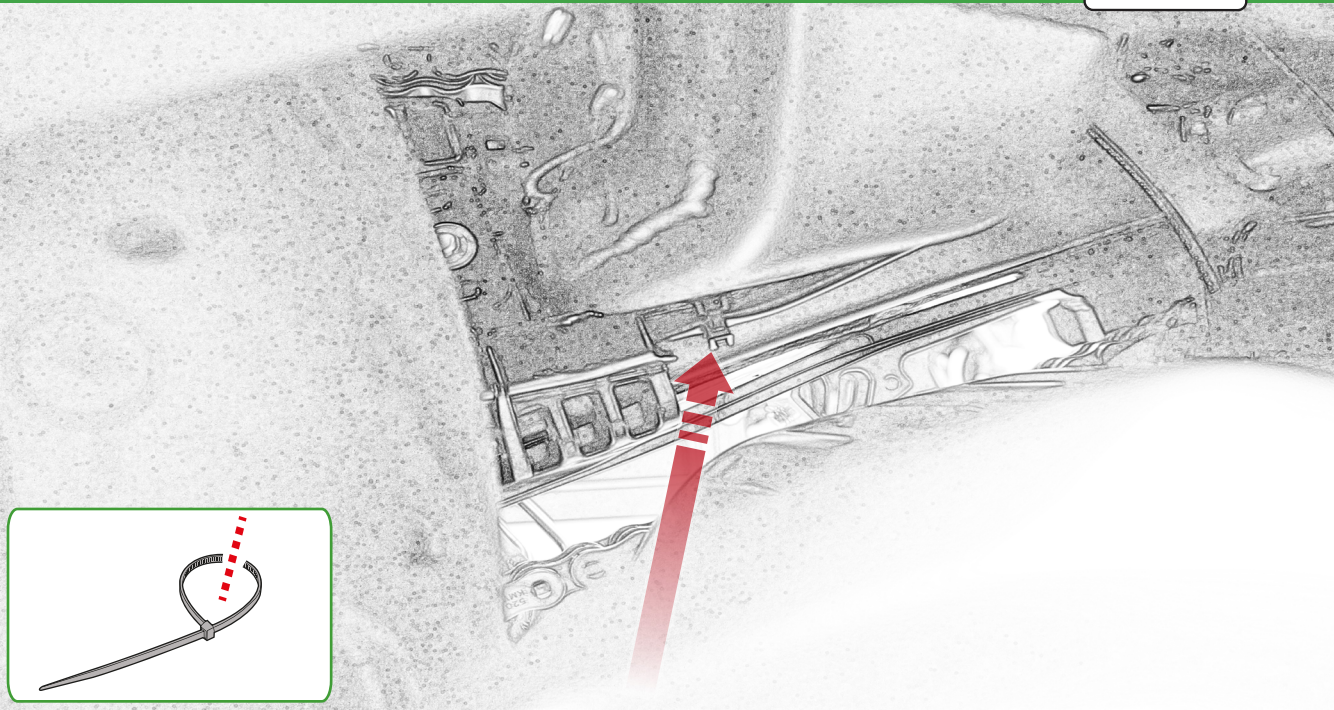


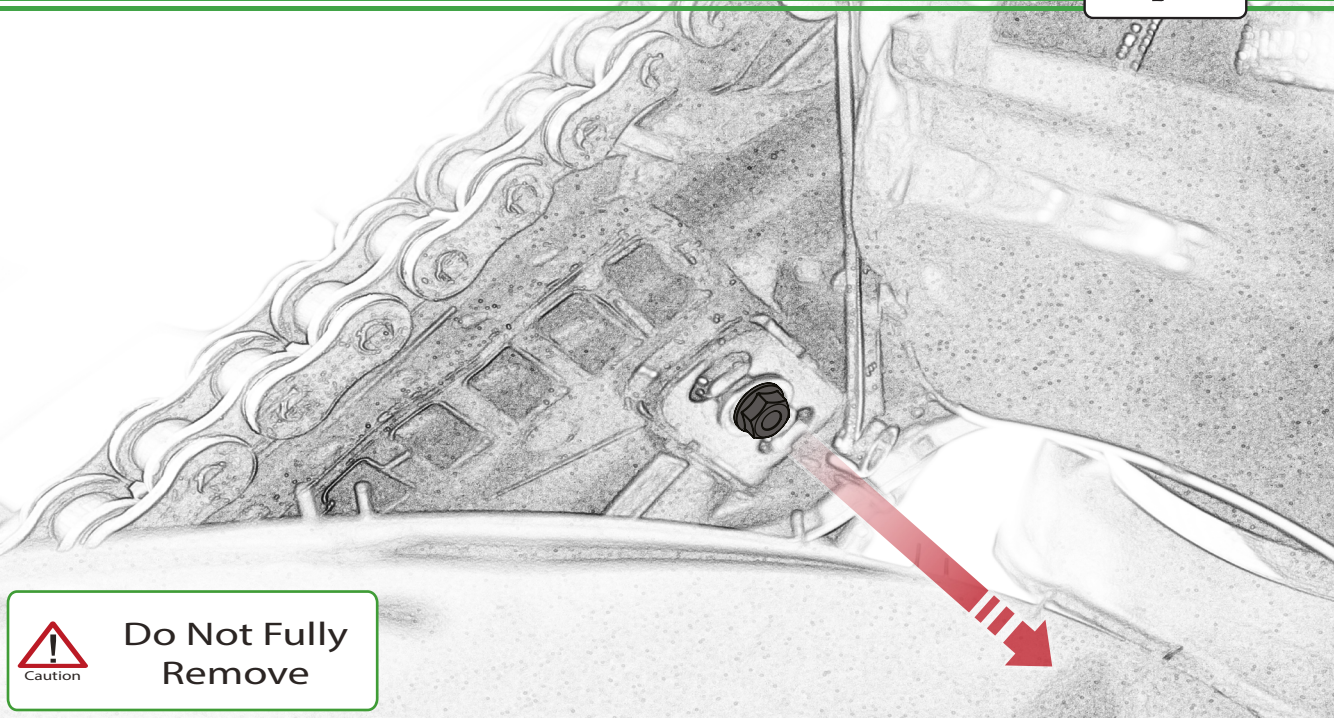


Do Not Fully
Remove

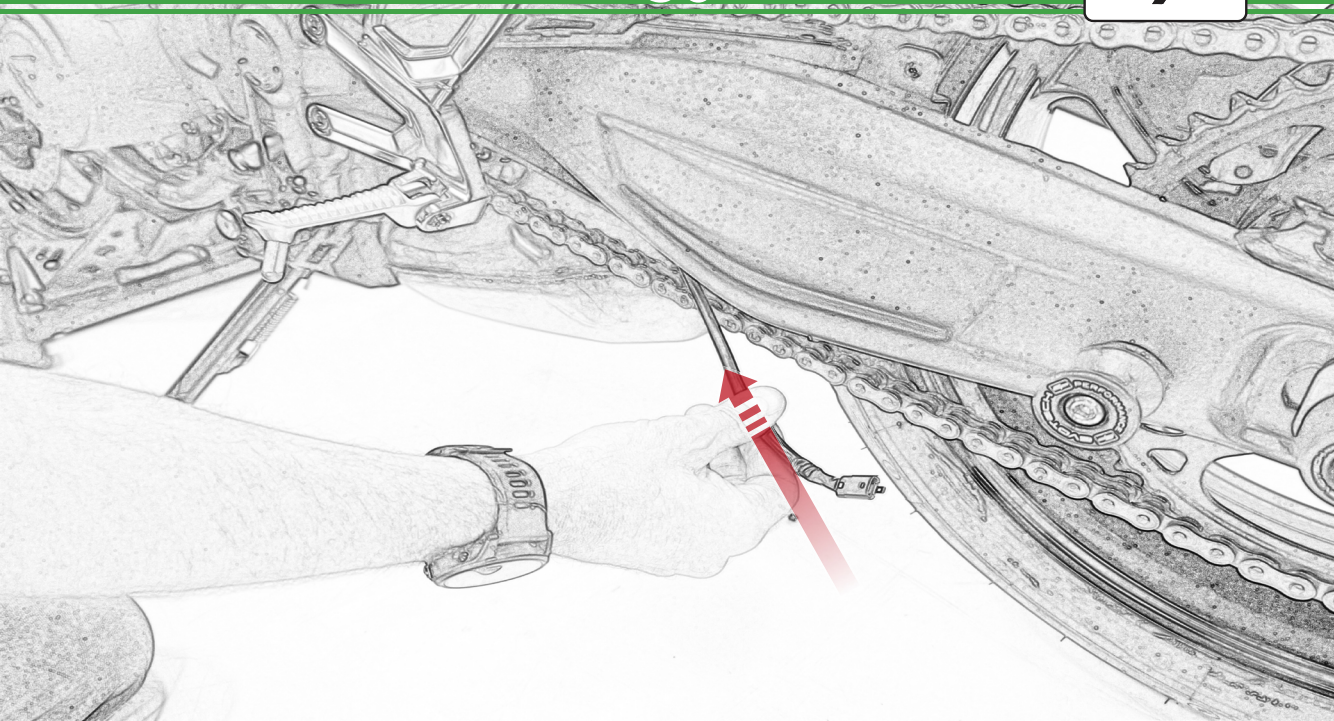

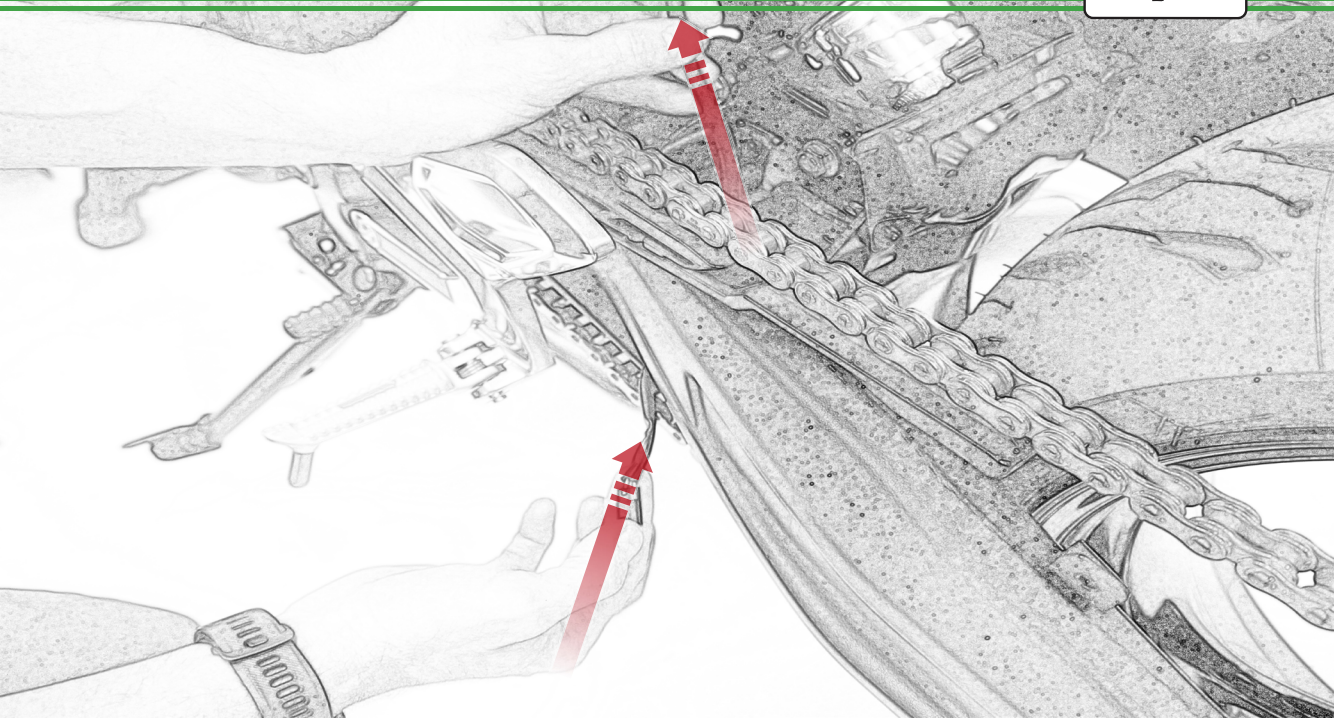

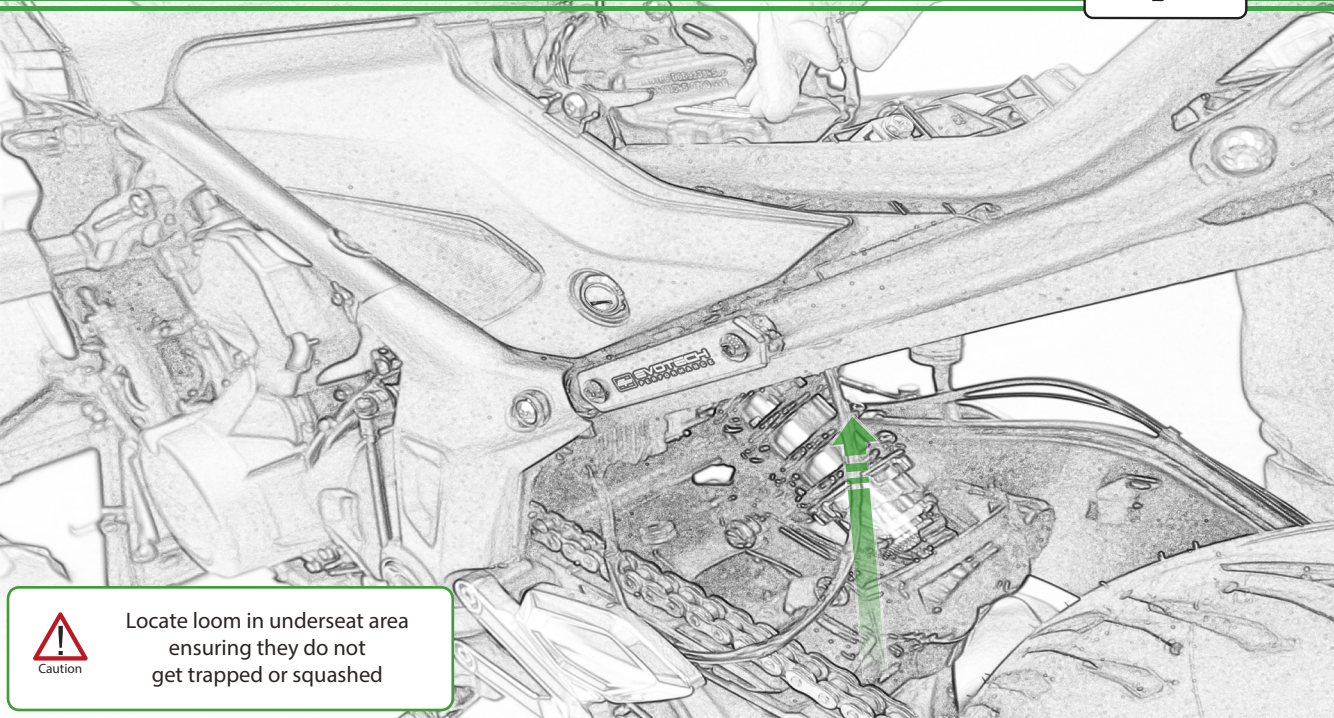



Locate loom in underseat area
ensuring they do not
get trapped or squashed

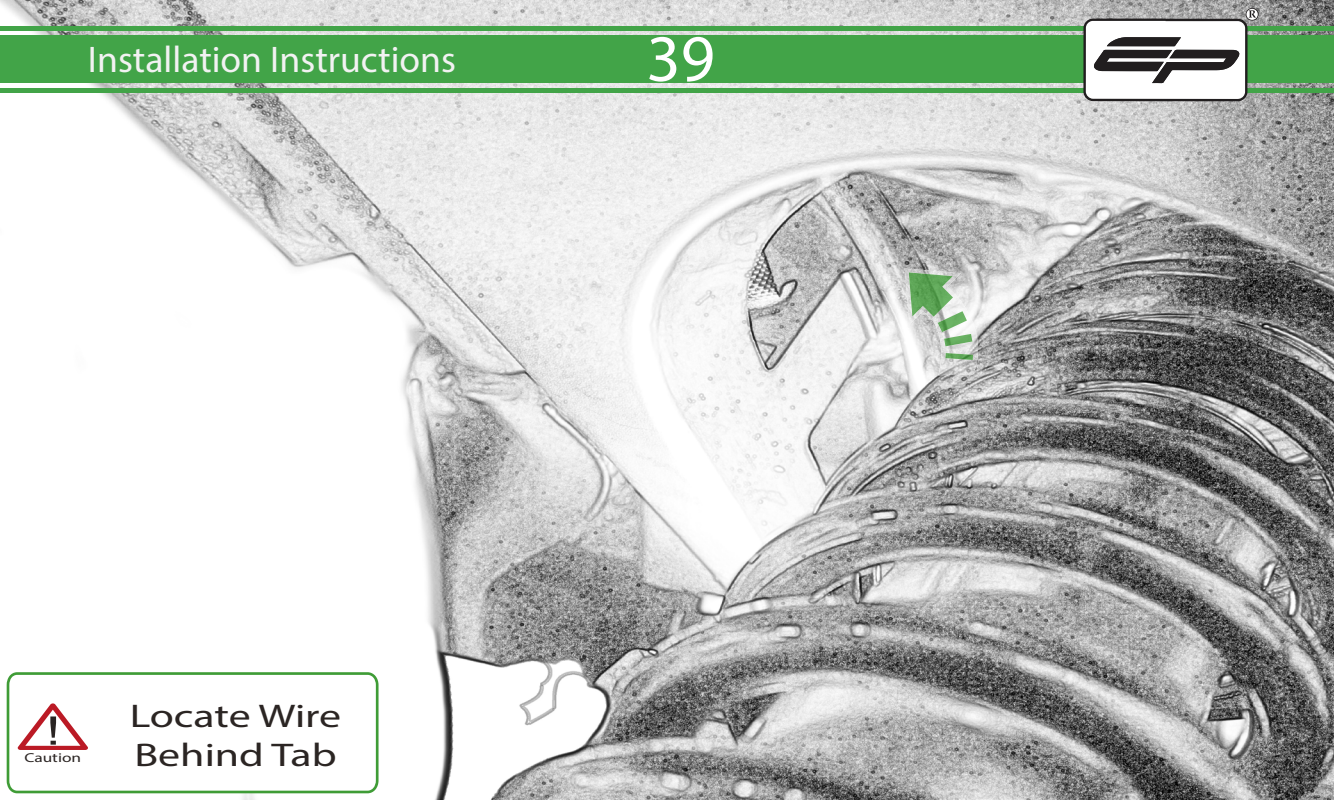




Caution


Locate Wire
Behind Tab

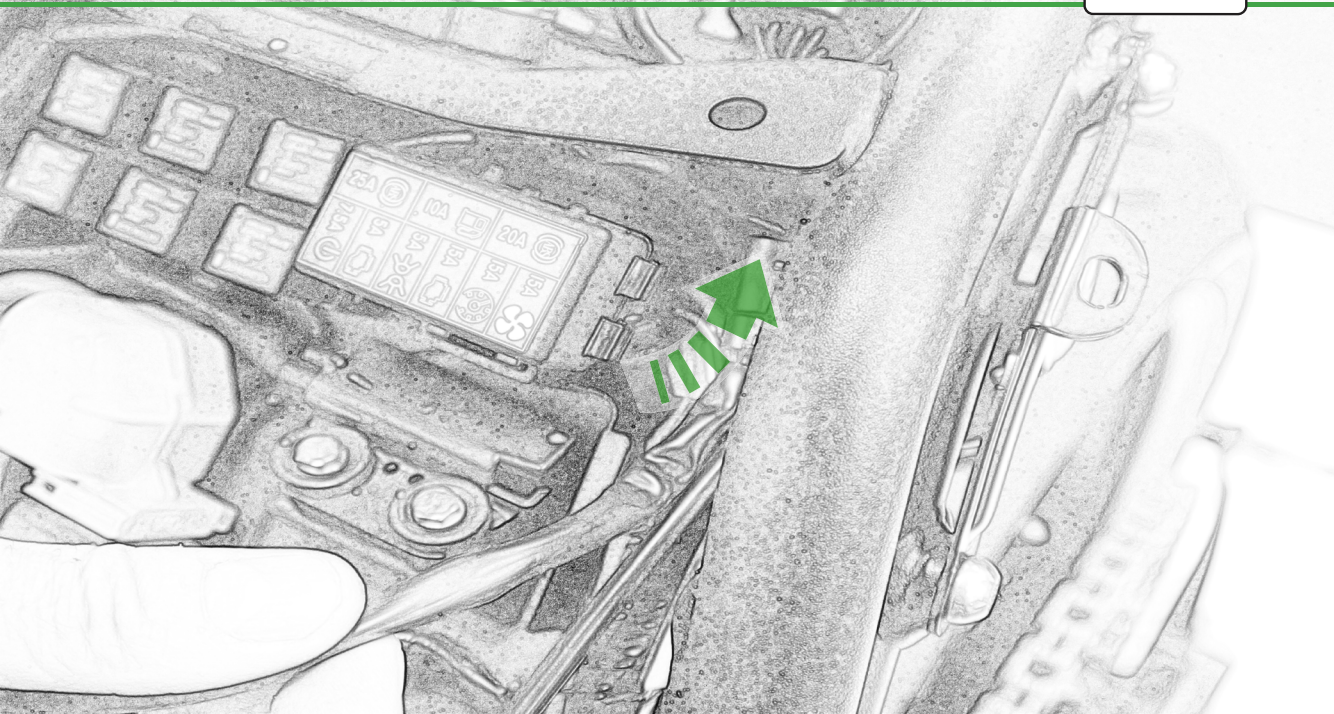

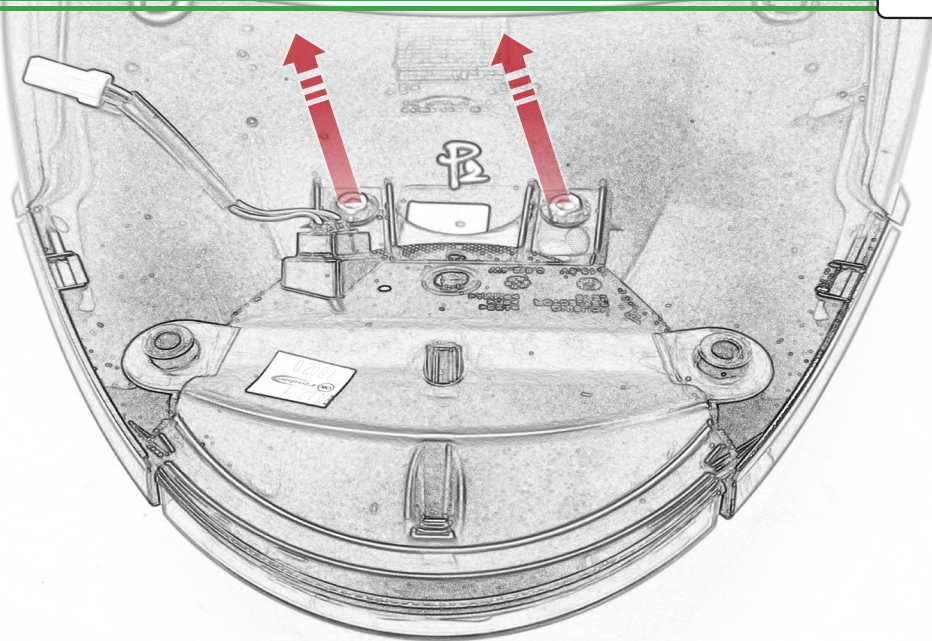


A

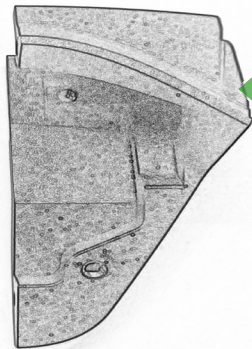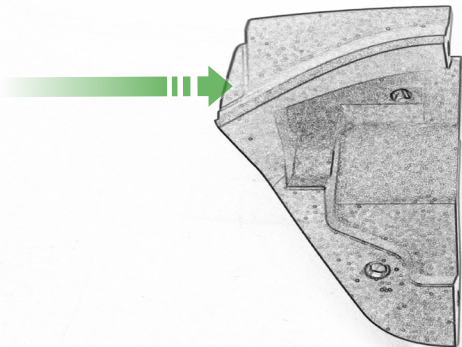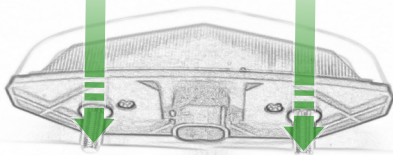


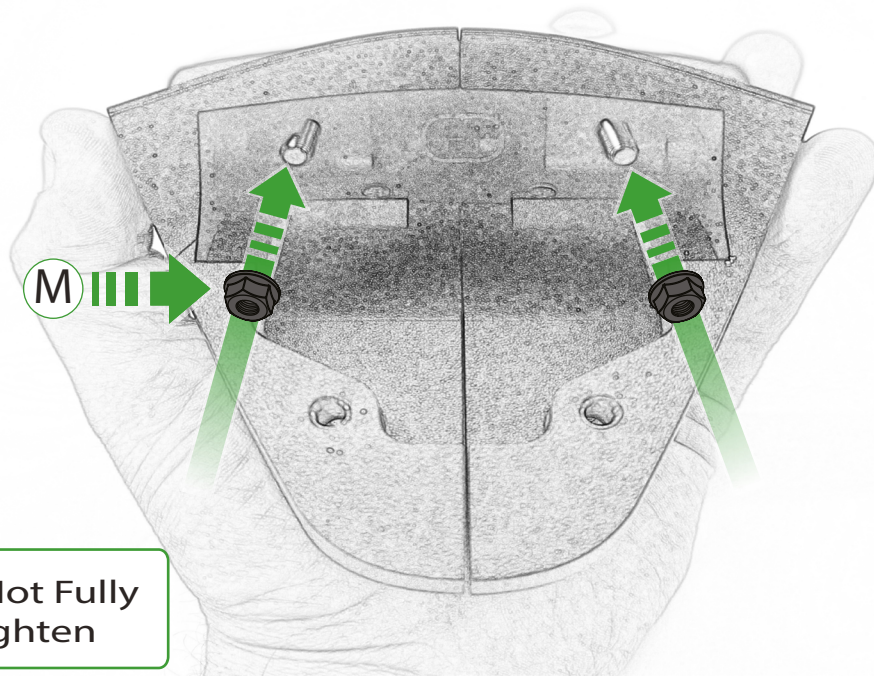


Caution

**Do Not Fully
Tighten**

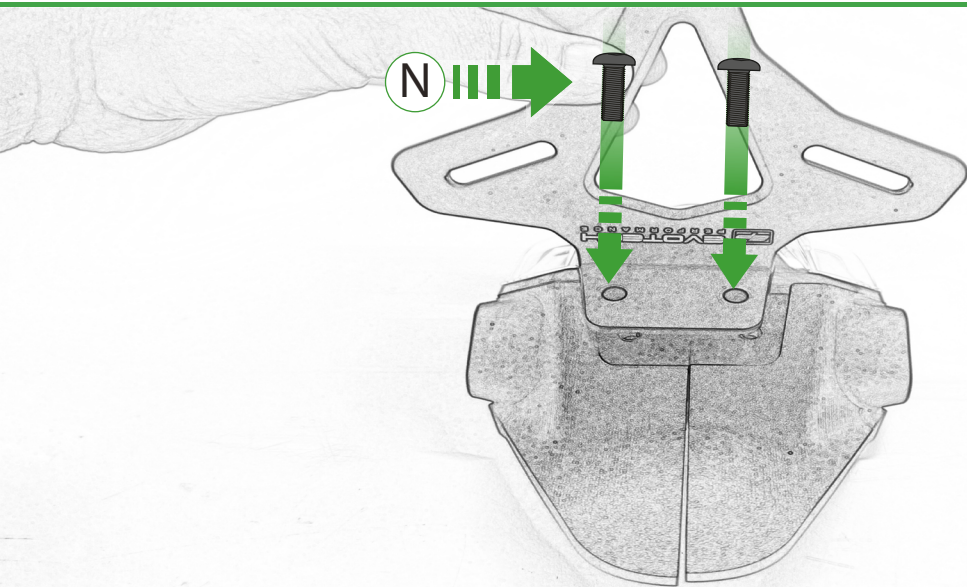


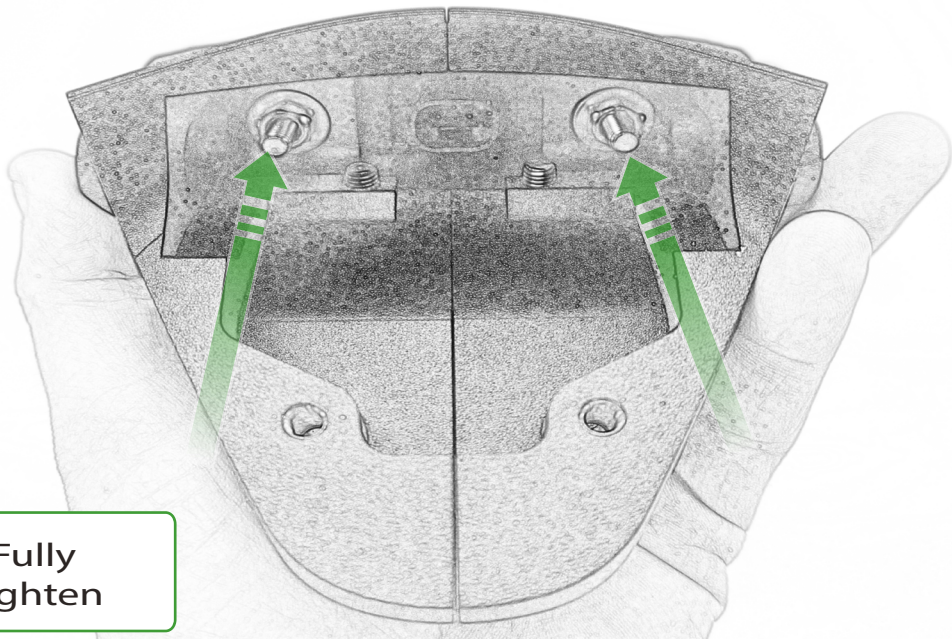


**Fully
Tighten**

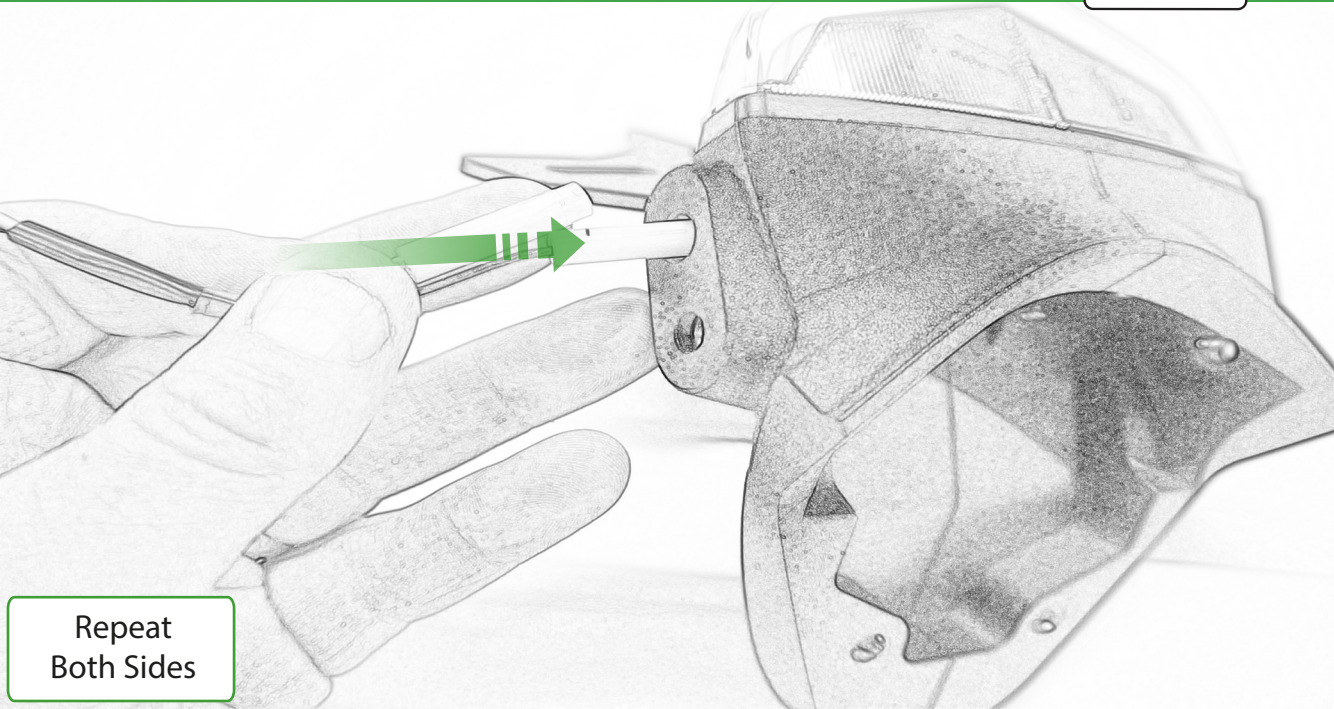



Repeat
Both Sides

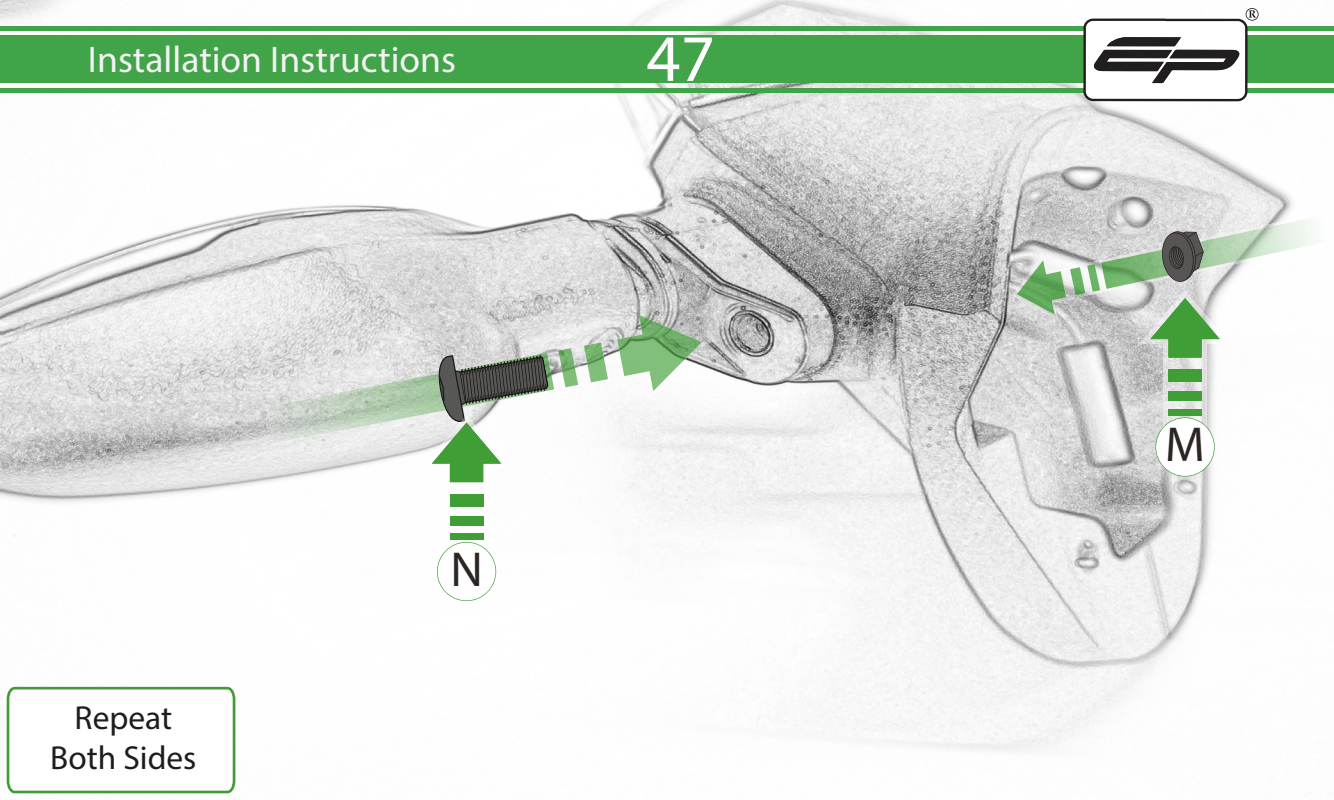

Repeat
Both Sides

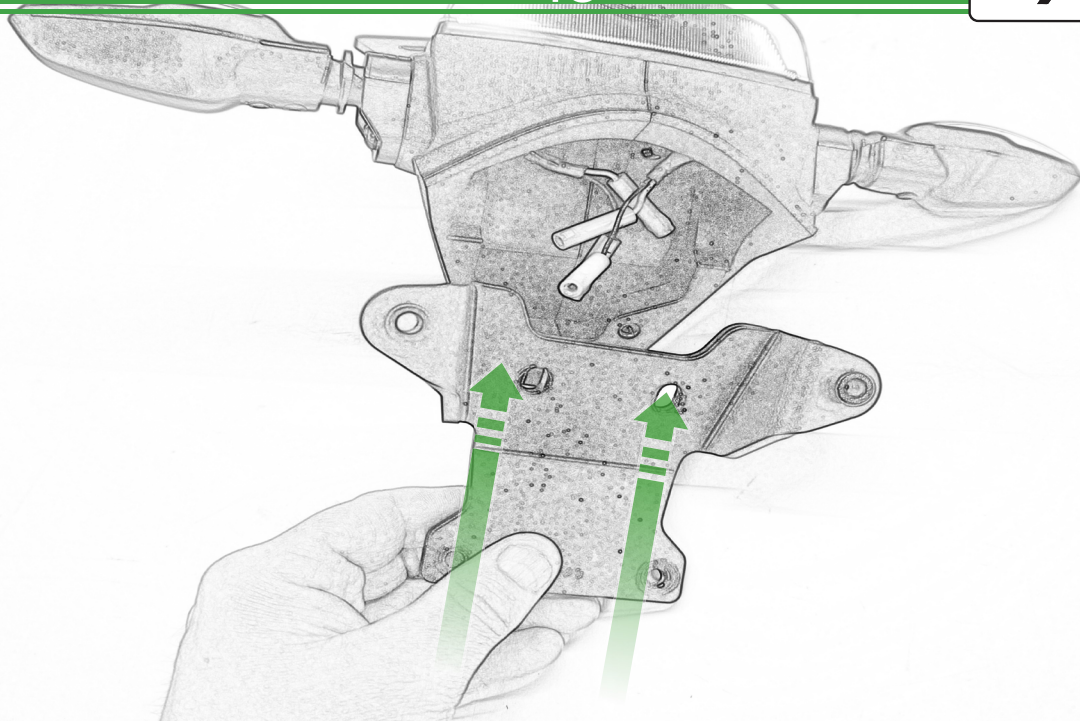



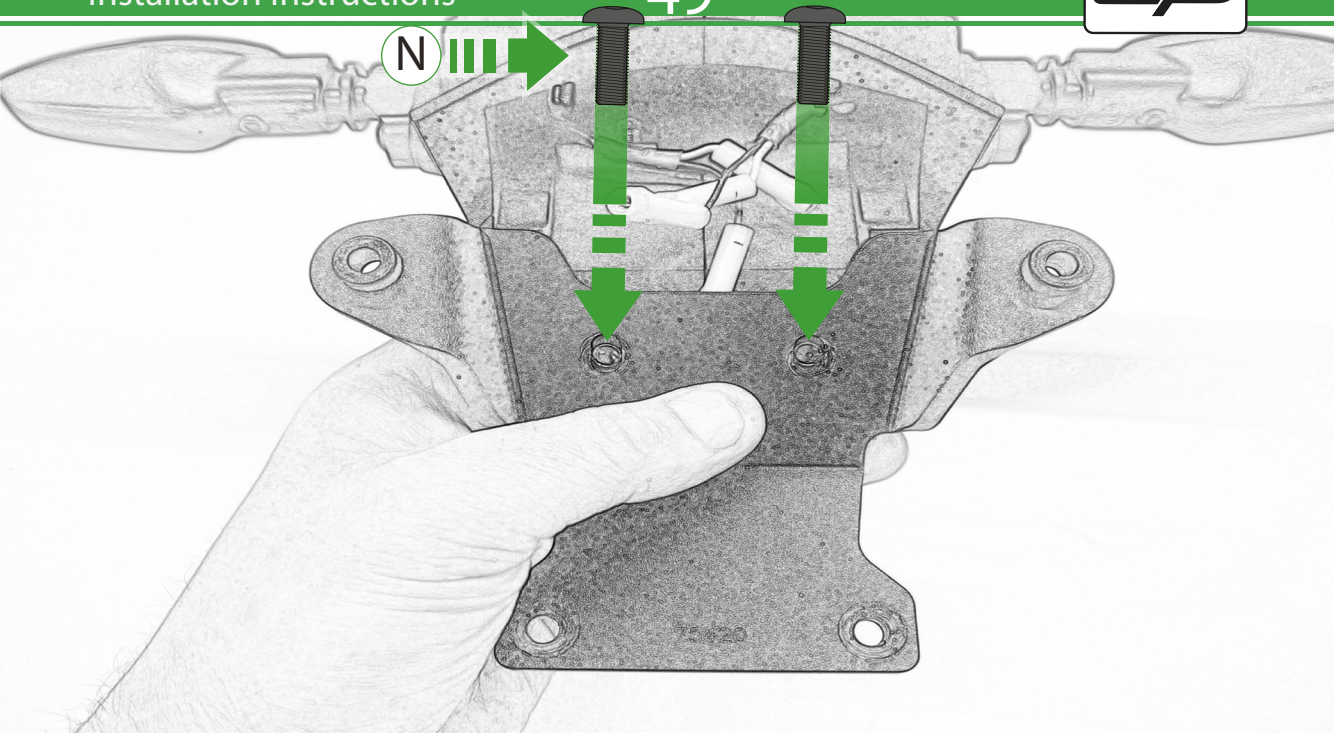


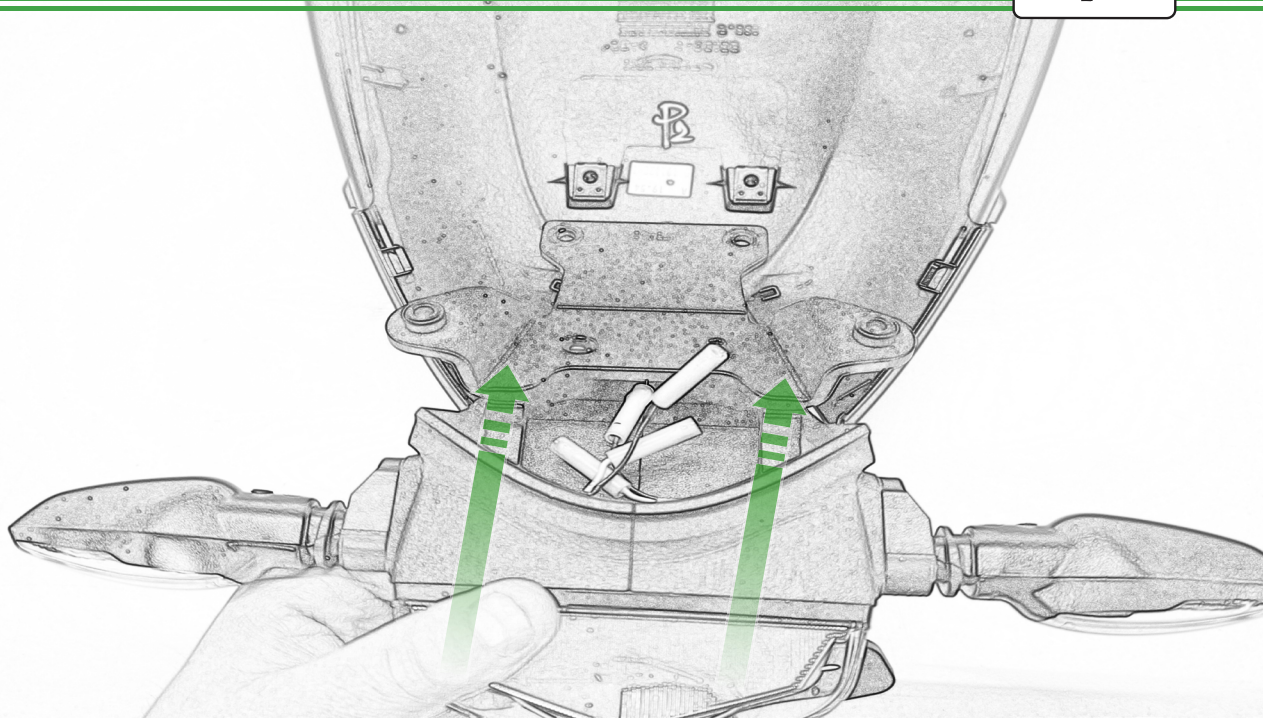



OEM PART


52

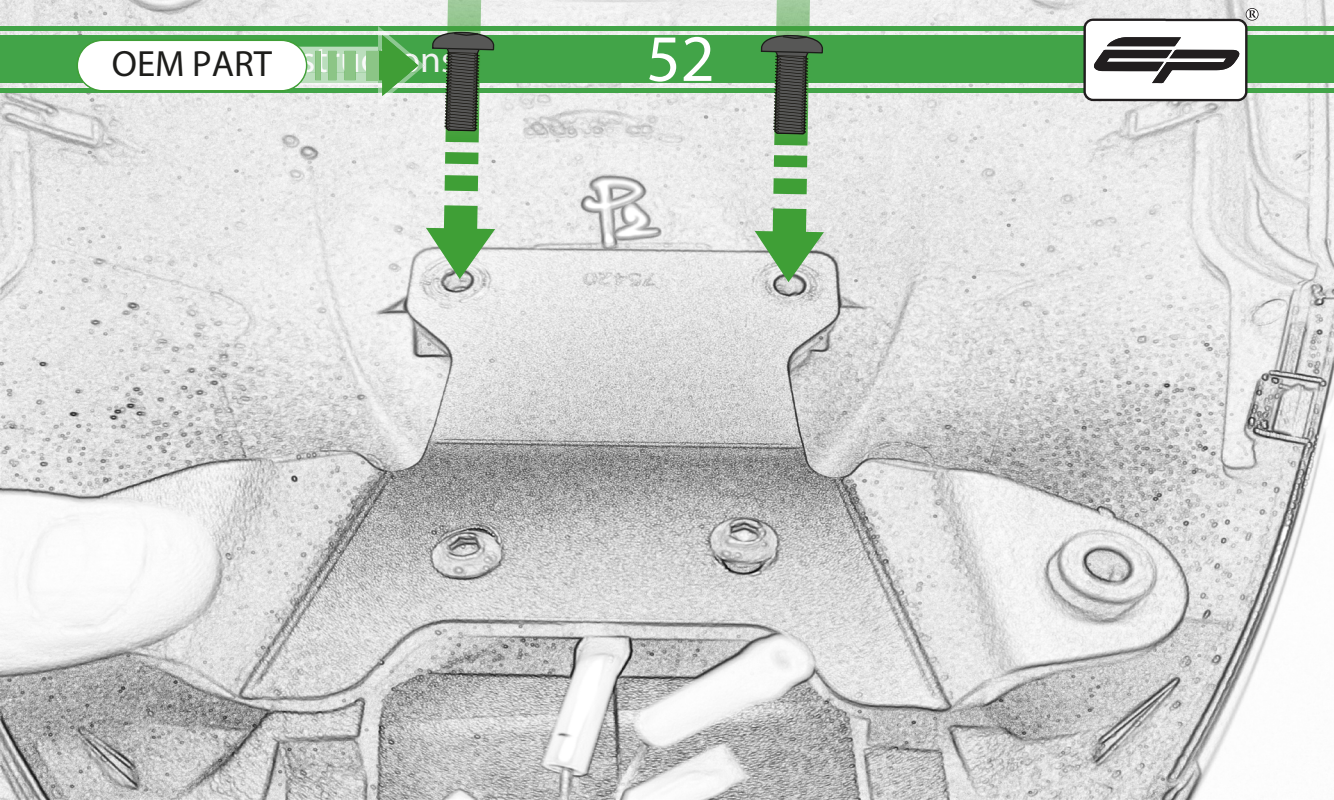

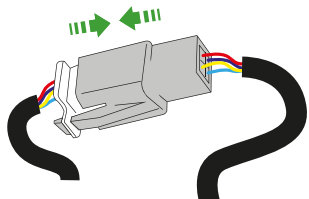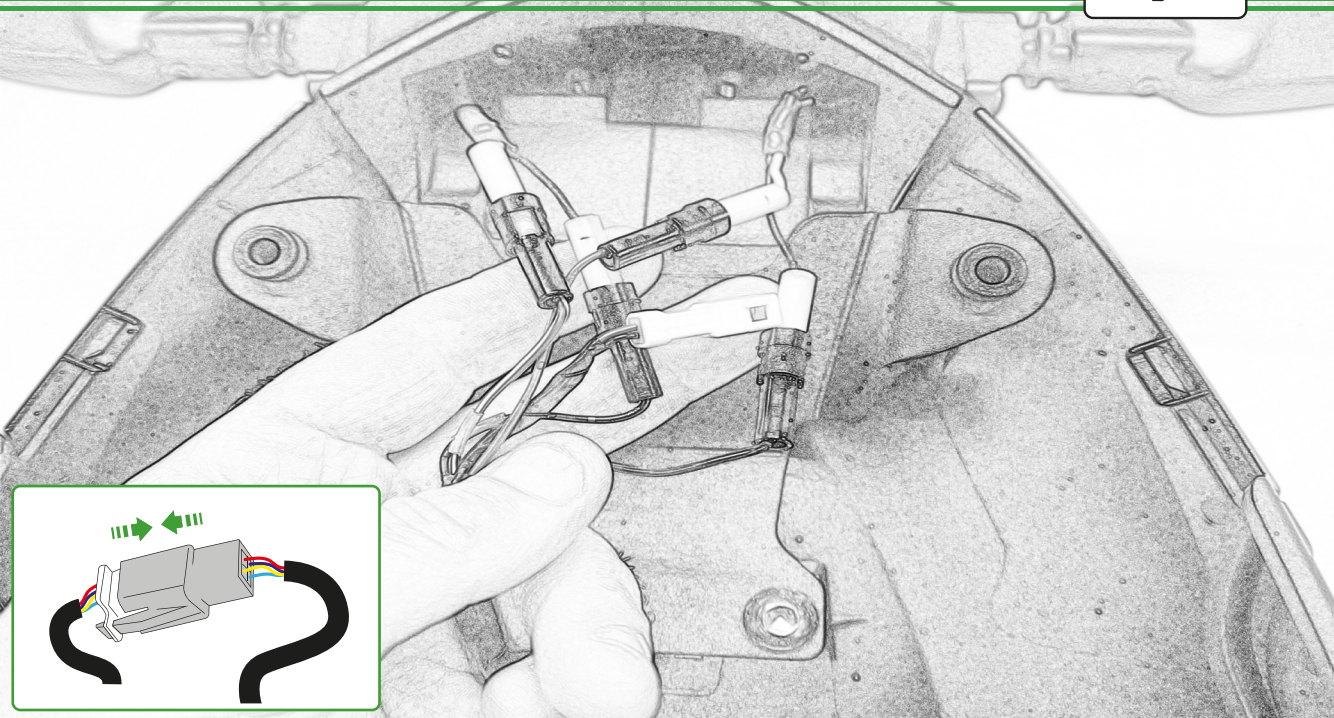

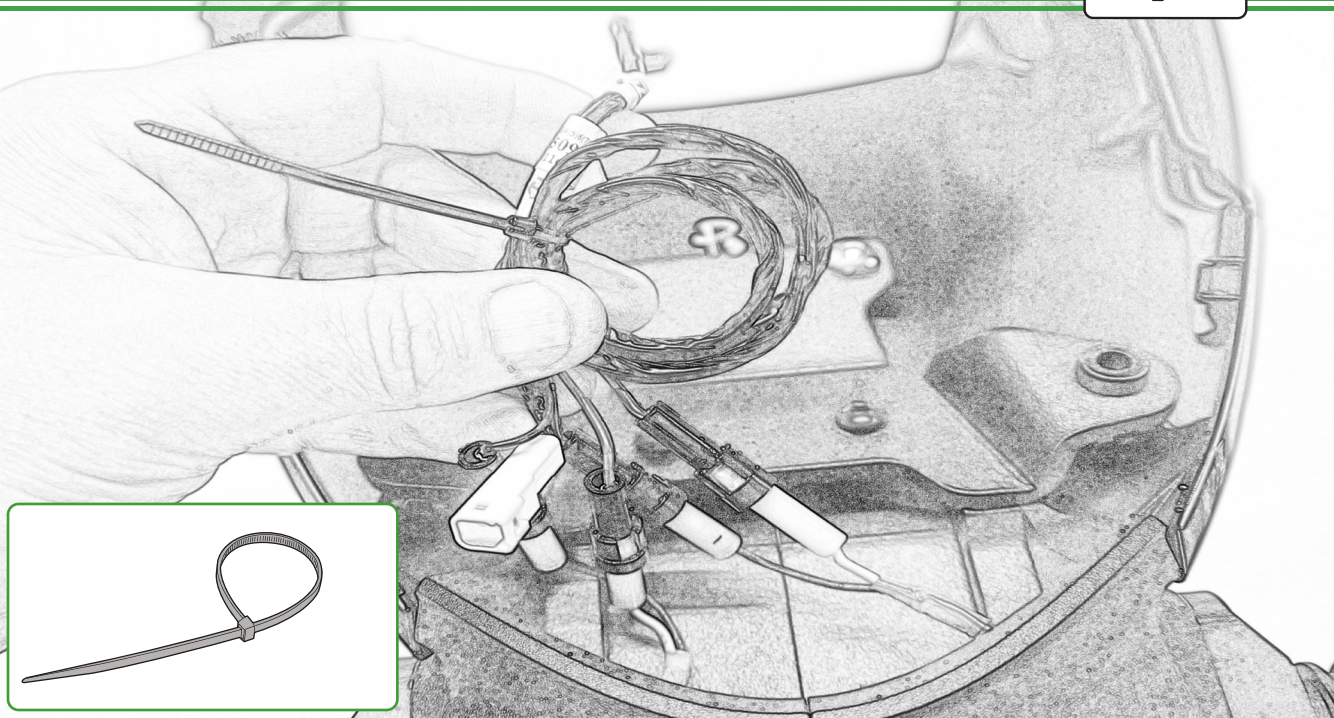


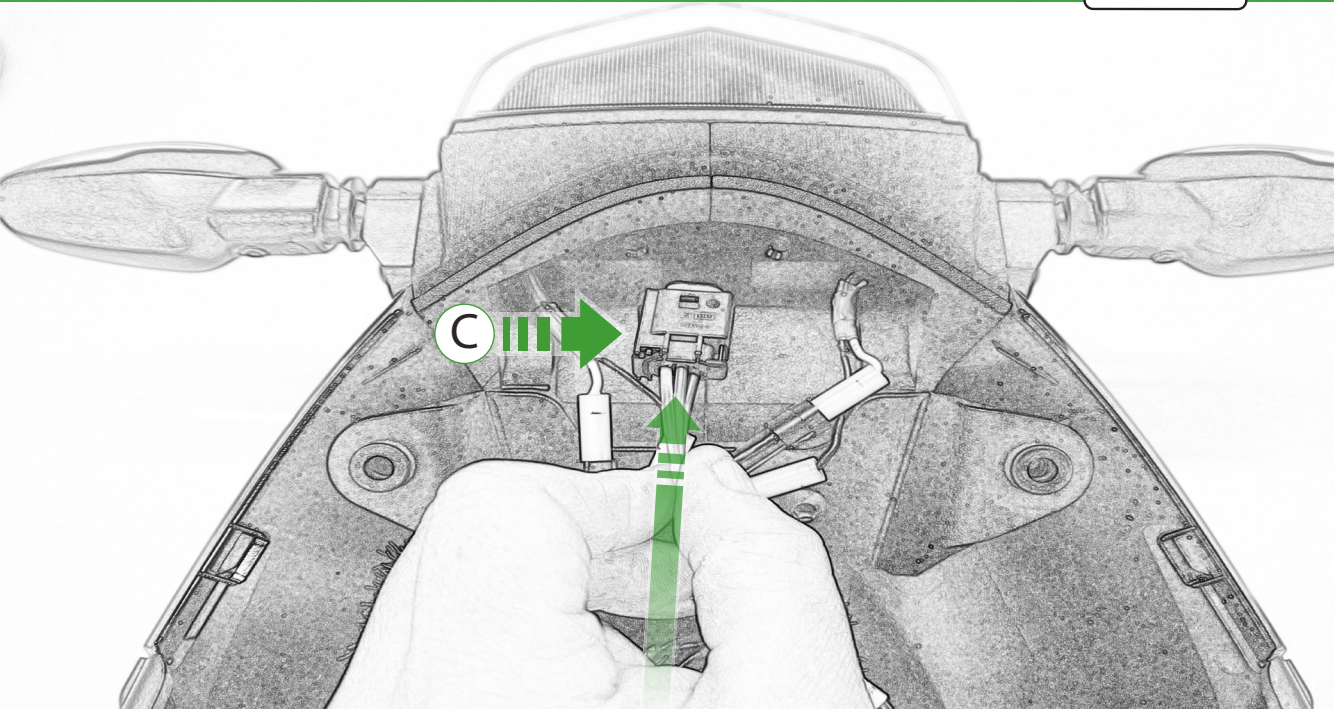

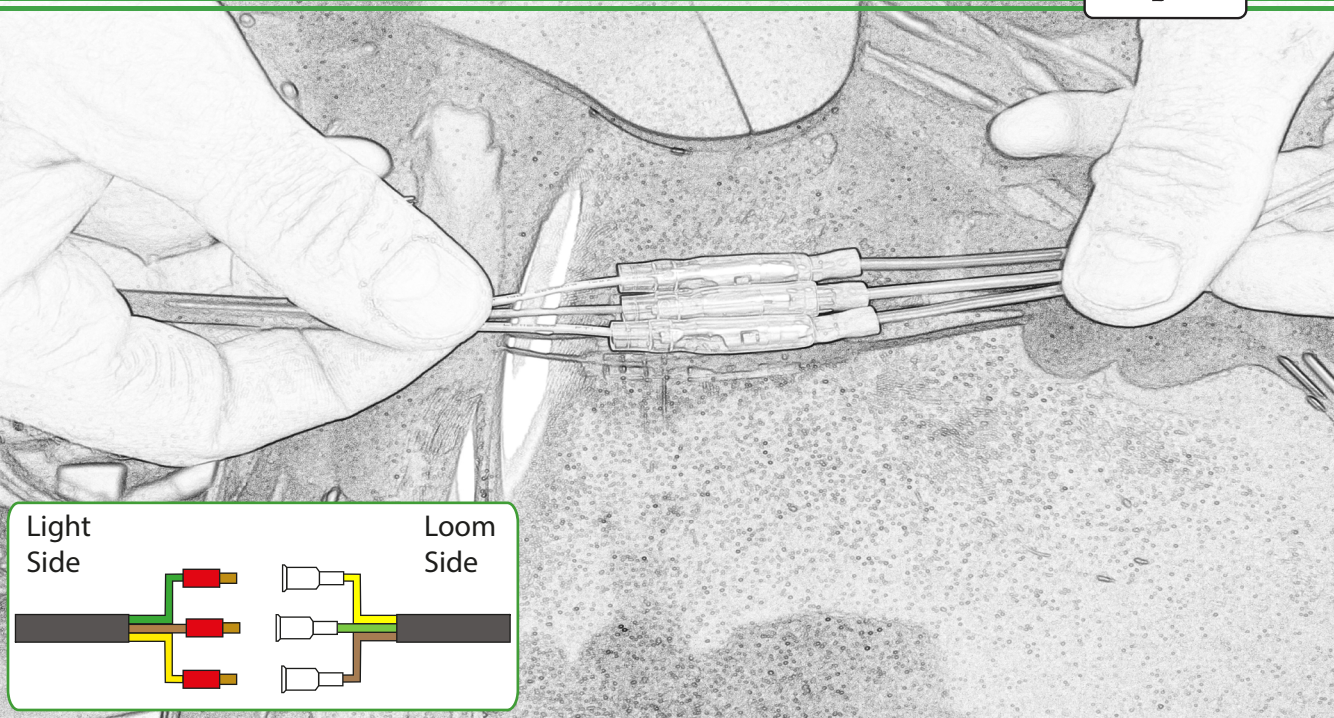


Light
Side


Loom
Side

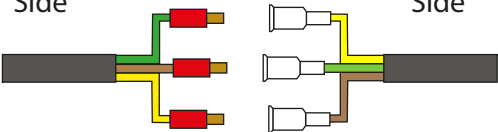





**Tidy
Wires**

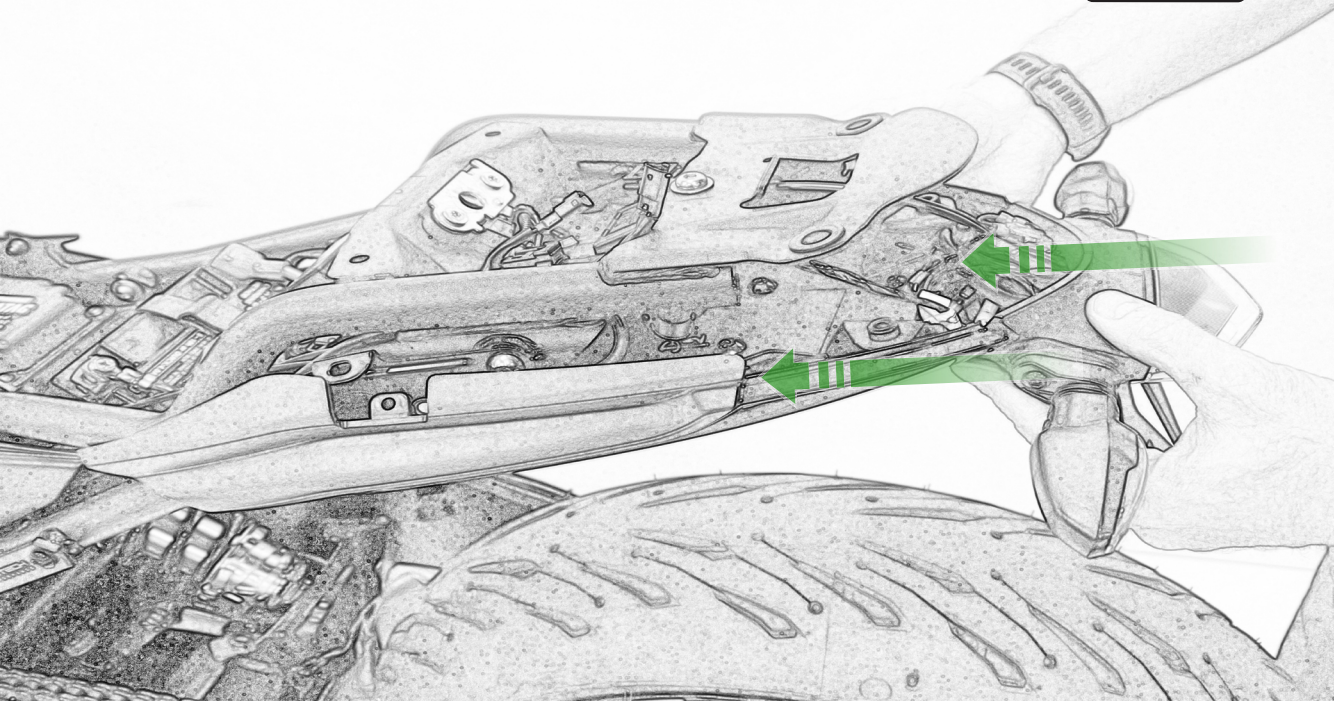

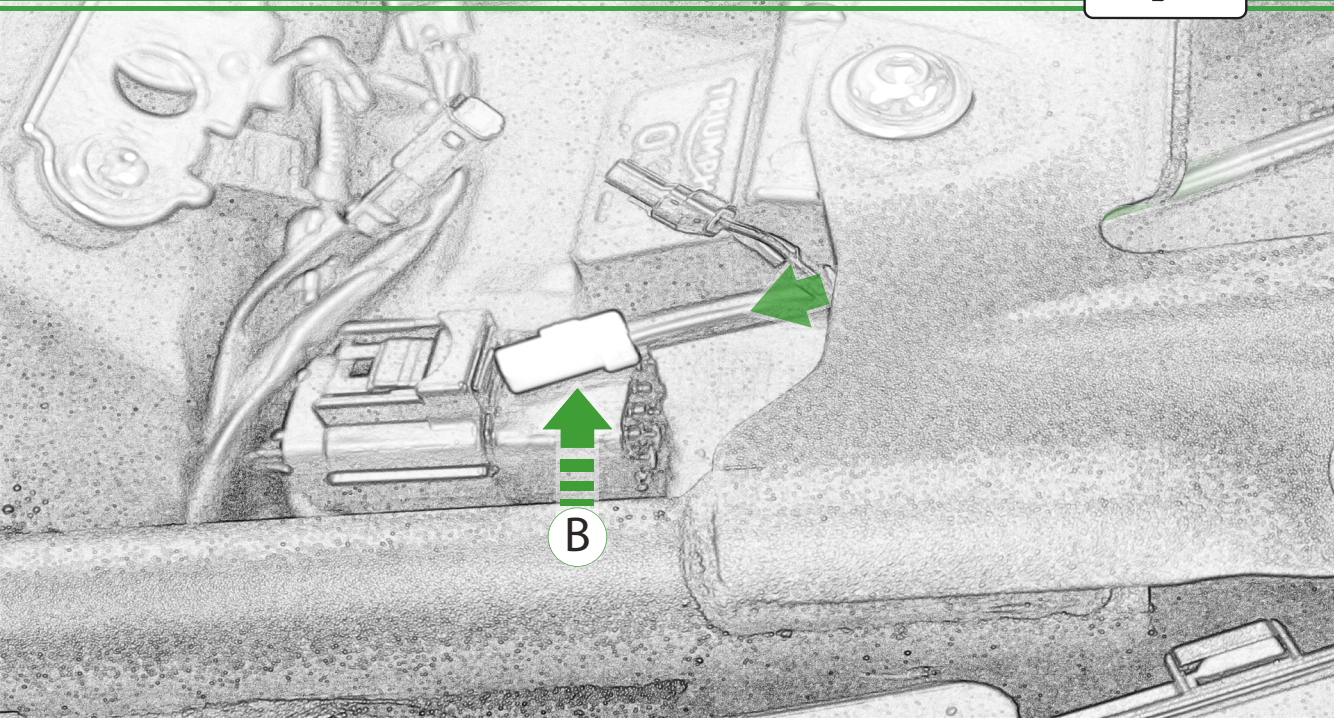


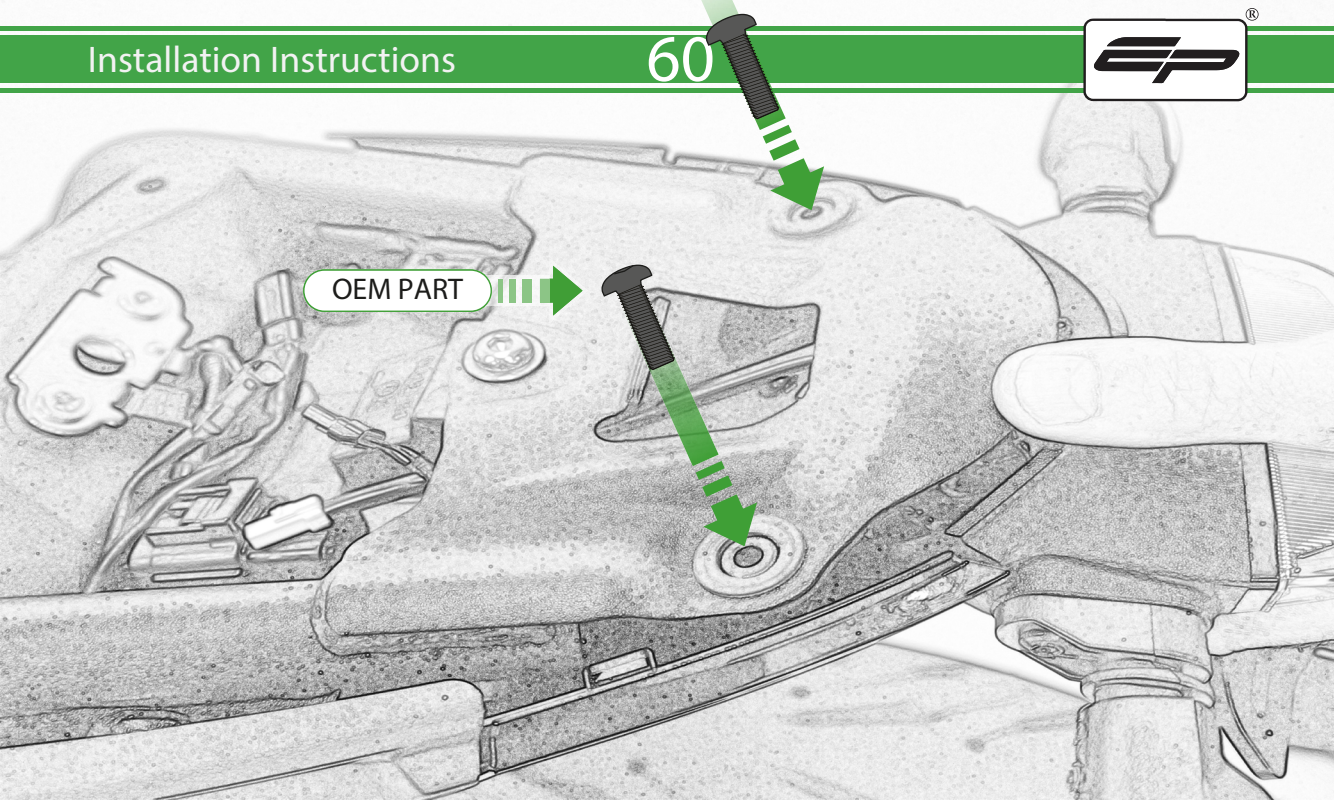



OEM PART

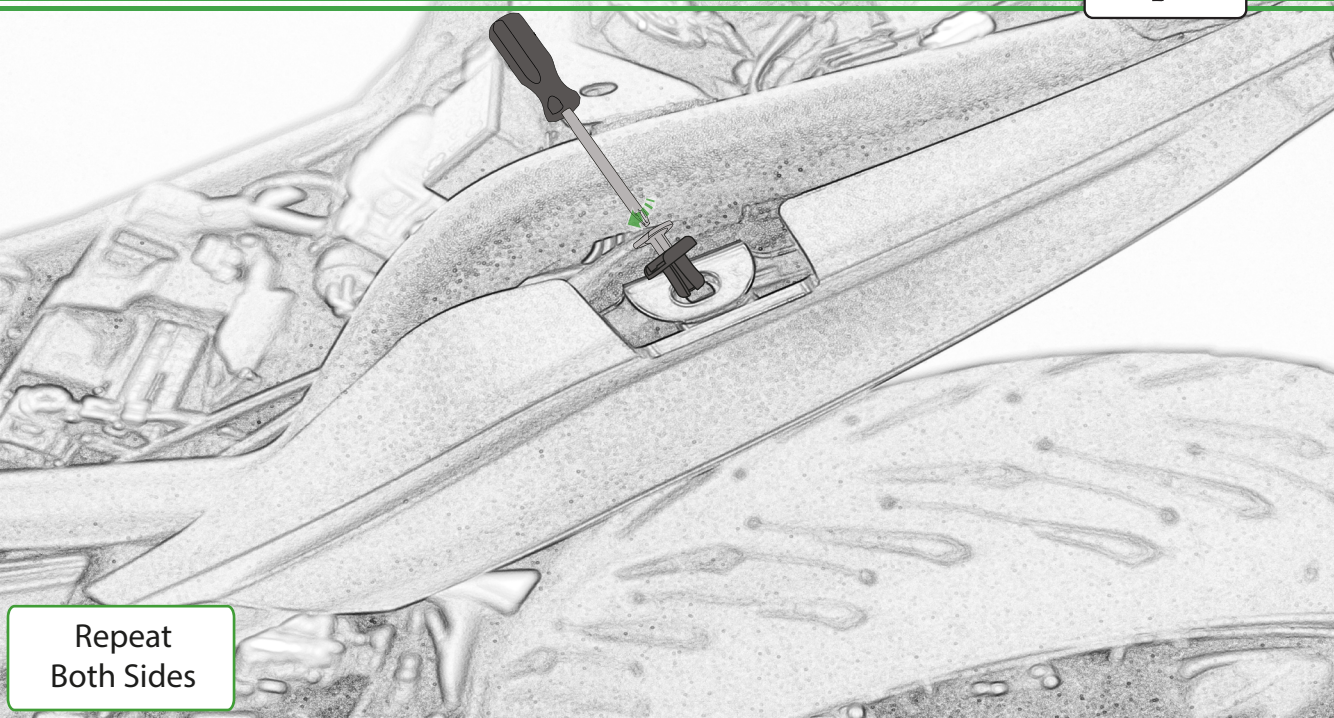


Repeat
Both Sides

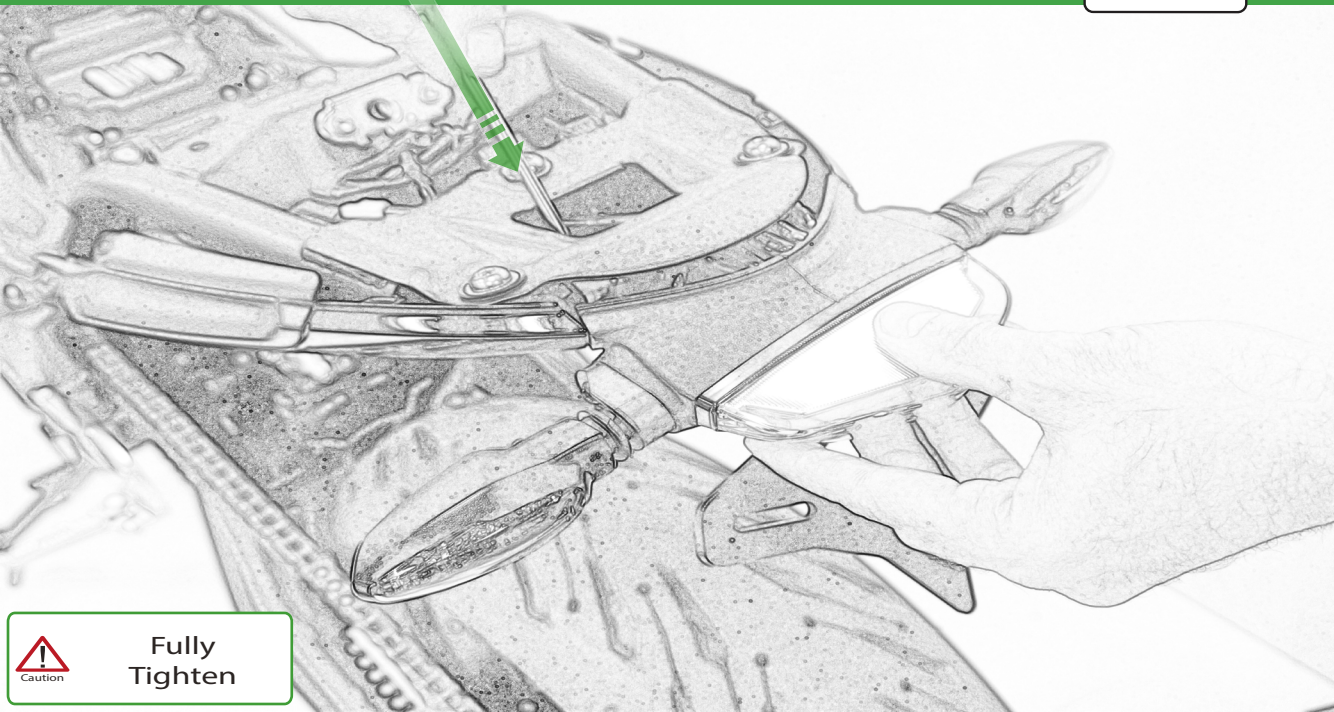



Fully
Tighten

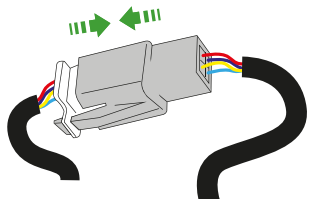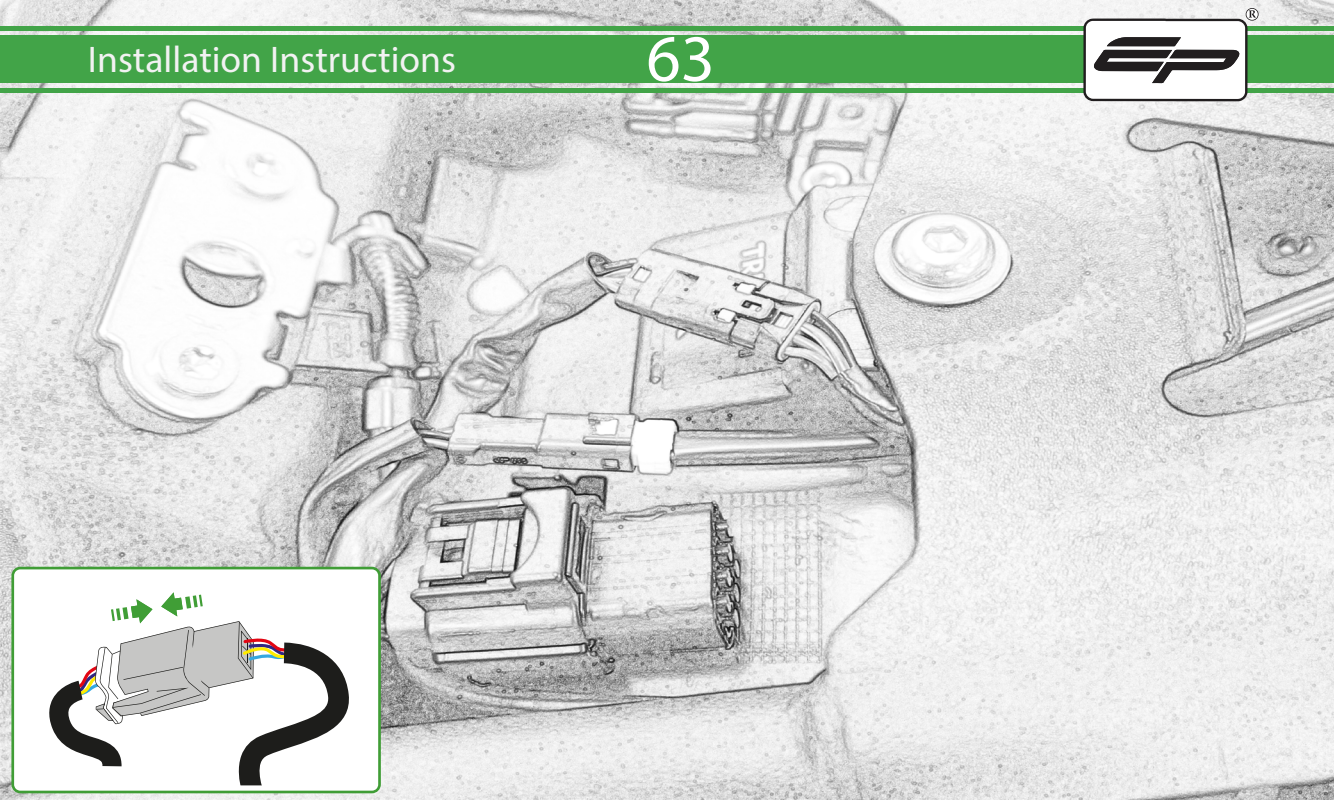





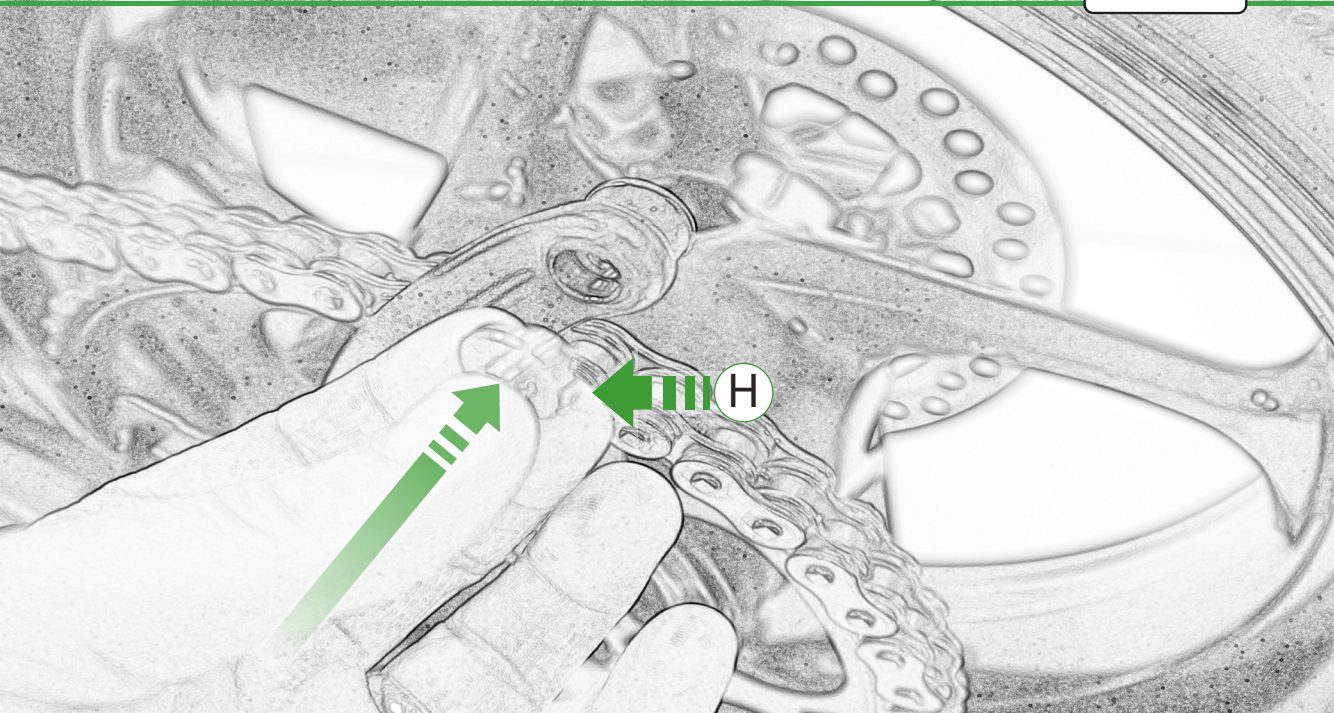

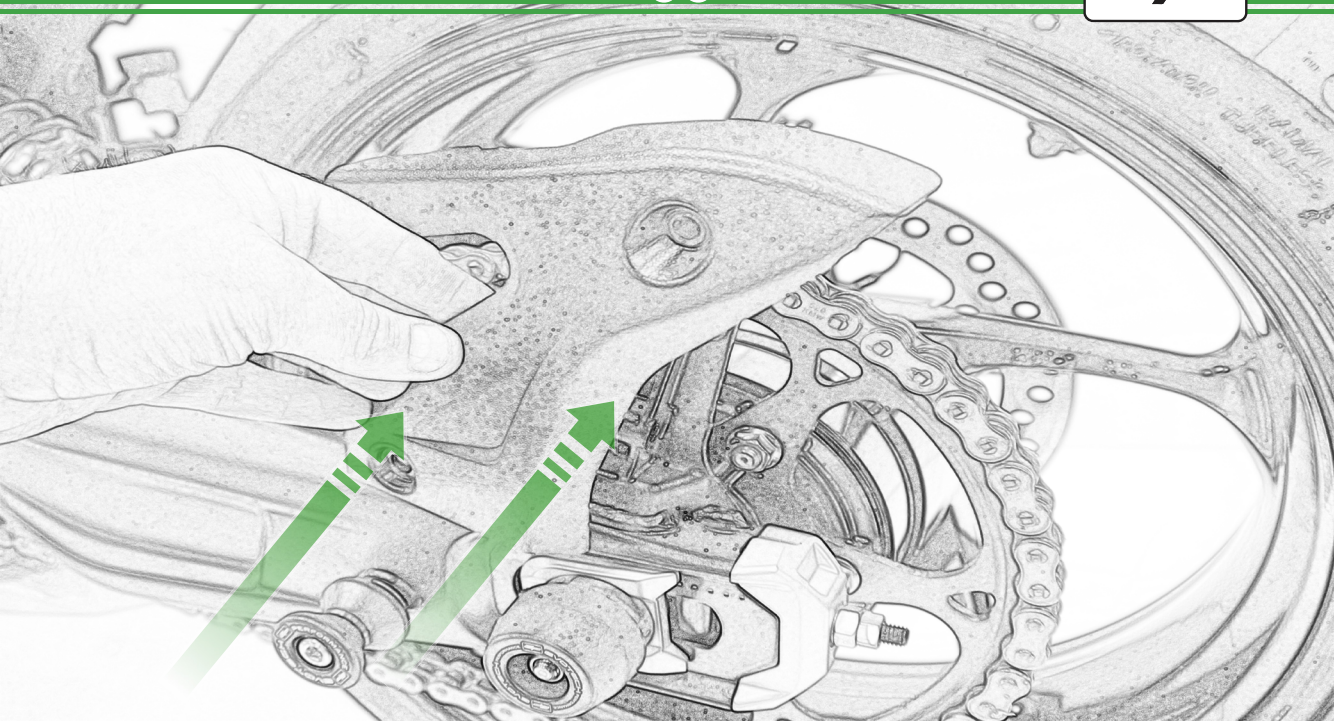

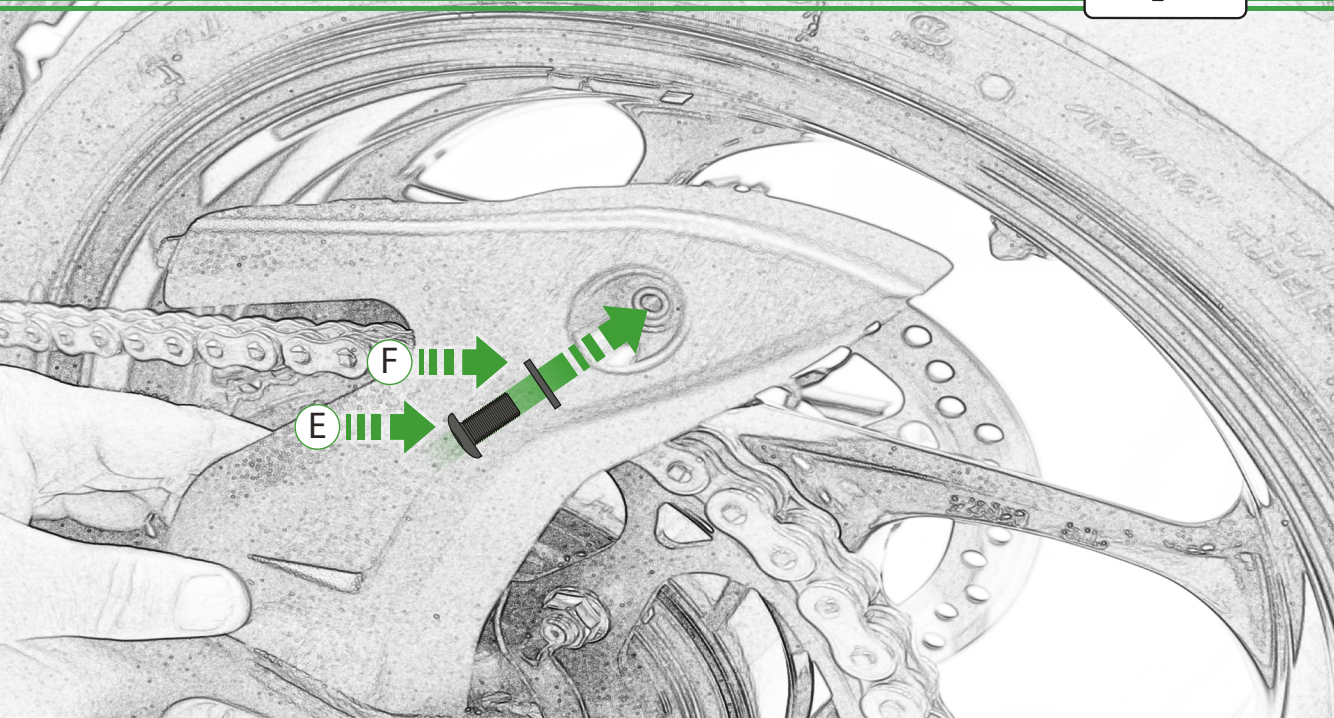

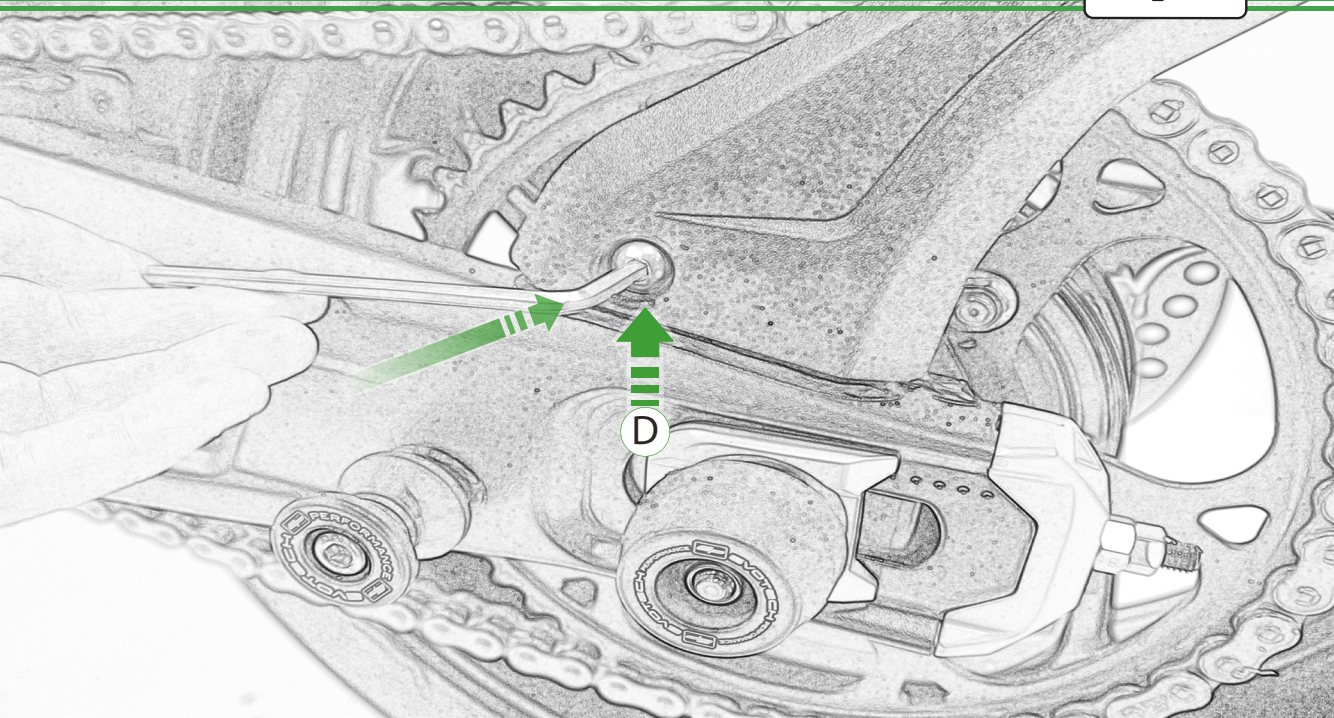

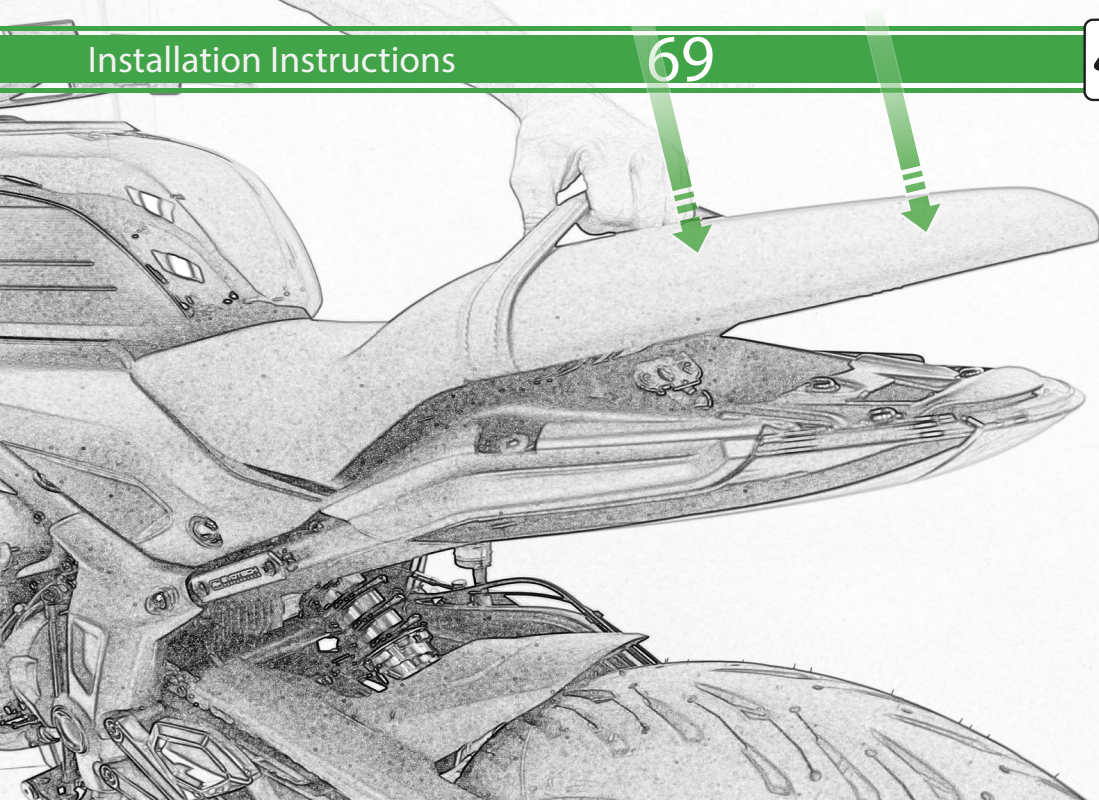




ESSENTIAL CHECKS




After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.

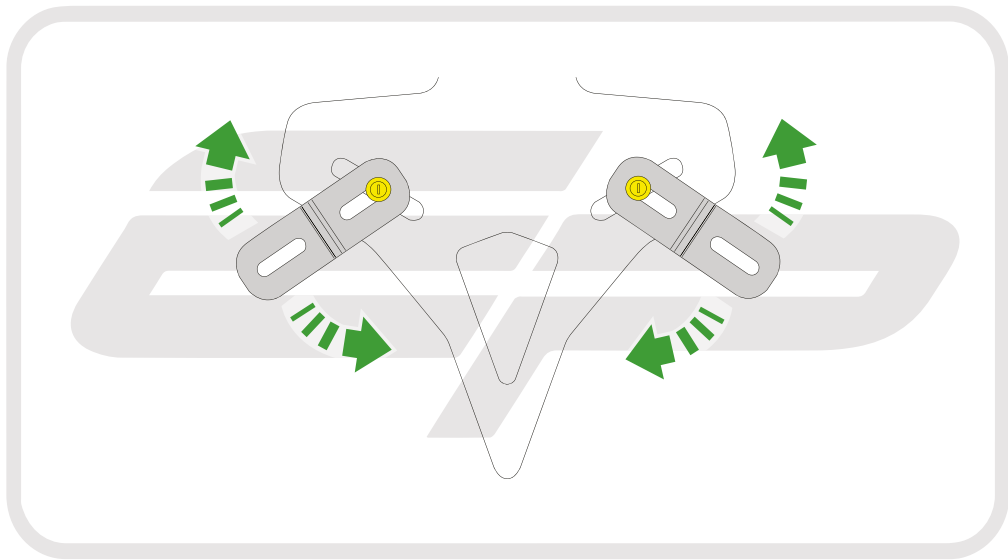

Installation Instructions

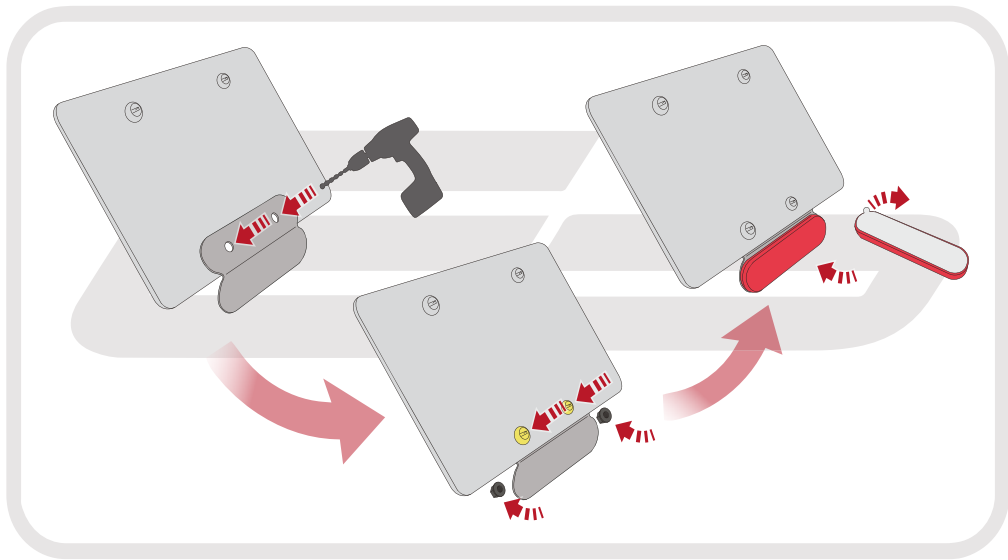

EVOTECH[®]
P E R F O R M A N C E



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com