


www.evotech-performance.com
Triumph Trident
Pillion Plate


Installation Instructions





Kit Contents PRN015433


- A 2 x Blanking Plate
- B 4 x M8 x 10mm Button Head

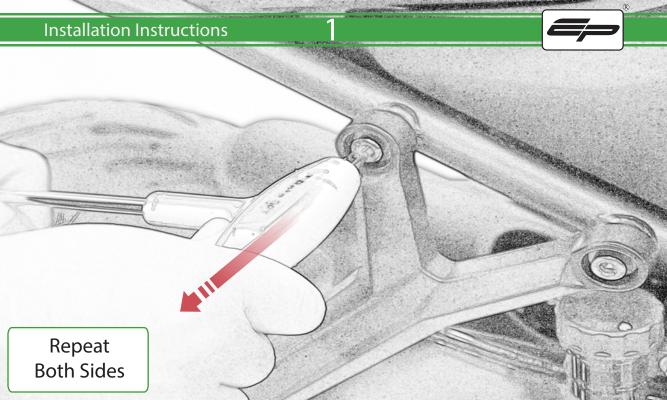


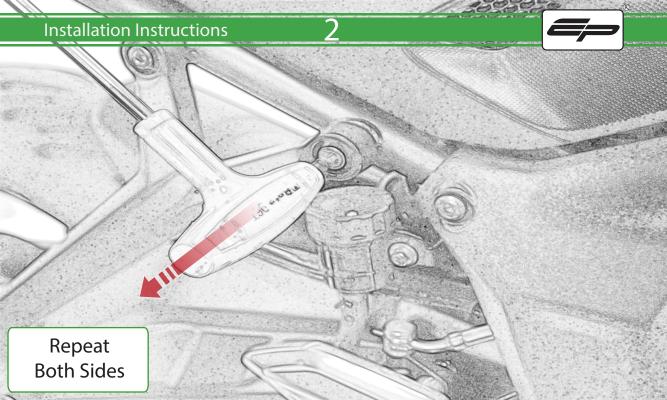

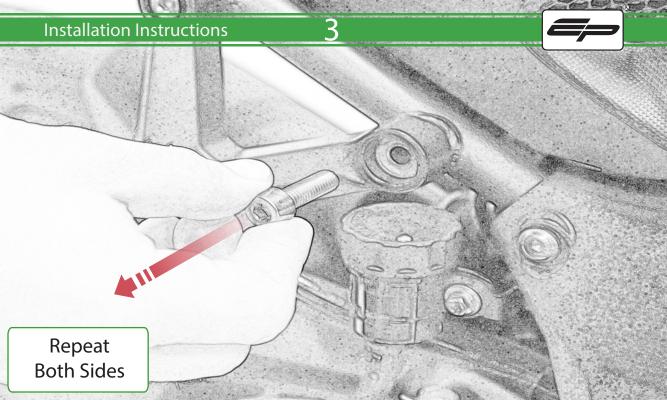

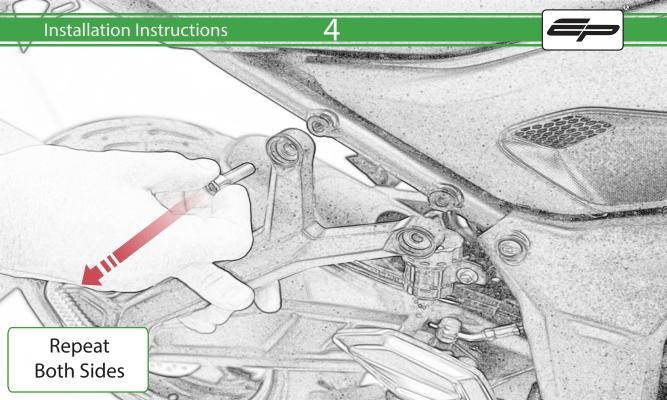

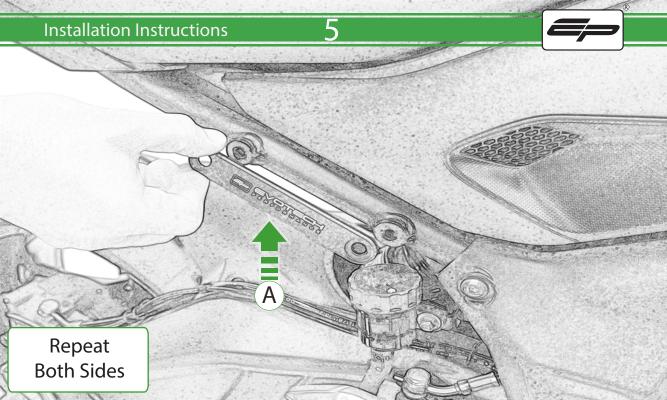

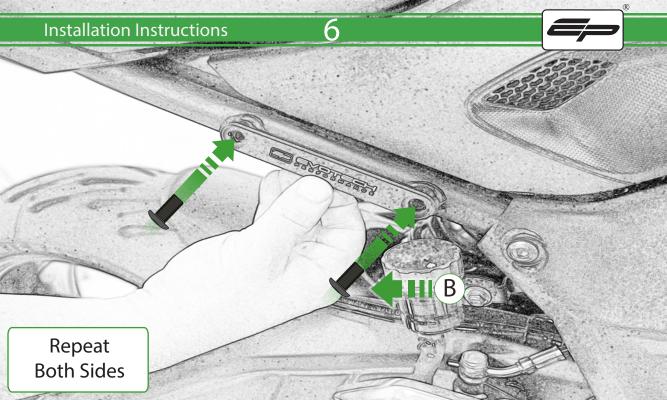





igwedge essential checks igwedge



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





www.evotech-performance.com