

EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com


RSV4 / Tuono V4 Tail Tidy


Installation Instructions





- Kit Contents PRN015516
- Ⓐ 1 x Retro Light
 - Ⓑ 1 x Spacer
 - Ⓒ 1 x Con 10
 - Ⓓ 2 x M6 x 12mm Button Head Bolts
 - Ⓔ 2 x M6 x 25mm Button Head Bolts
 - Ⓕ 2 x M6 Flange Nut
 - Ⓖ 2 x M6 x 16mm Black Button Head Bolts
 - Ⓗ 2 x Special Washer
 - Ⓘ 2 x M4 Flange Nut
 - Ⓙ 2 x M4 x 8mm Button Head Bolts
 - Ⓚ 2 x M6 x 60mm Button Head Bolts (Double Indicator Spacers)
 - Ⓛ 2 x Indicator Bush
 - Ⓜ 3 x M6 x 40mm Button Head Bolts (Single Indicator Spacers)

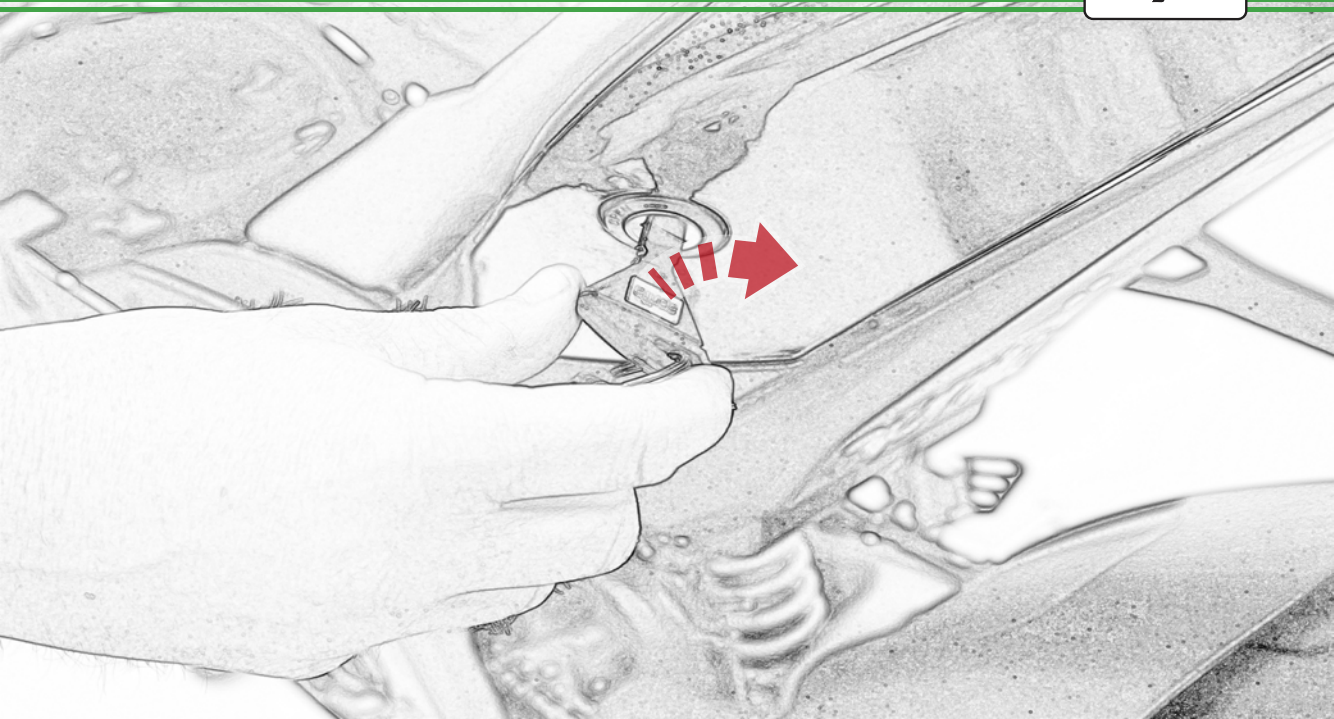

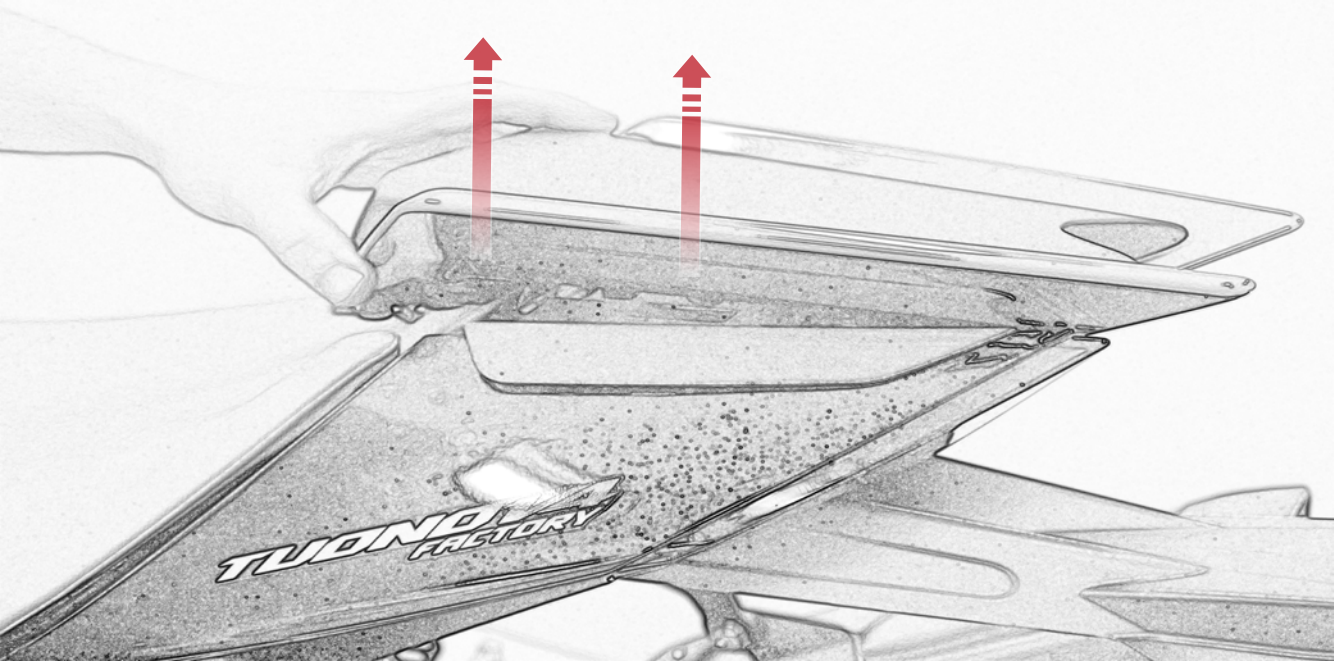


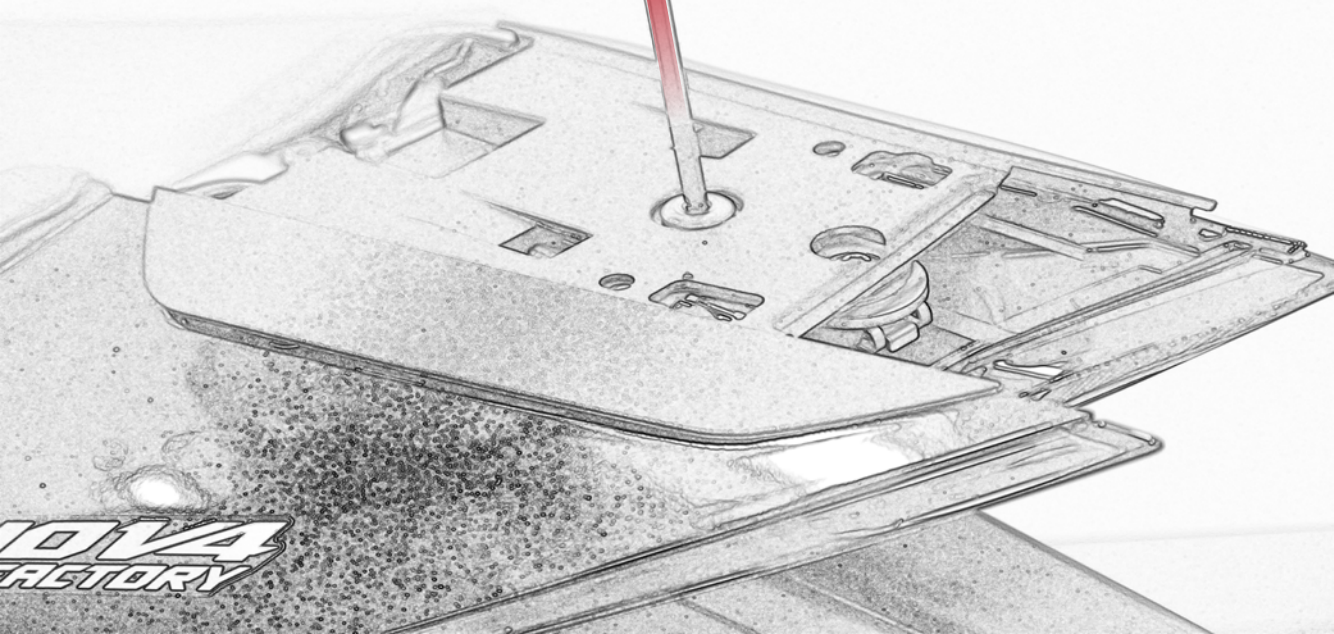

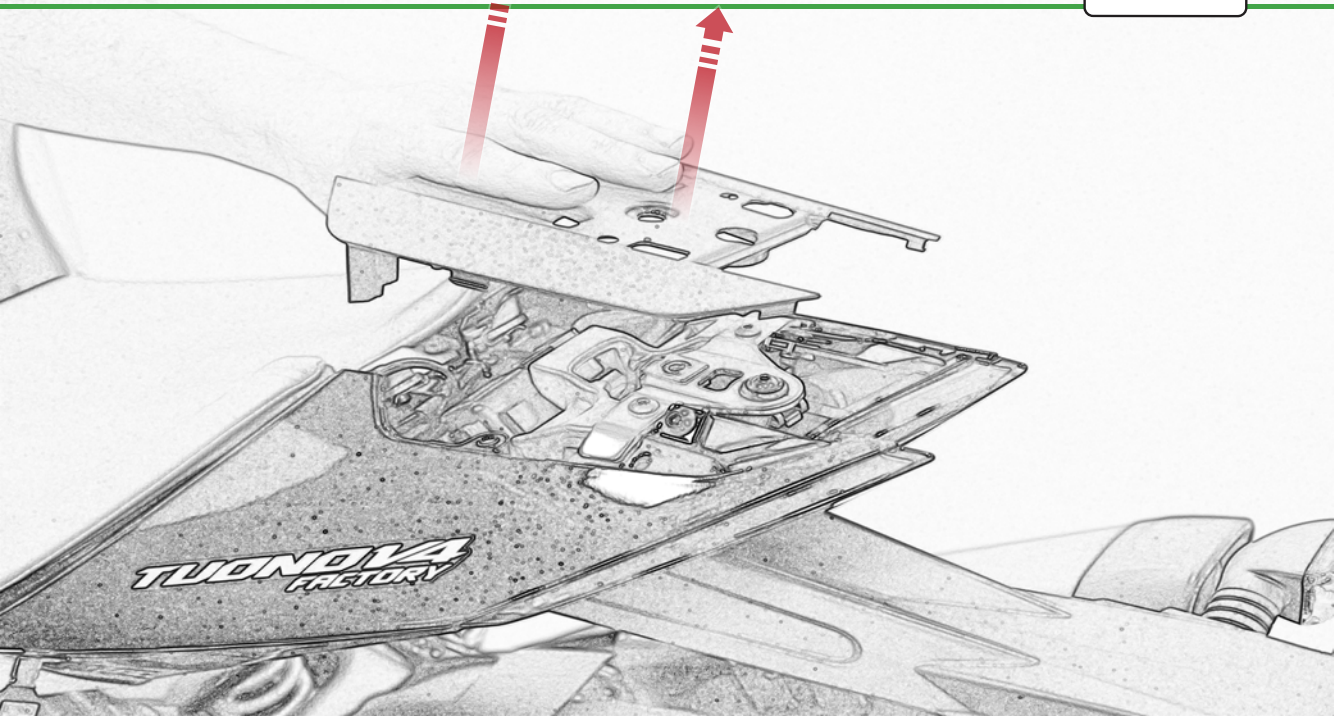

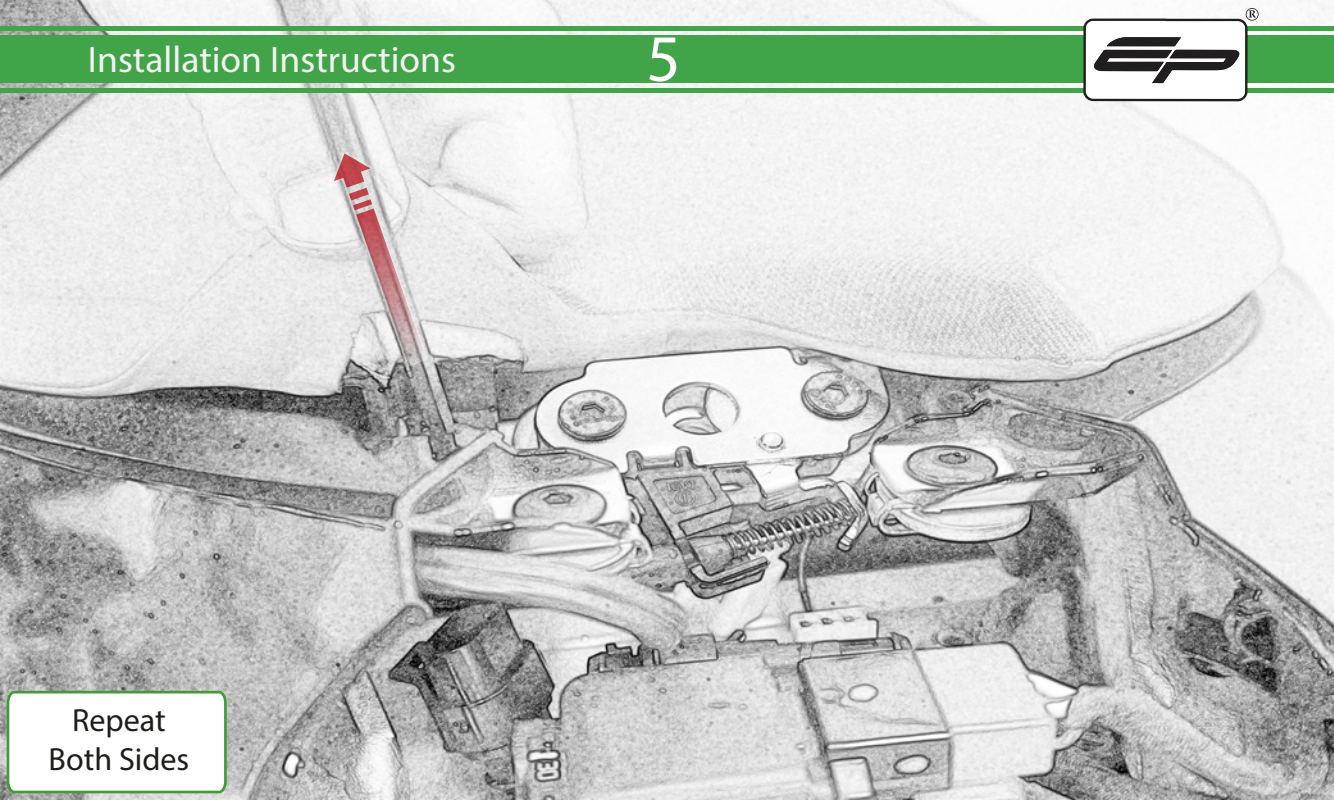



Repeat
Both Sides

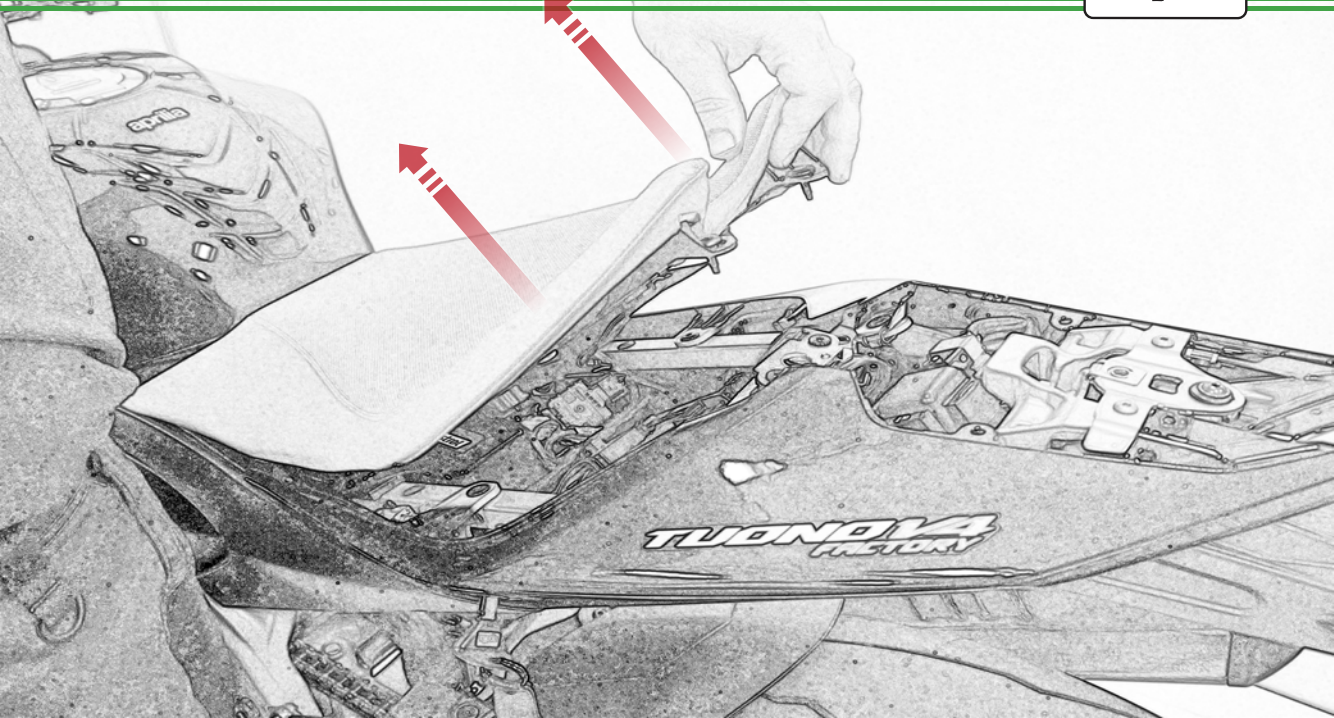







Repeat
Both Sides

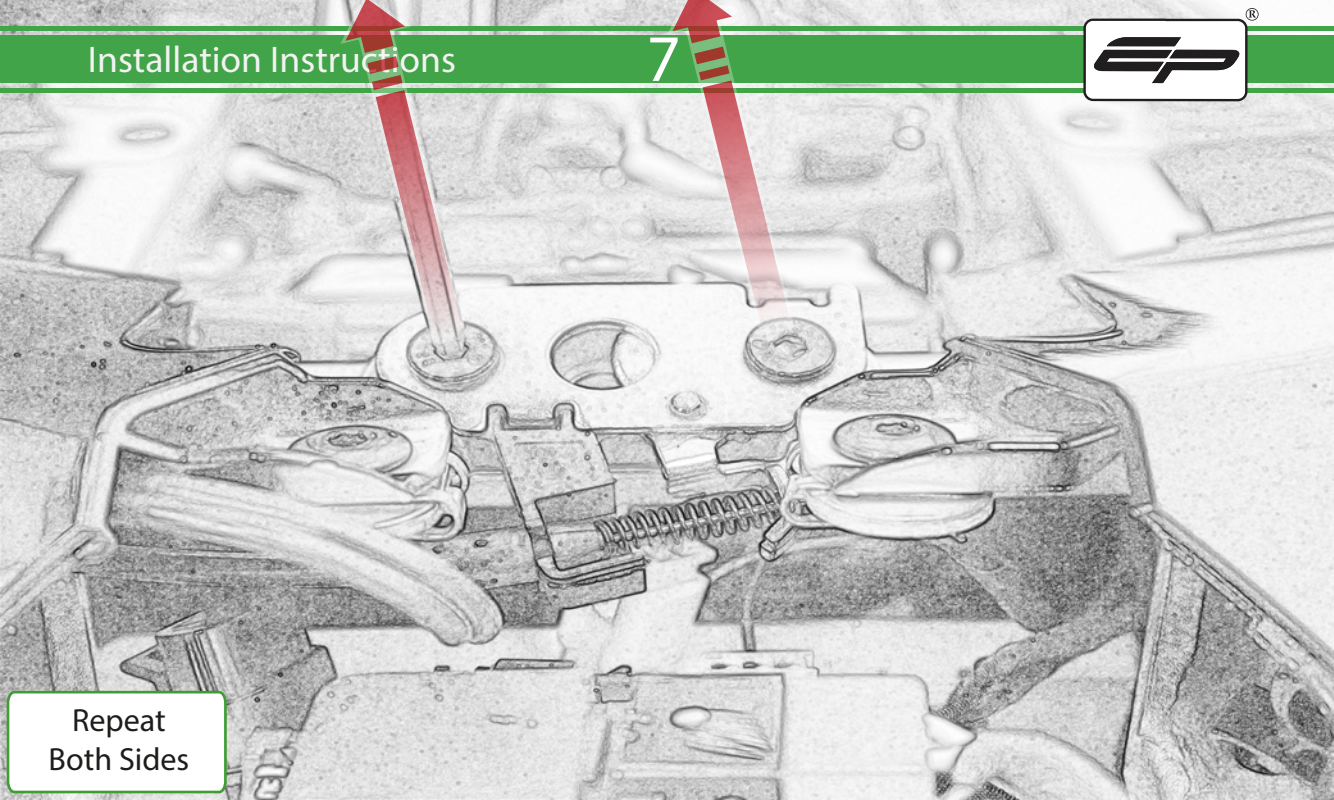

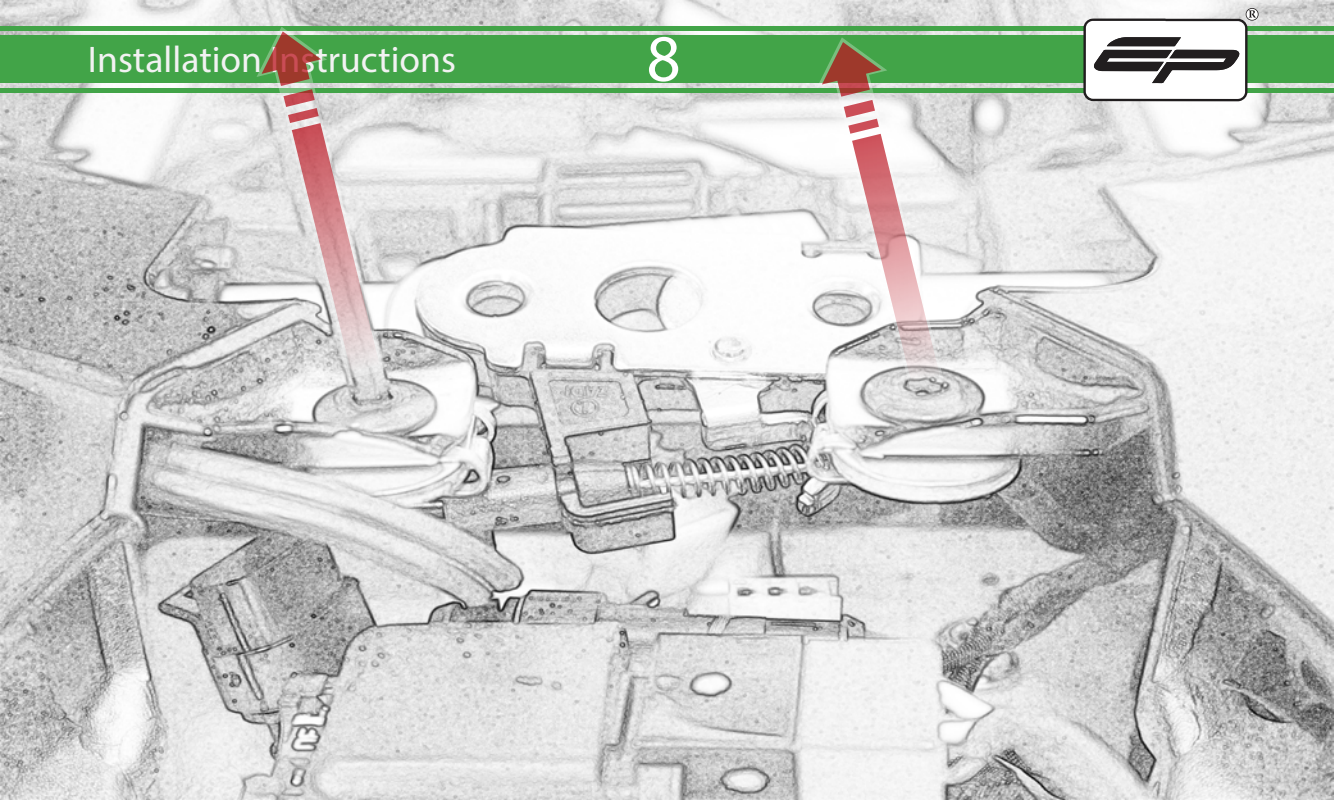


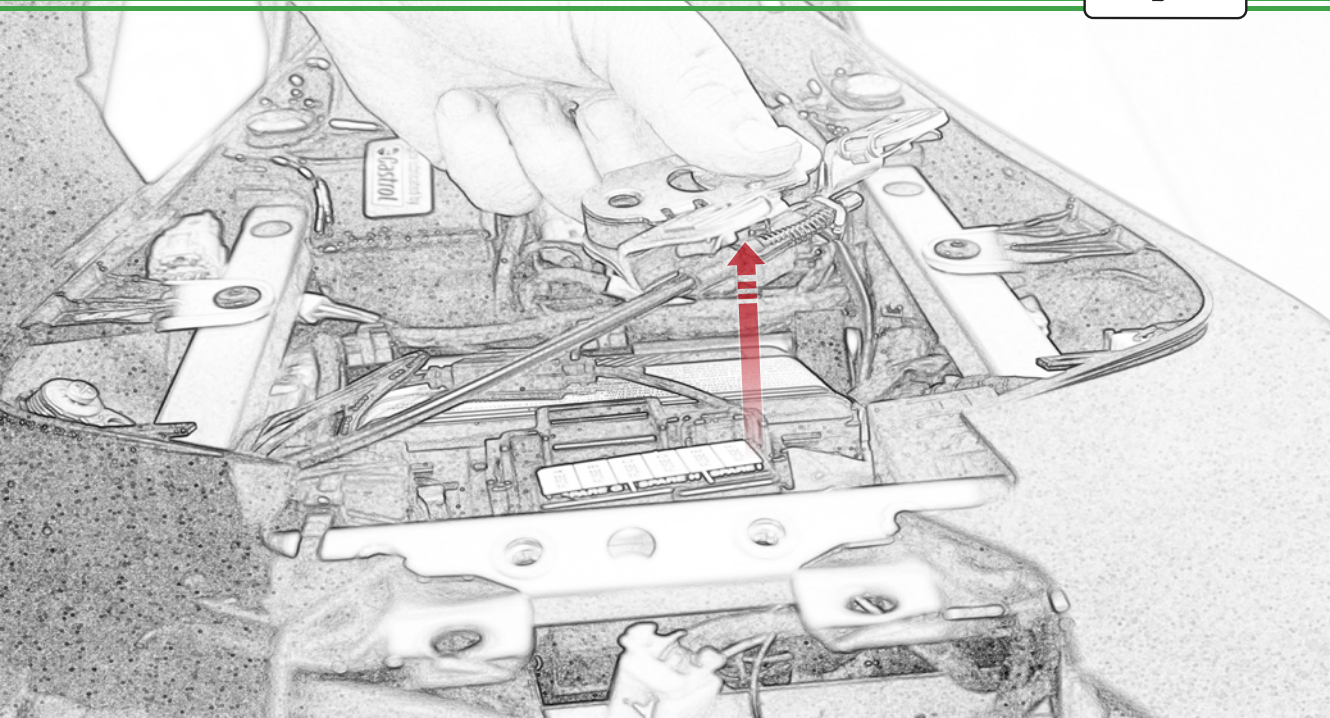

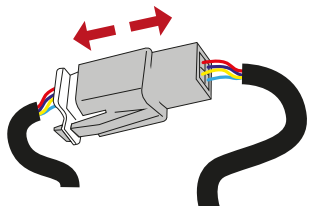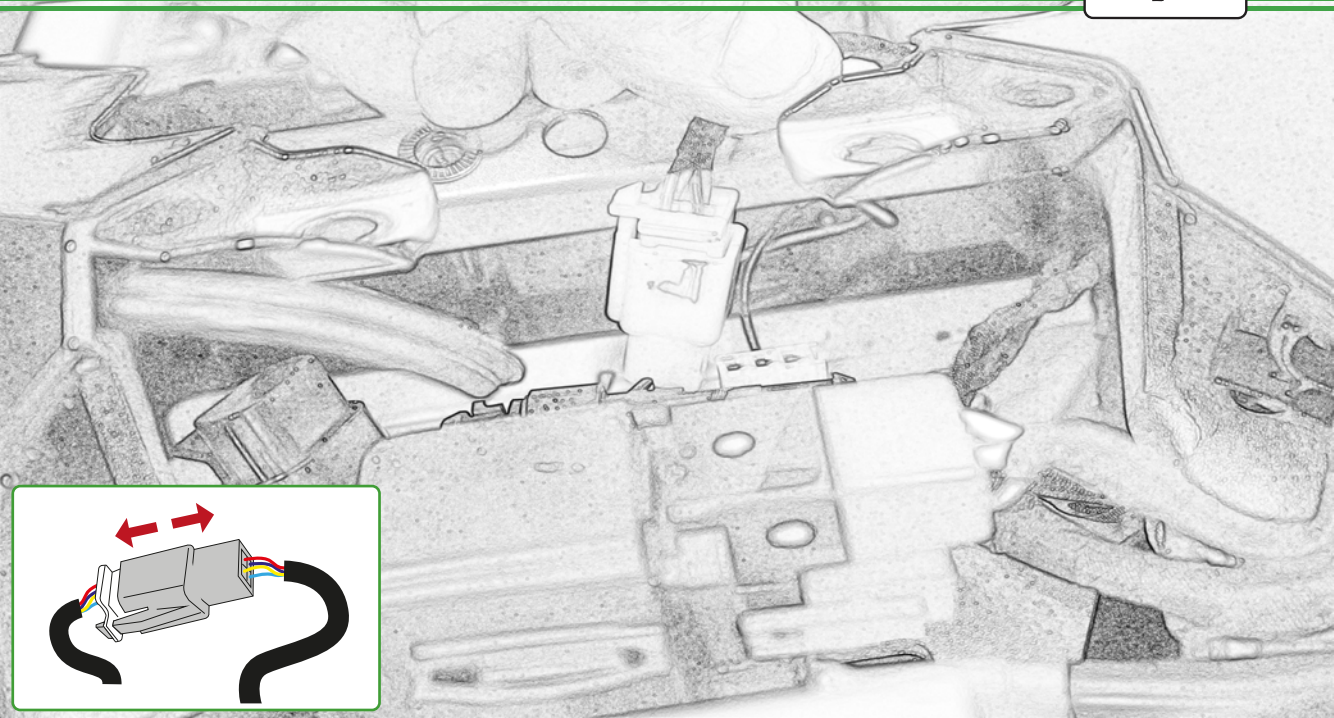


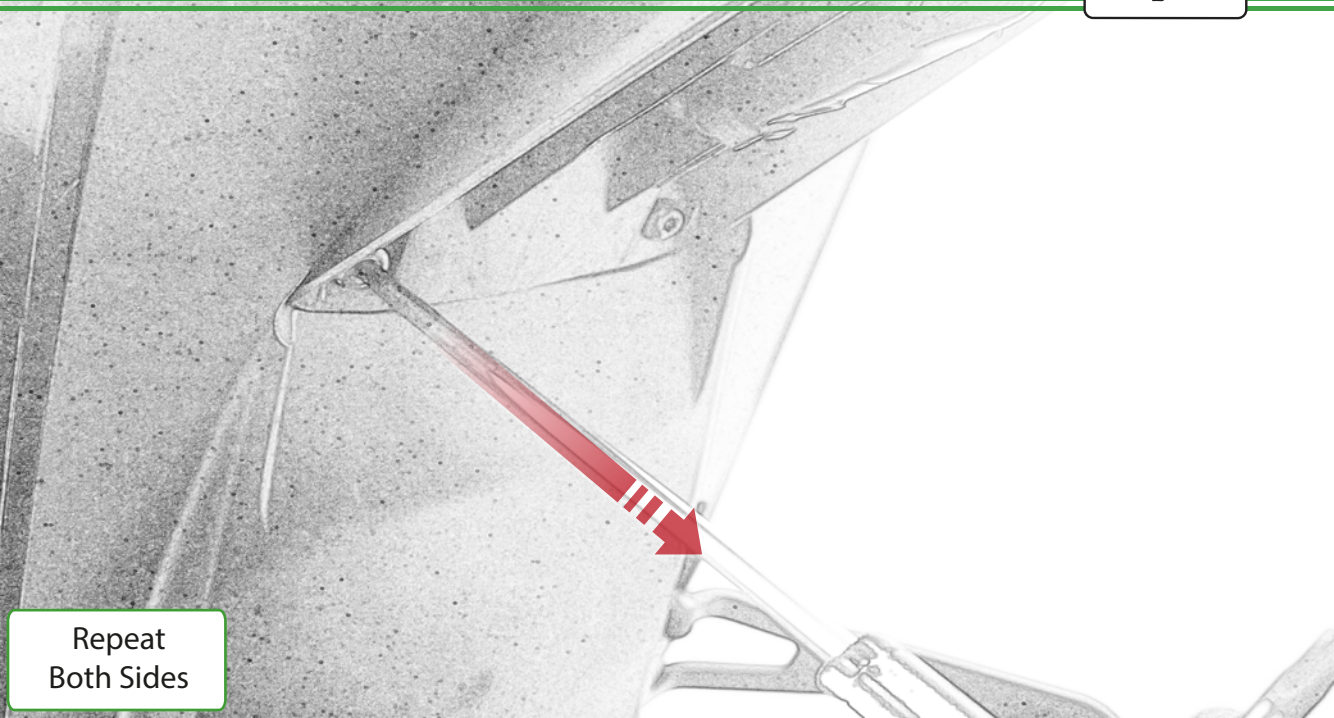



Repeat
Both Sides

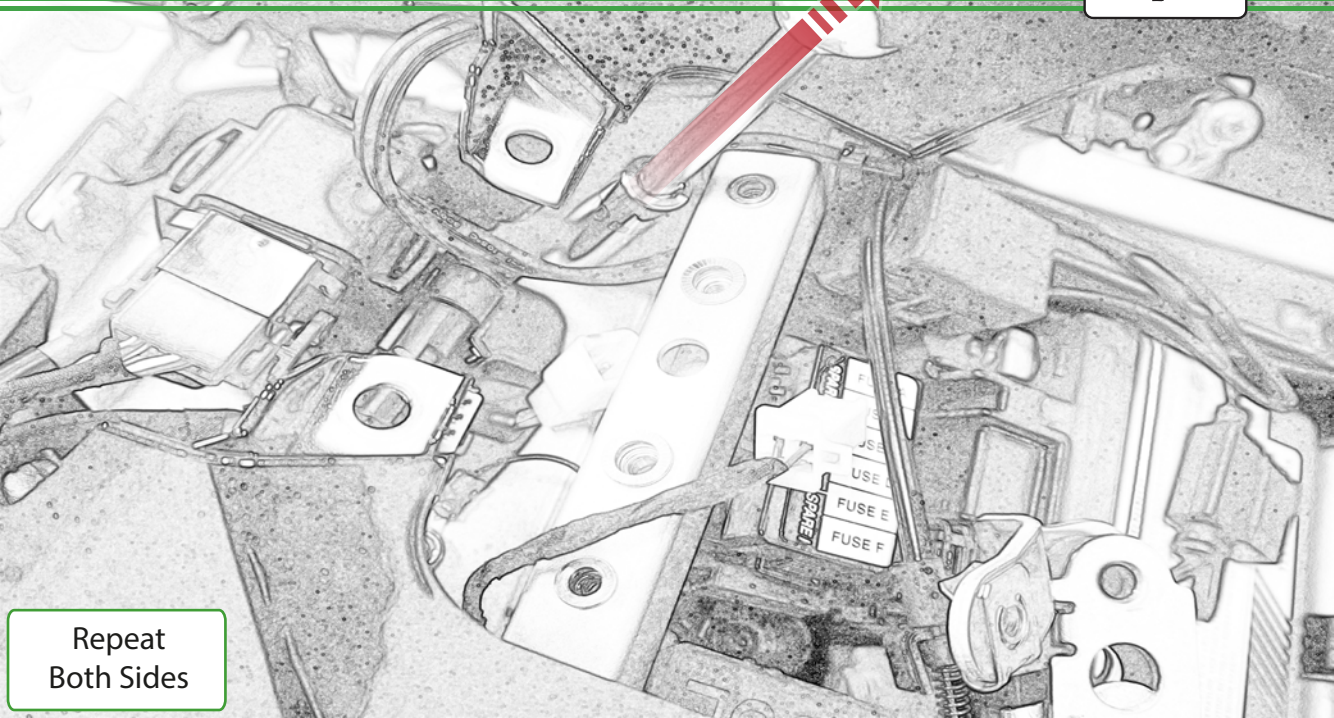




Repeat
Both Sides

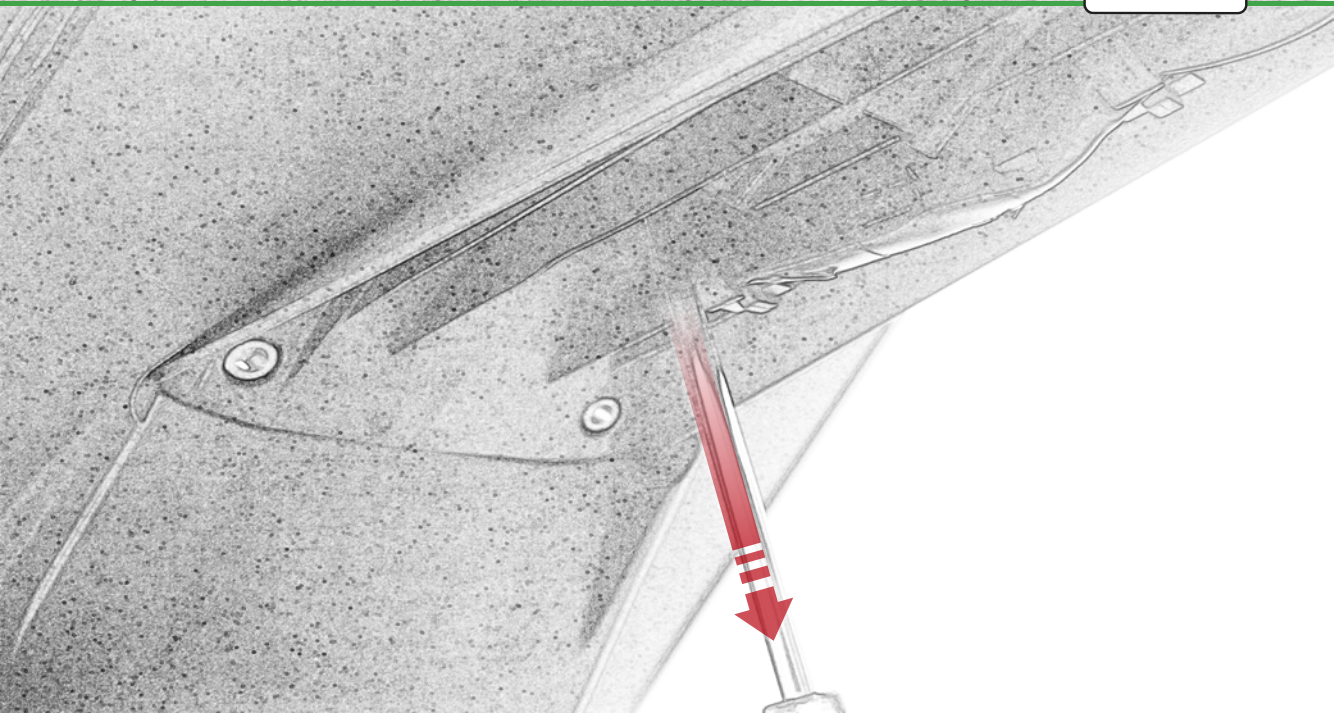


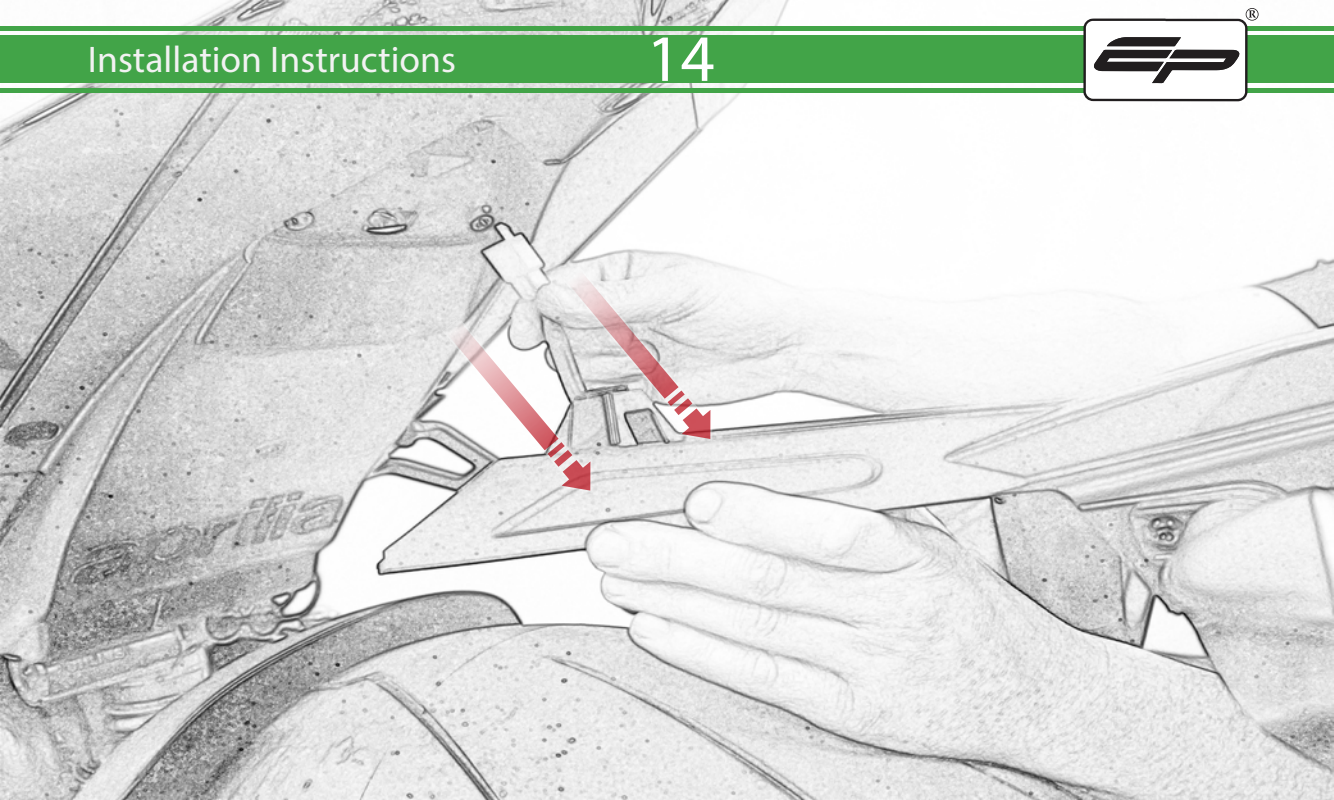


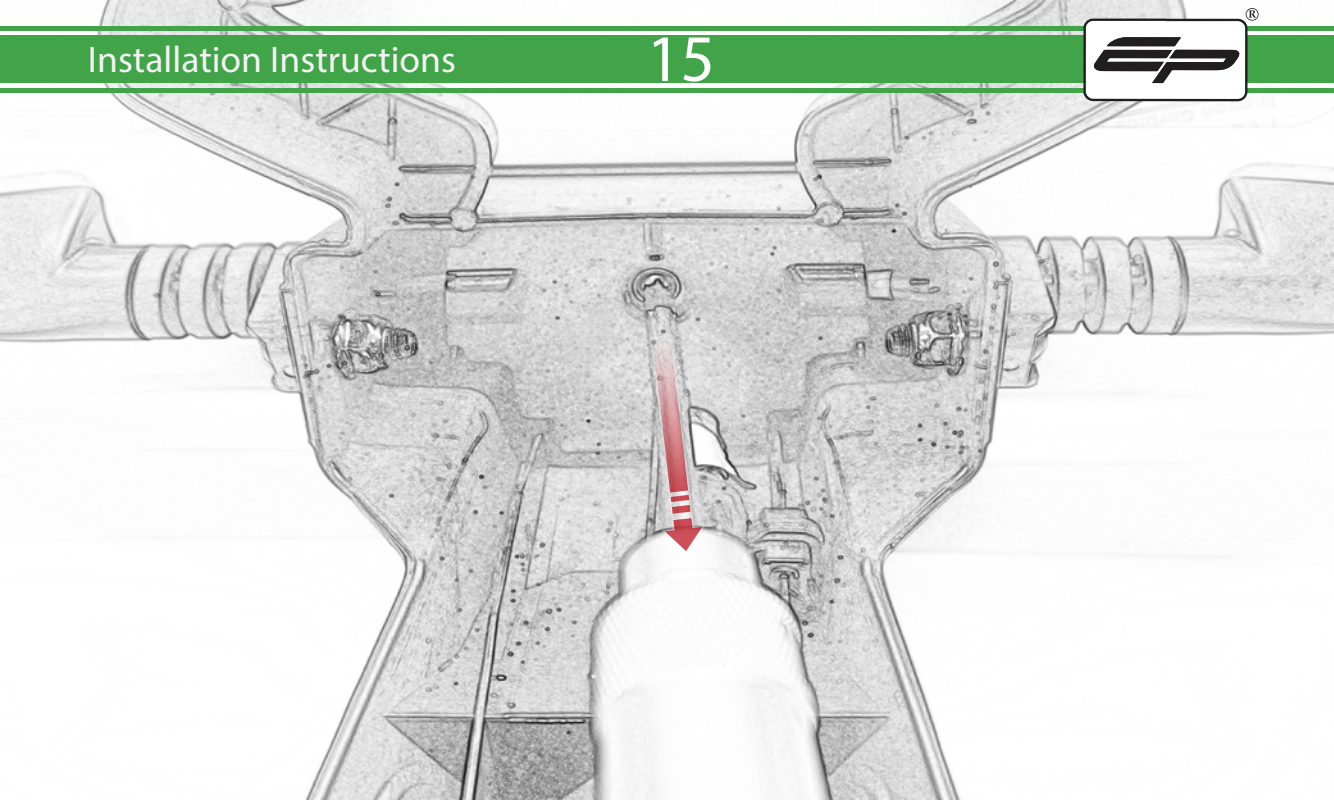


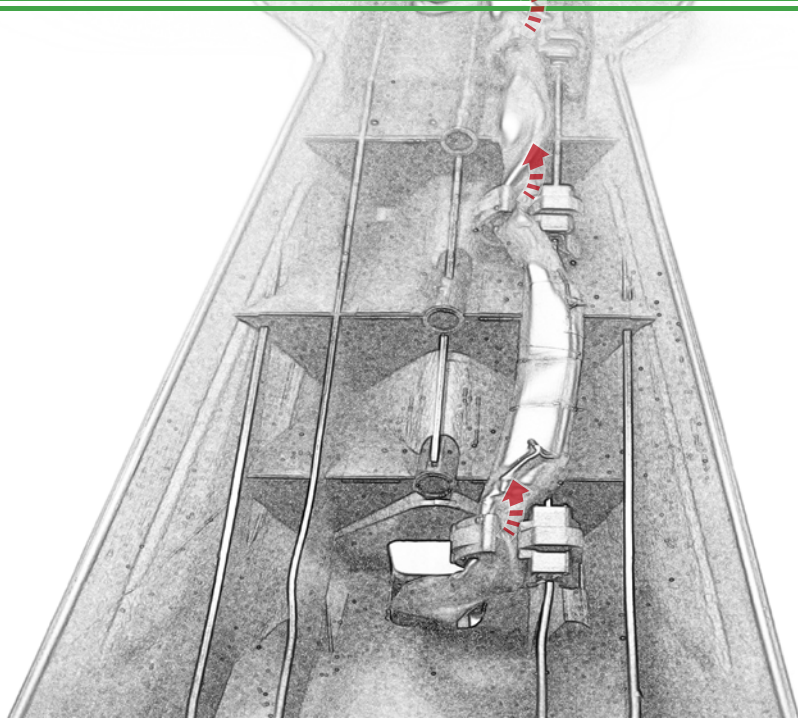


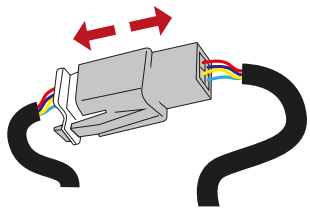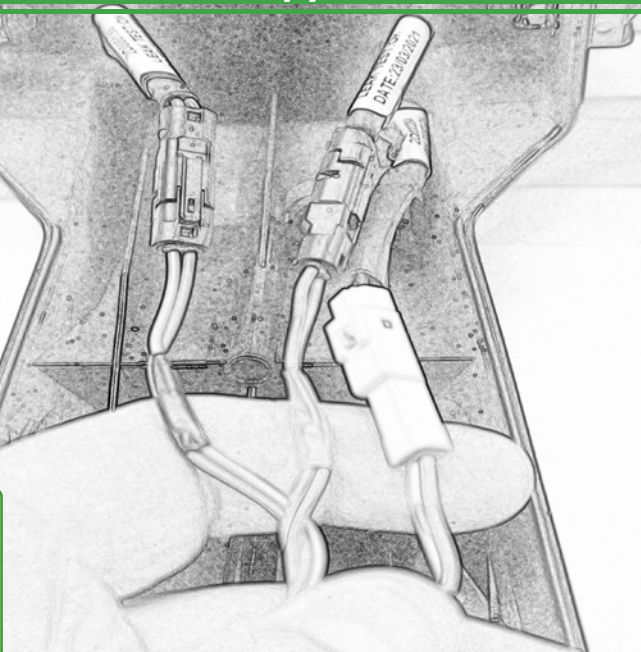


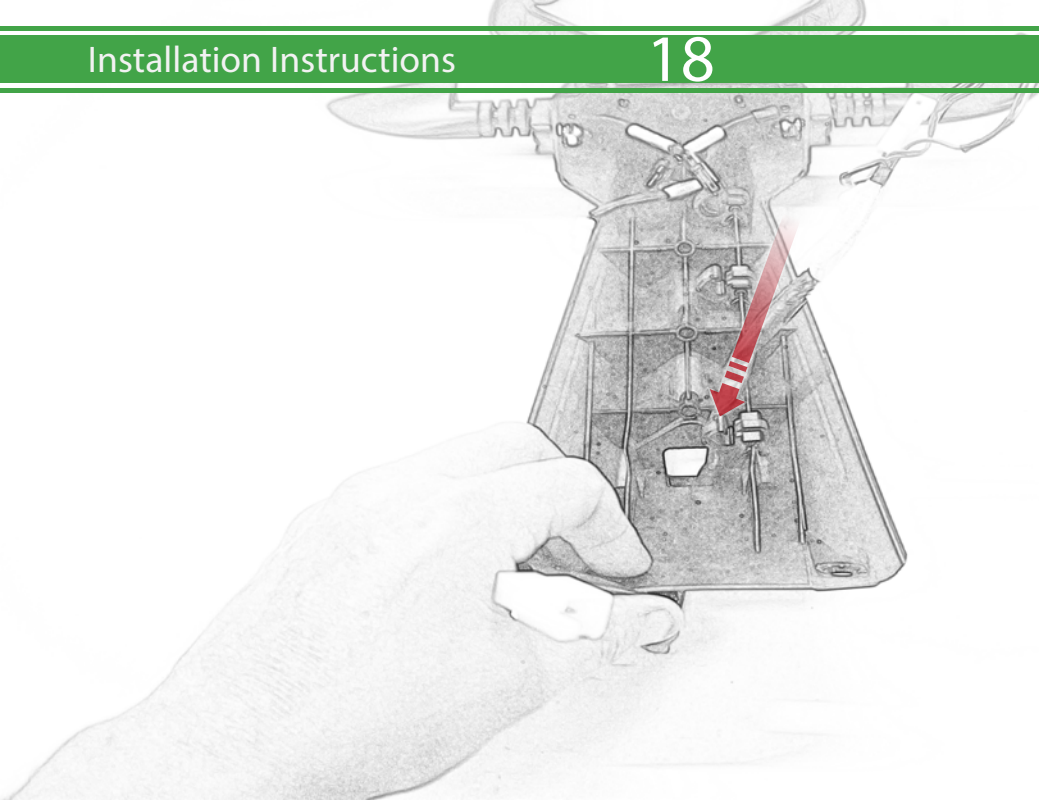


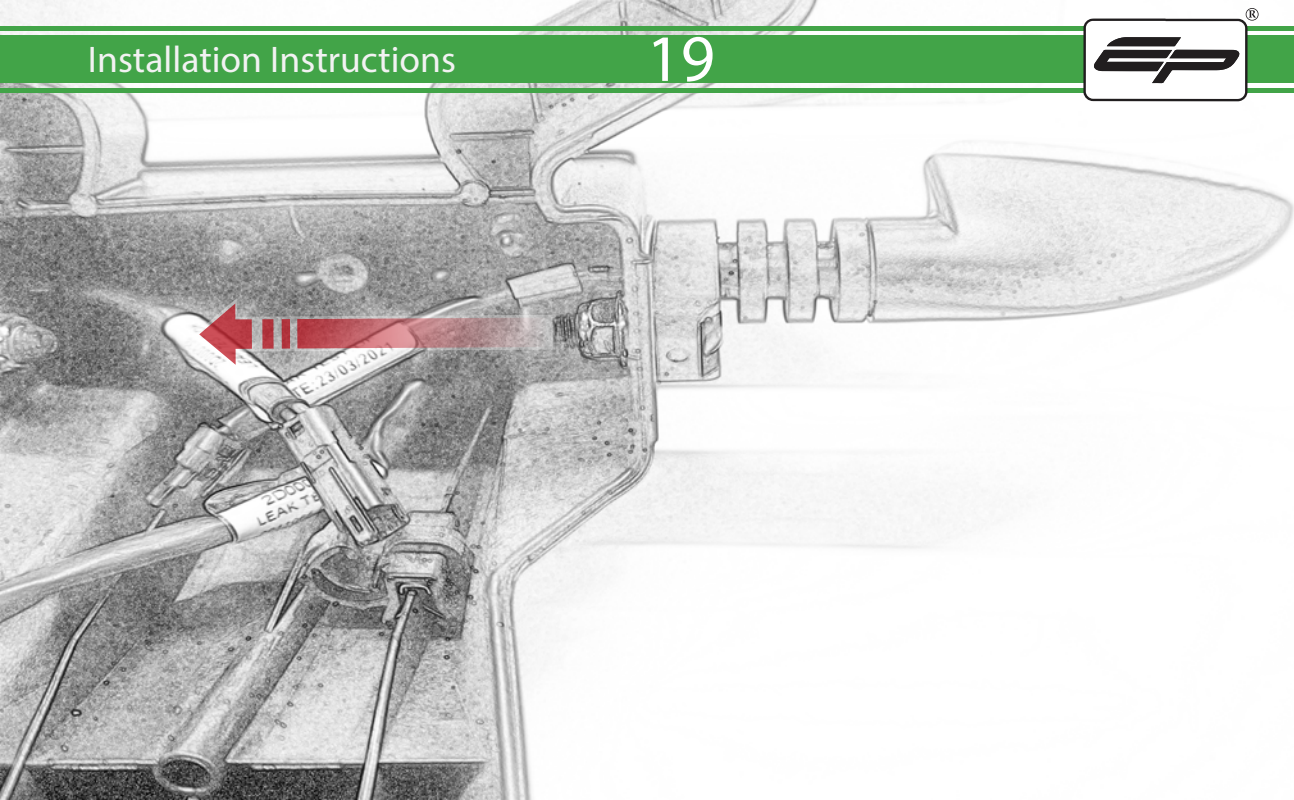


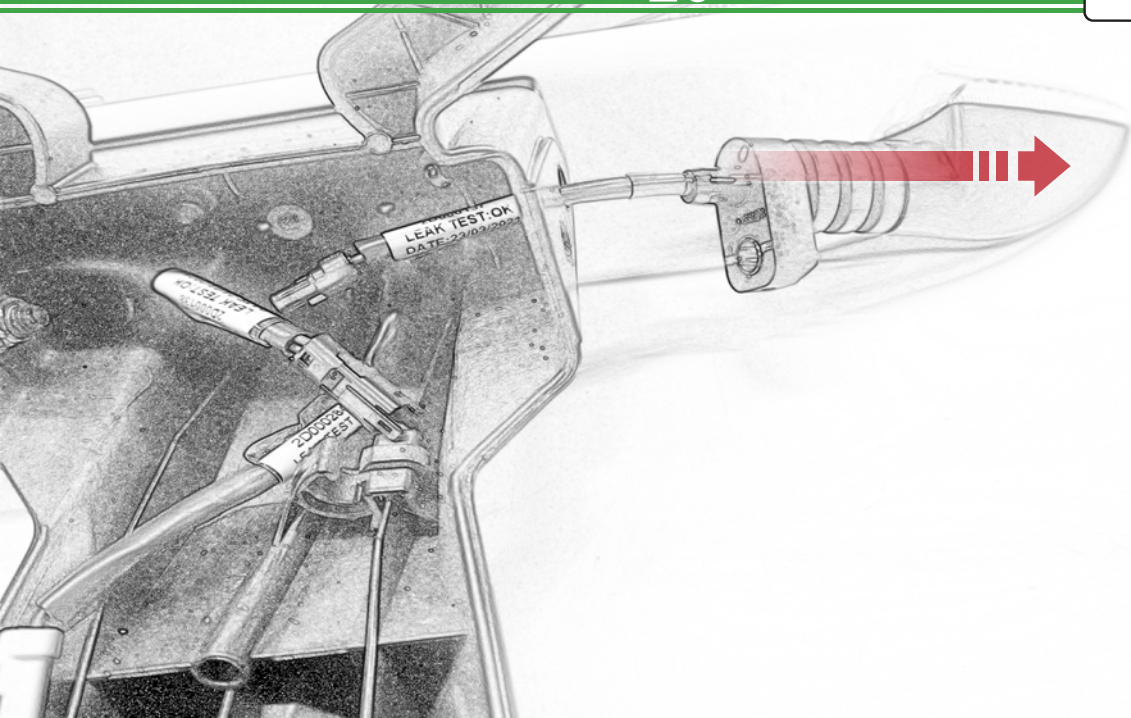


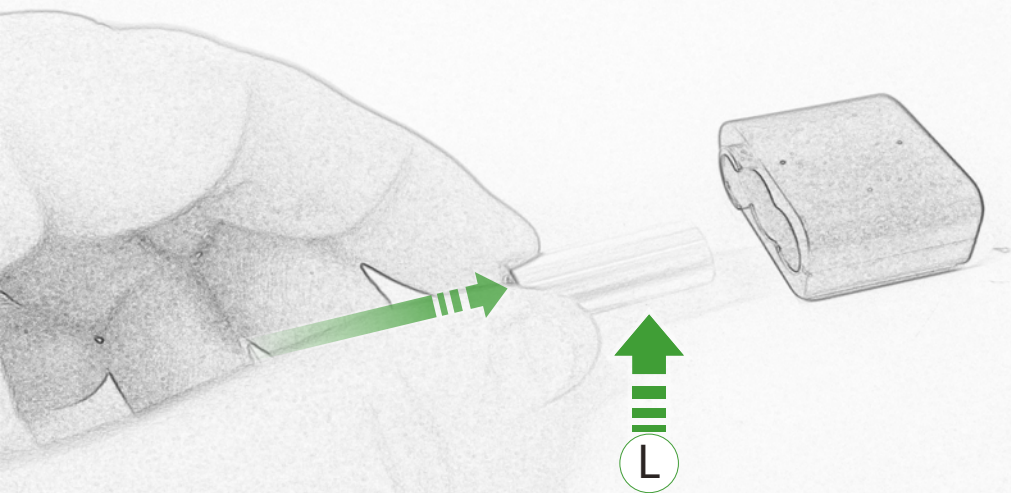


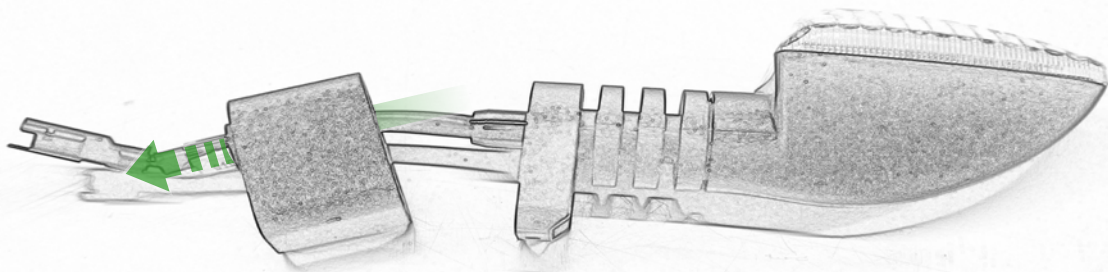

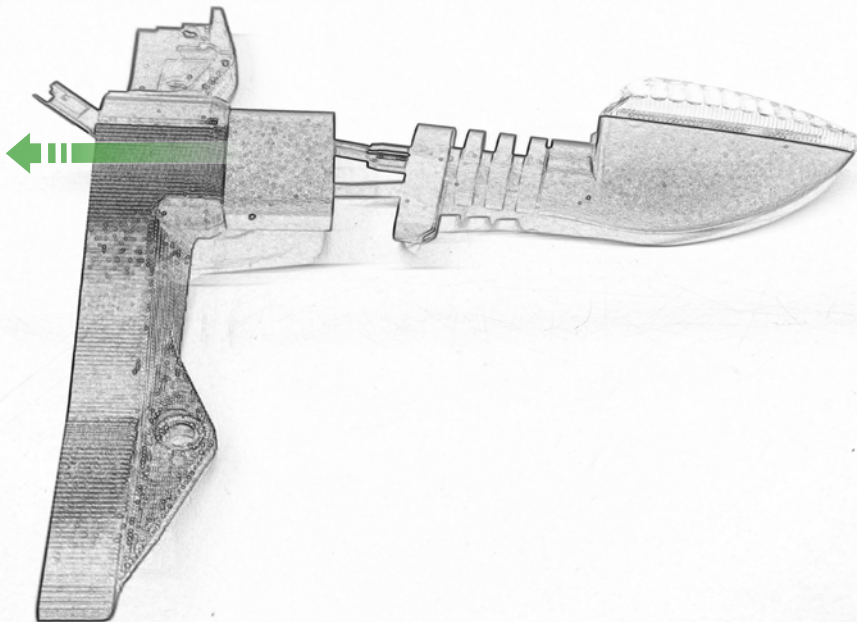


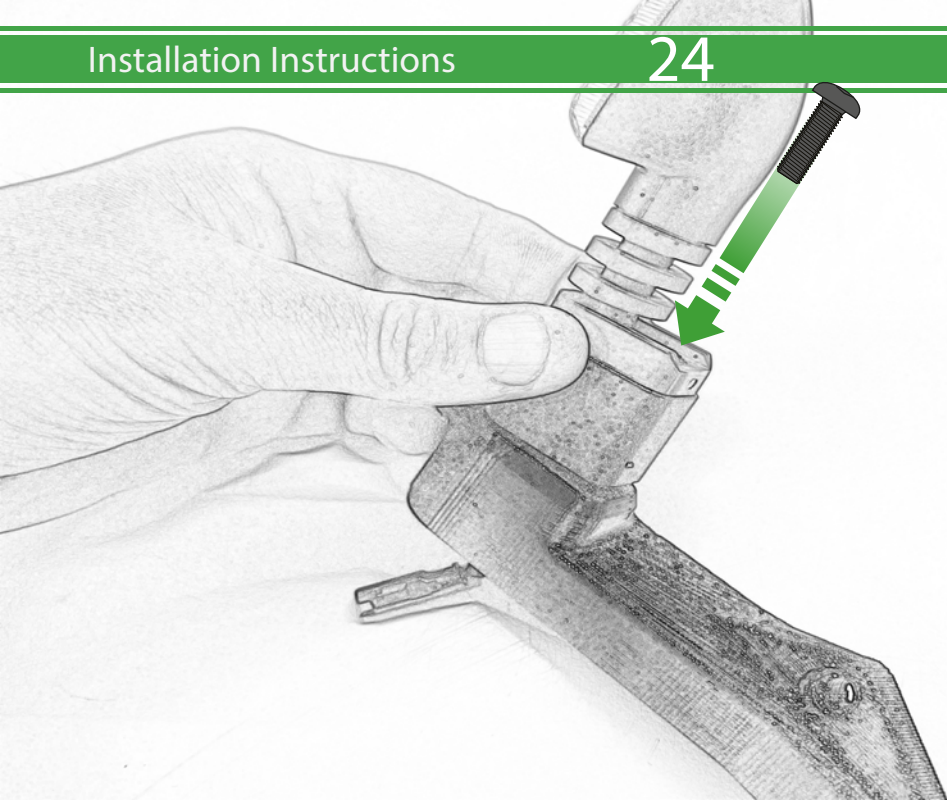


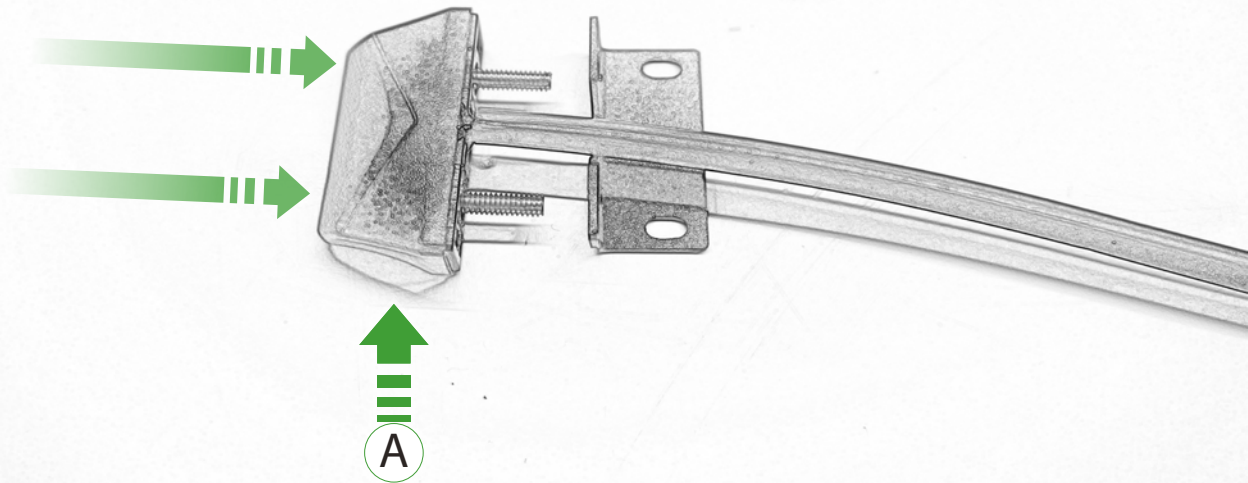

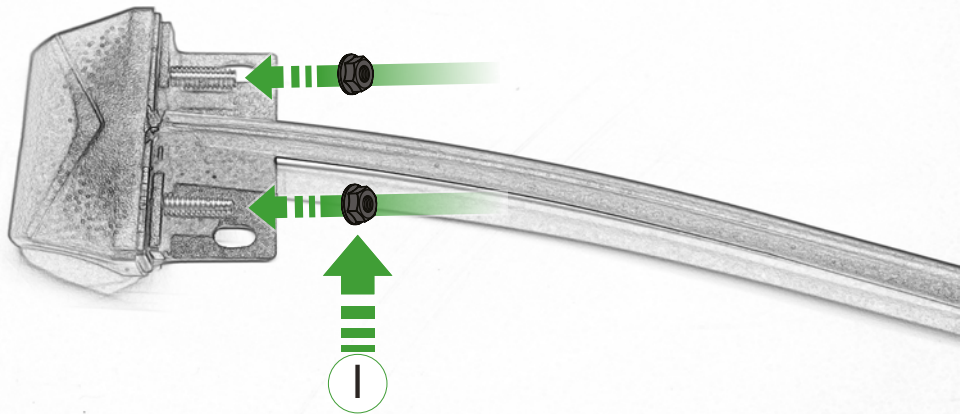


J

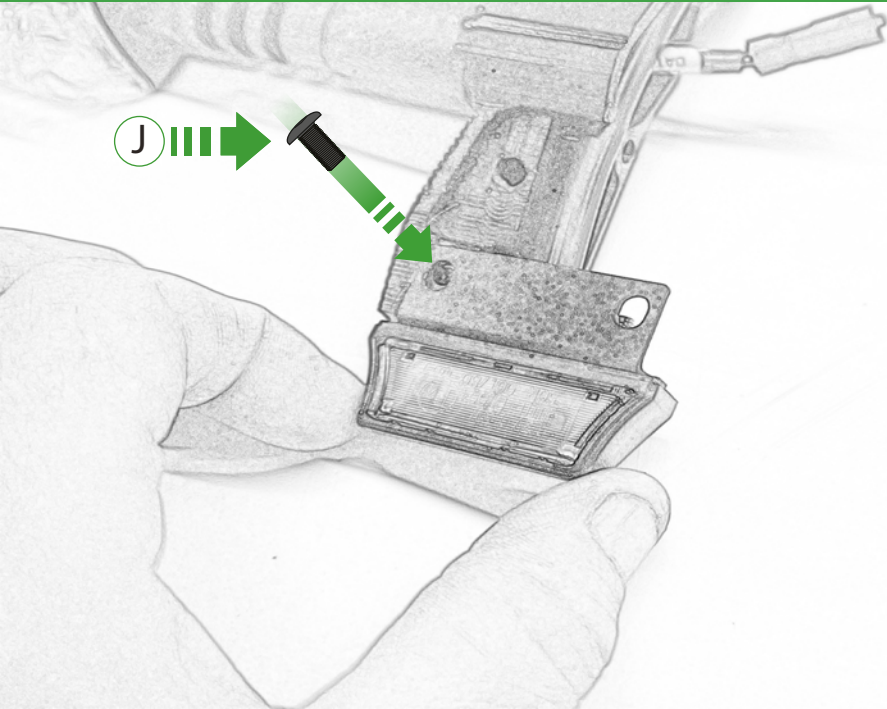

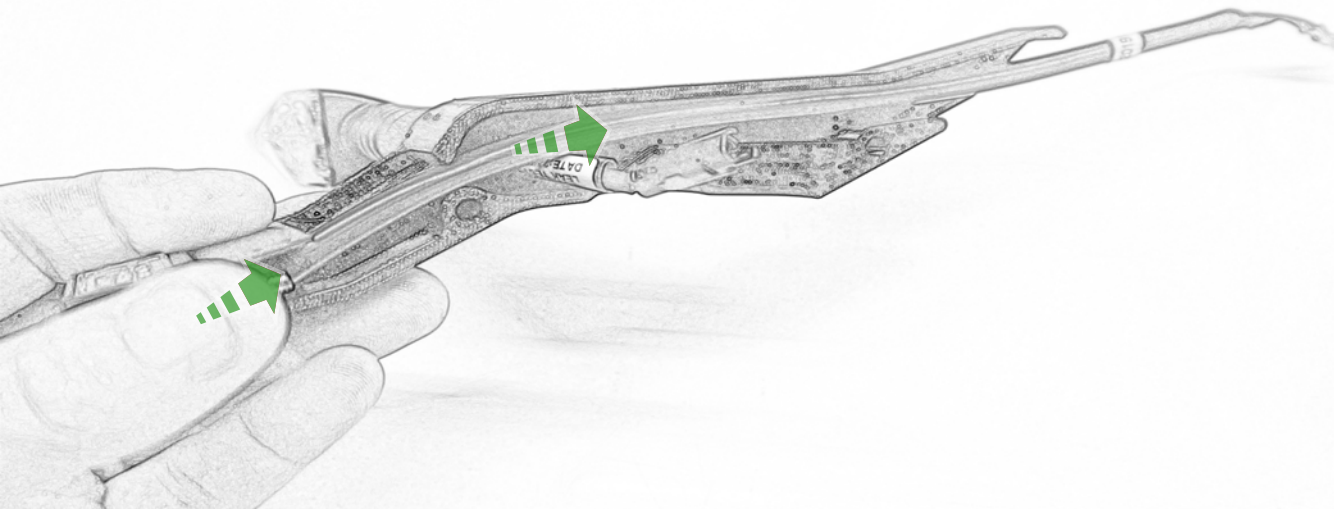




Caution


Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed

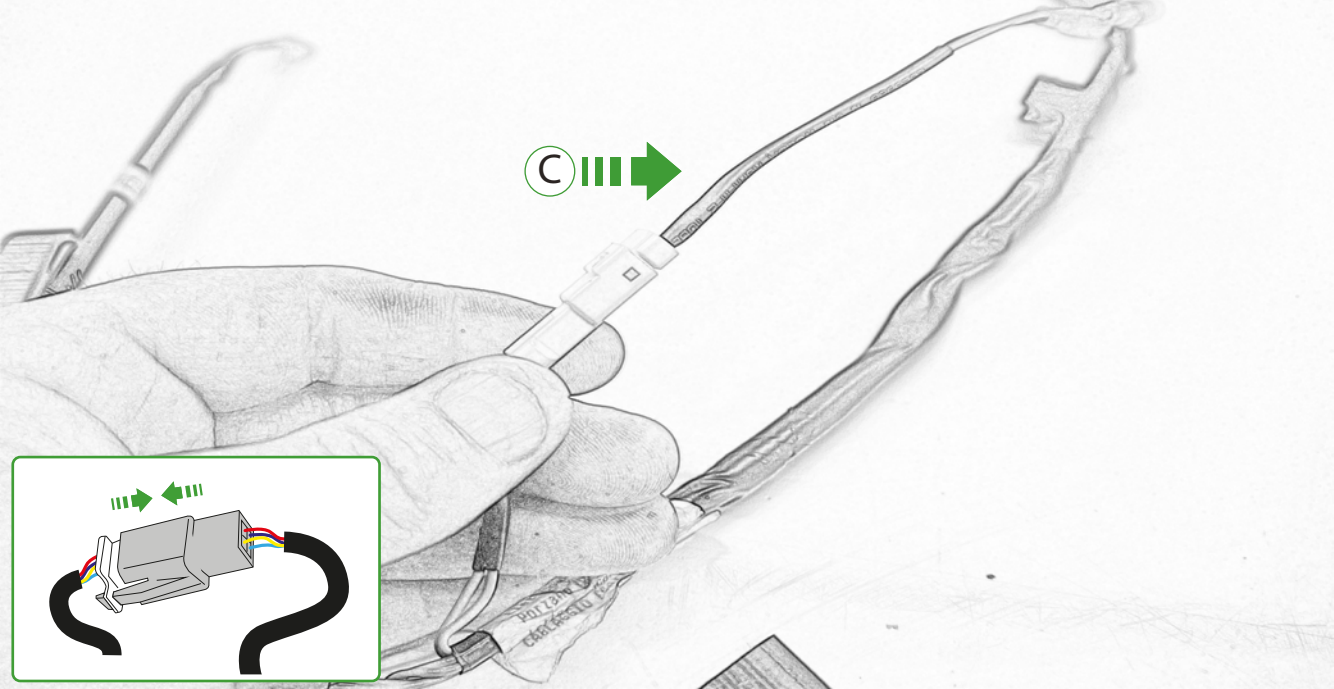


C

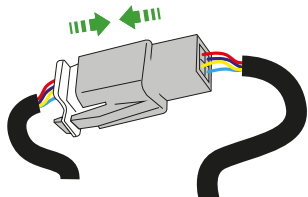


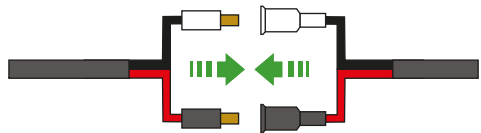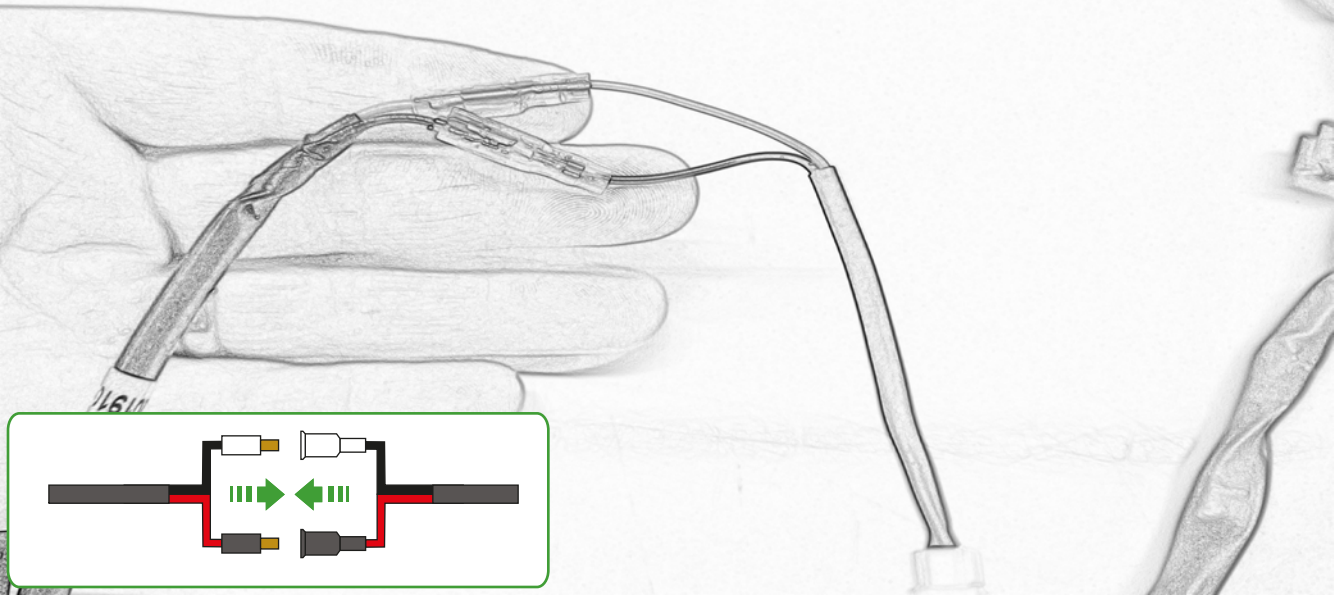


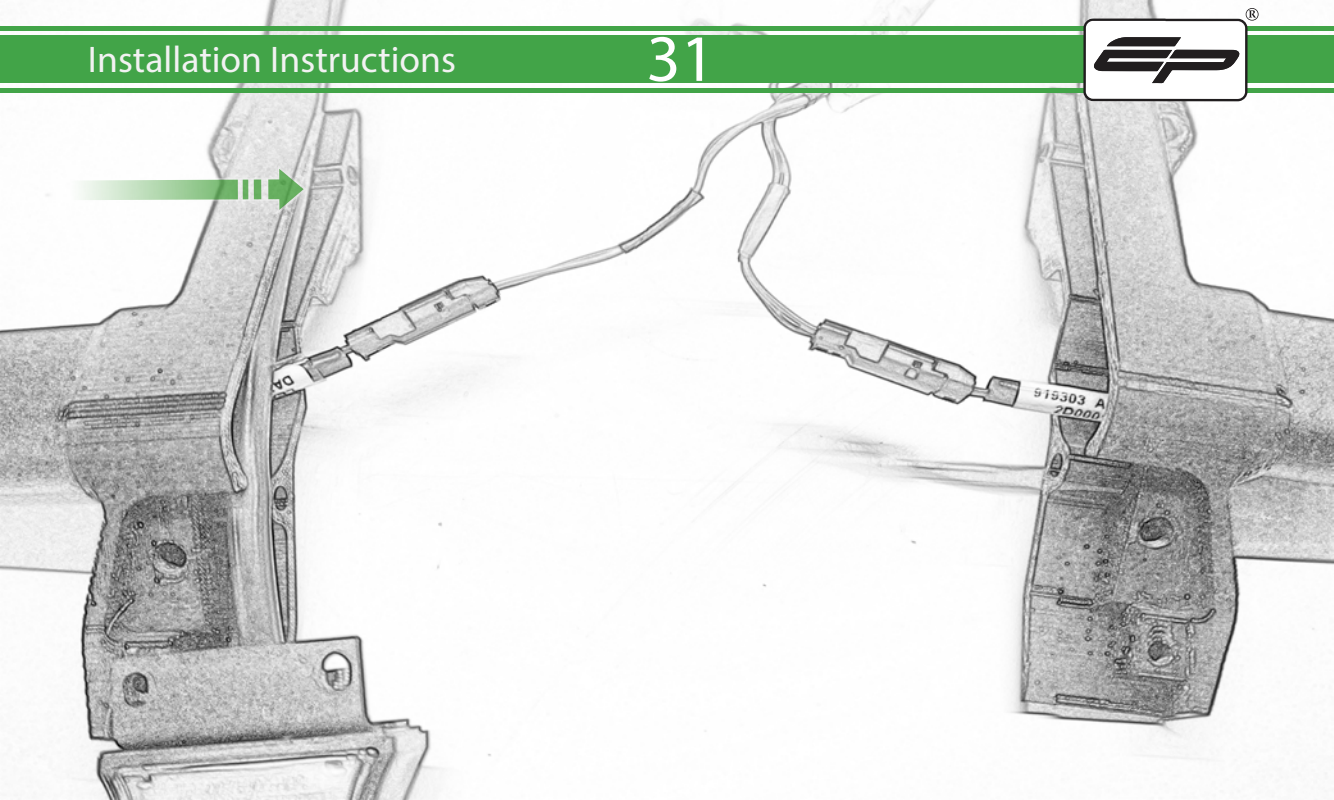


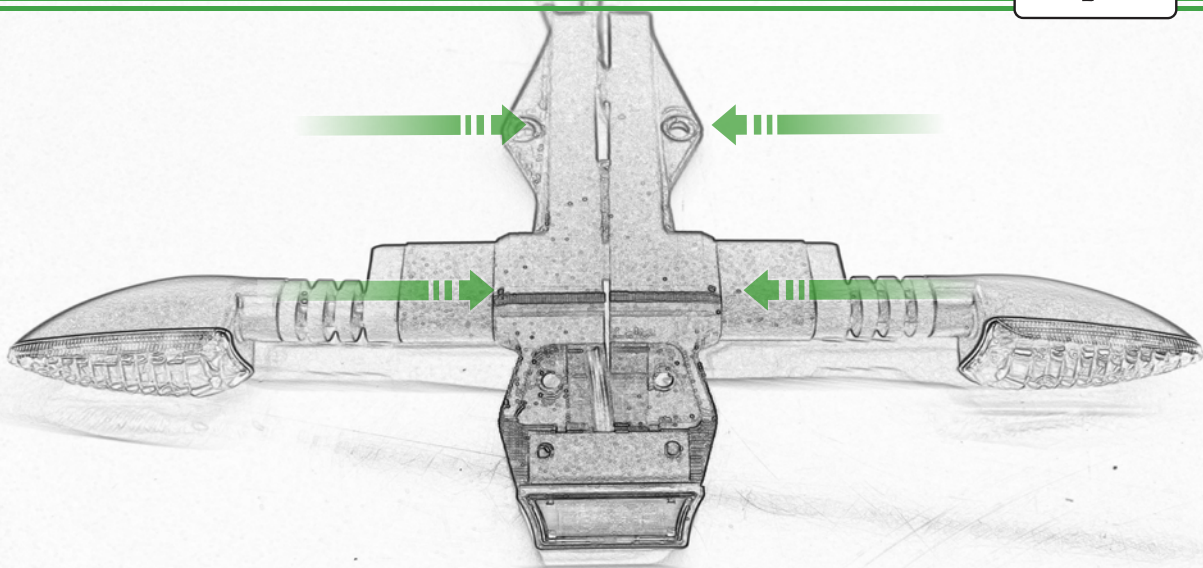



Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed

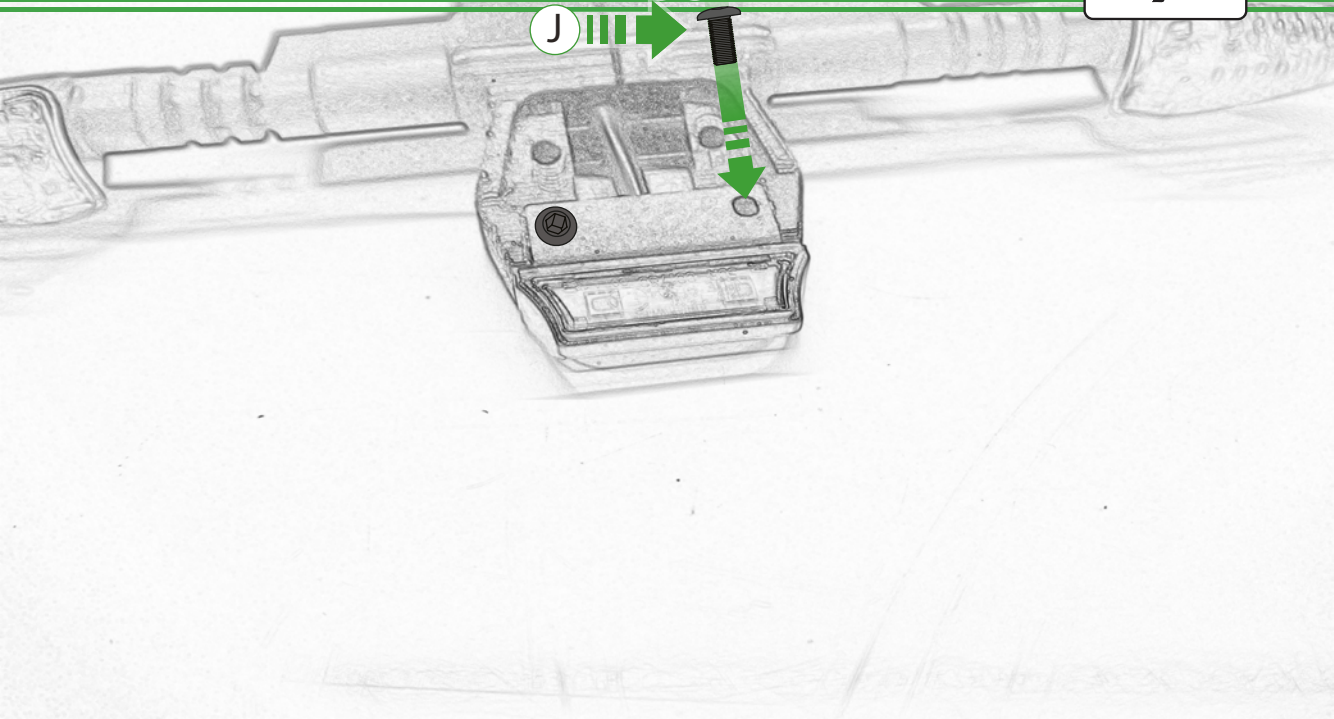


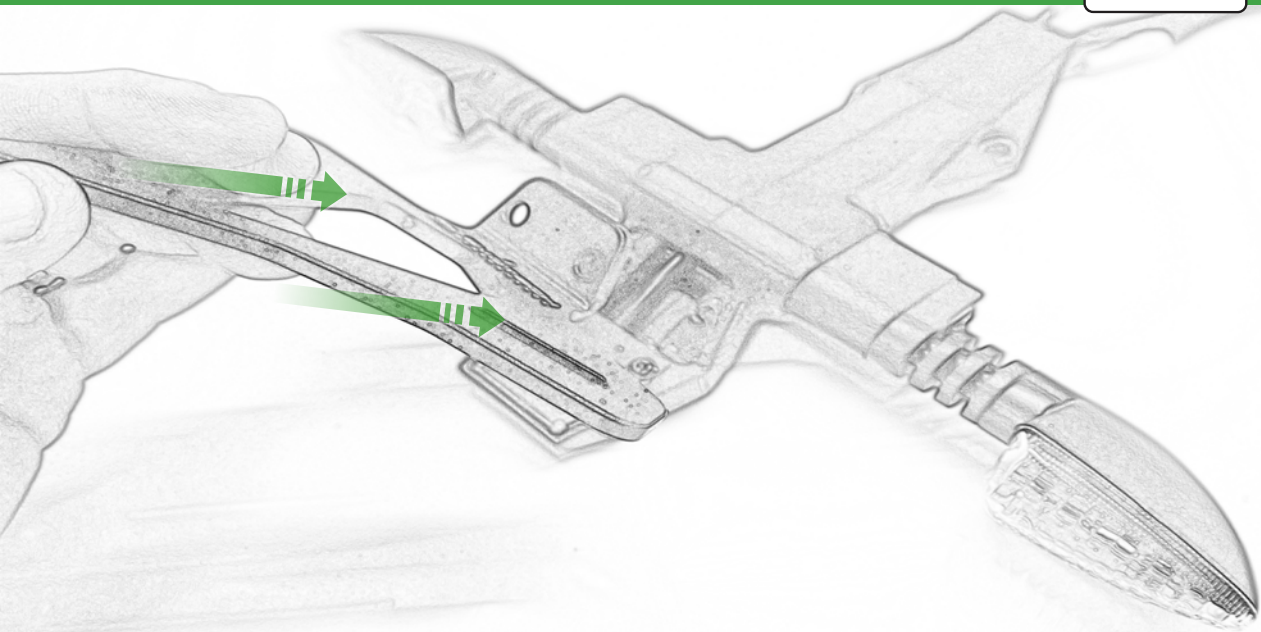


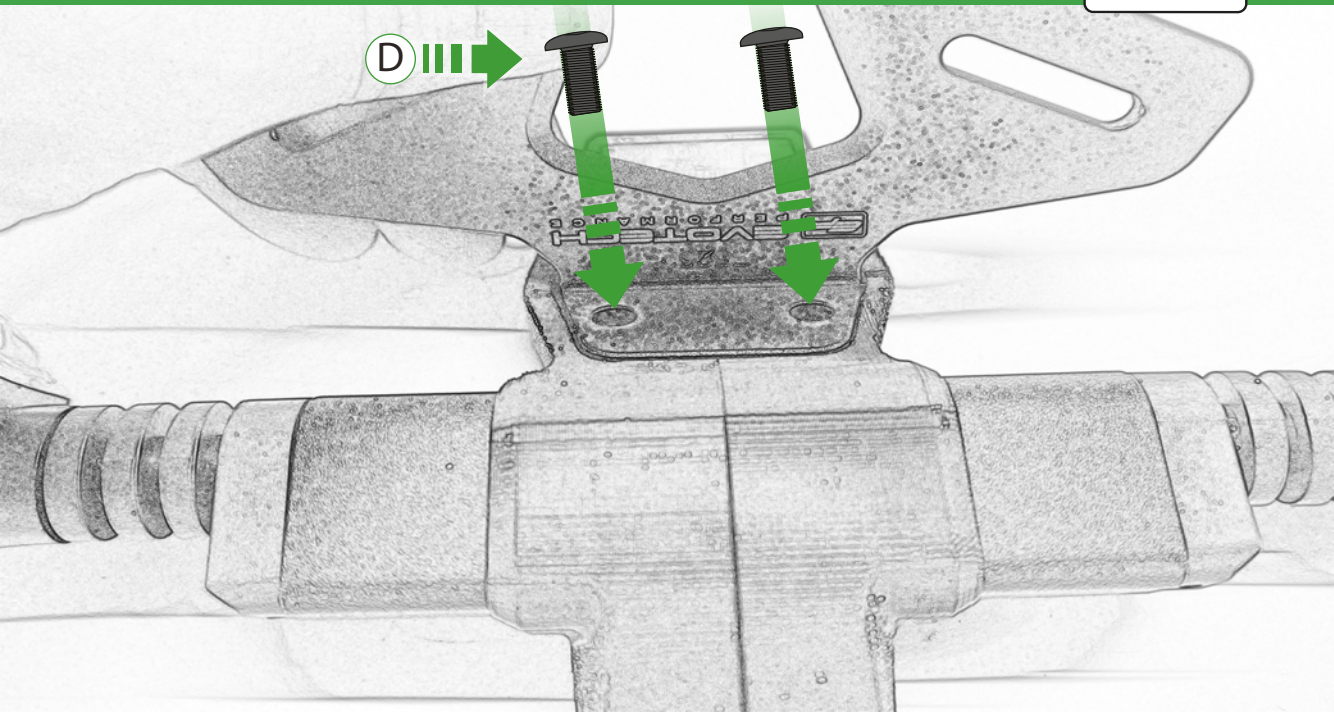

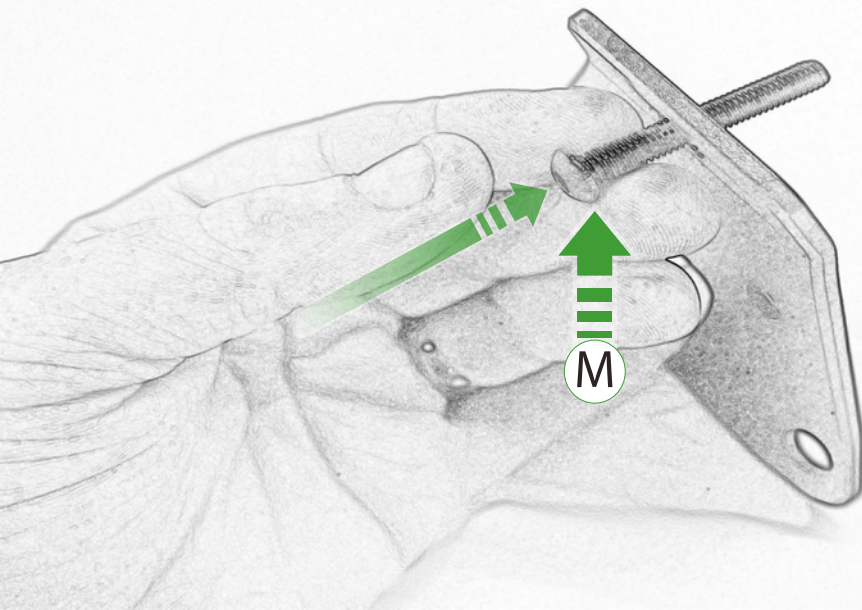

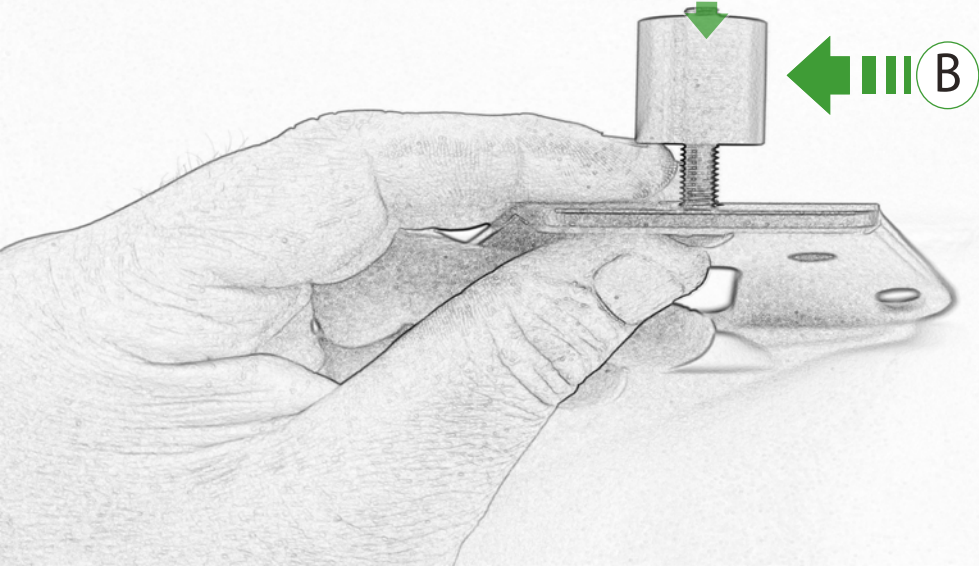


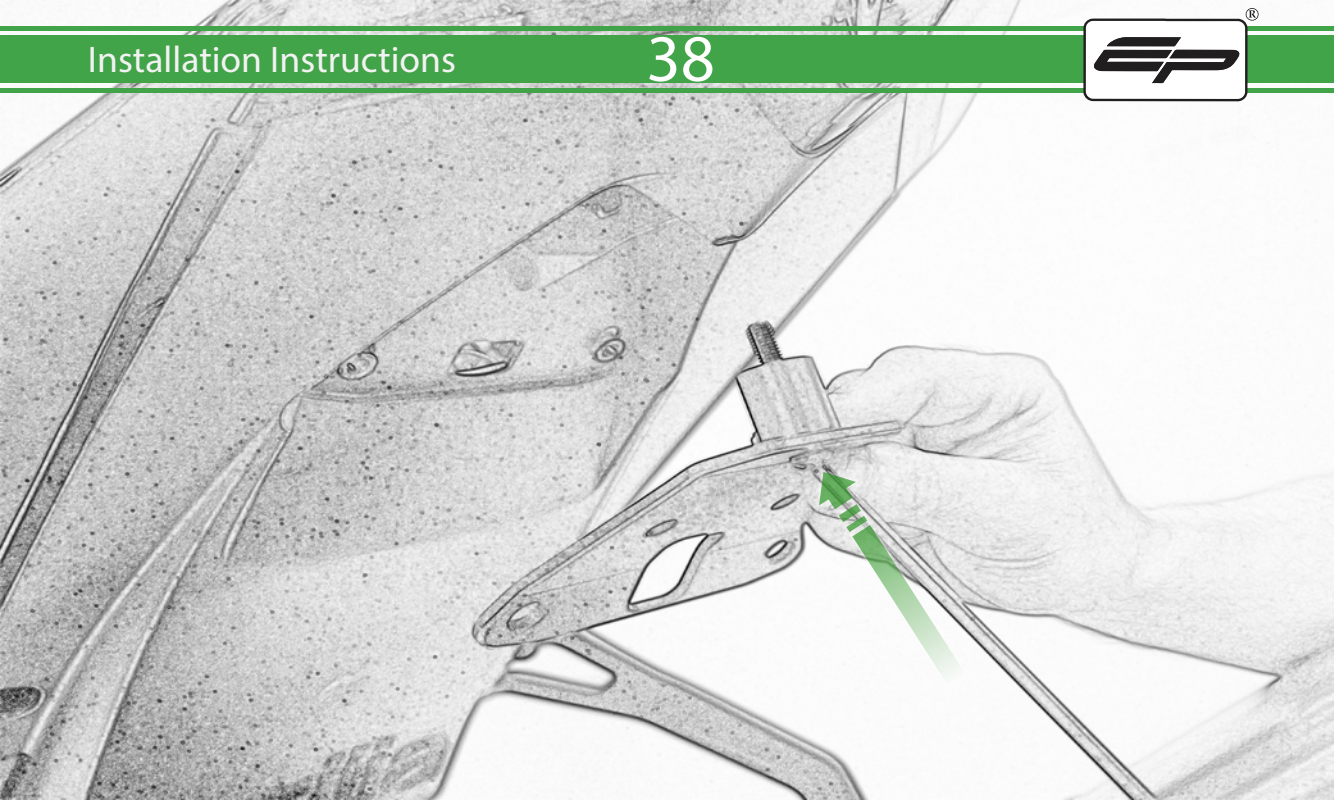


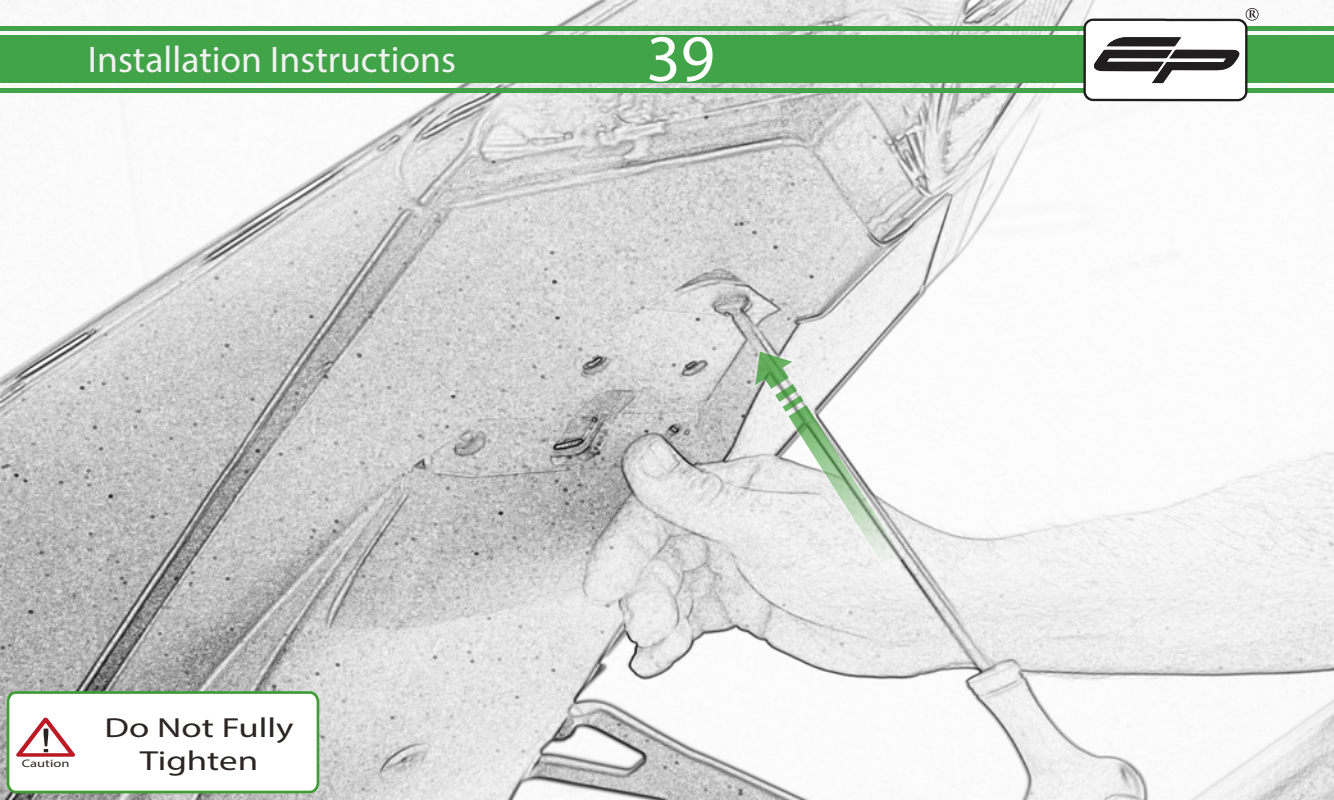


Caution


Do Not Fully
Tighten

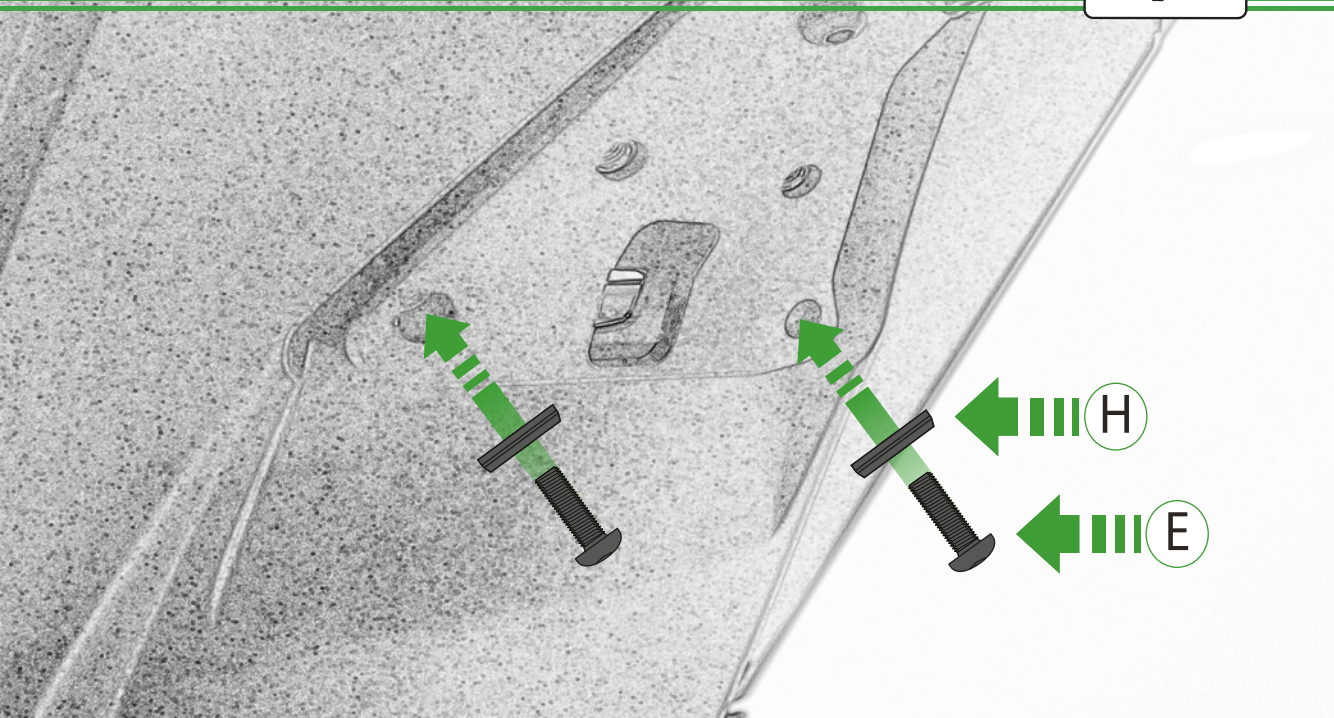

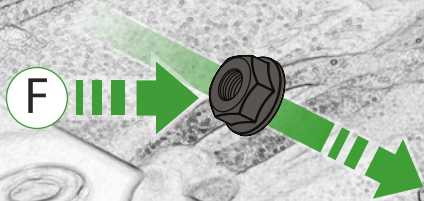



Repeat
Both Sides


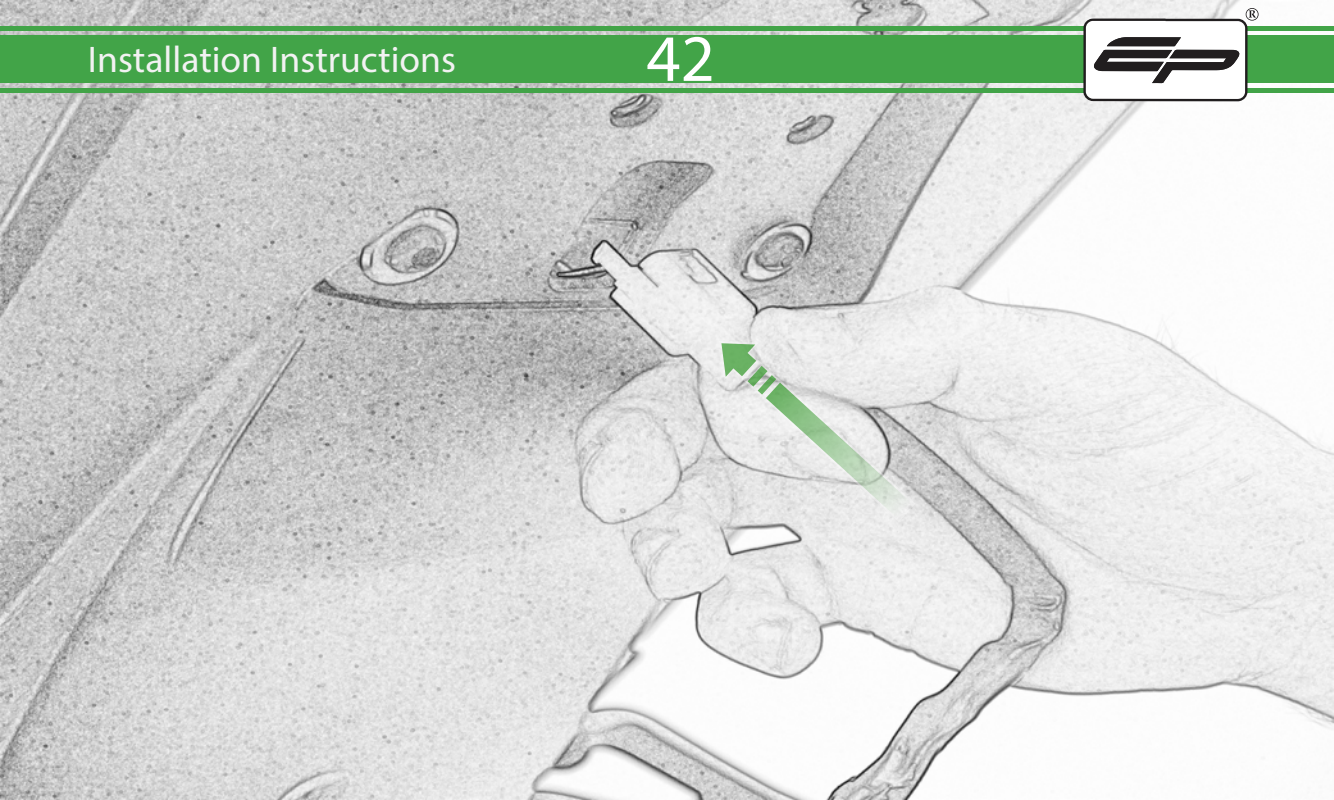


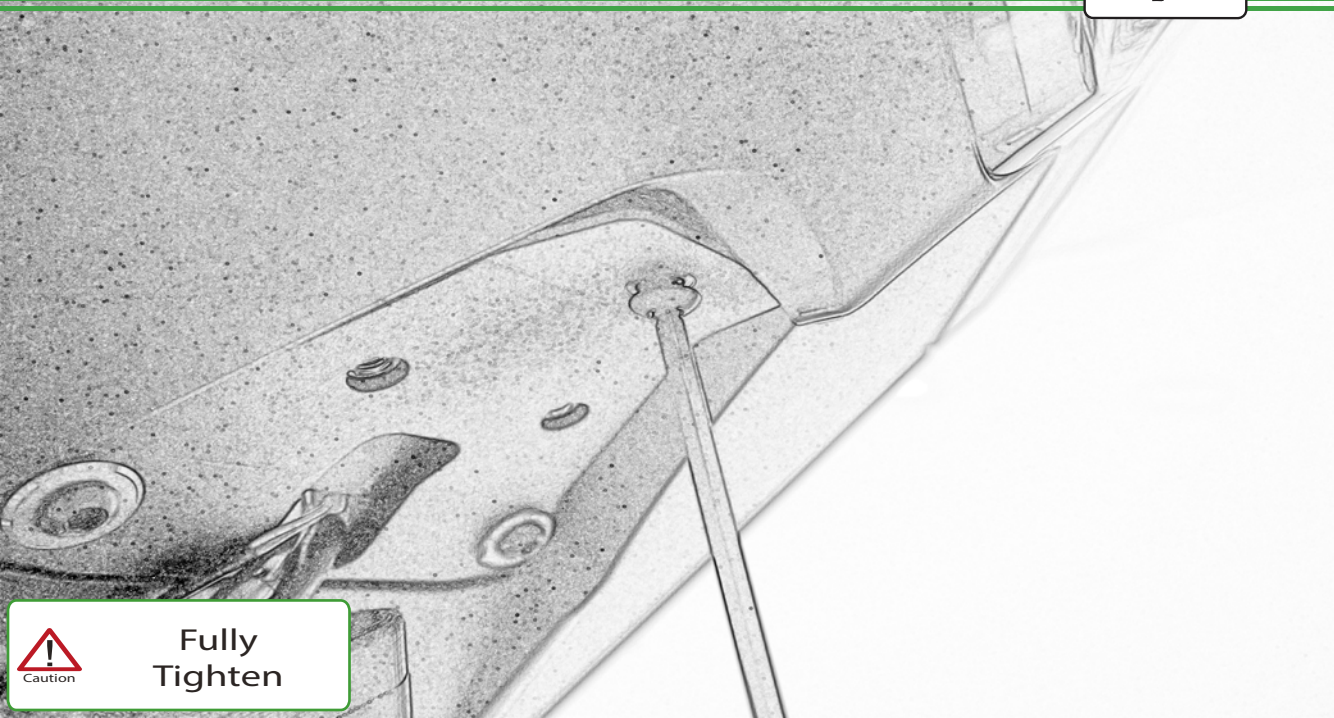

Fully
Tighten

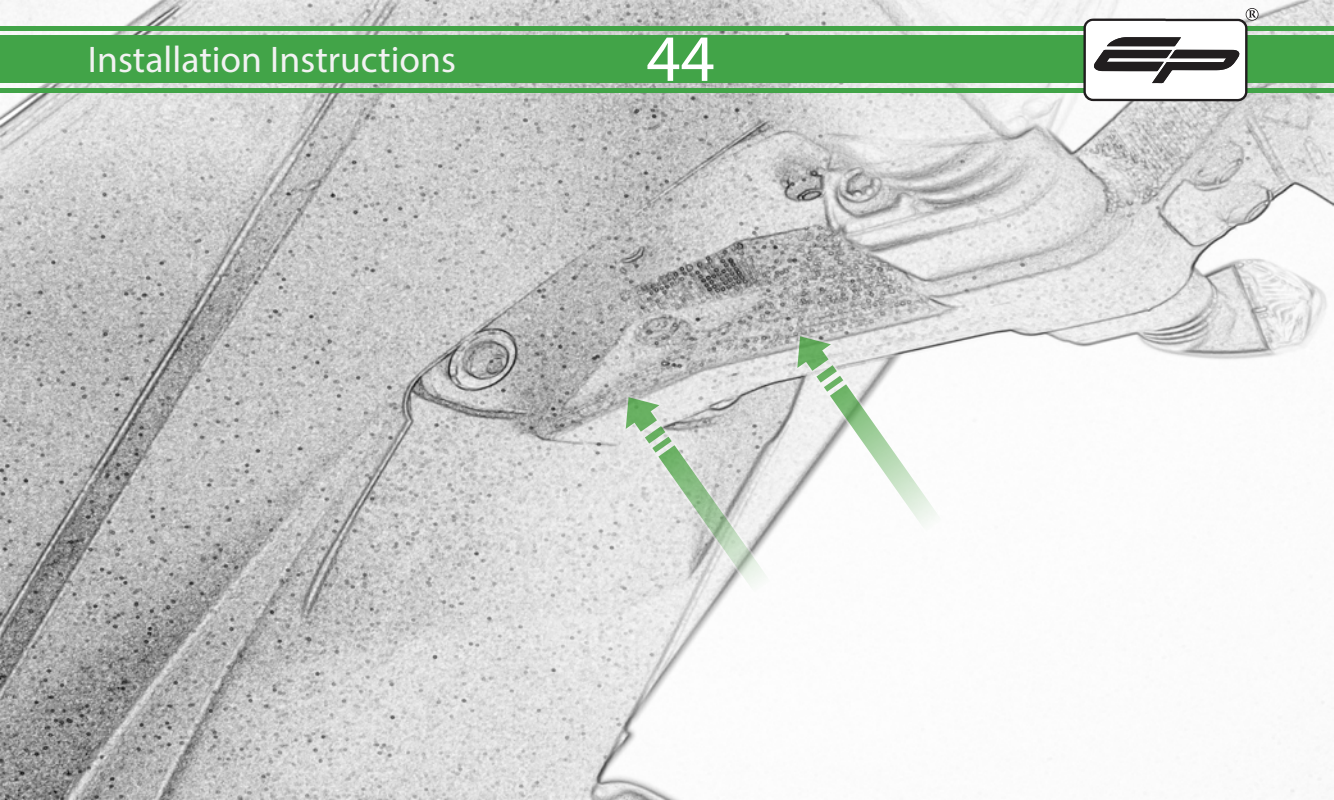

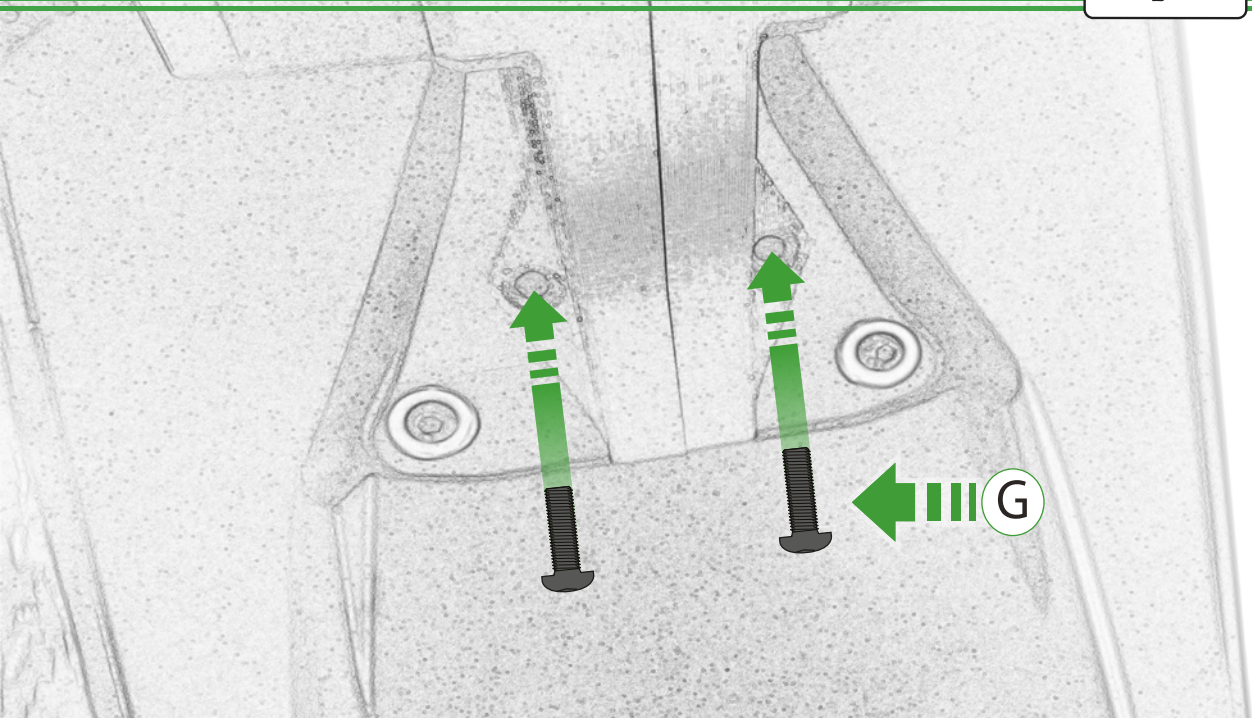

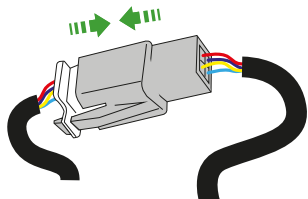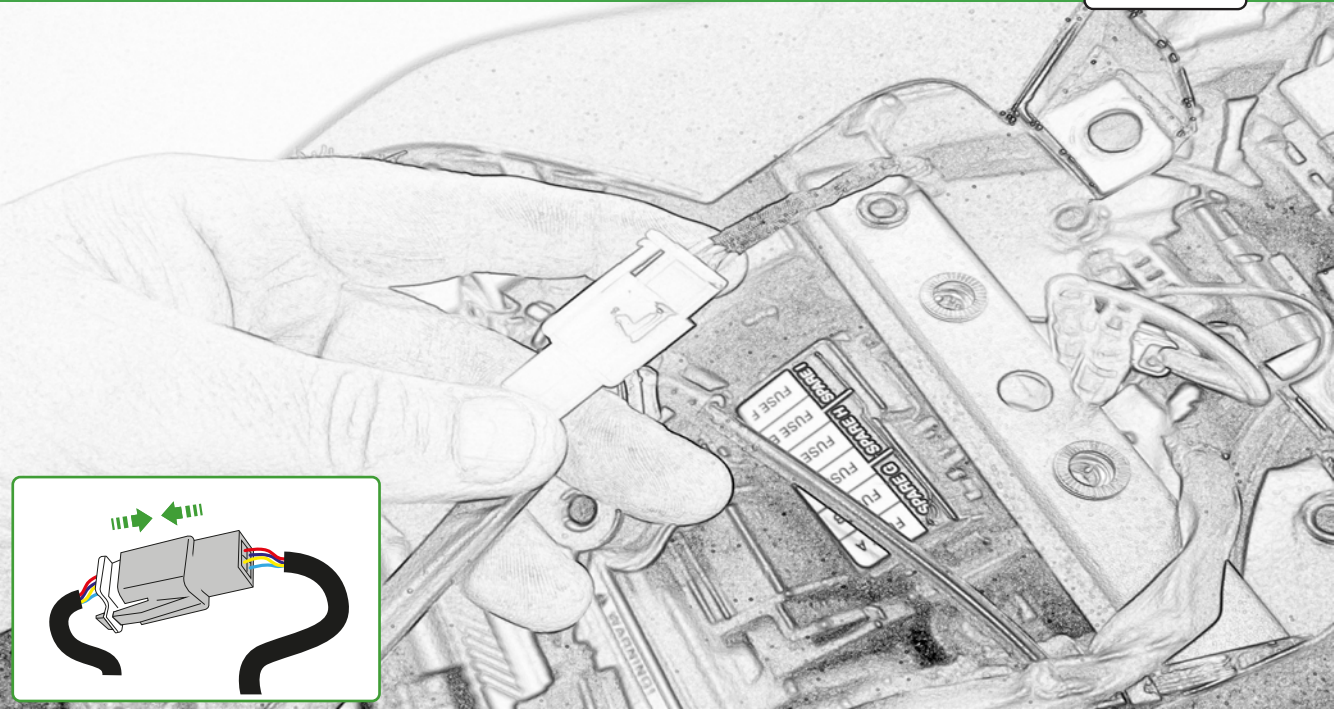




Reverse Stages


9 - 1

Installation Instructions

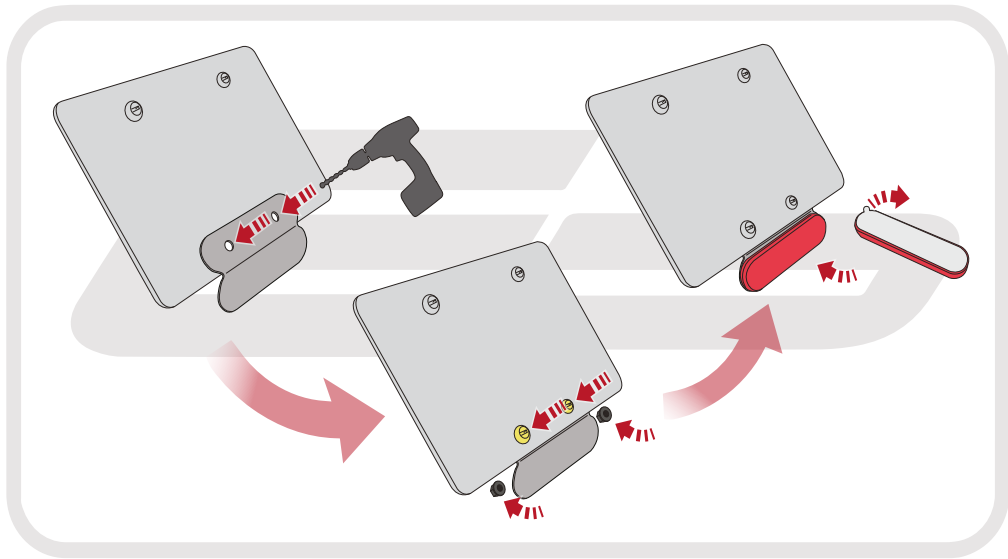

EVOTECH[®]
P E R F O R M A N C E

Installation Instructions

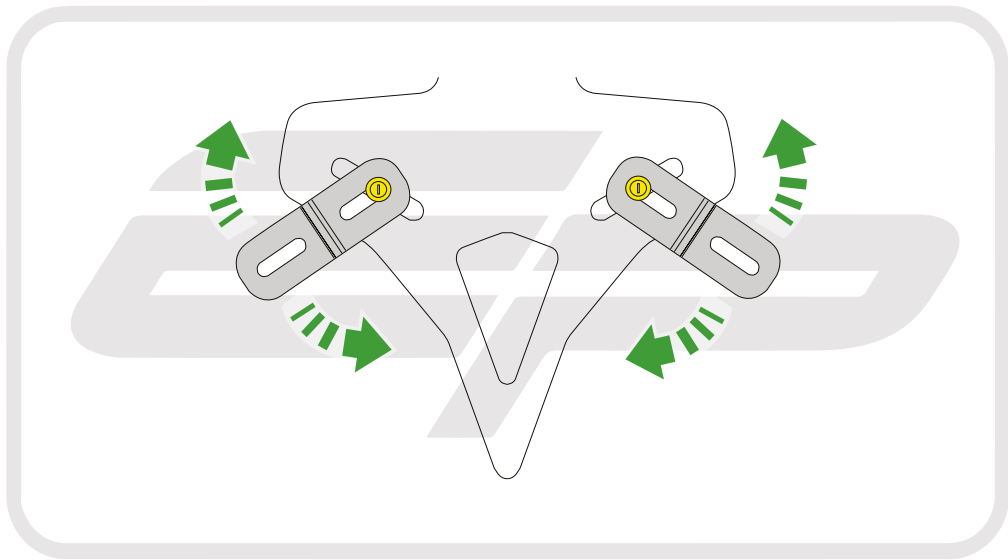

EVOTECH[®]
P E R F O R M A N C E



ESSENTIAL CHECKS



After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com