

www.evotech-performance.com

KTM 1290 Super Duke Action Camera / Beeline Mount Instructions

## Installation Instructions




## Kit Contents

- (A) 1 x Pivot Plate
- **B** 1 x Main Bracket
- © 1 x Camera Mount
- ① 1 x Rubber Pad
- **E** 1 x M5 Washers
- F 1 x M5 x 20mm Caphead
- © 2 x M5 x 8mm Caphead
- H 2 x M5 x 10mm Caphead
- 1 2 x Nord Lock Washers
- ① 4 x M5 x 40mm Black Button Head Bolts
- K 4 x Spacers








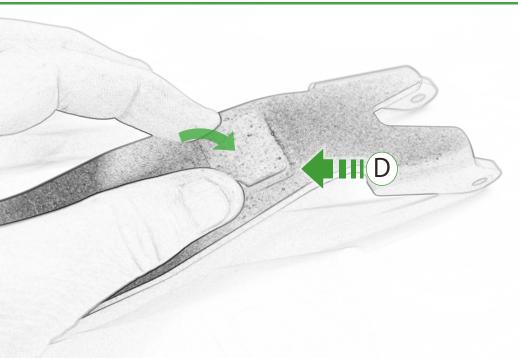







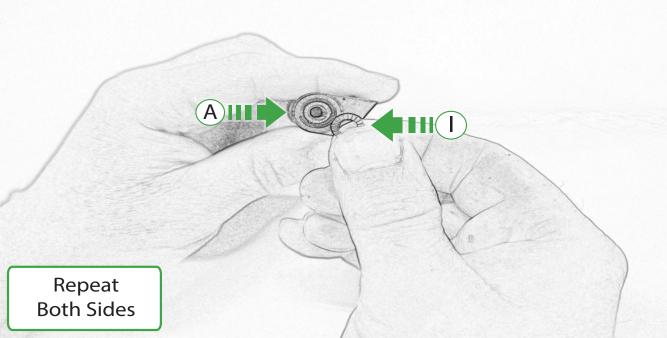







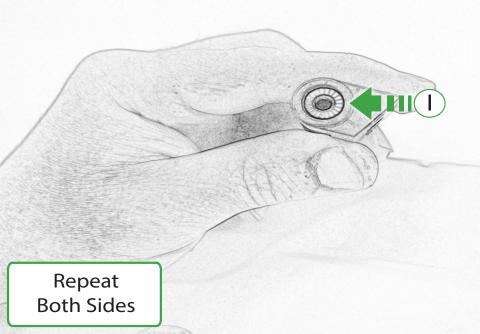

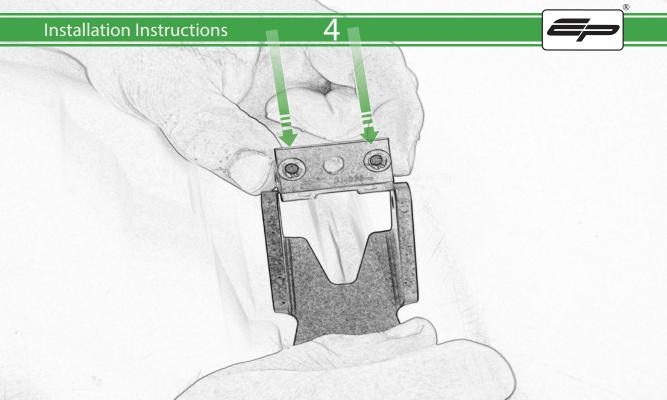




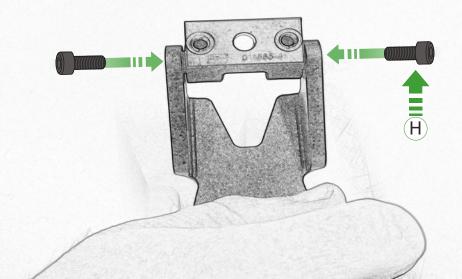


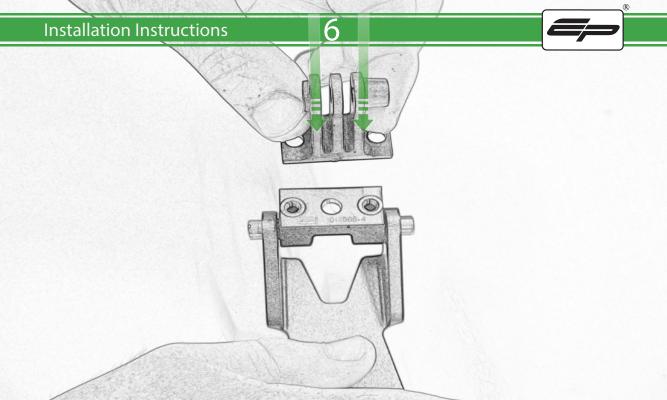



## 7




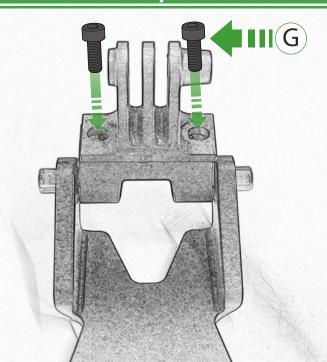


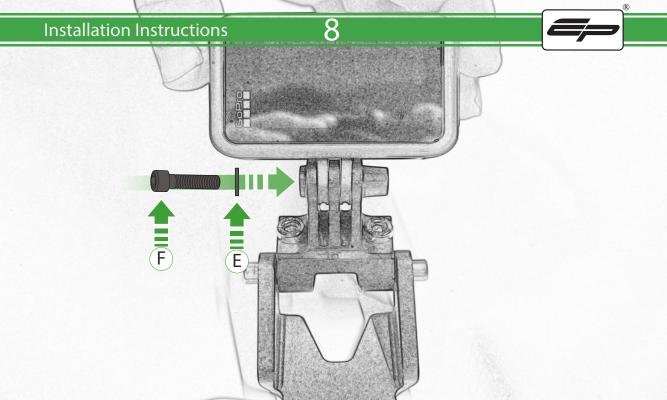

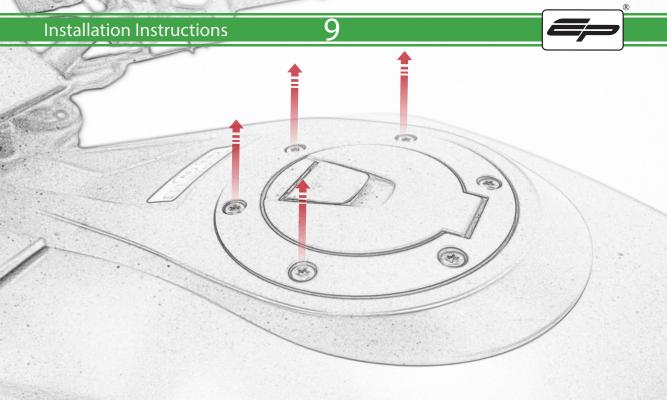

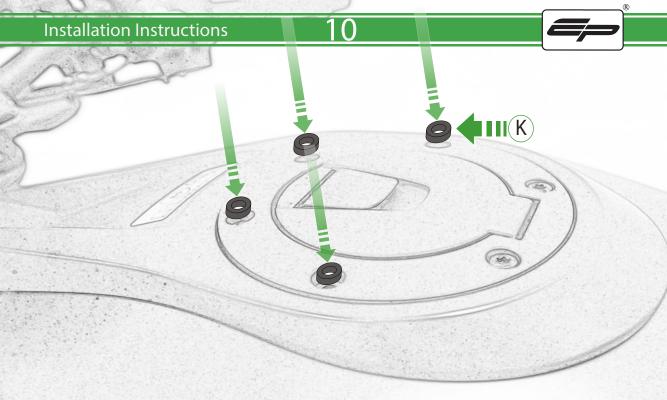

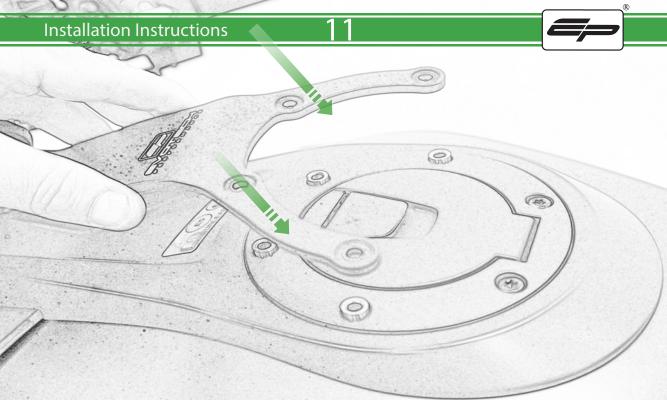

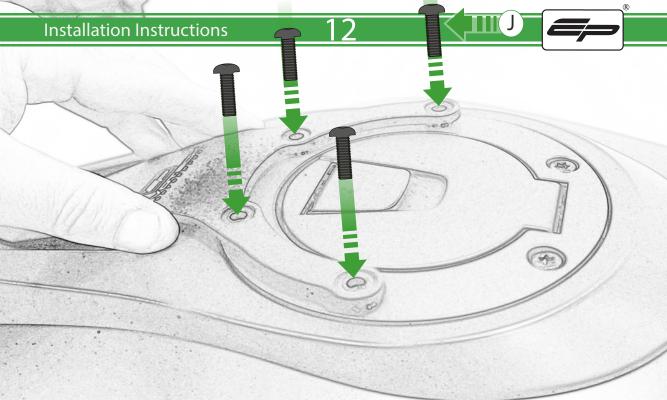





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





www.evotech-performance.com