

www.evotech-performance.com

Ducati Monster Engine Guard Instructions

Installation Instructions




Kit Contents PRN015685


- A 1 x Inner Grill
- **B** 2 x M4 Flange Nut
- © 2 x M6 x 12 Caphead Bolt
- D 5 x M6 x 16 Button Head Bolts
- **E** 5 x Grommet
- F 5 x Top Hat Nut





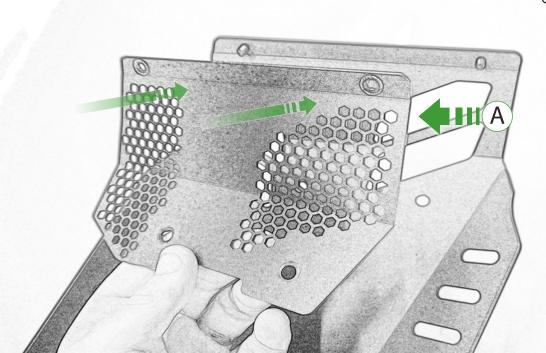




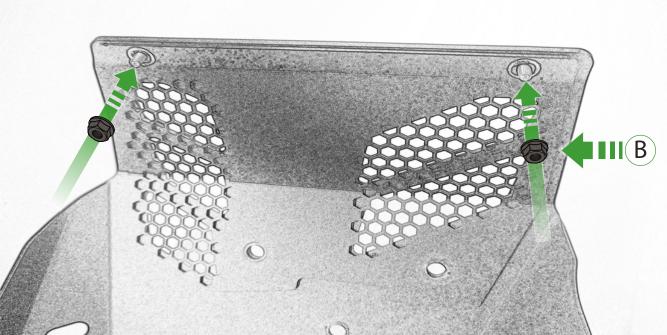






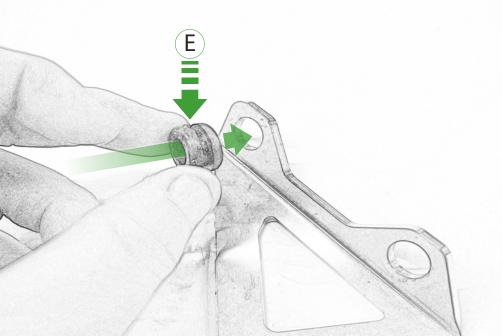




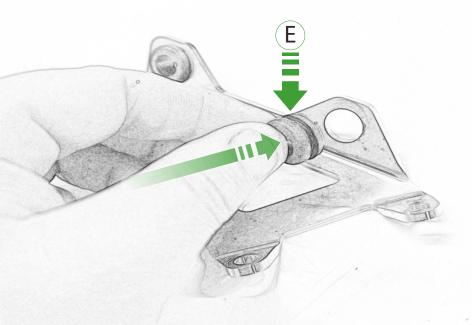









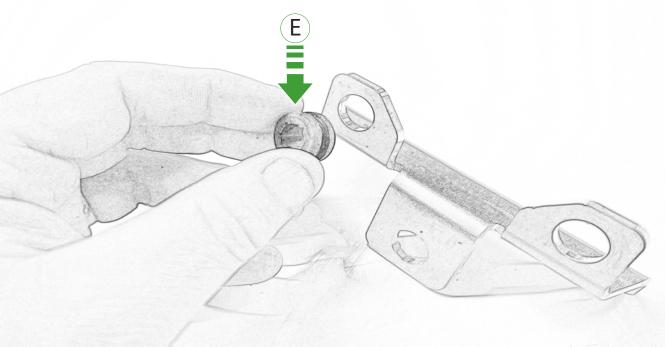







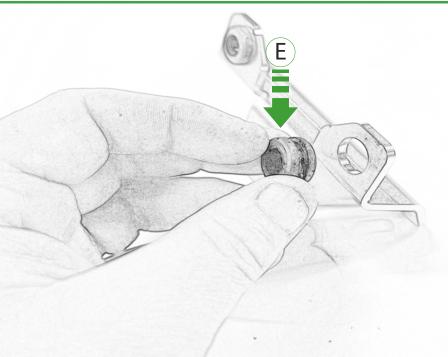


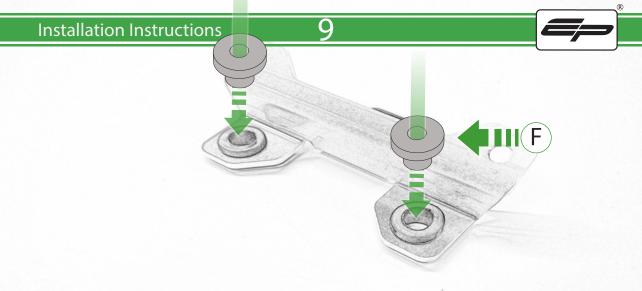




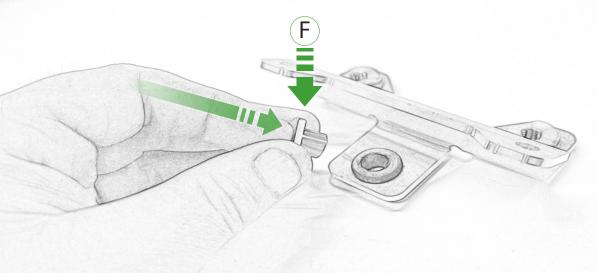


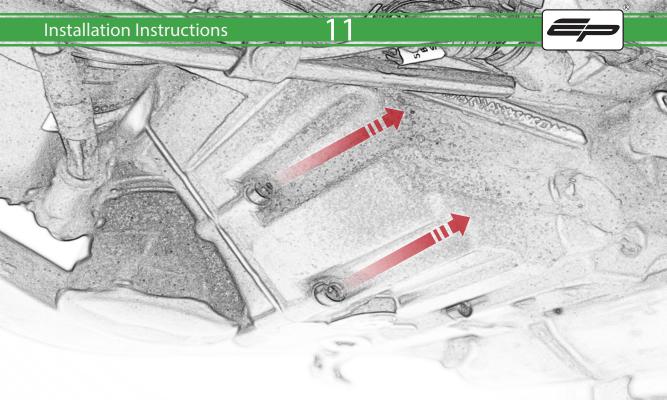


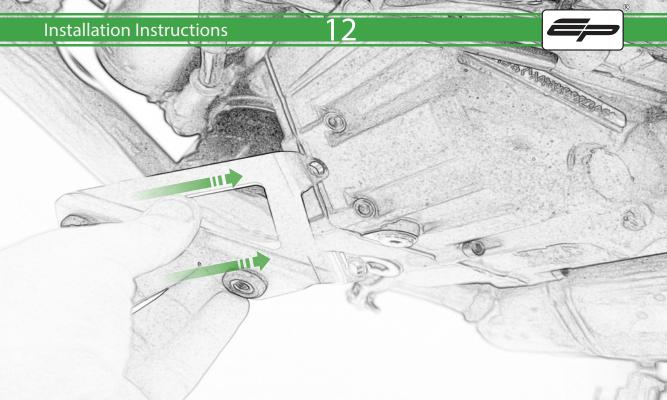





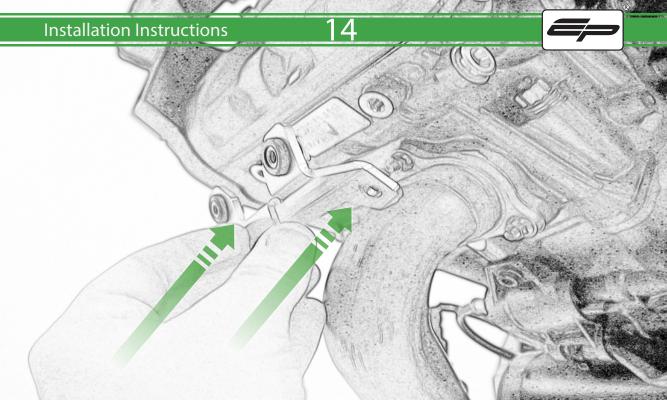

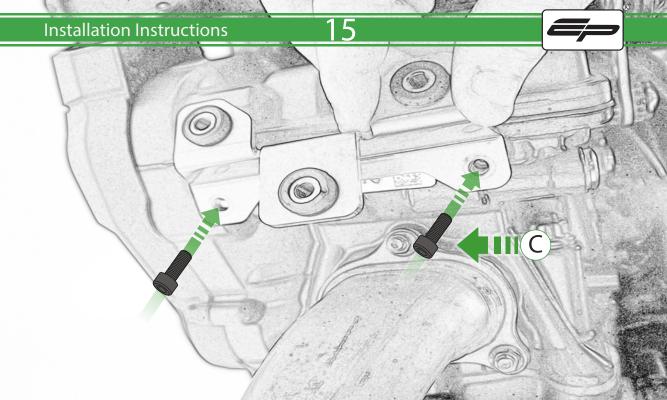

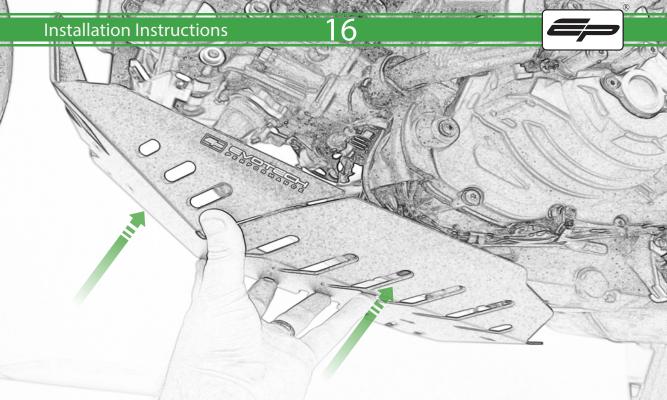

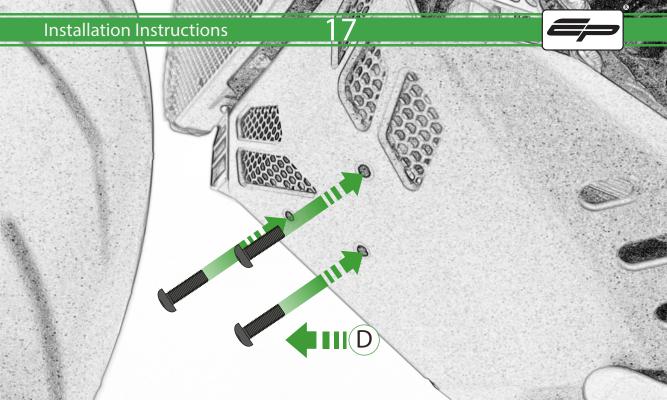

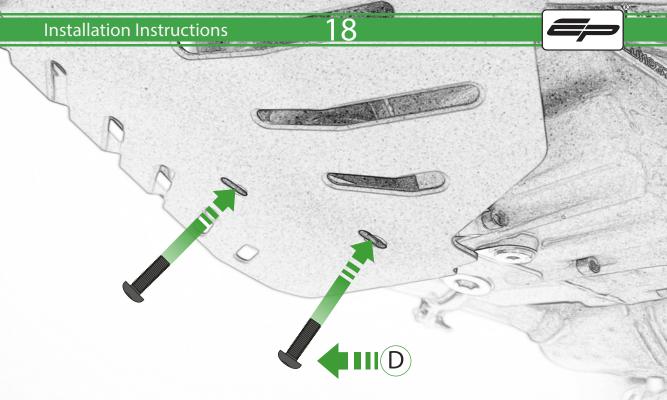





igwedge essential checks igwedge



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





www.evotech-performance.com