

EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com


Triumph Rocket Tail Tidy
Instructions





- Ⓐ 1 x Retro Light
- Ⓑ 1 x Connector
- Ⓒ 2 x M8 x 20 Black Button head Bolt
- Ⓓ 2 x M8 x 30 Black Button head Bolt(Use OEM Bolt with Seat Attachment)
- Ⓔ 2 x M8 Flange Nut
- Ⓕ 2 x Indicator Cup
- Ⓖ 2 x M6 x 12 Silver Button head Bolt
- Ⓗ 2 x M5 x 12 Silver Button head Bolt
- Ⓘ 2 x M6 x 65 Caphead Bolt
- Ⓙ 2 x M4 x Flange Nut
- Ⓚ 3 x M8 x 16 Silver Button head Bolt
- Ⓛ 3 x Special Washer
- Ⓜ 4 x Special Stud Spacer
- Ⓝ 6 x M6 x 16 Silver Button head Bolt
- Ⓜ 2 x Pannier Spacers



Rocket GT

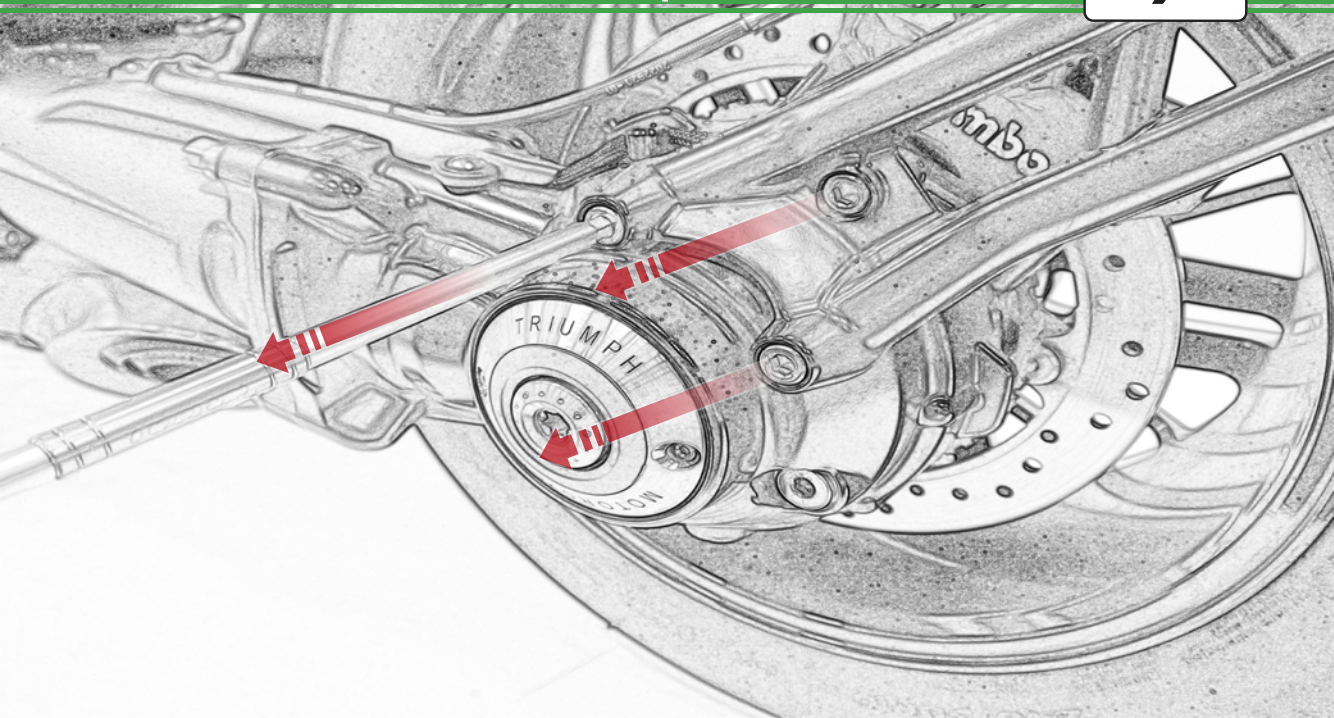


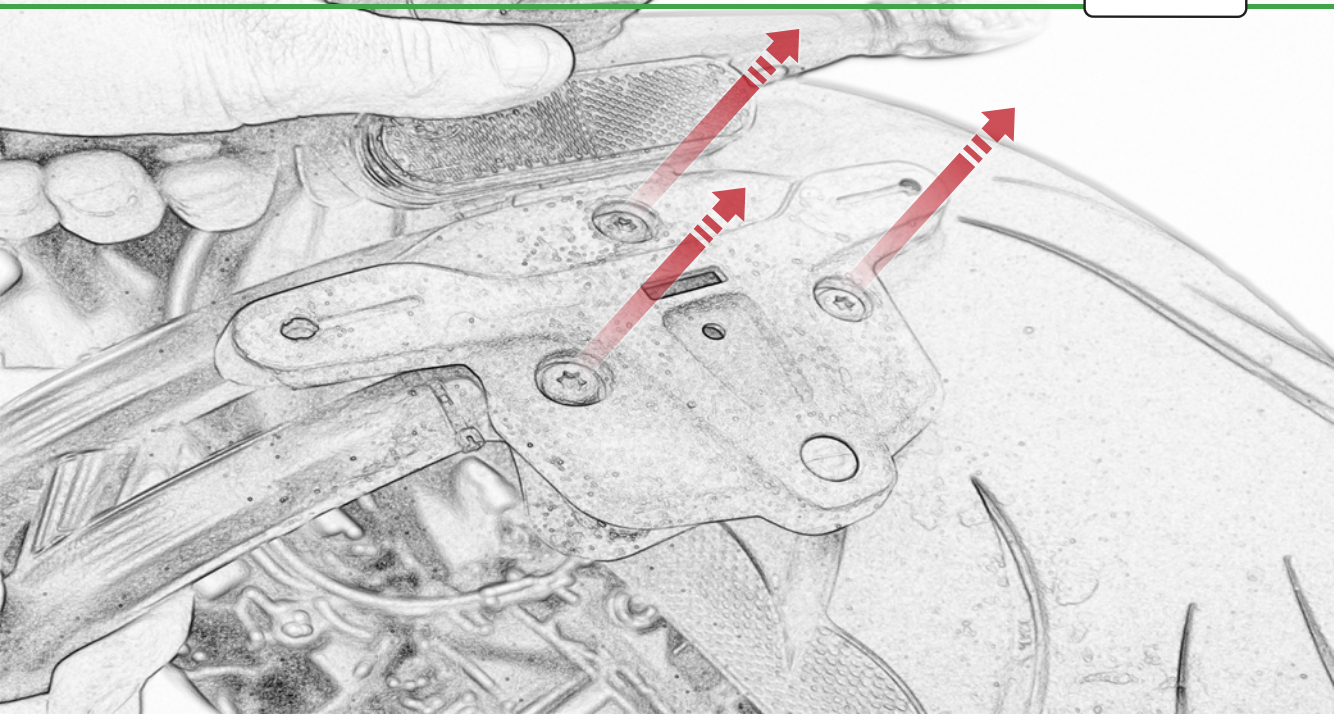


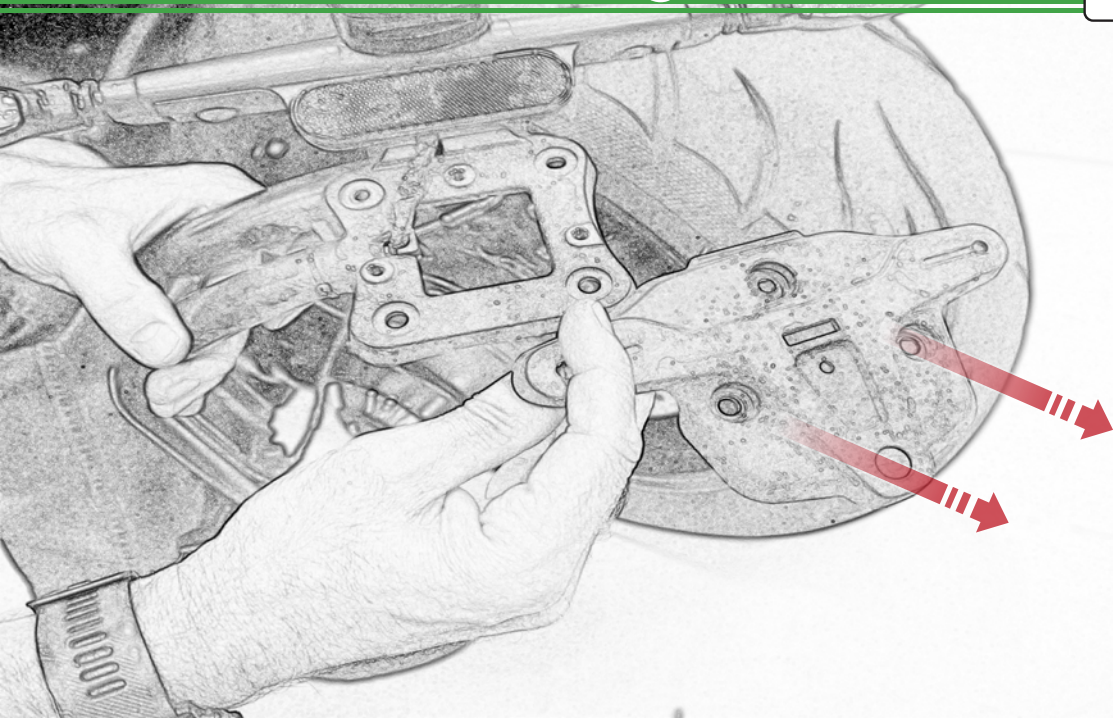


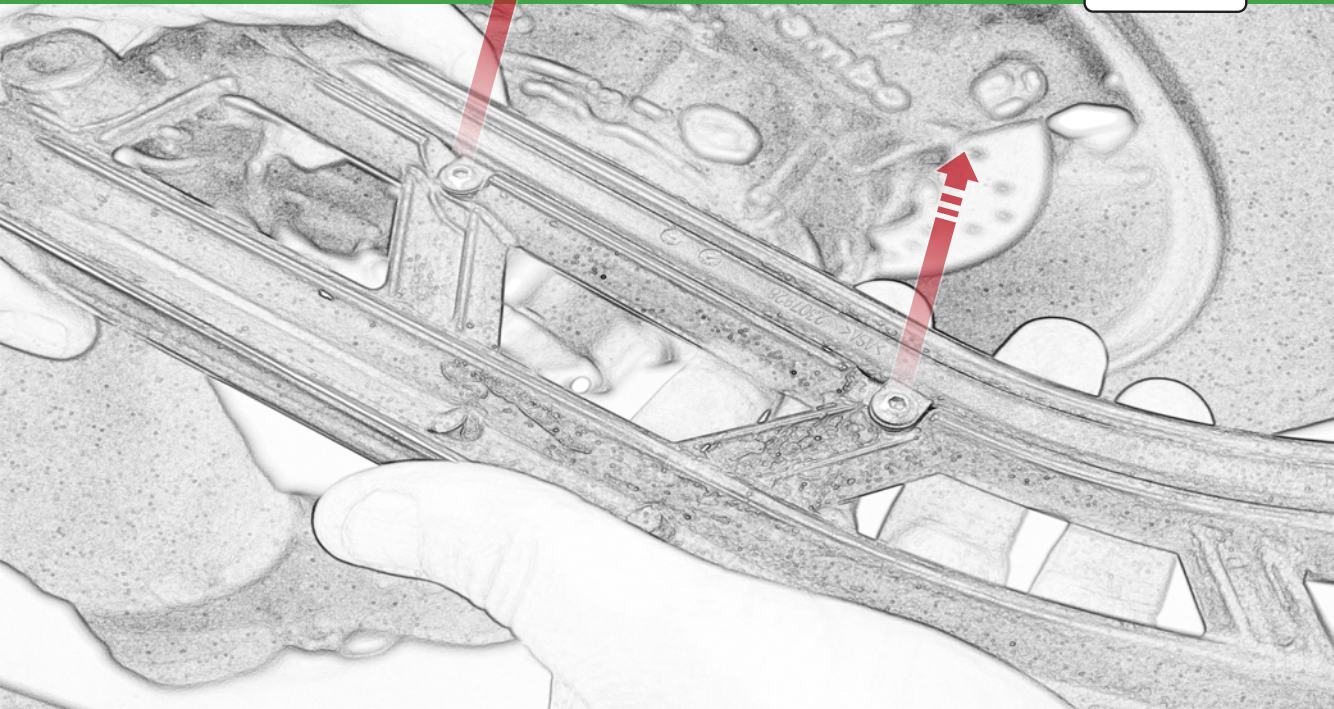


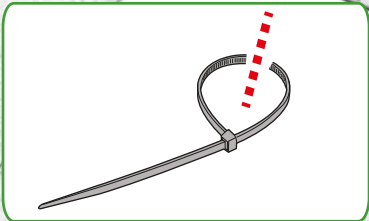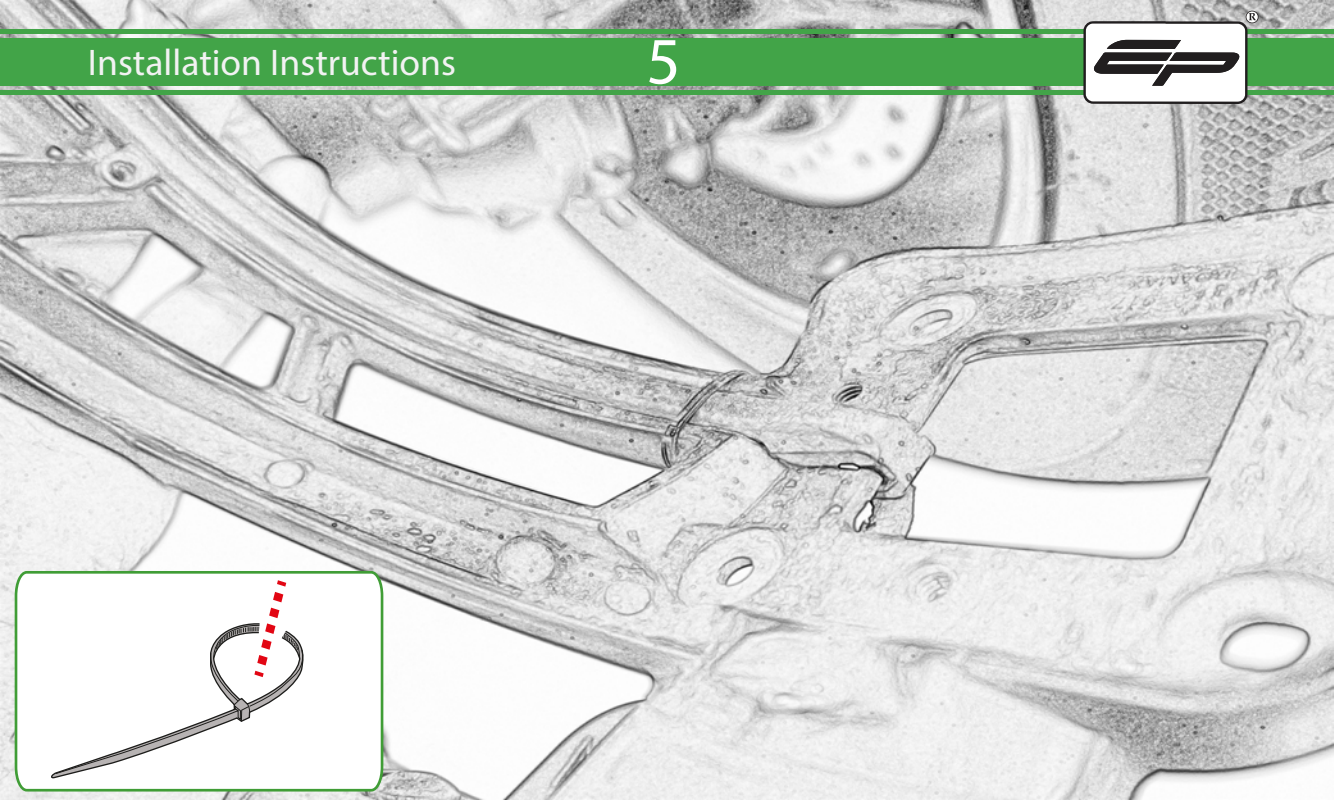



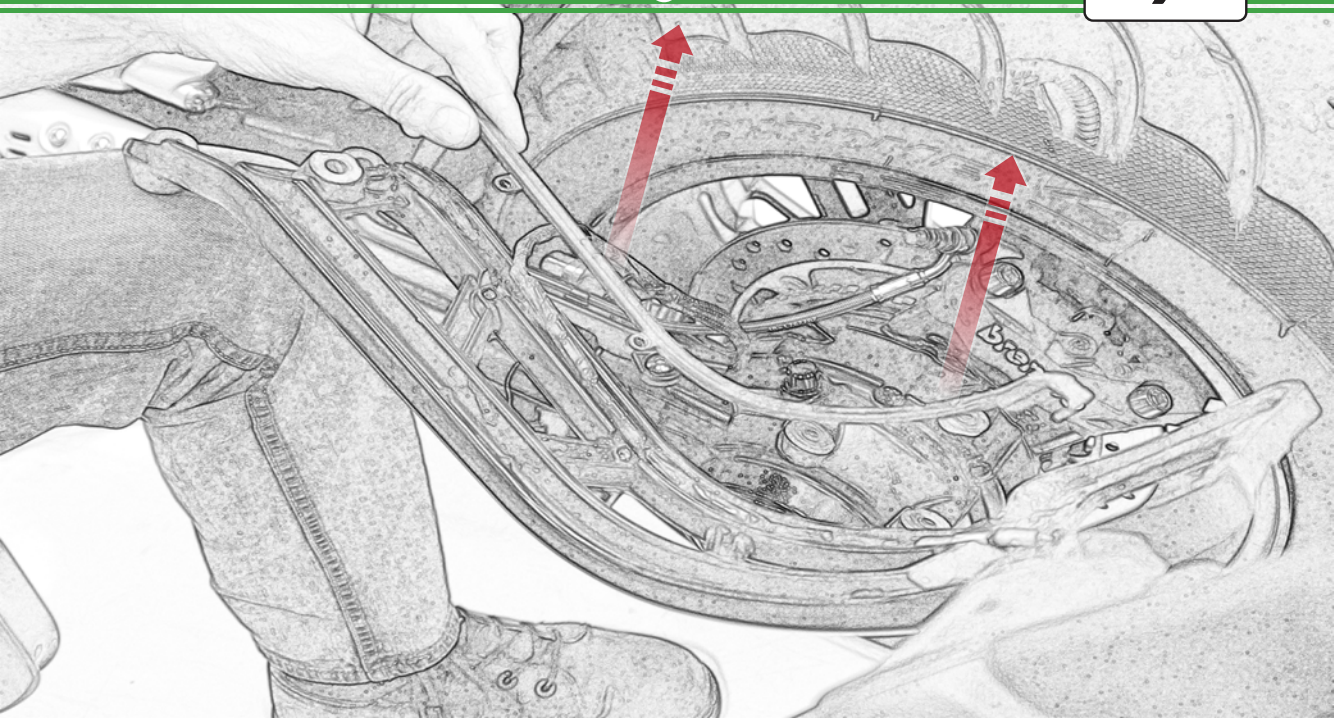


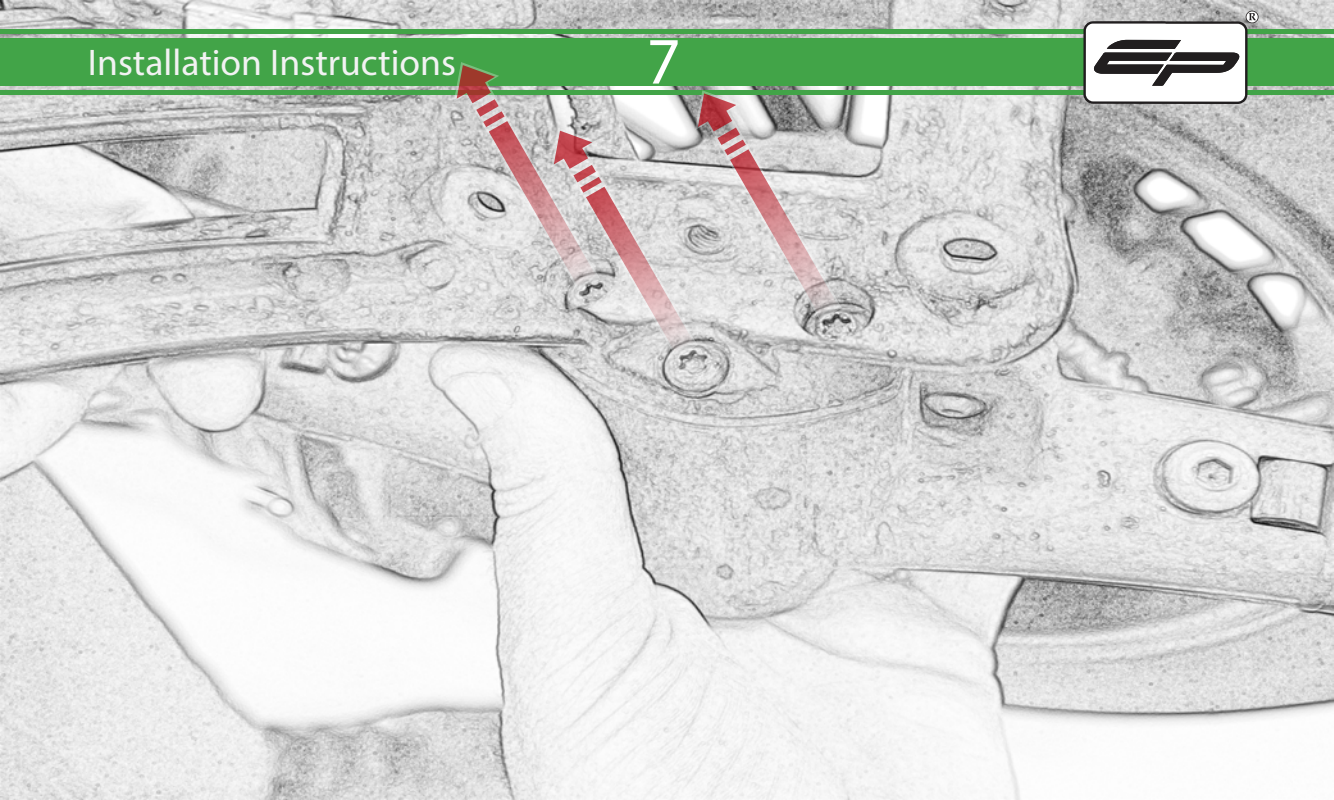


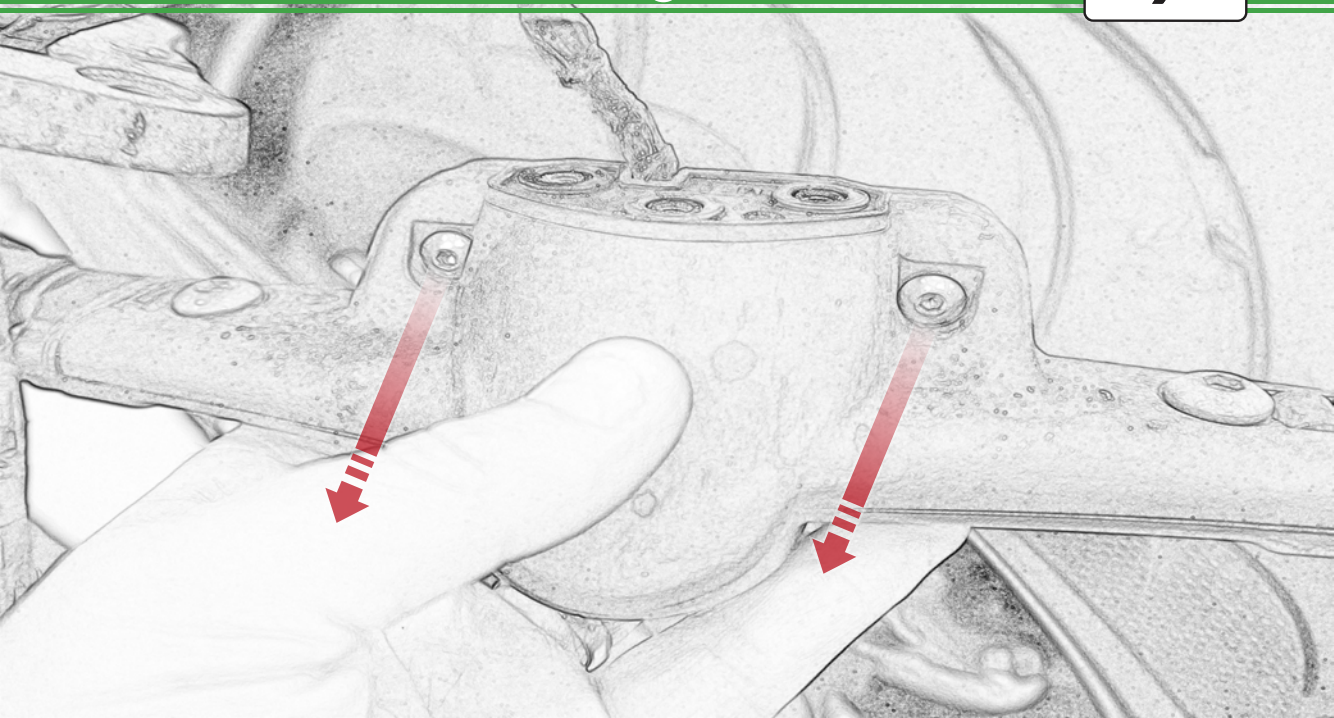

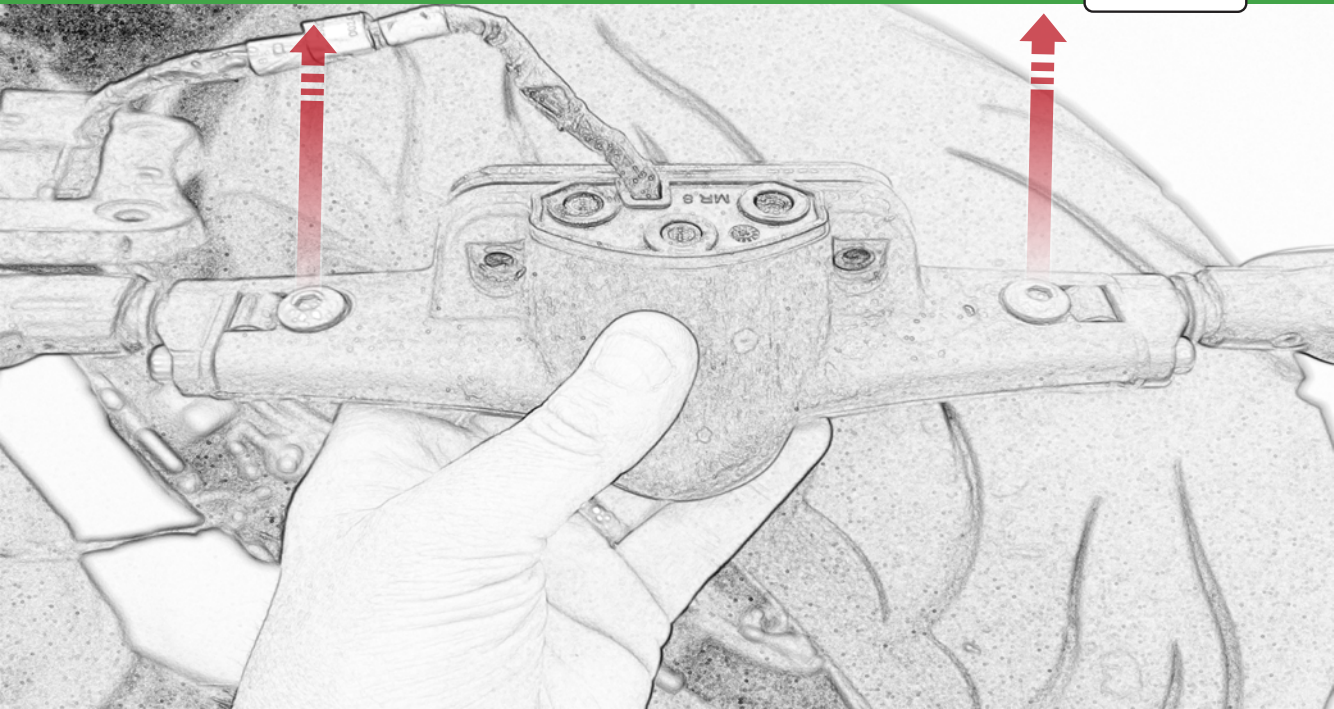

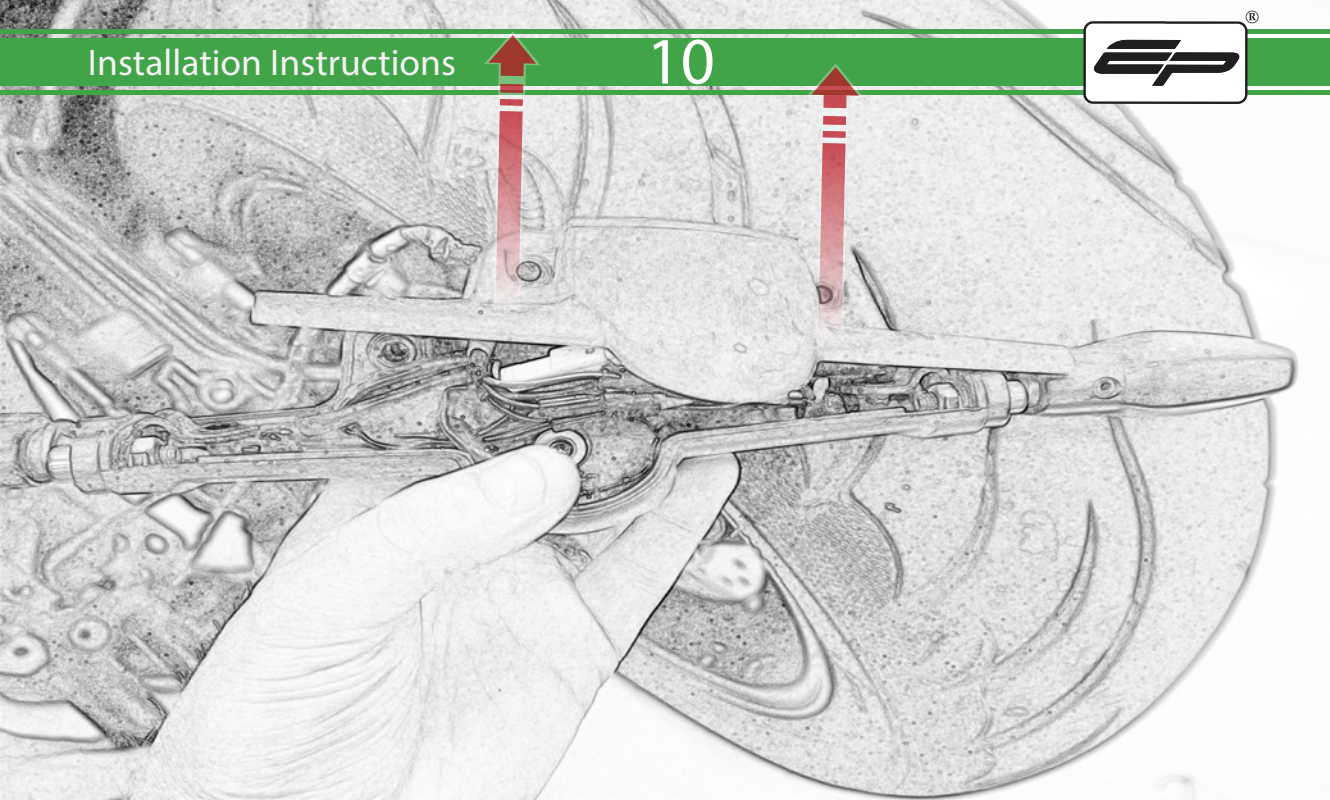


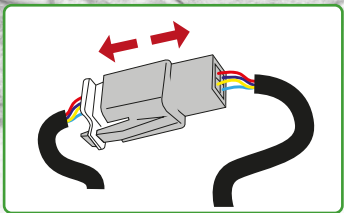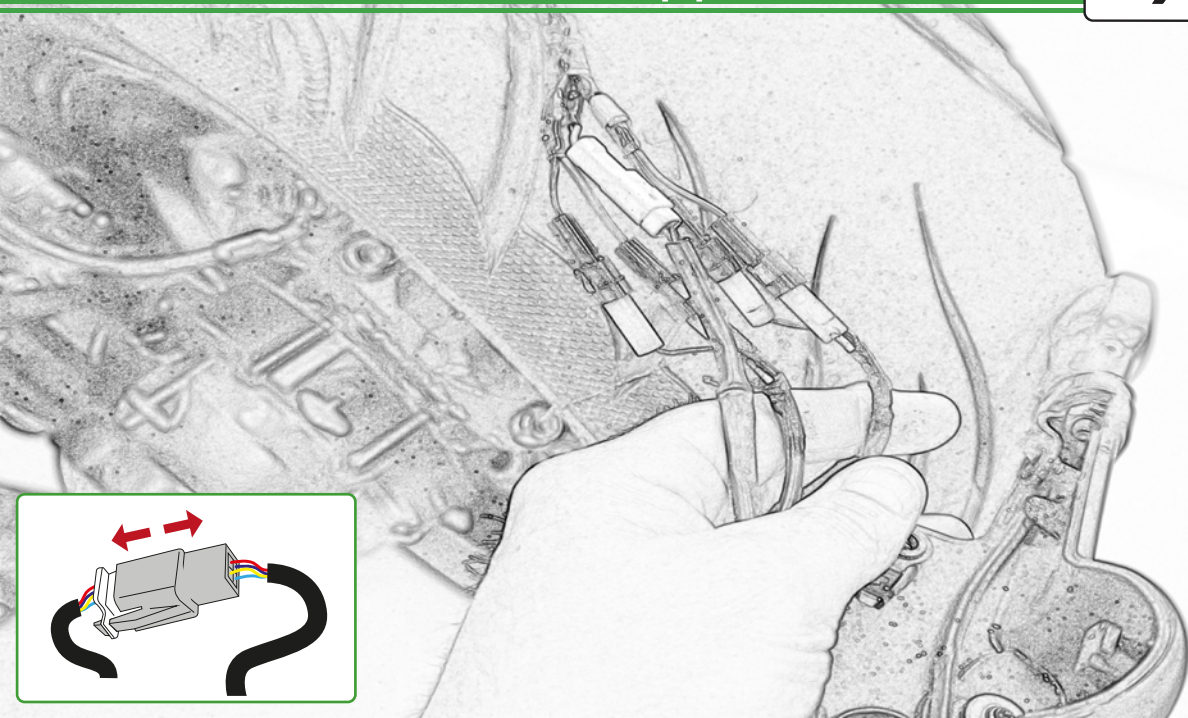


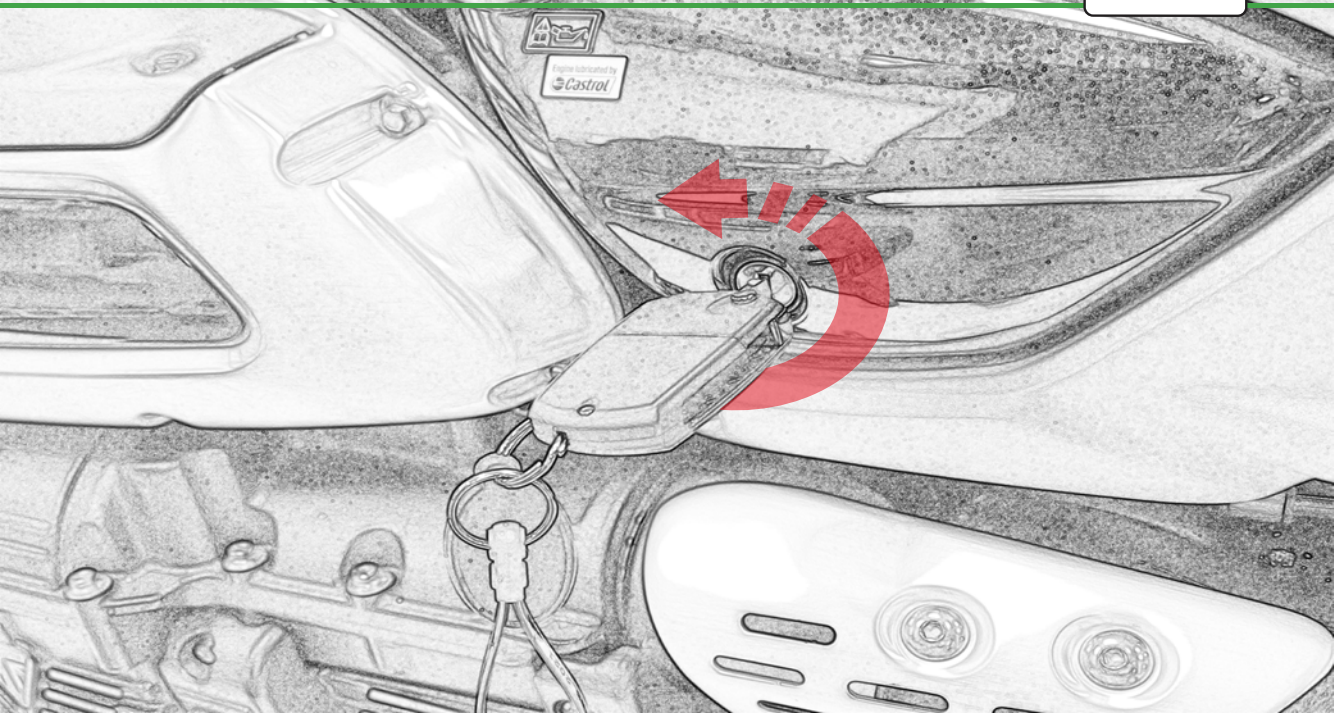


Installation Instructions


3

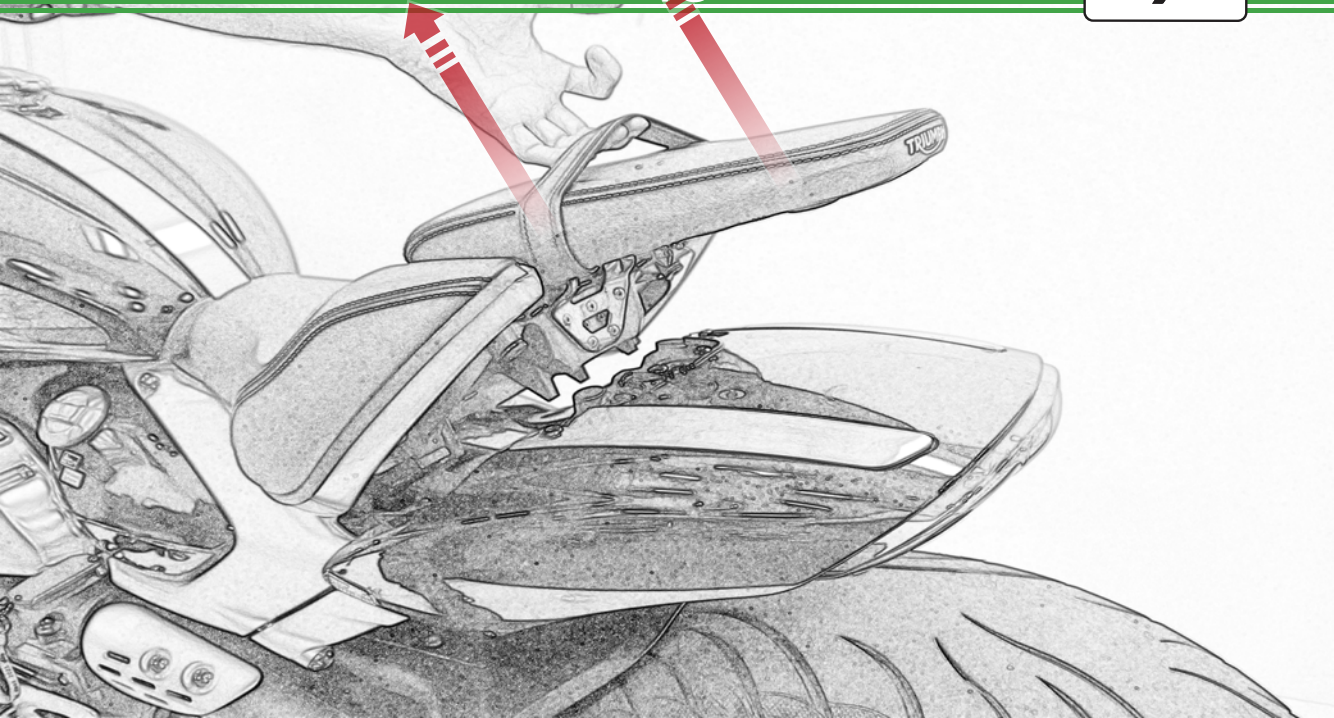


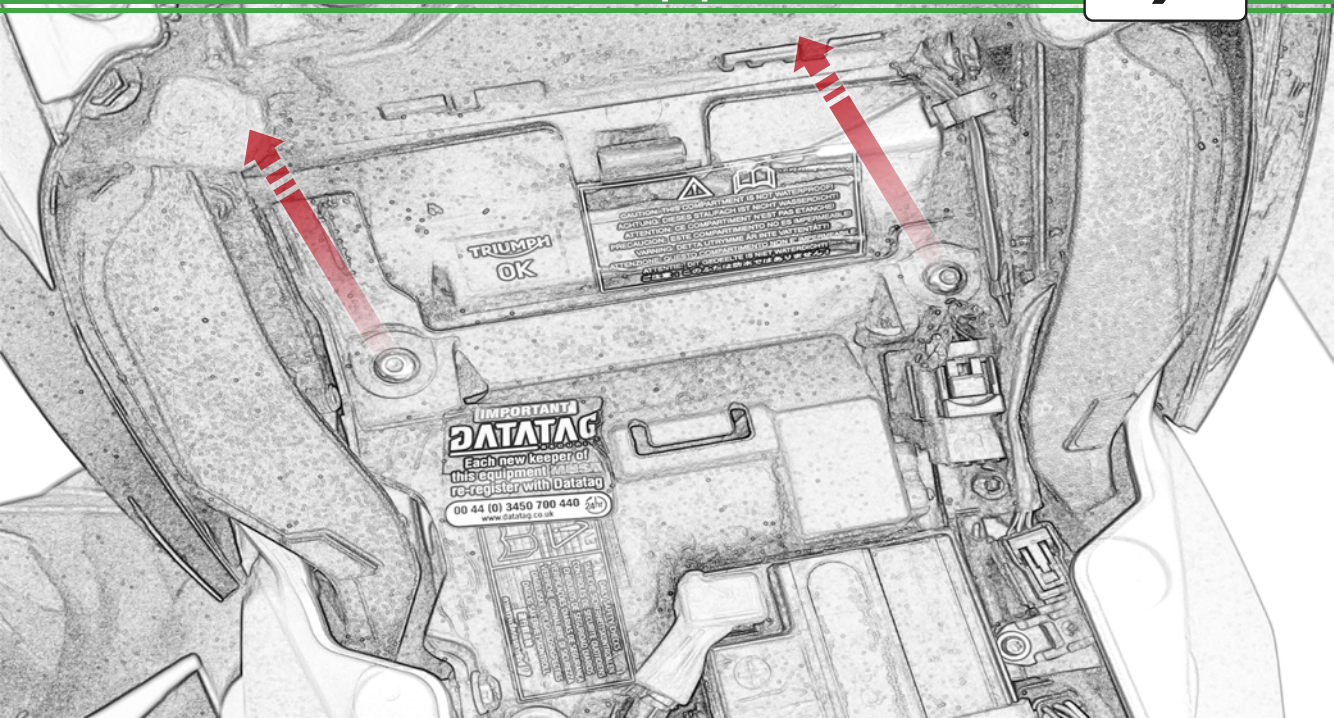





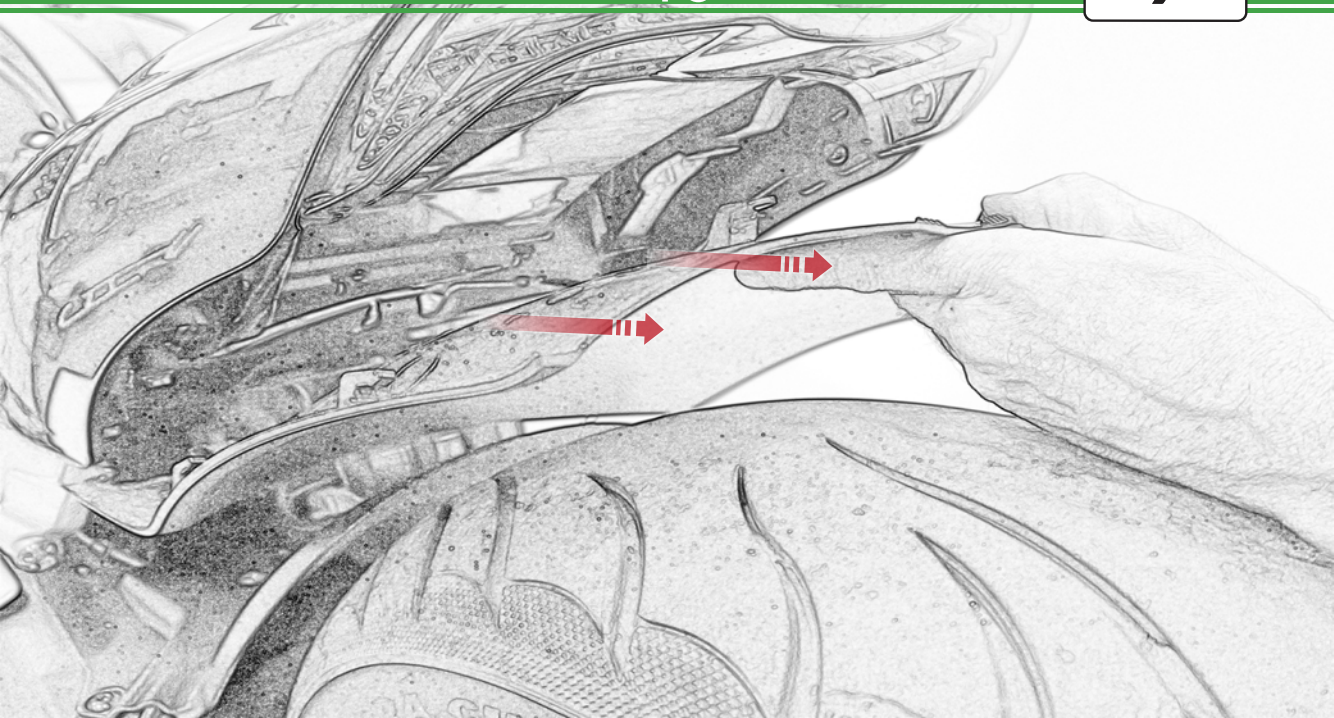


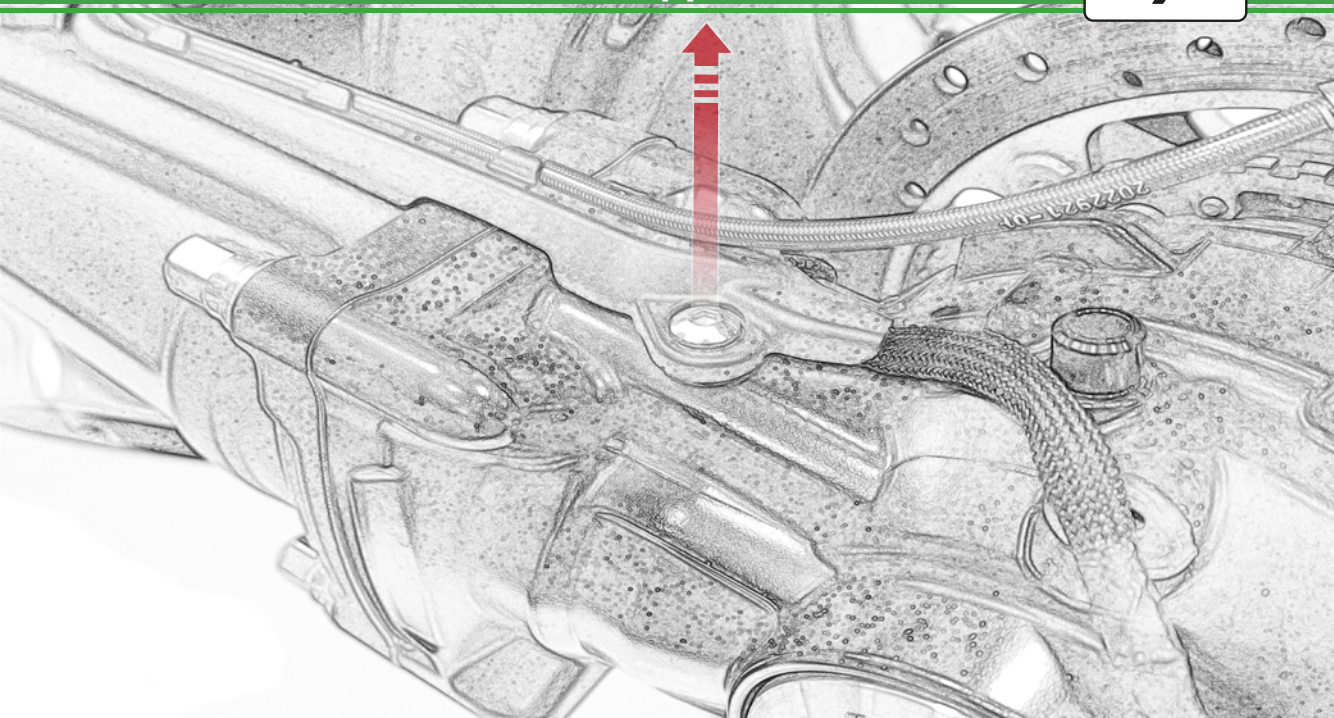

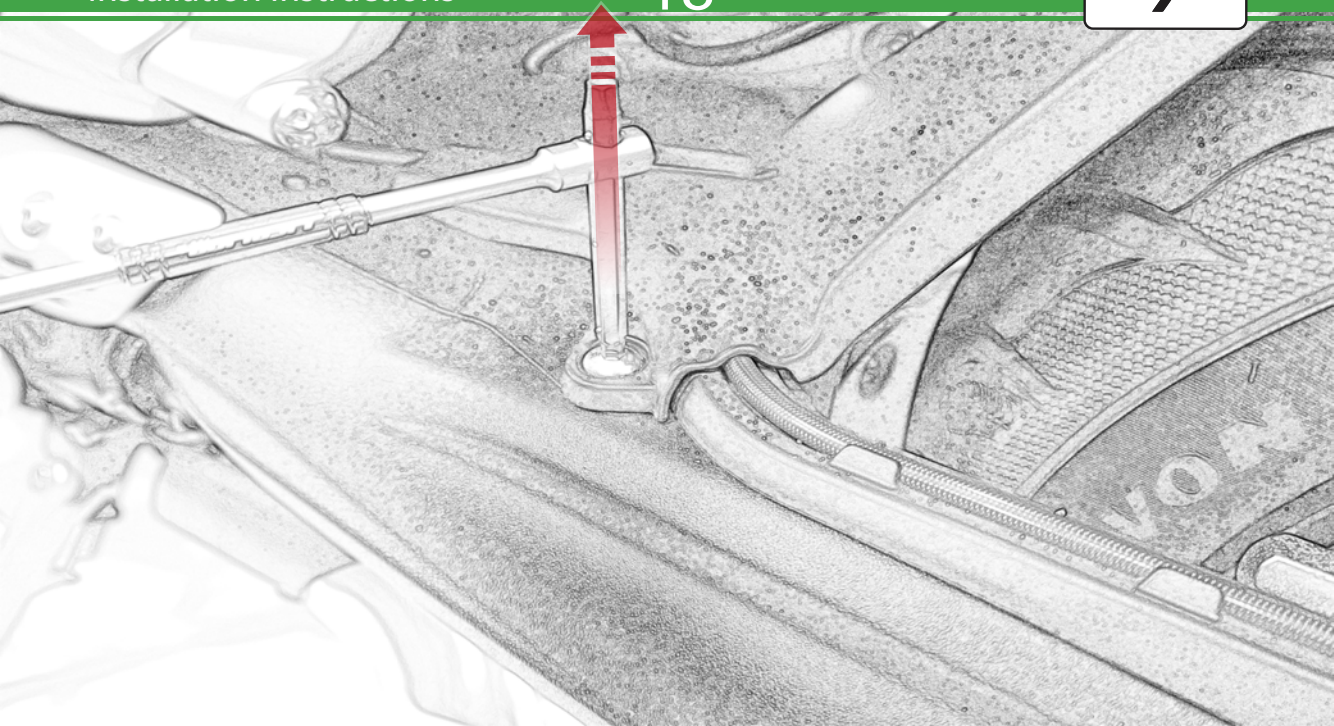




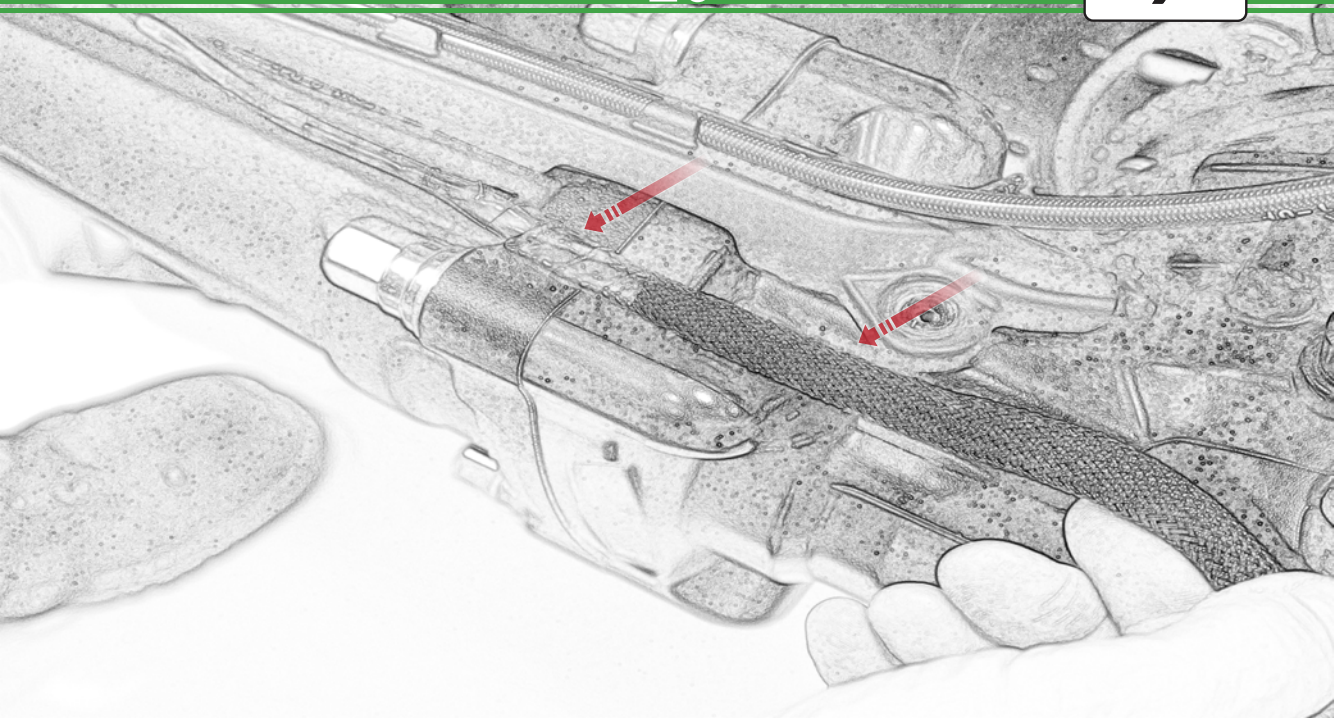

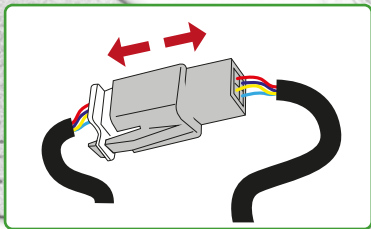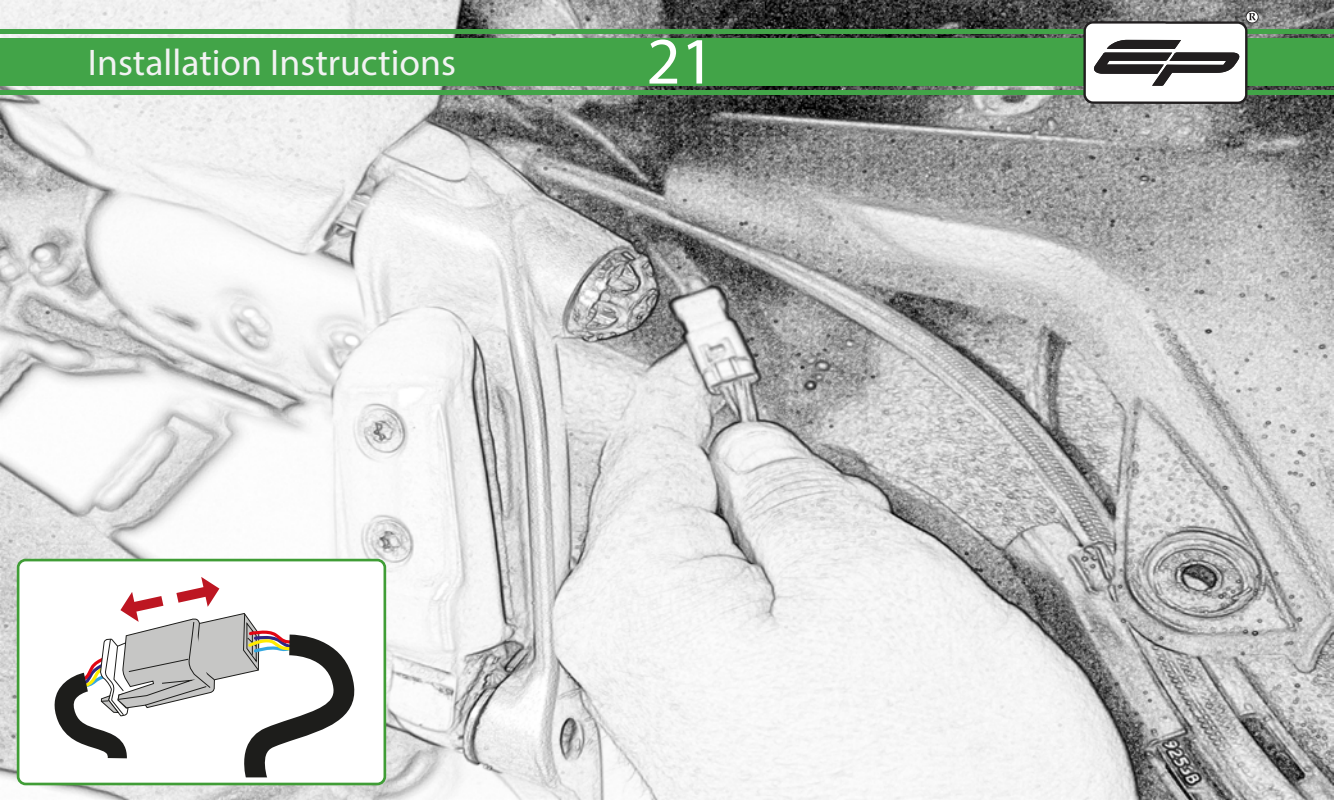



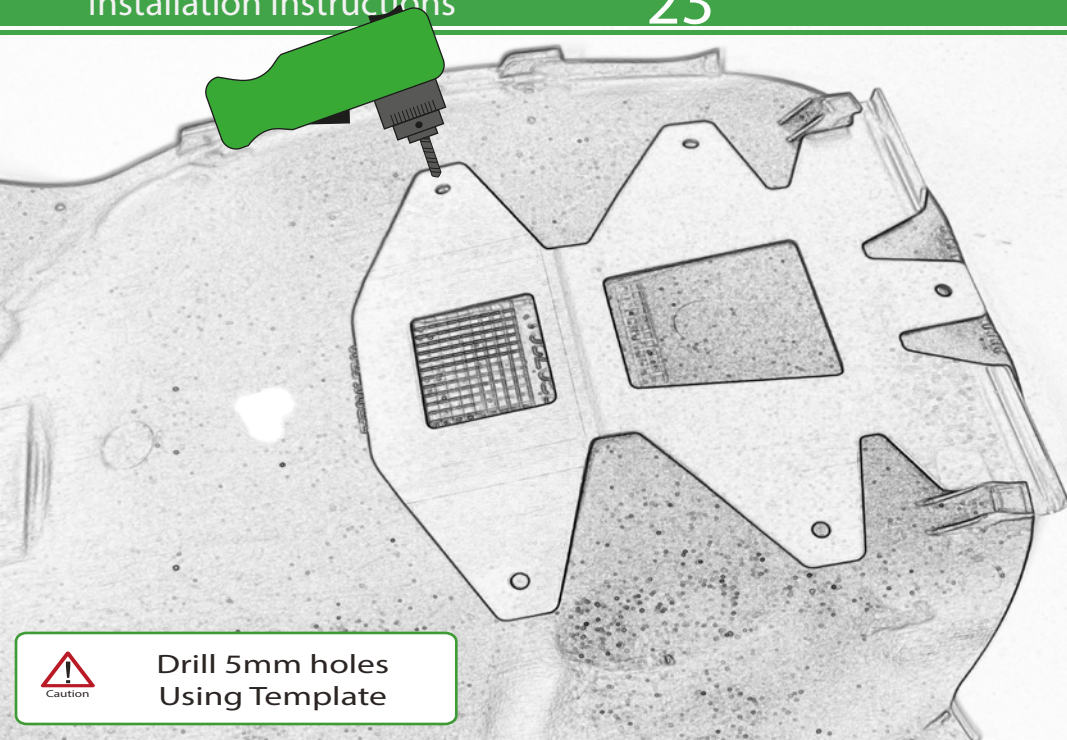


Caution

Drill 5mm holes
Using Template




Caution


Drill 13mm
Holes

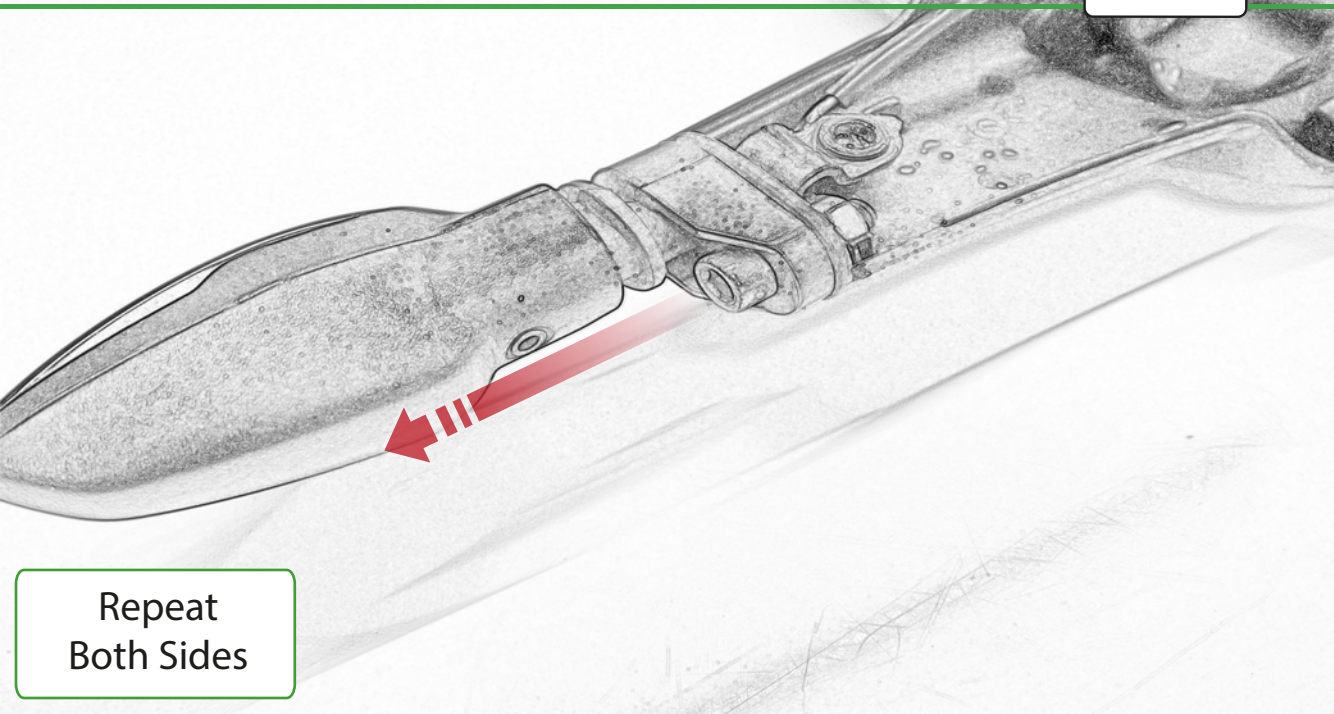


Repeat
Both Sides

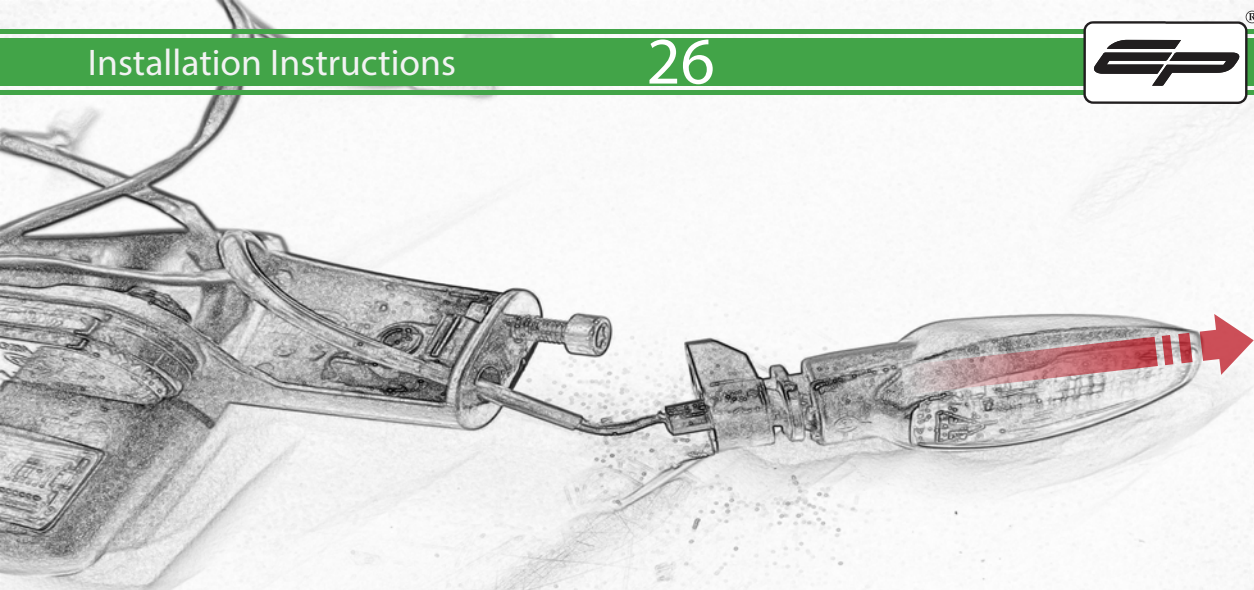


Repeat
Both Sides

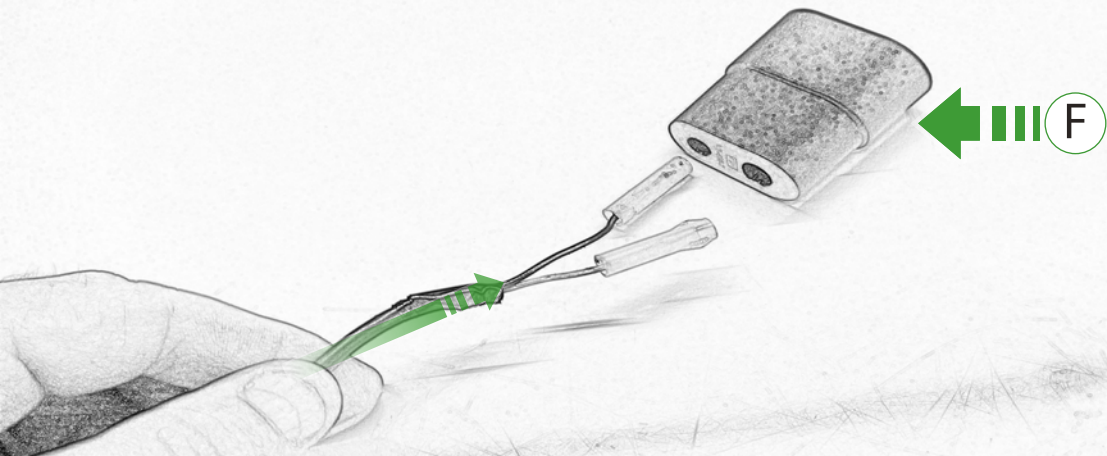


Repeat
Both Sides

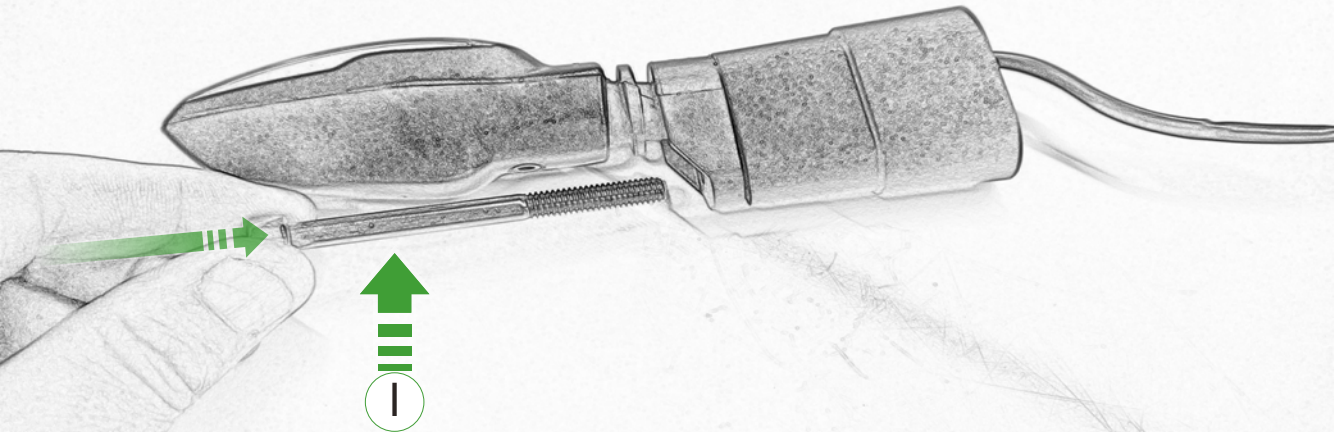

Repeat
Both Sides

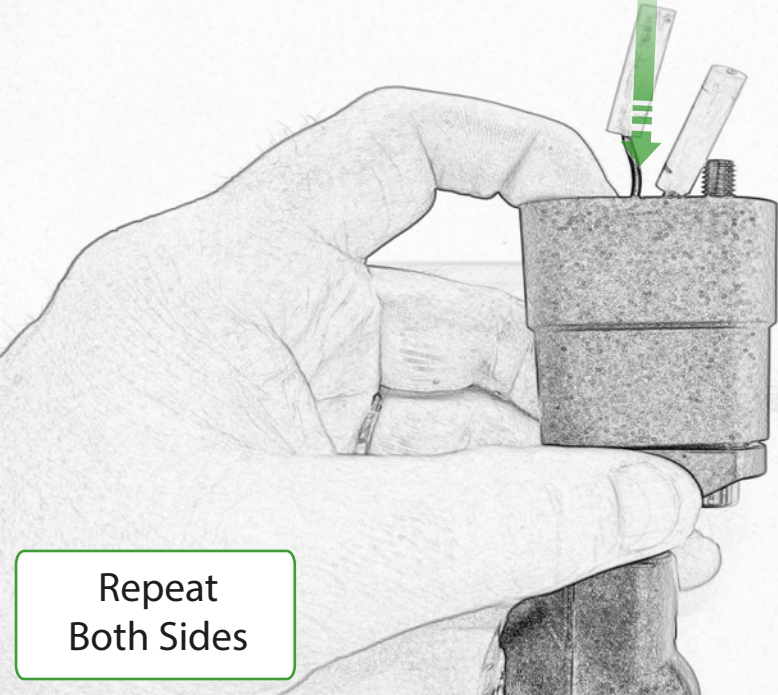




Repeat
Both Sides

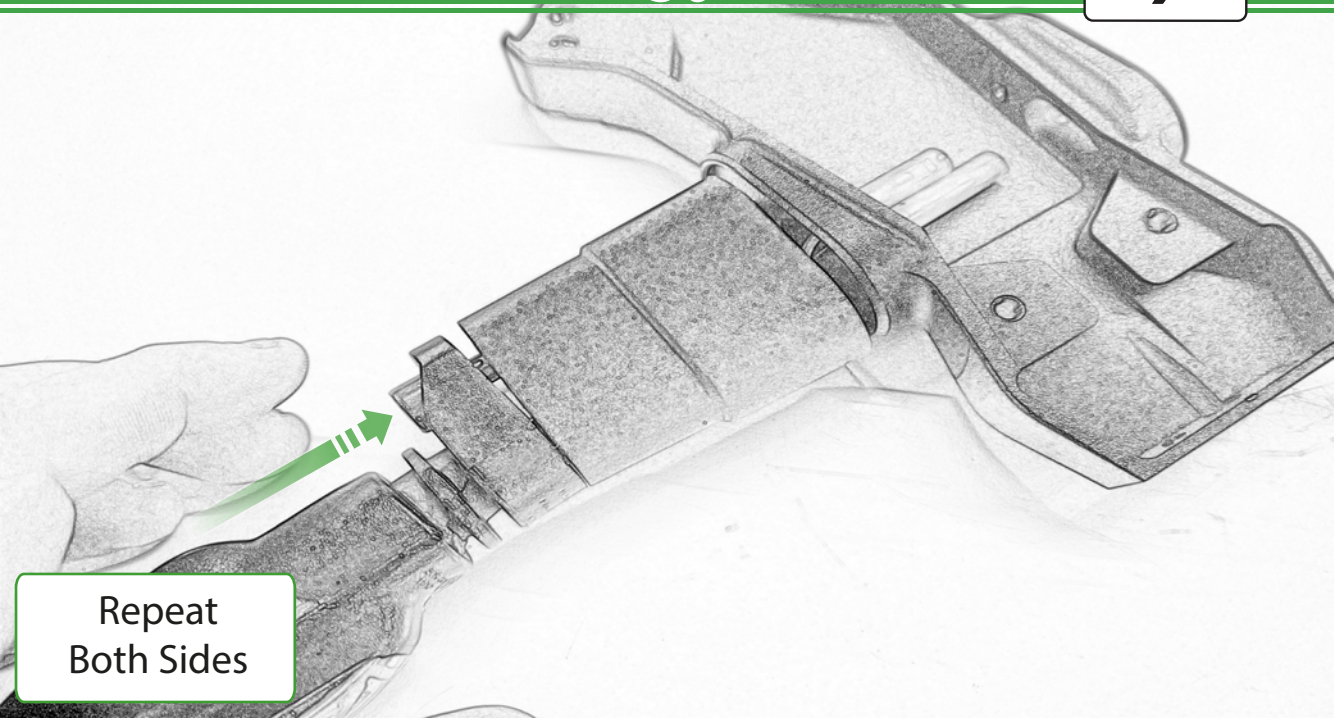




Repeat
Both Sides




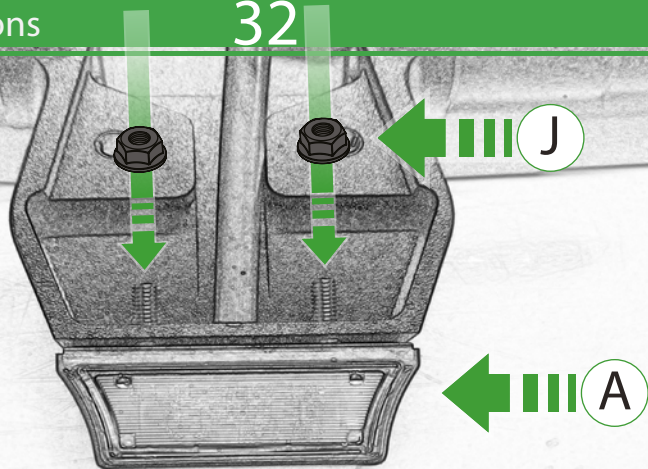

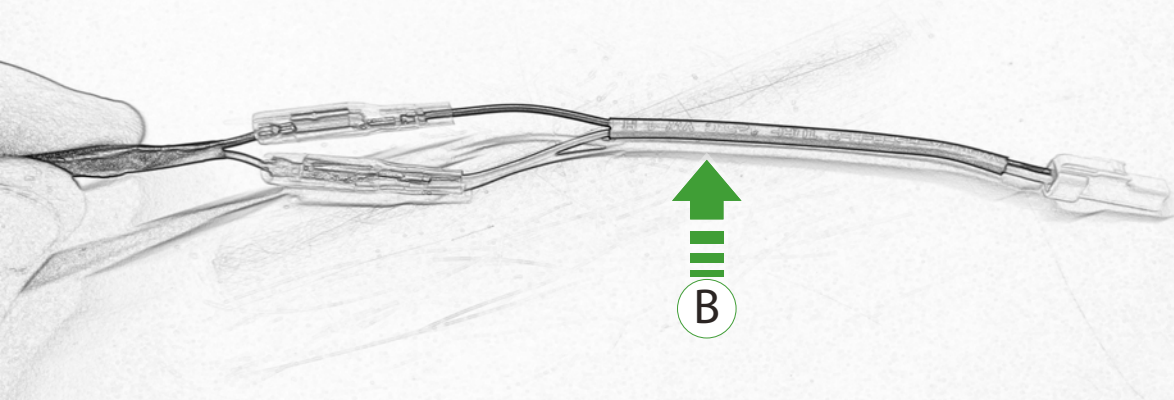

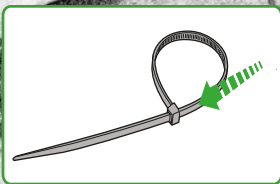


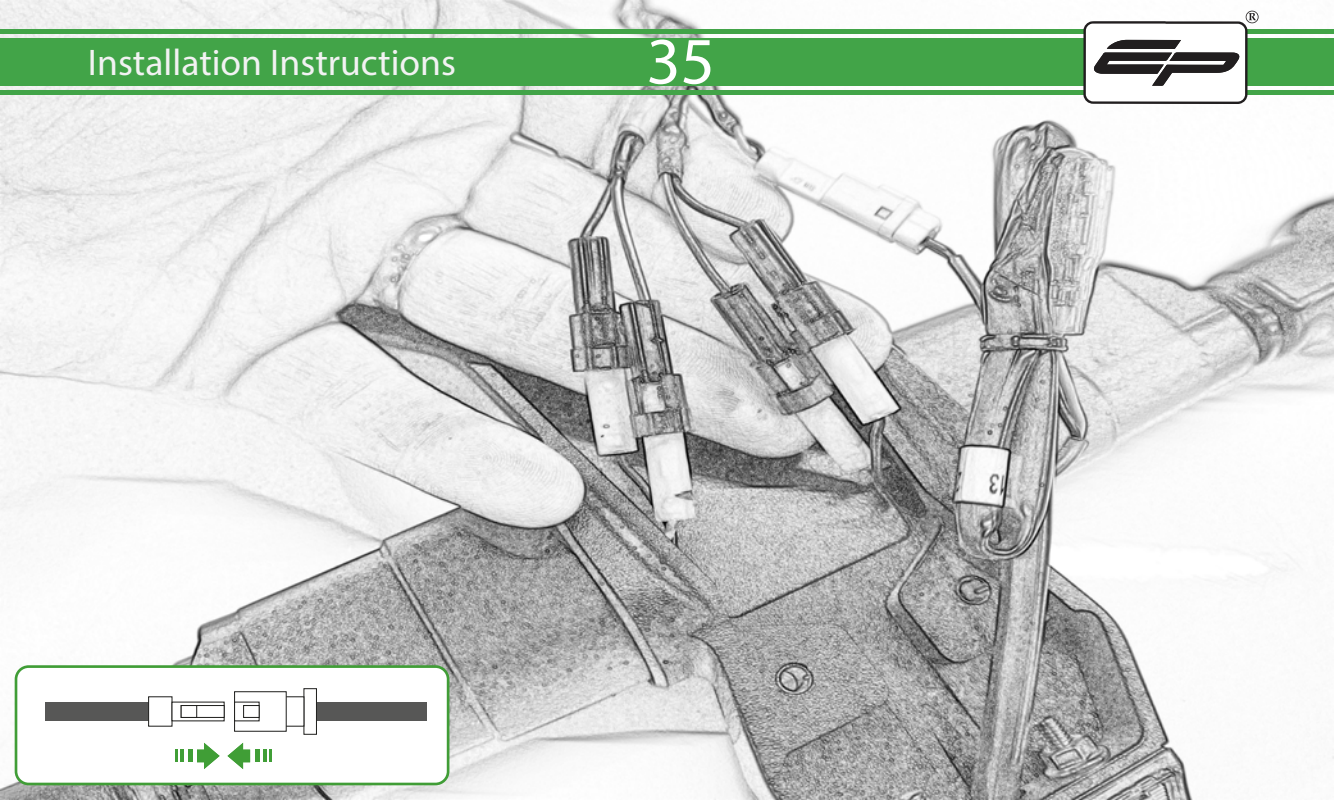


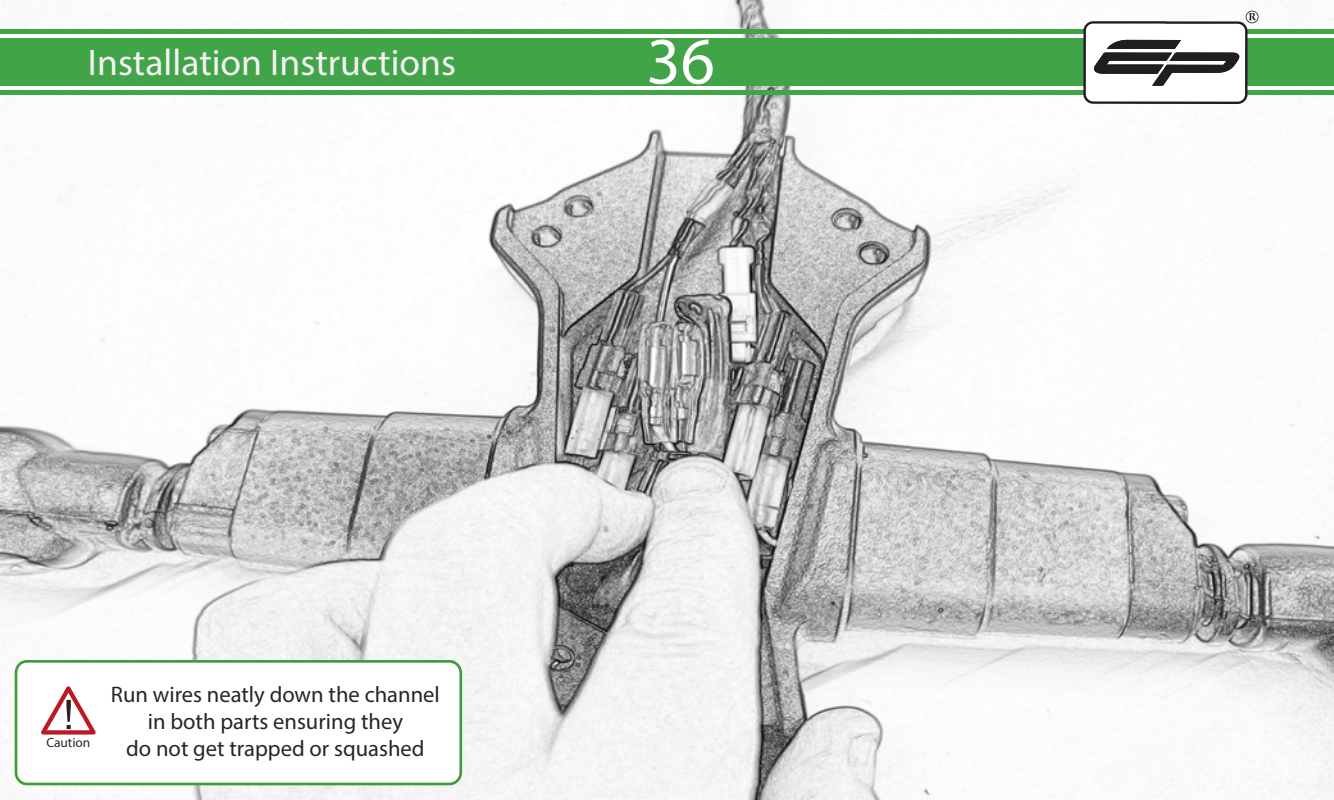



Caution


Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed

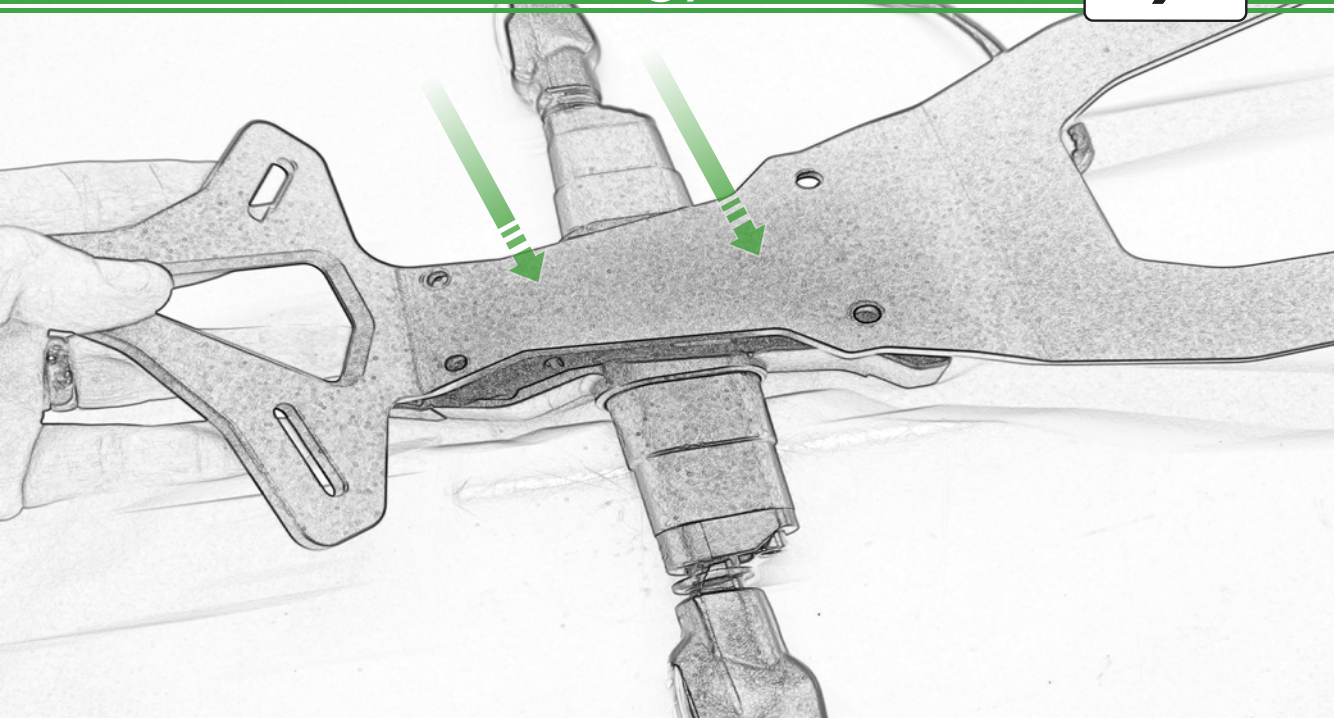


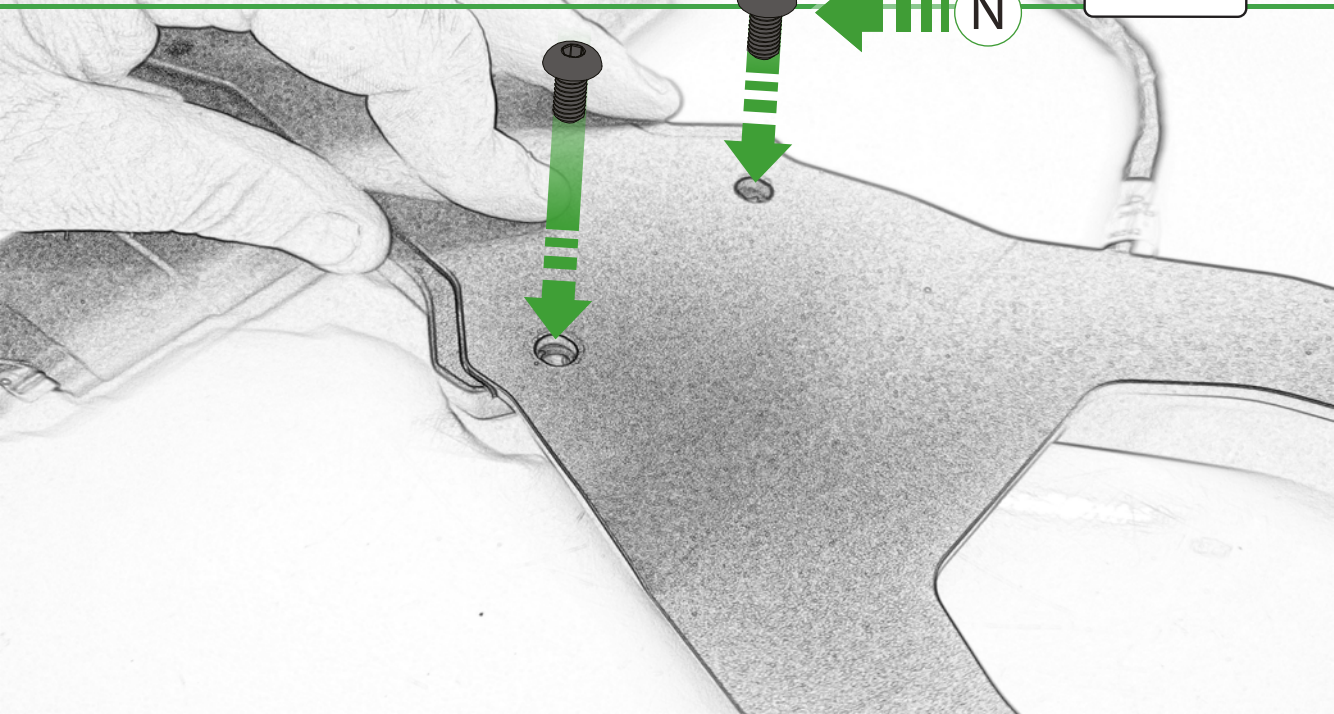


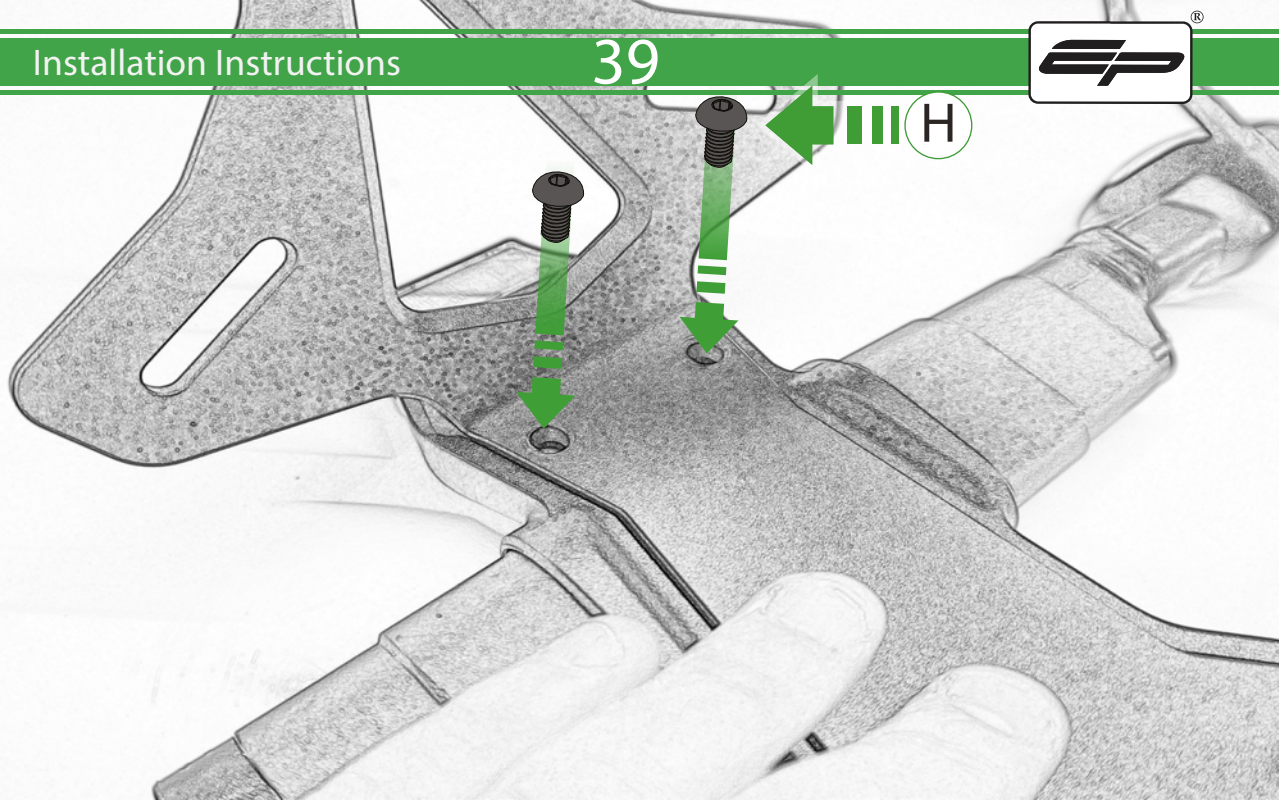


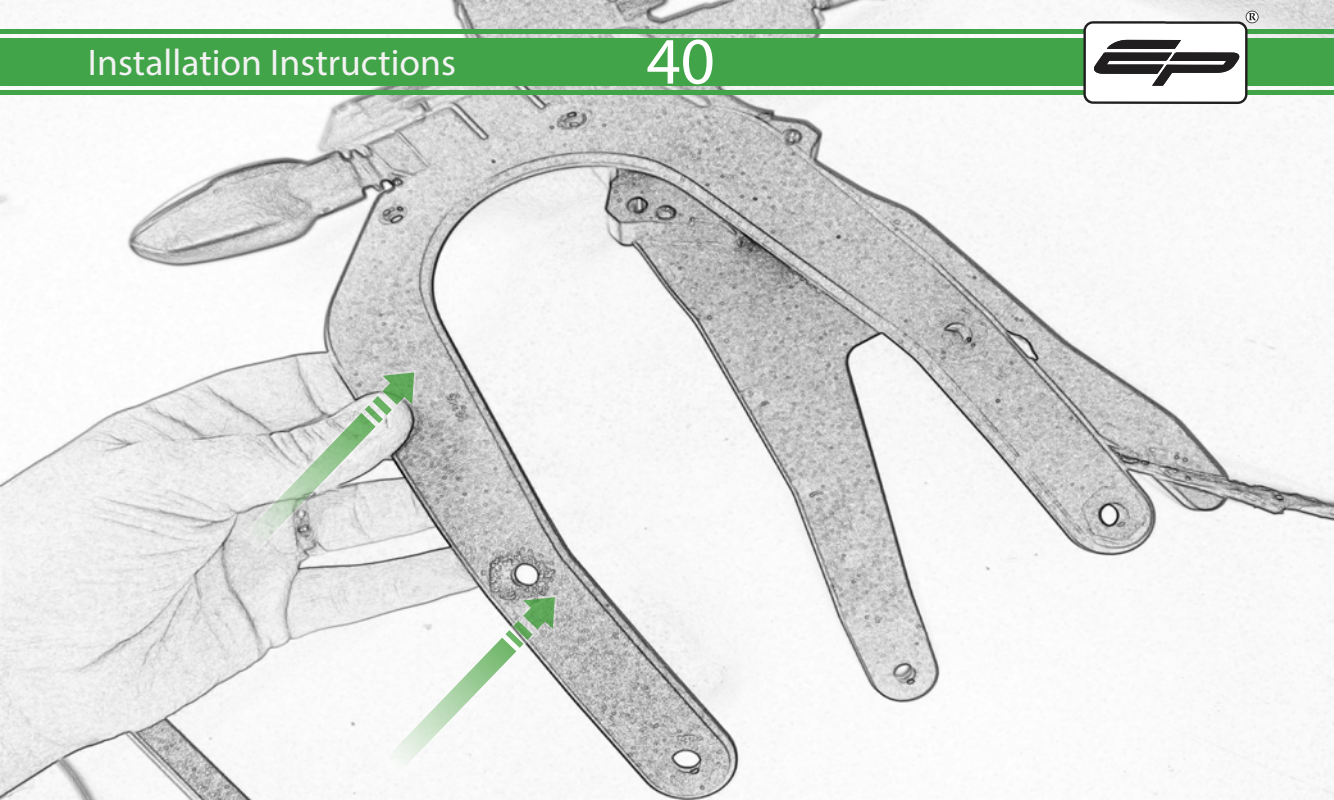


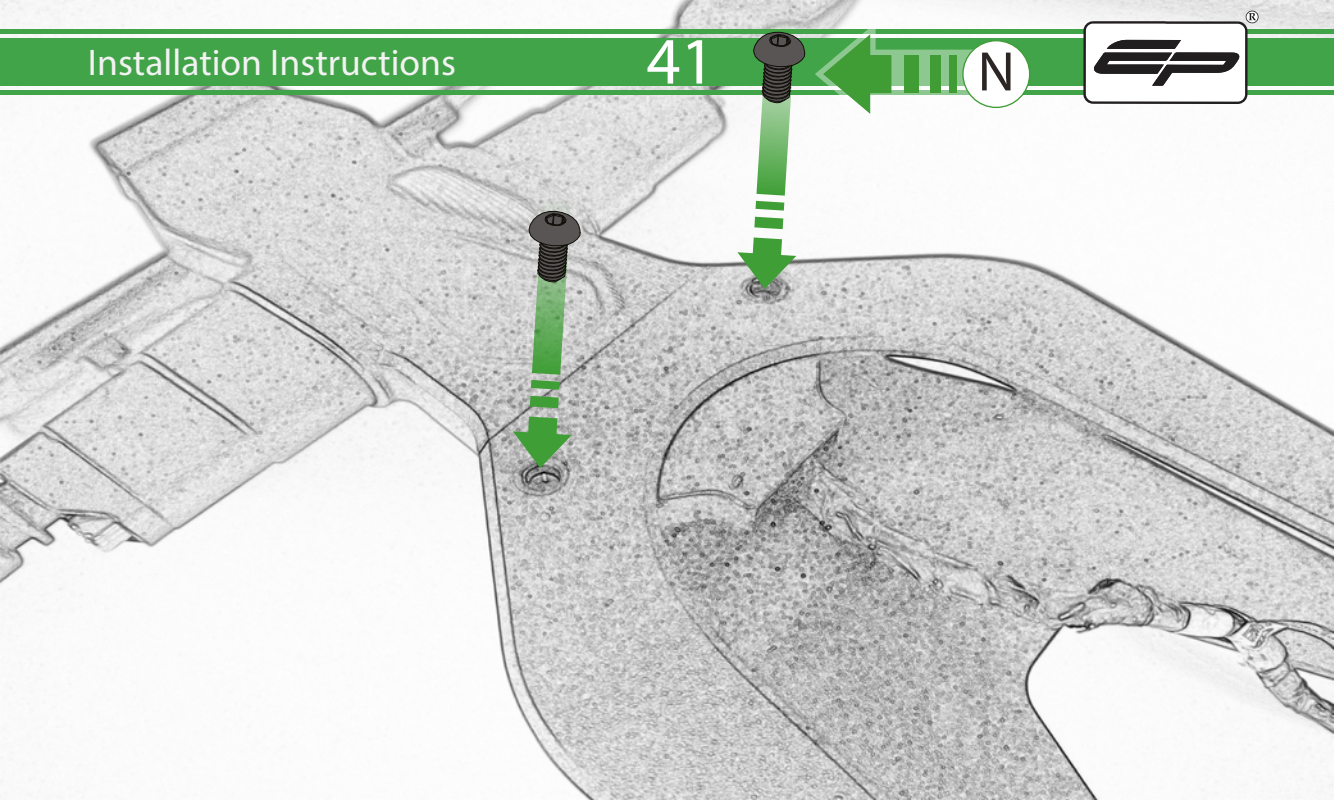


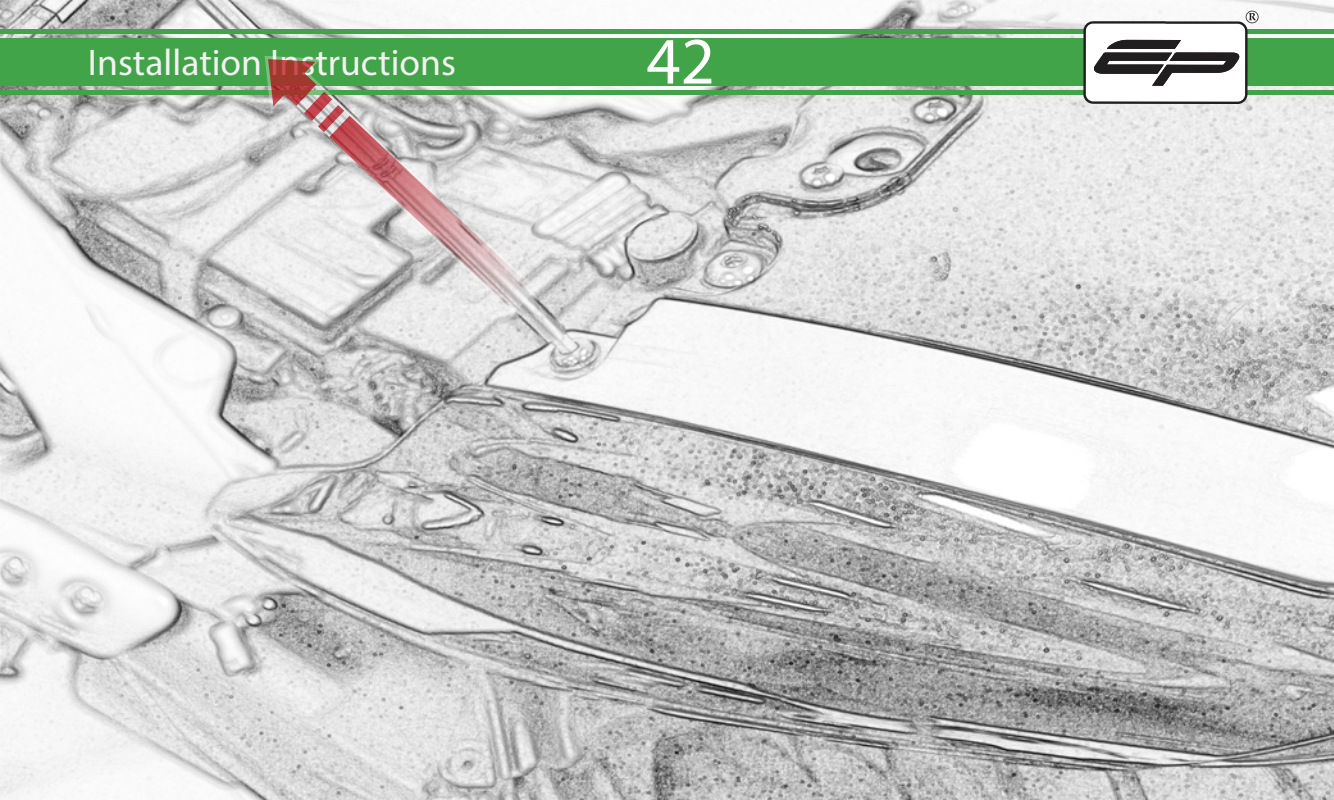

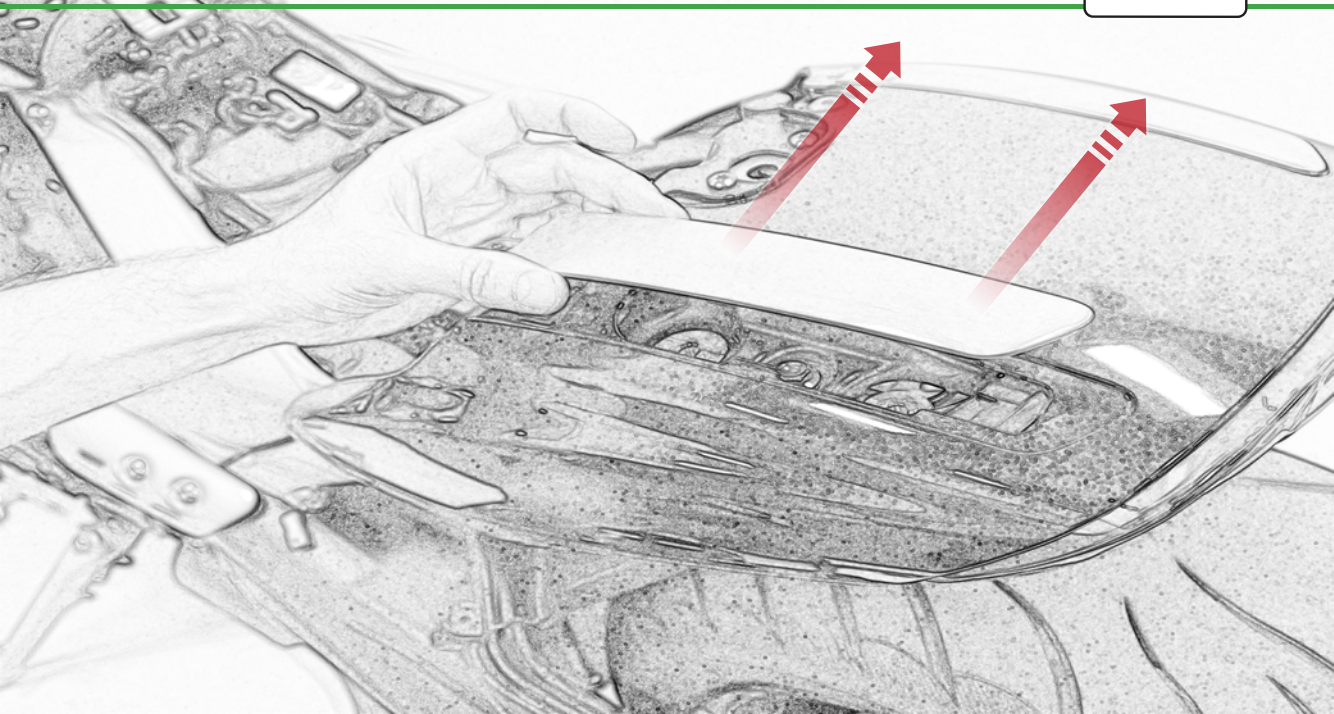


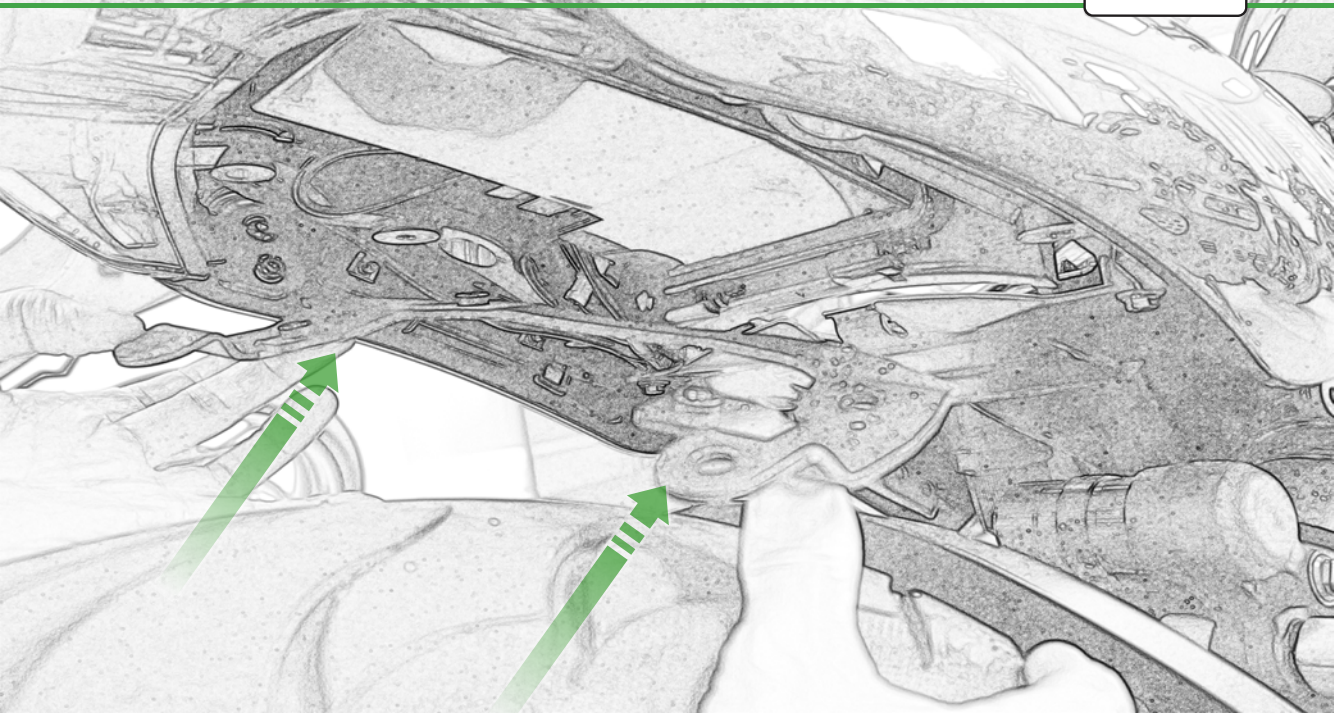


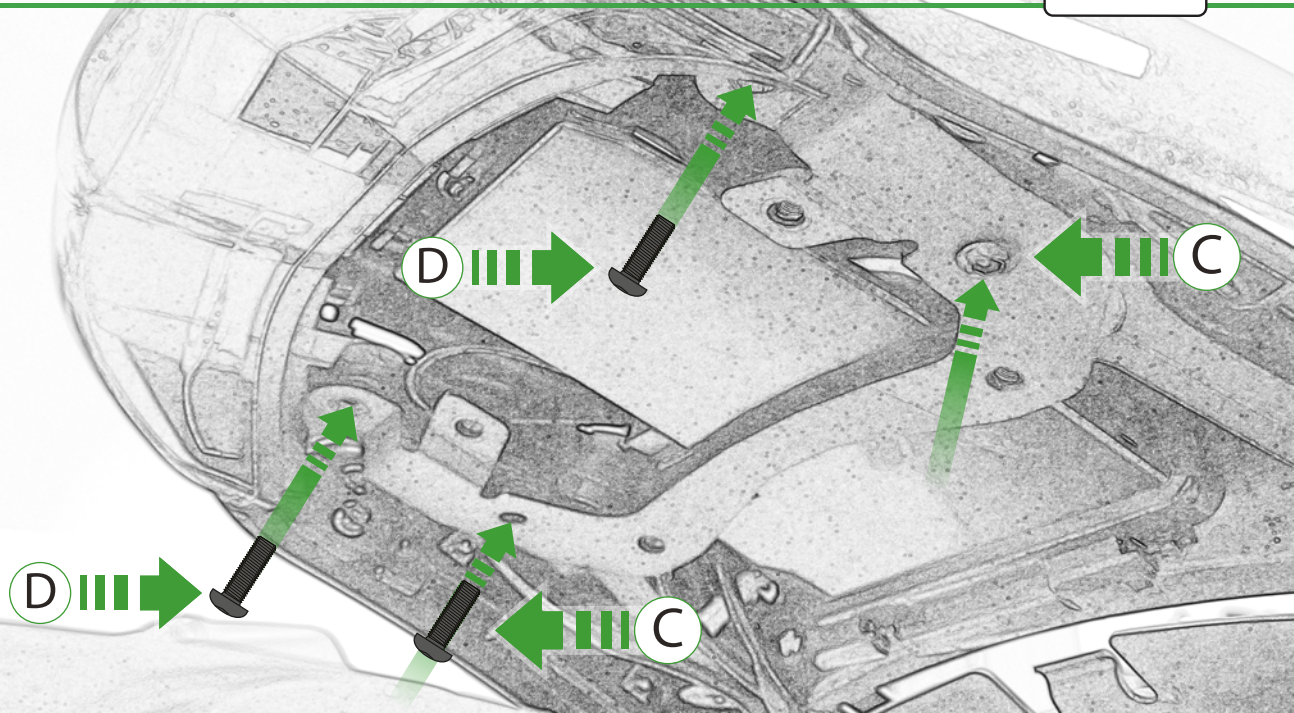

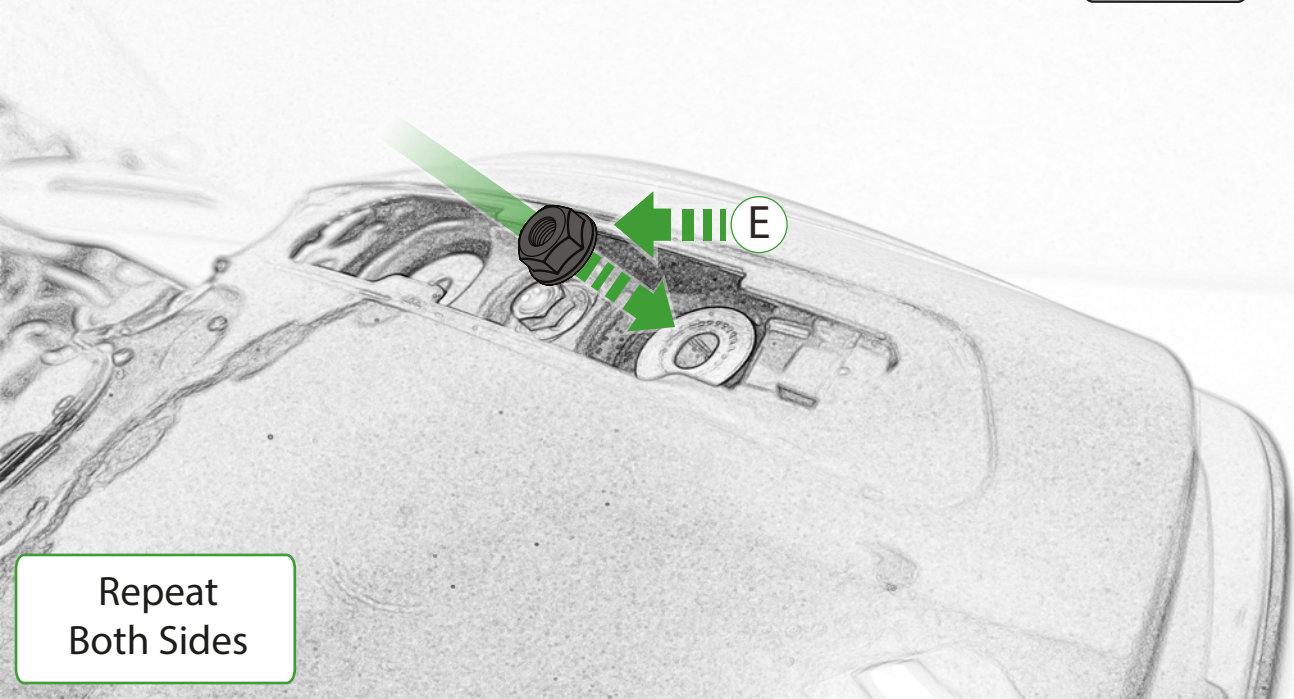

Repeat
Both Sides

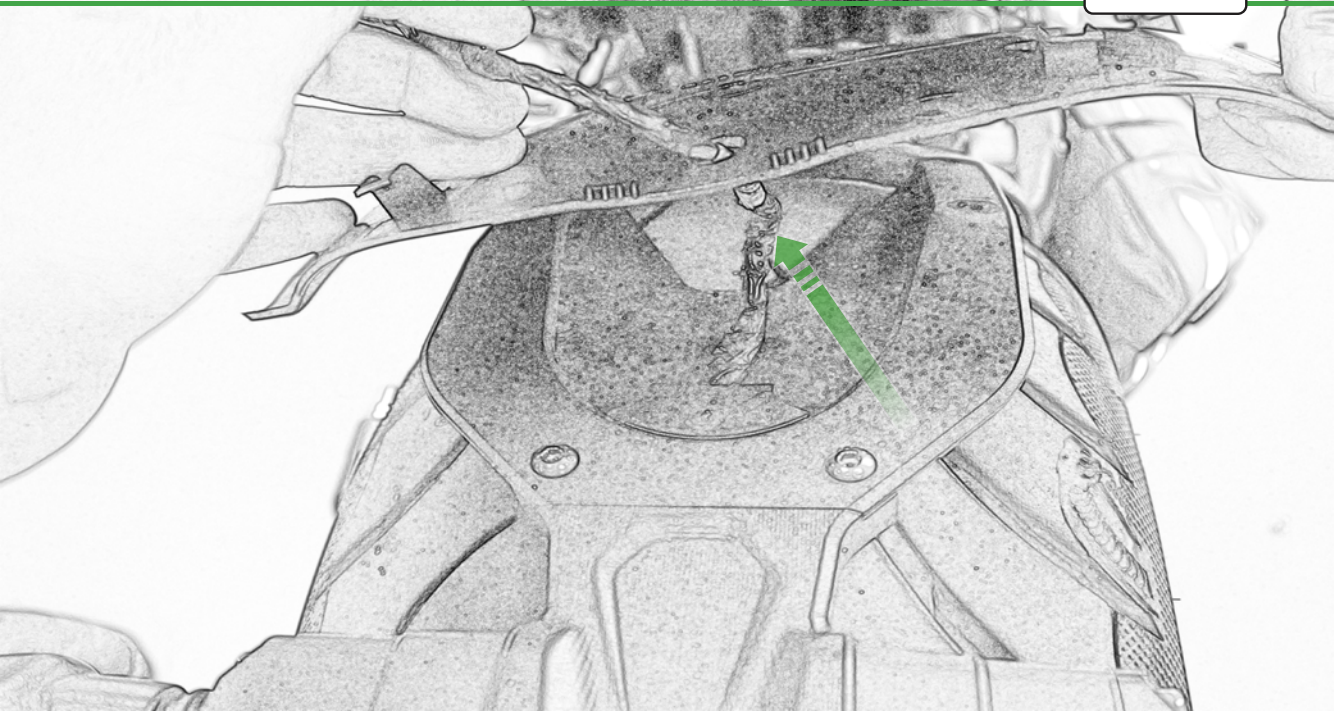


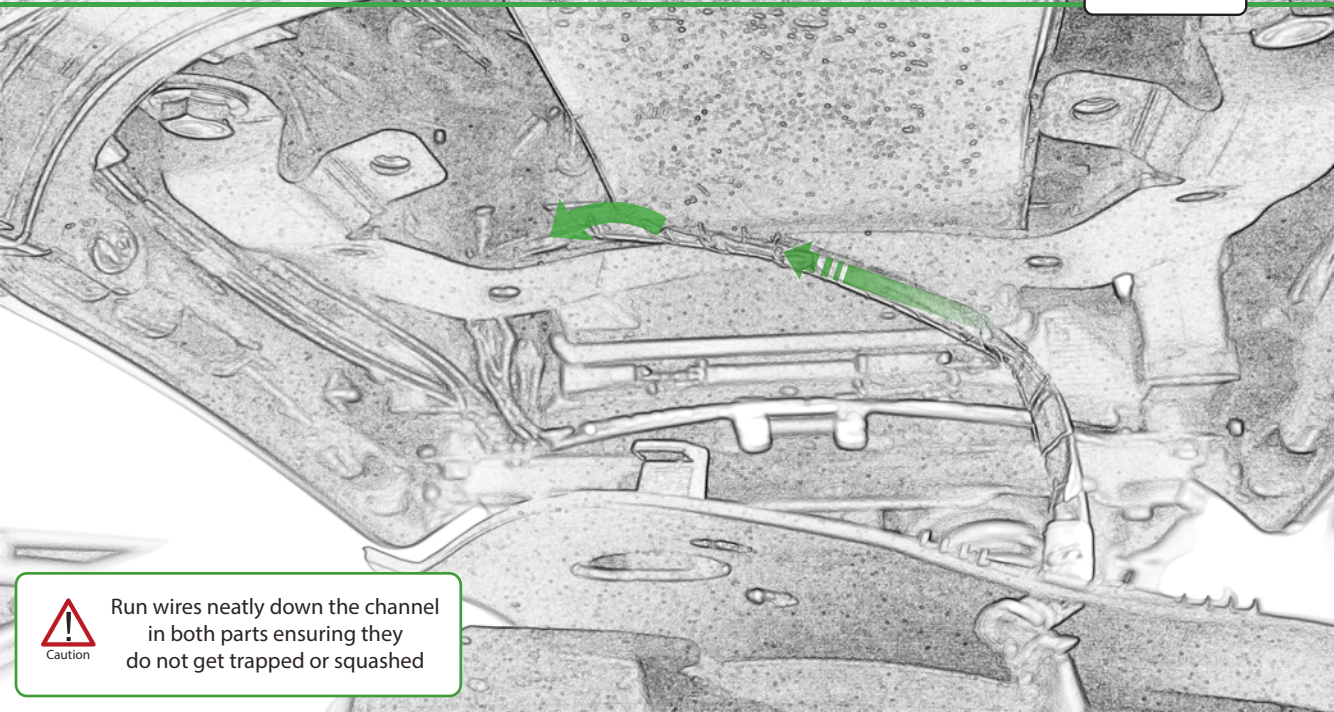

Caution


Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed




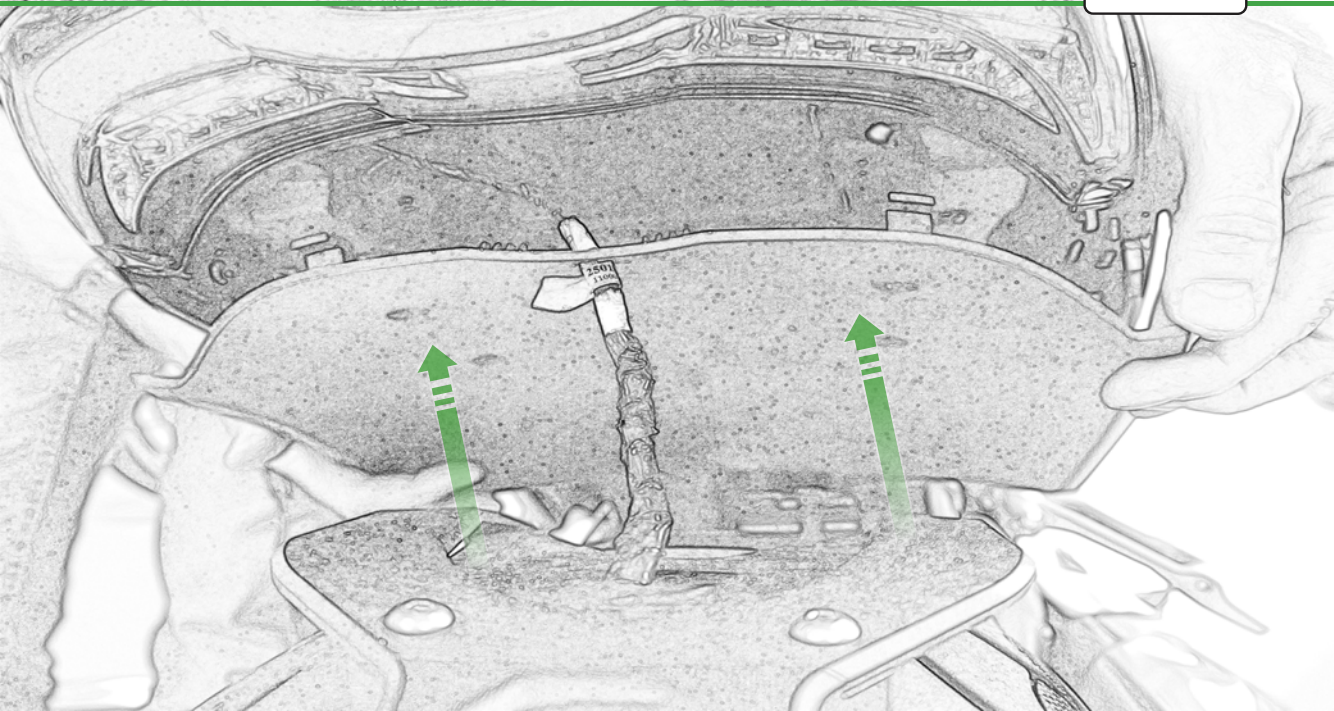



Repeat for all four
mounting points

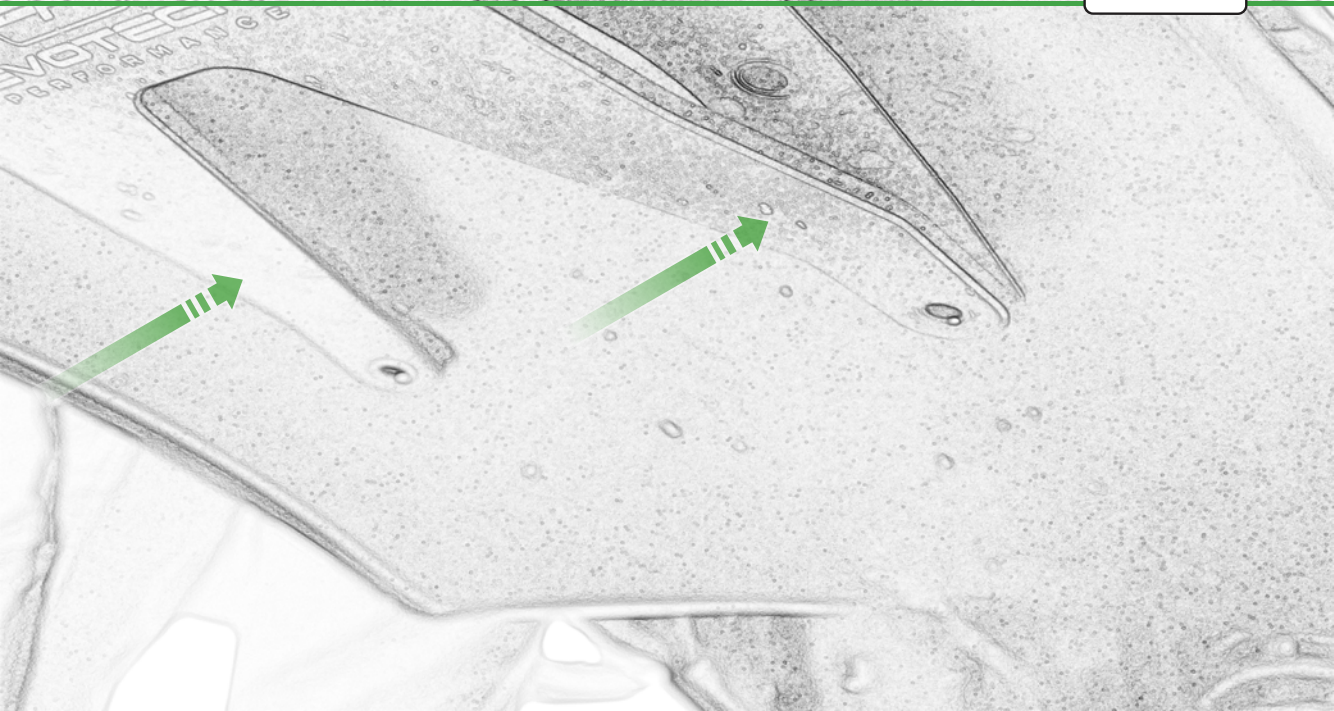

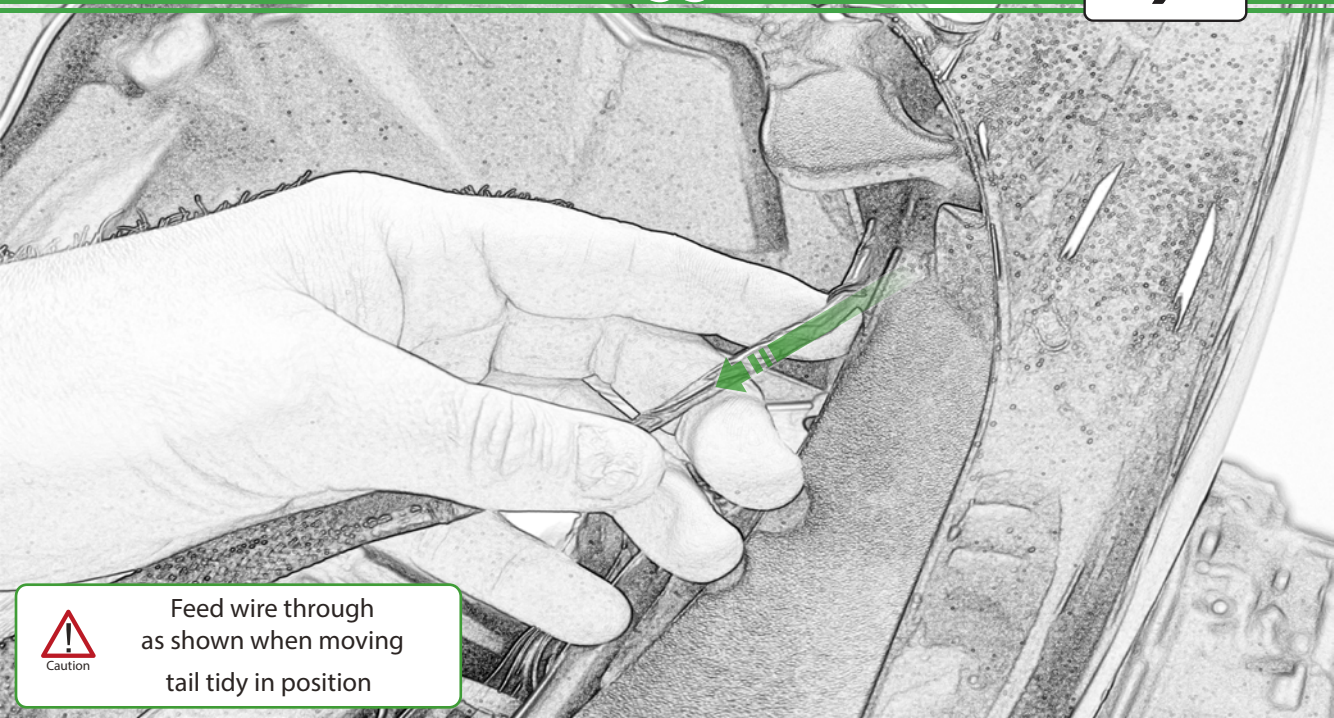


Feed wire through
as shown when moving
tail tidy in position






G



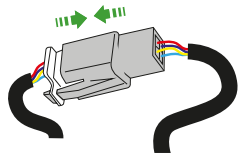

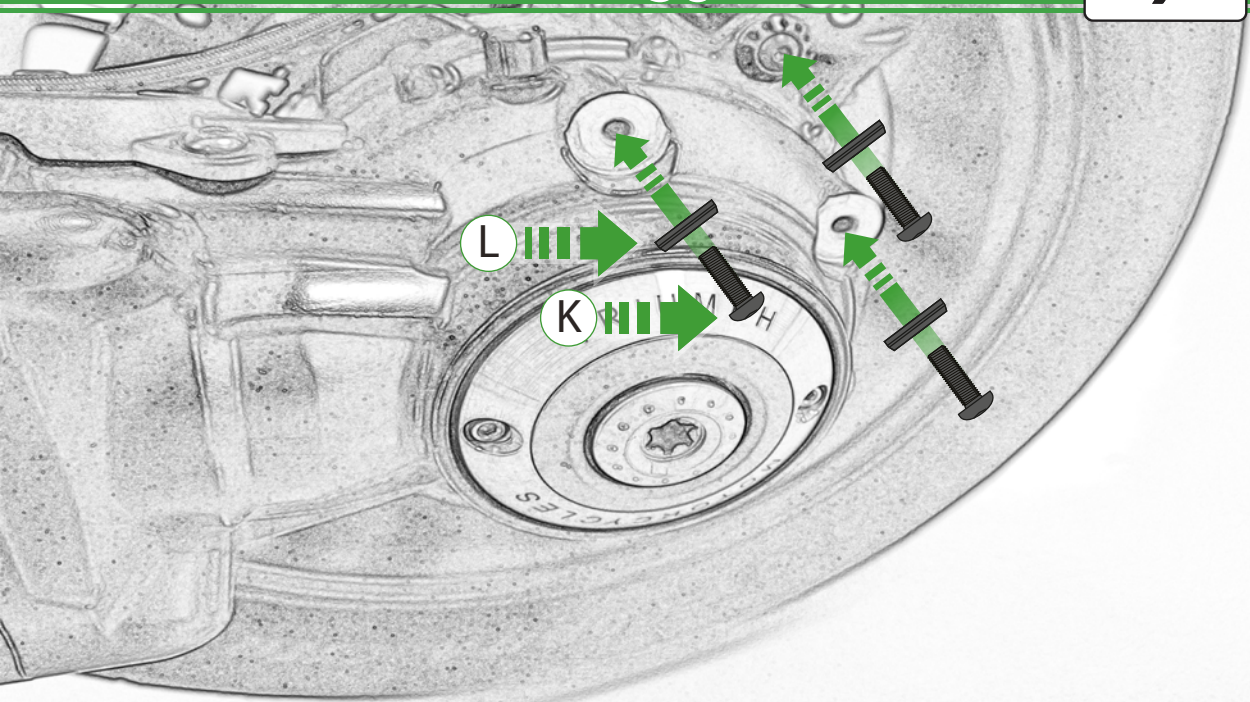




Caution


Stage 60 is for
Pannier / GT version


EVOTECH®
P E R F O R M A N C E

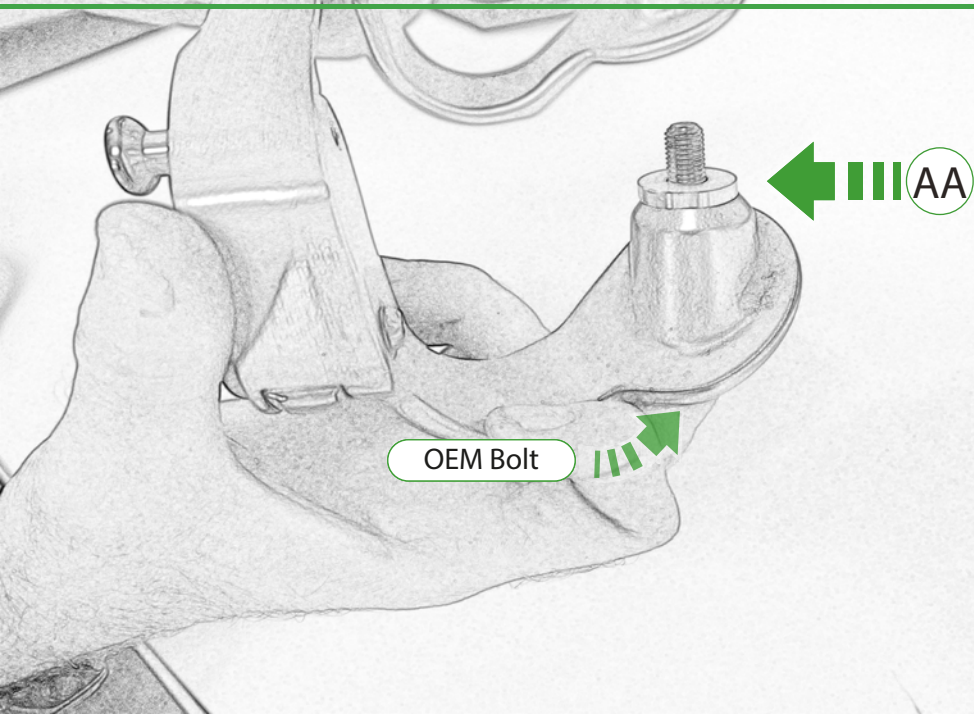



Repeat
Both Sides

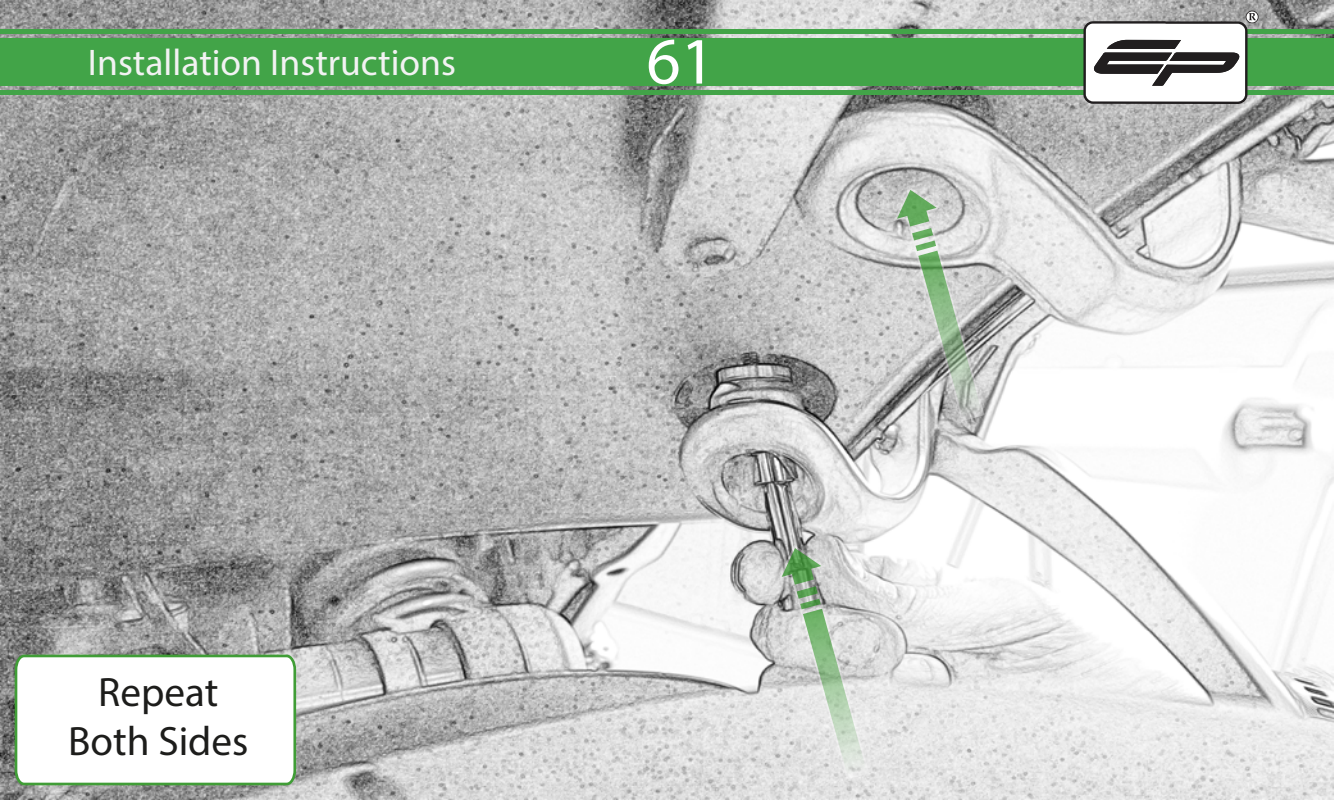

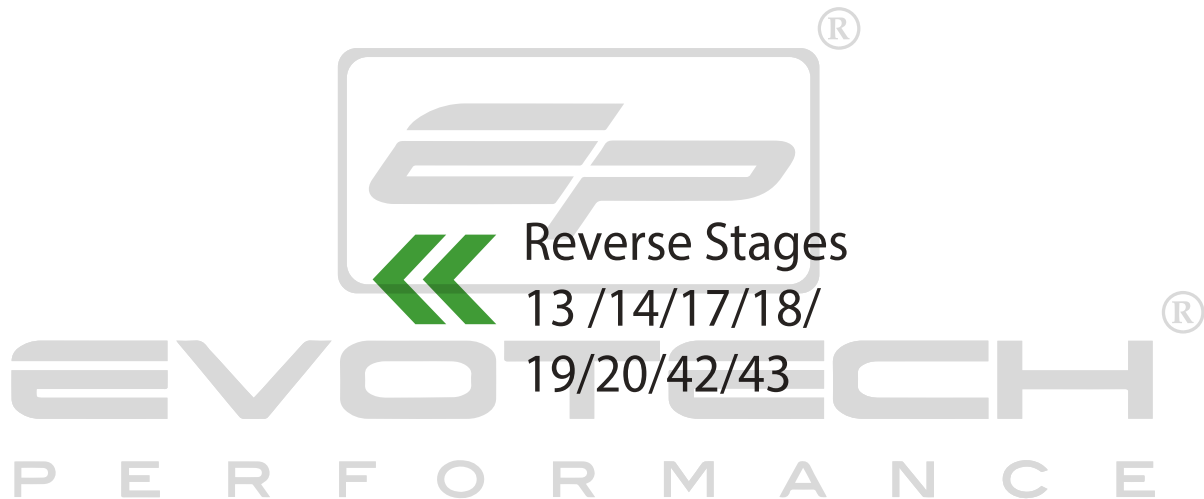



ESSENTIAL CHECKS




After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.


It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.

EVOTECH[®]
PERFORMANCE

Installation Instructions

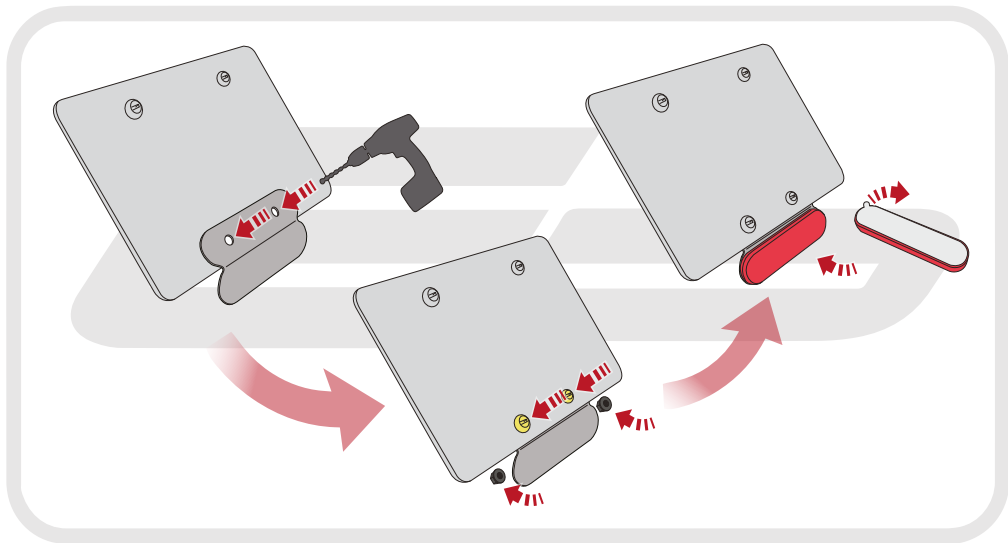

EVOTECH[®]
P E R F O R M A N C E

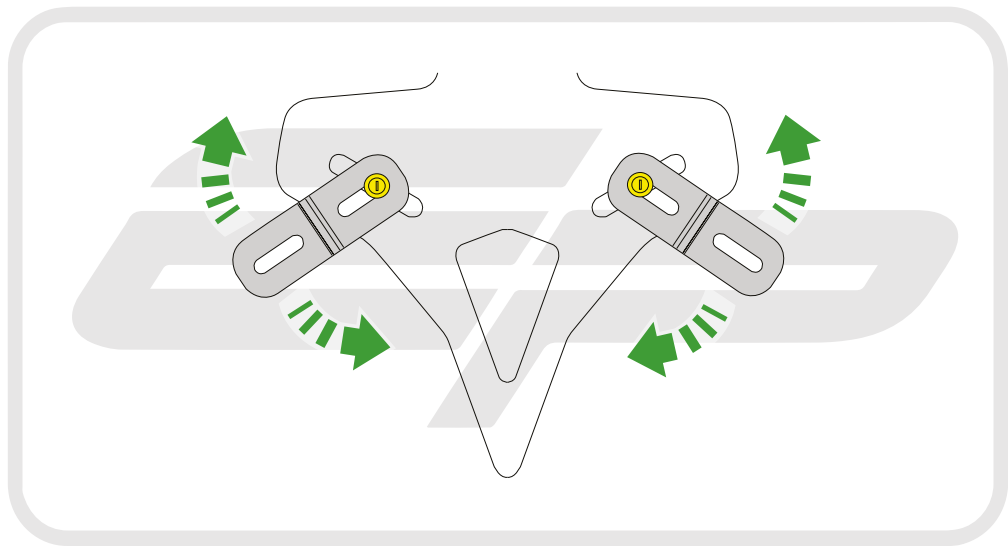



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com