EVOTECH®

PERFORMANCE

BMW R 1200 / 1250 GS
Quad Lock Sat Nav Mount

Installation Instructions

Kit Contents PRN014506-014530

- (A) 1 x Main Plate
- (B) 1 x Quad Lock Mounting Bracket
- (C) 1 x Quad Lock Sub Mounting Bracket
- (D) 2 x M4 x 5mm Black Button Head Bolts
- (E) 2 x P-clips (No.1)
- (F) 2 x P-clips (No.2)
- (G) 2 x P-clips (No.3)
- (H) 2 x P-clips (No.4)
- (I) 2 x Rubber Bungs (TFT Screens Only)
- (J) 3 x M5 x 12mm Black Button head Bolts
- (K) 4 x M6 x 16mm Caphead Bolt

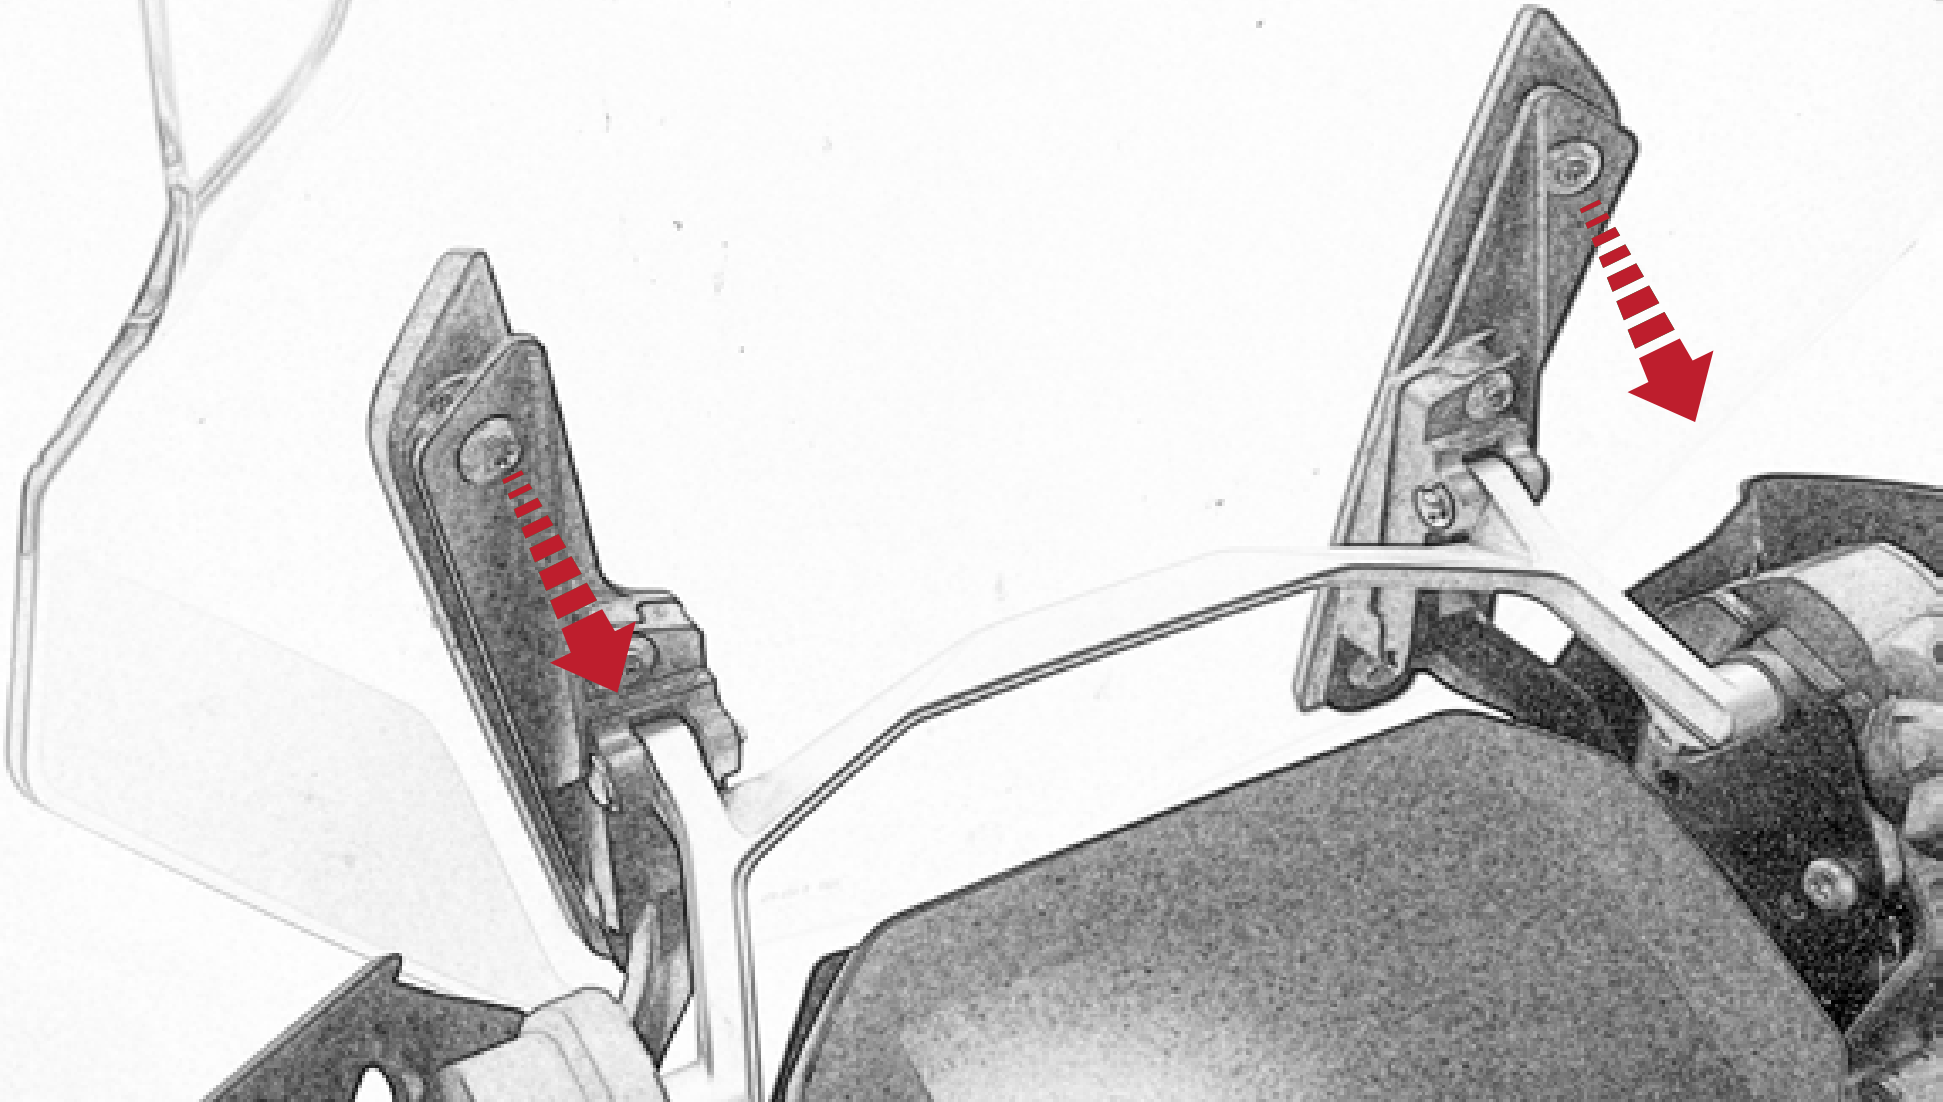

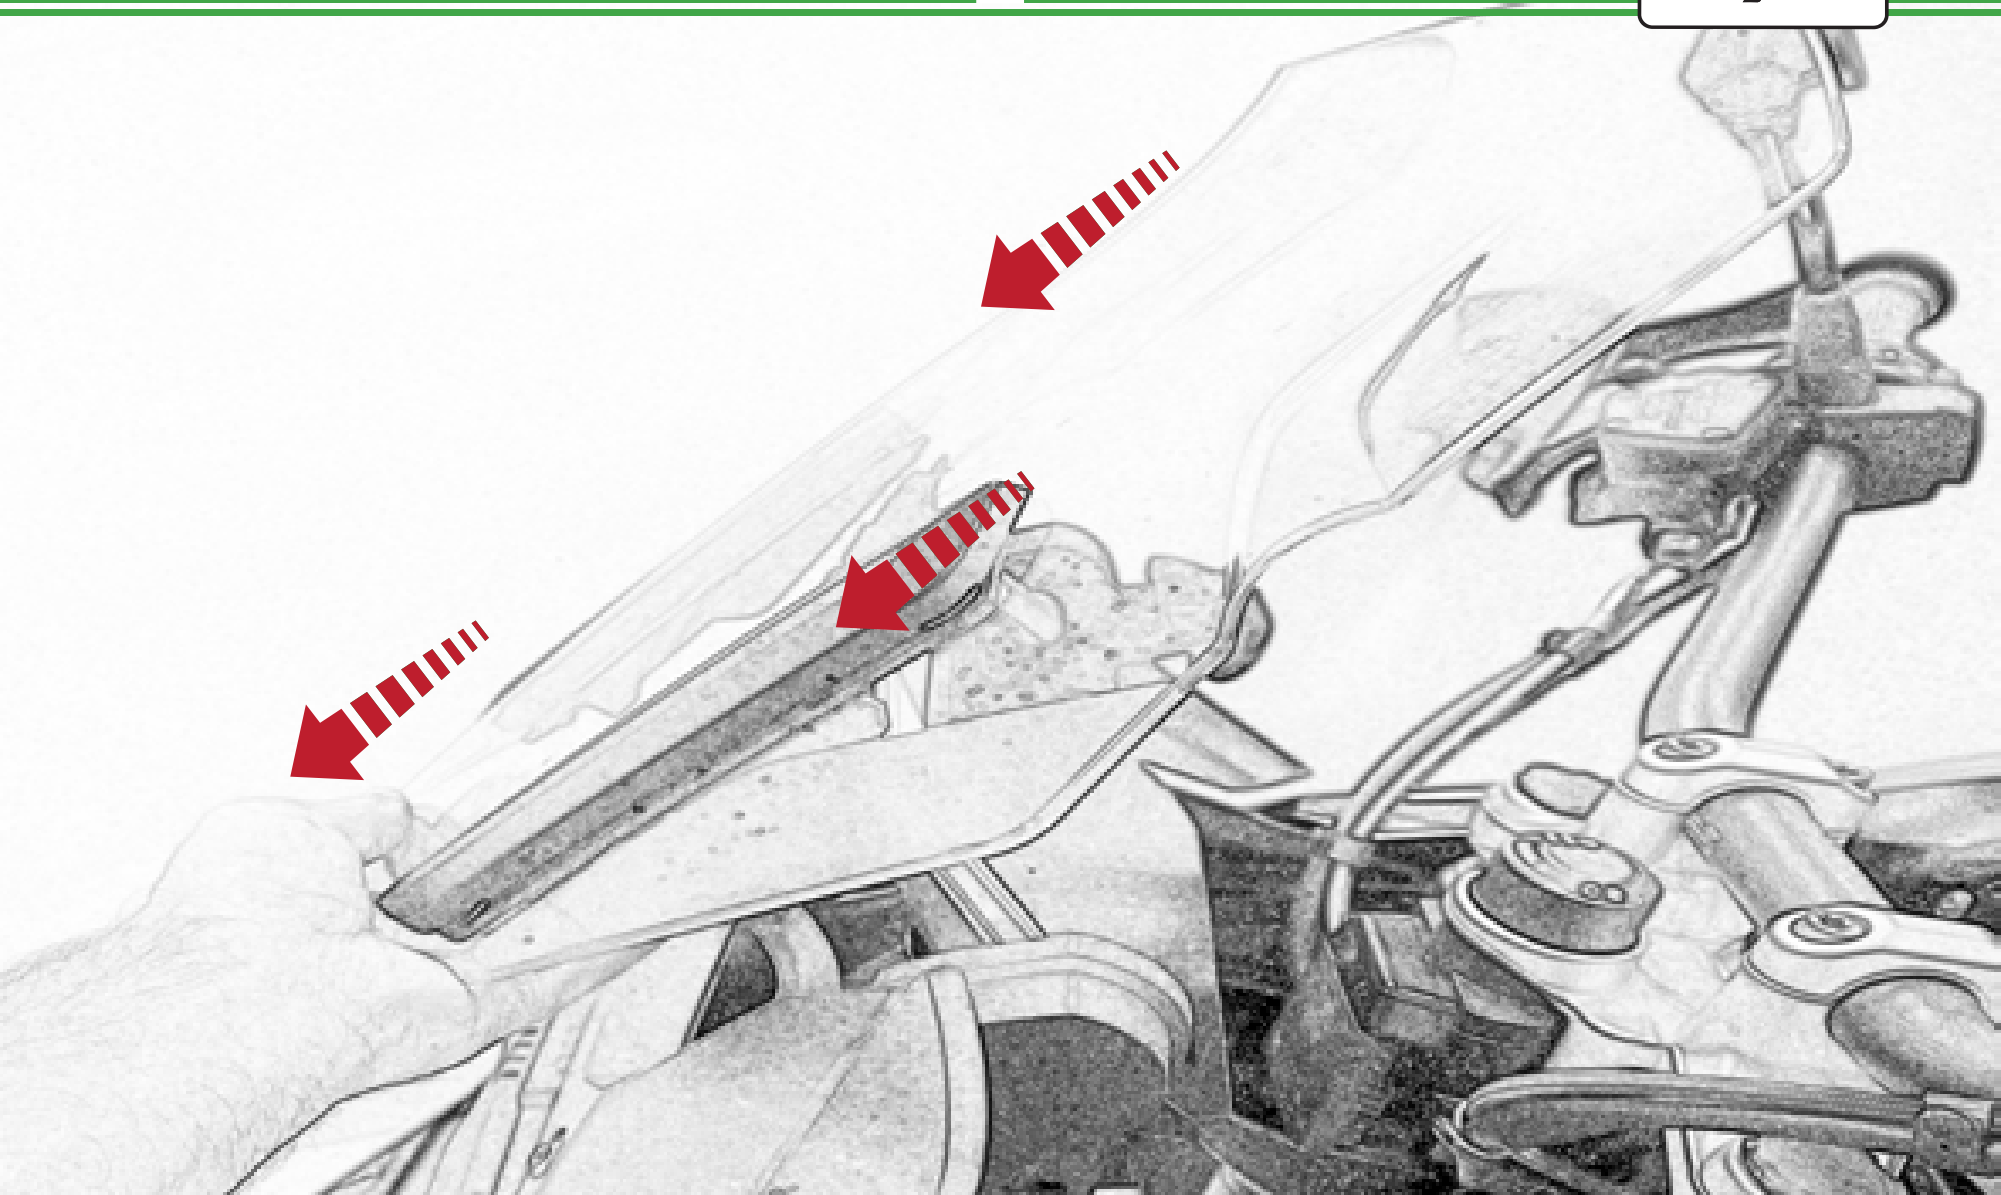

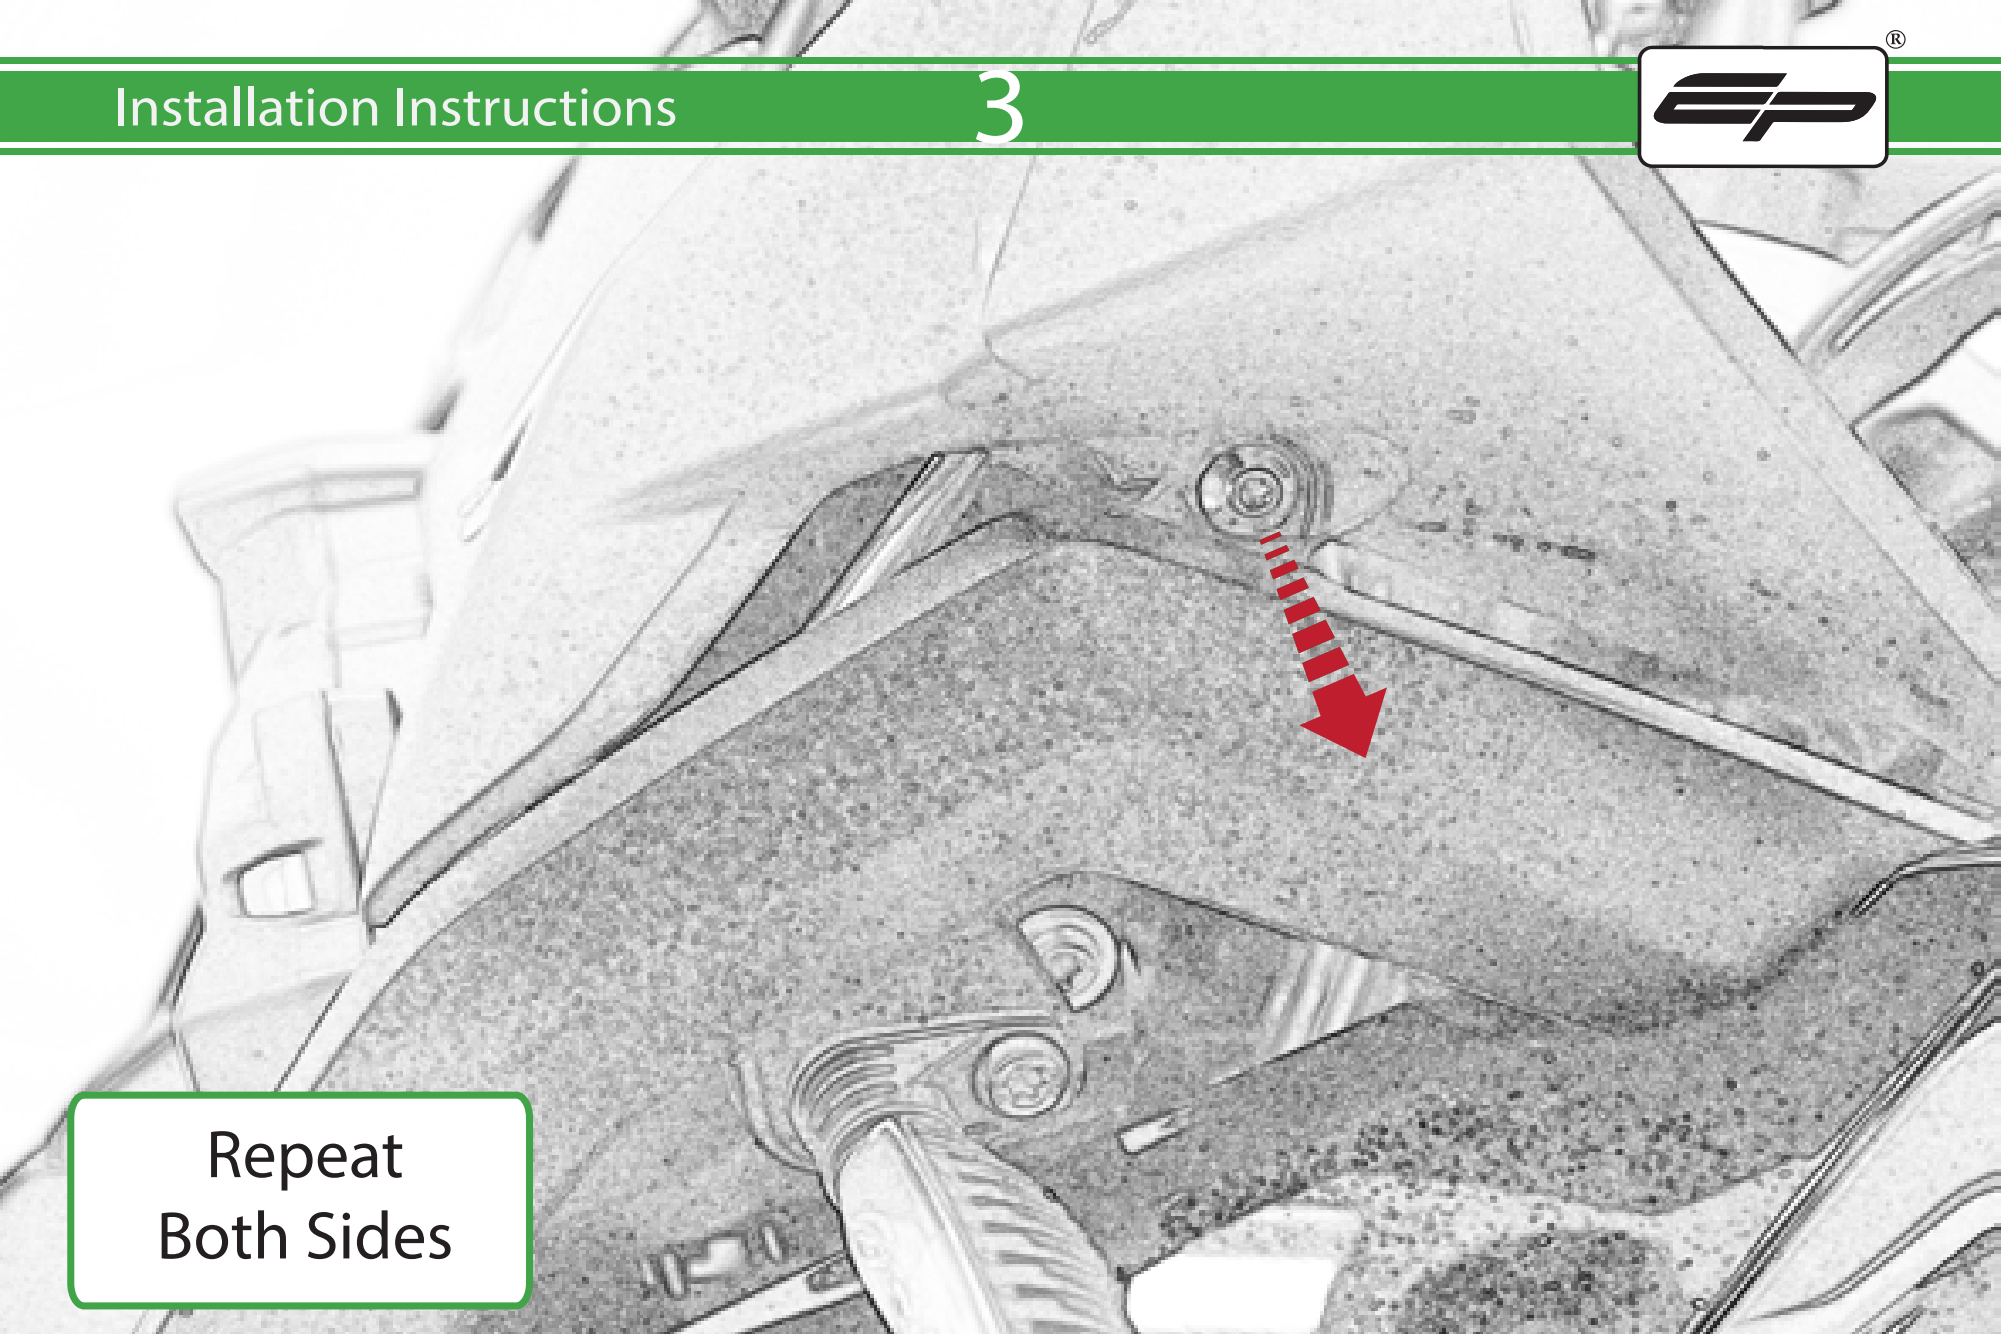

Repeat
Both Sides

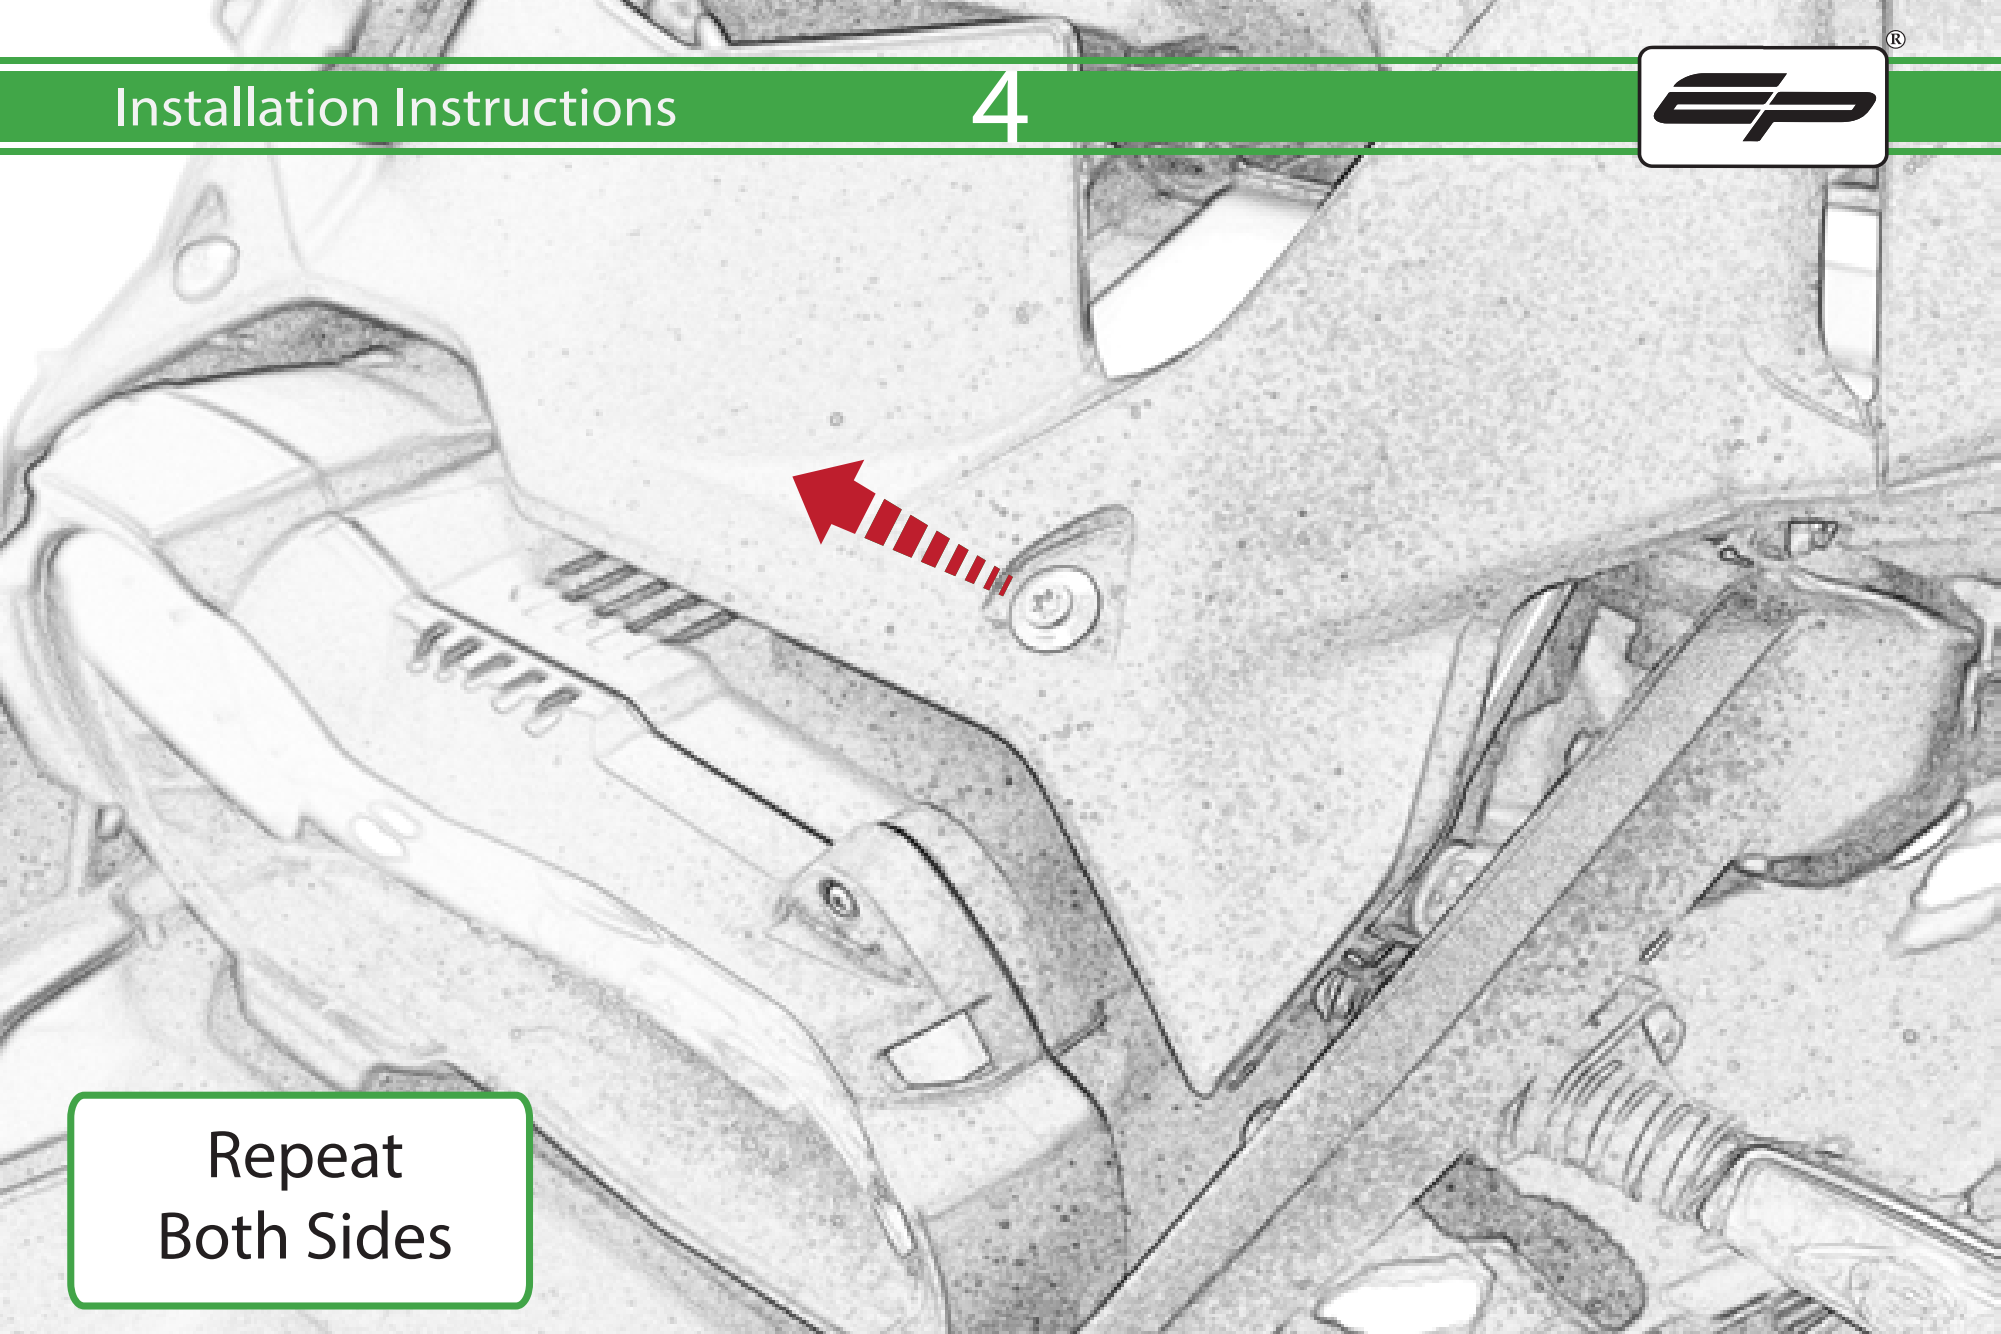

Repeat
Both Sides

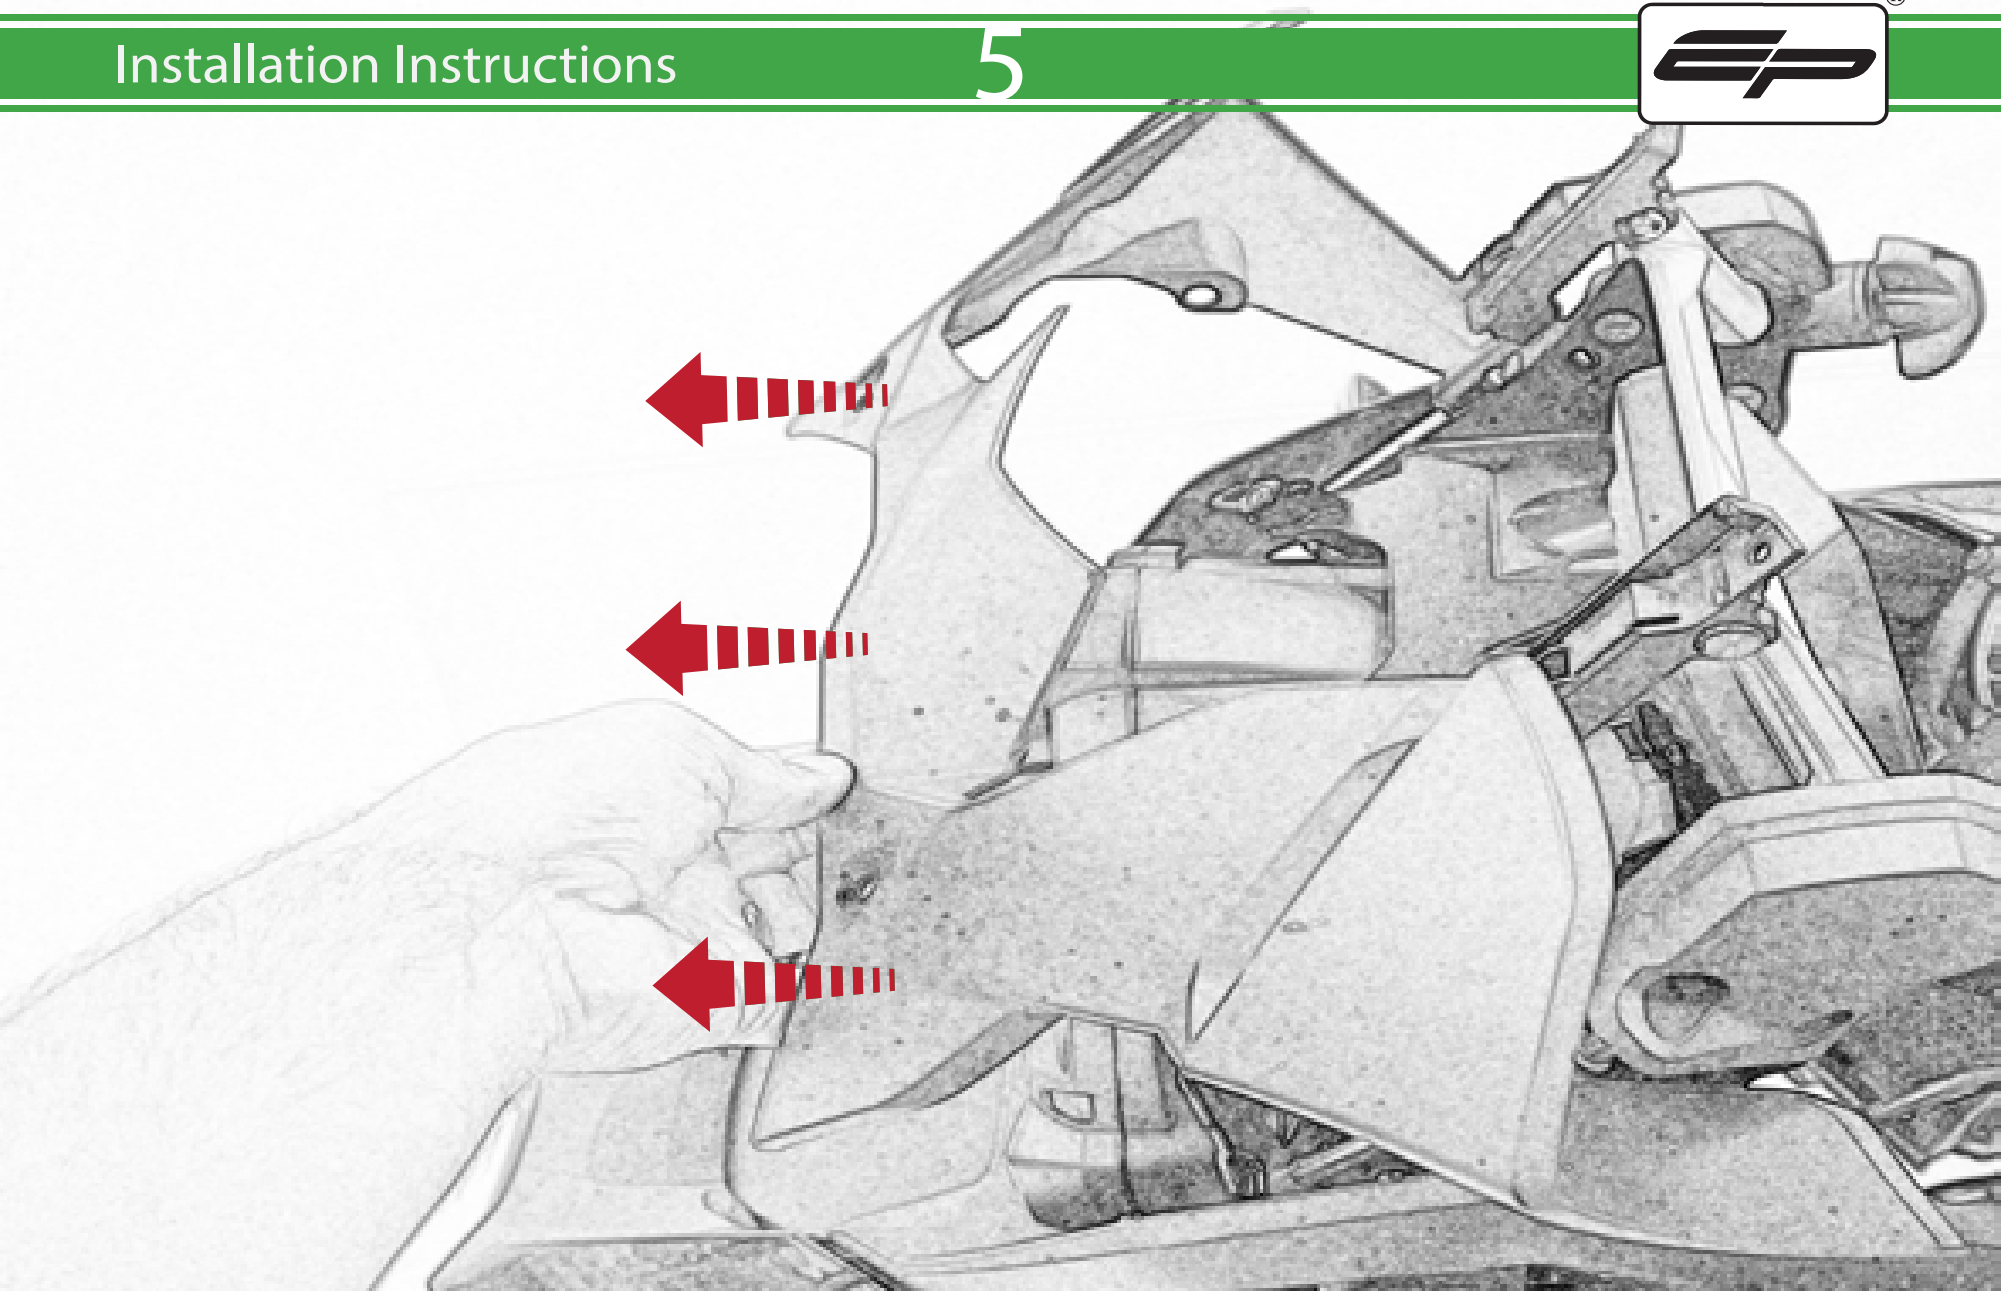

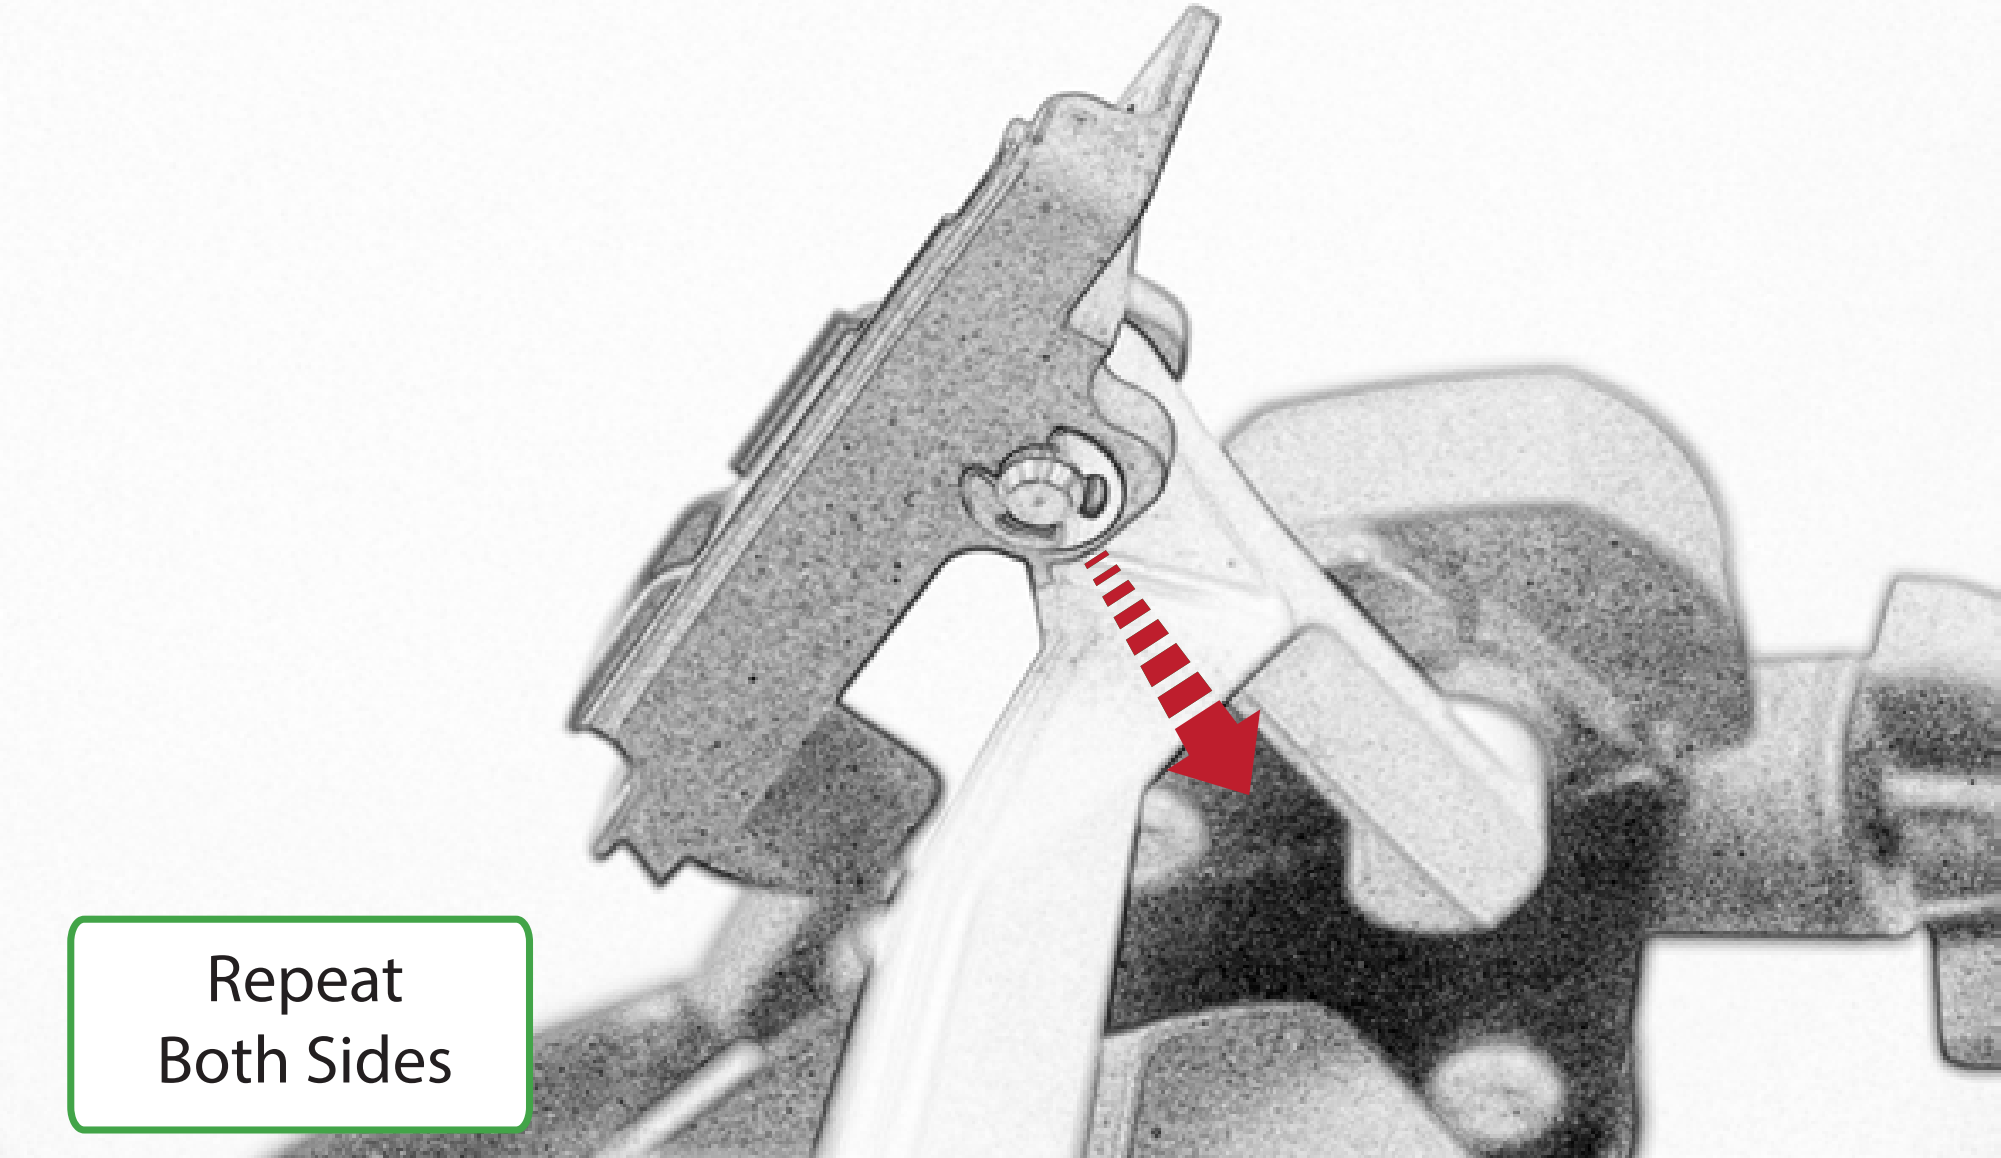

Repeat
Both Sides

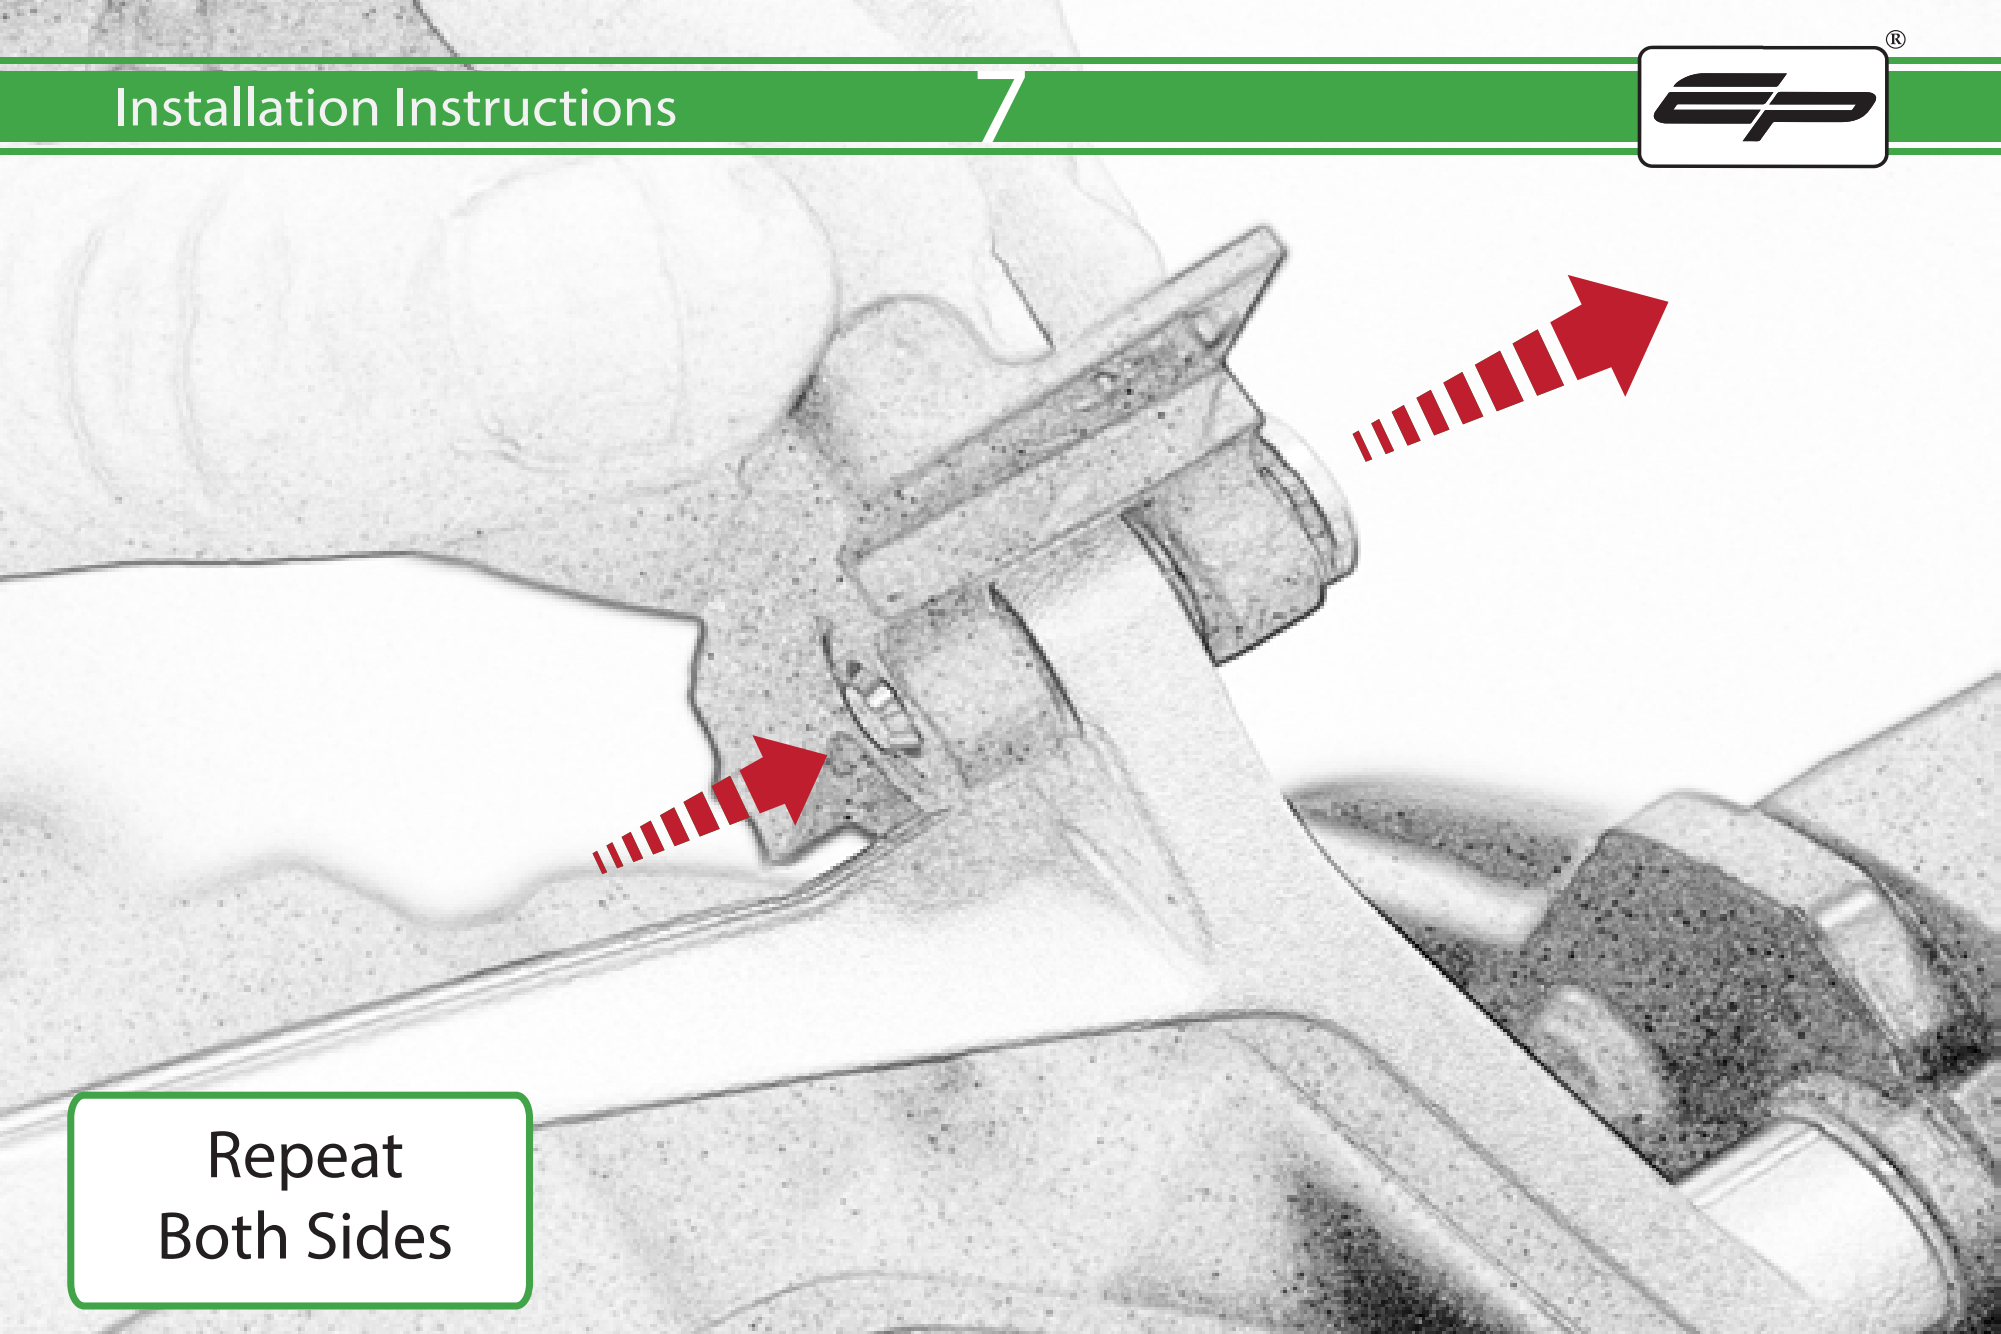

Repeat
Both Sides

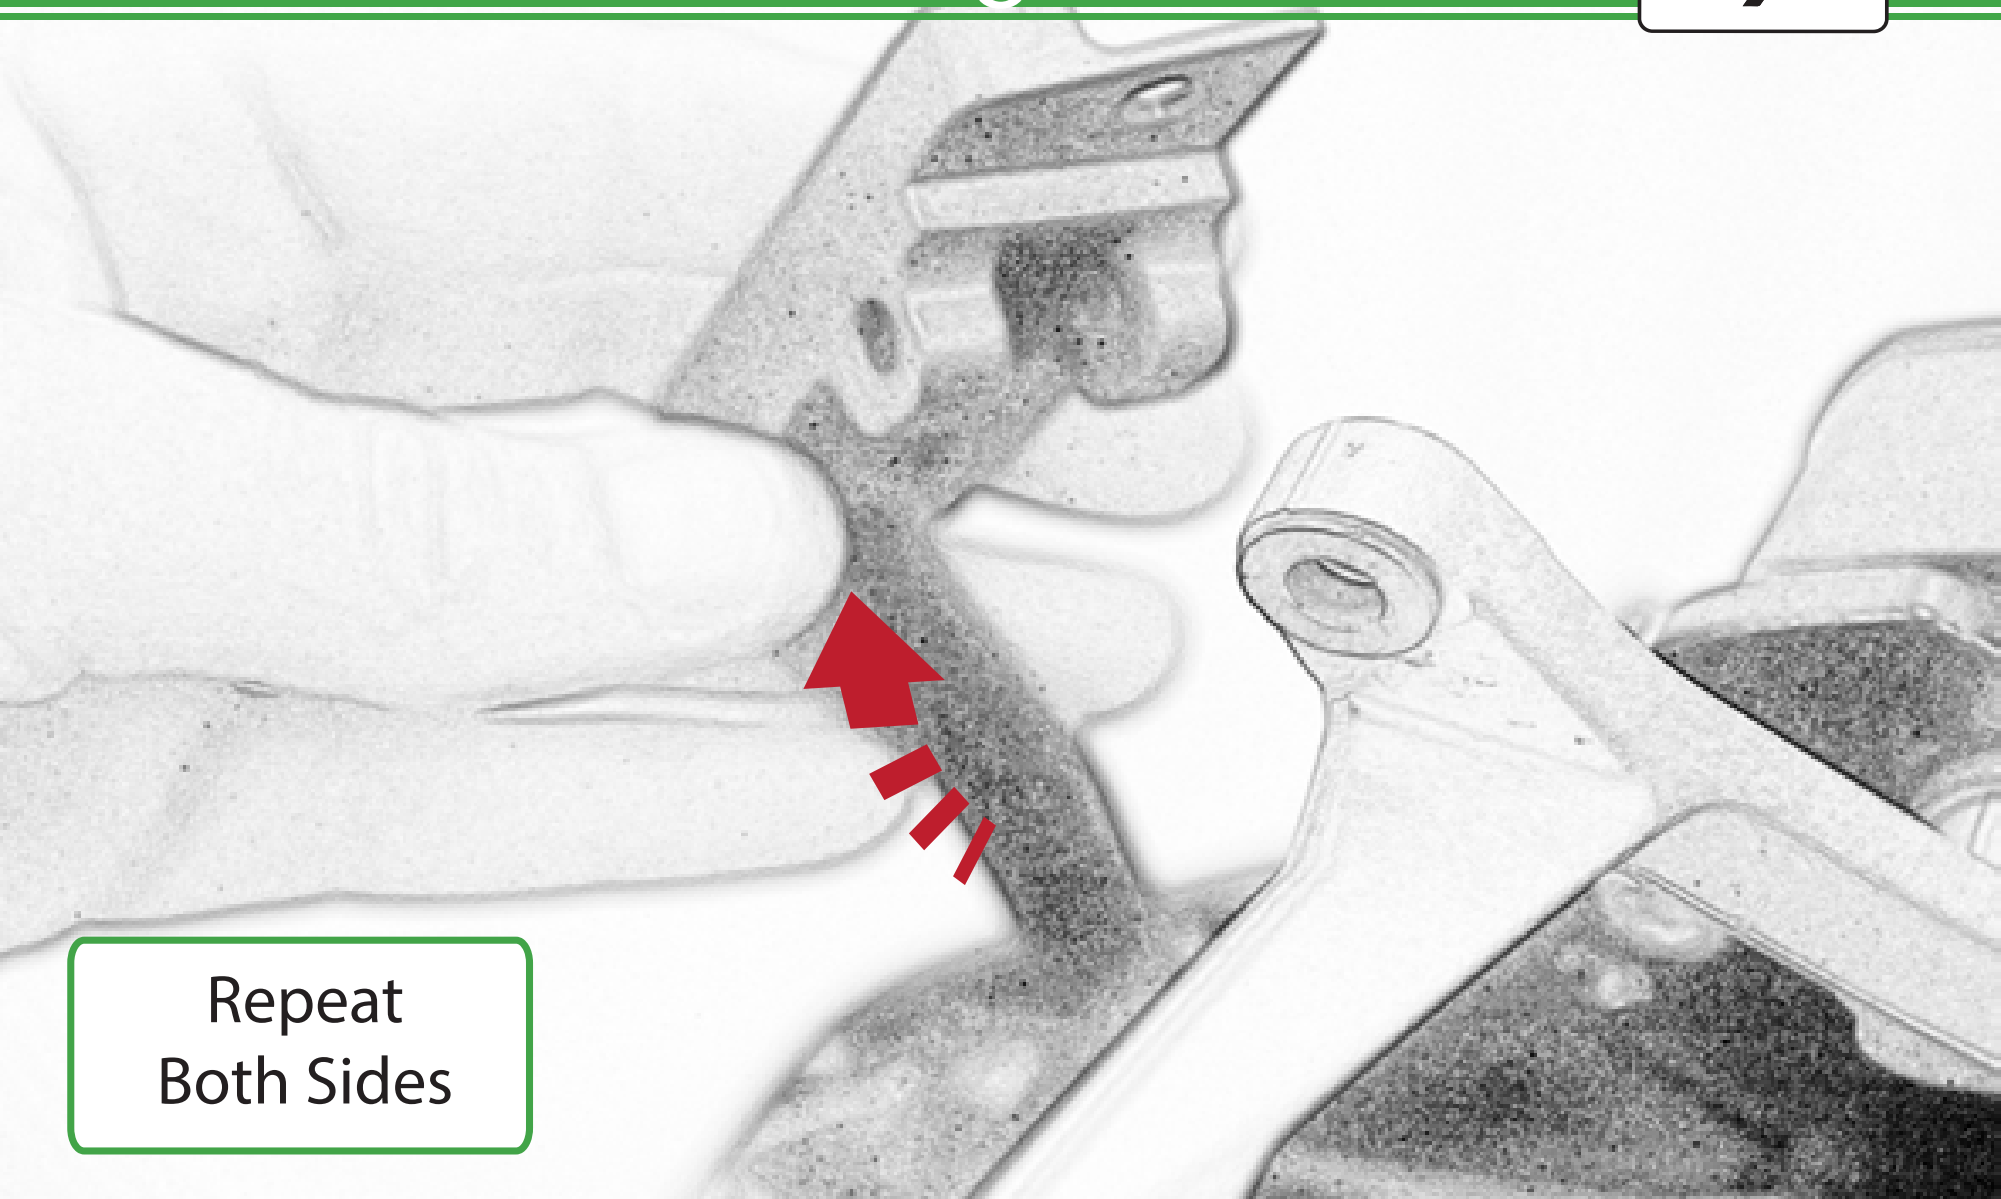

Repeat
Both Sides

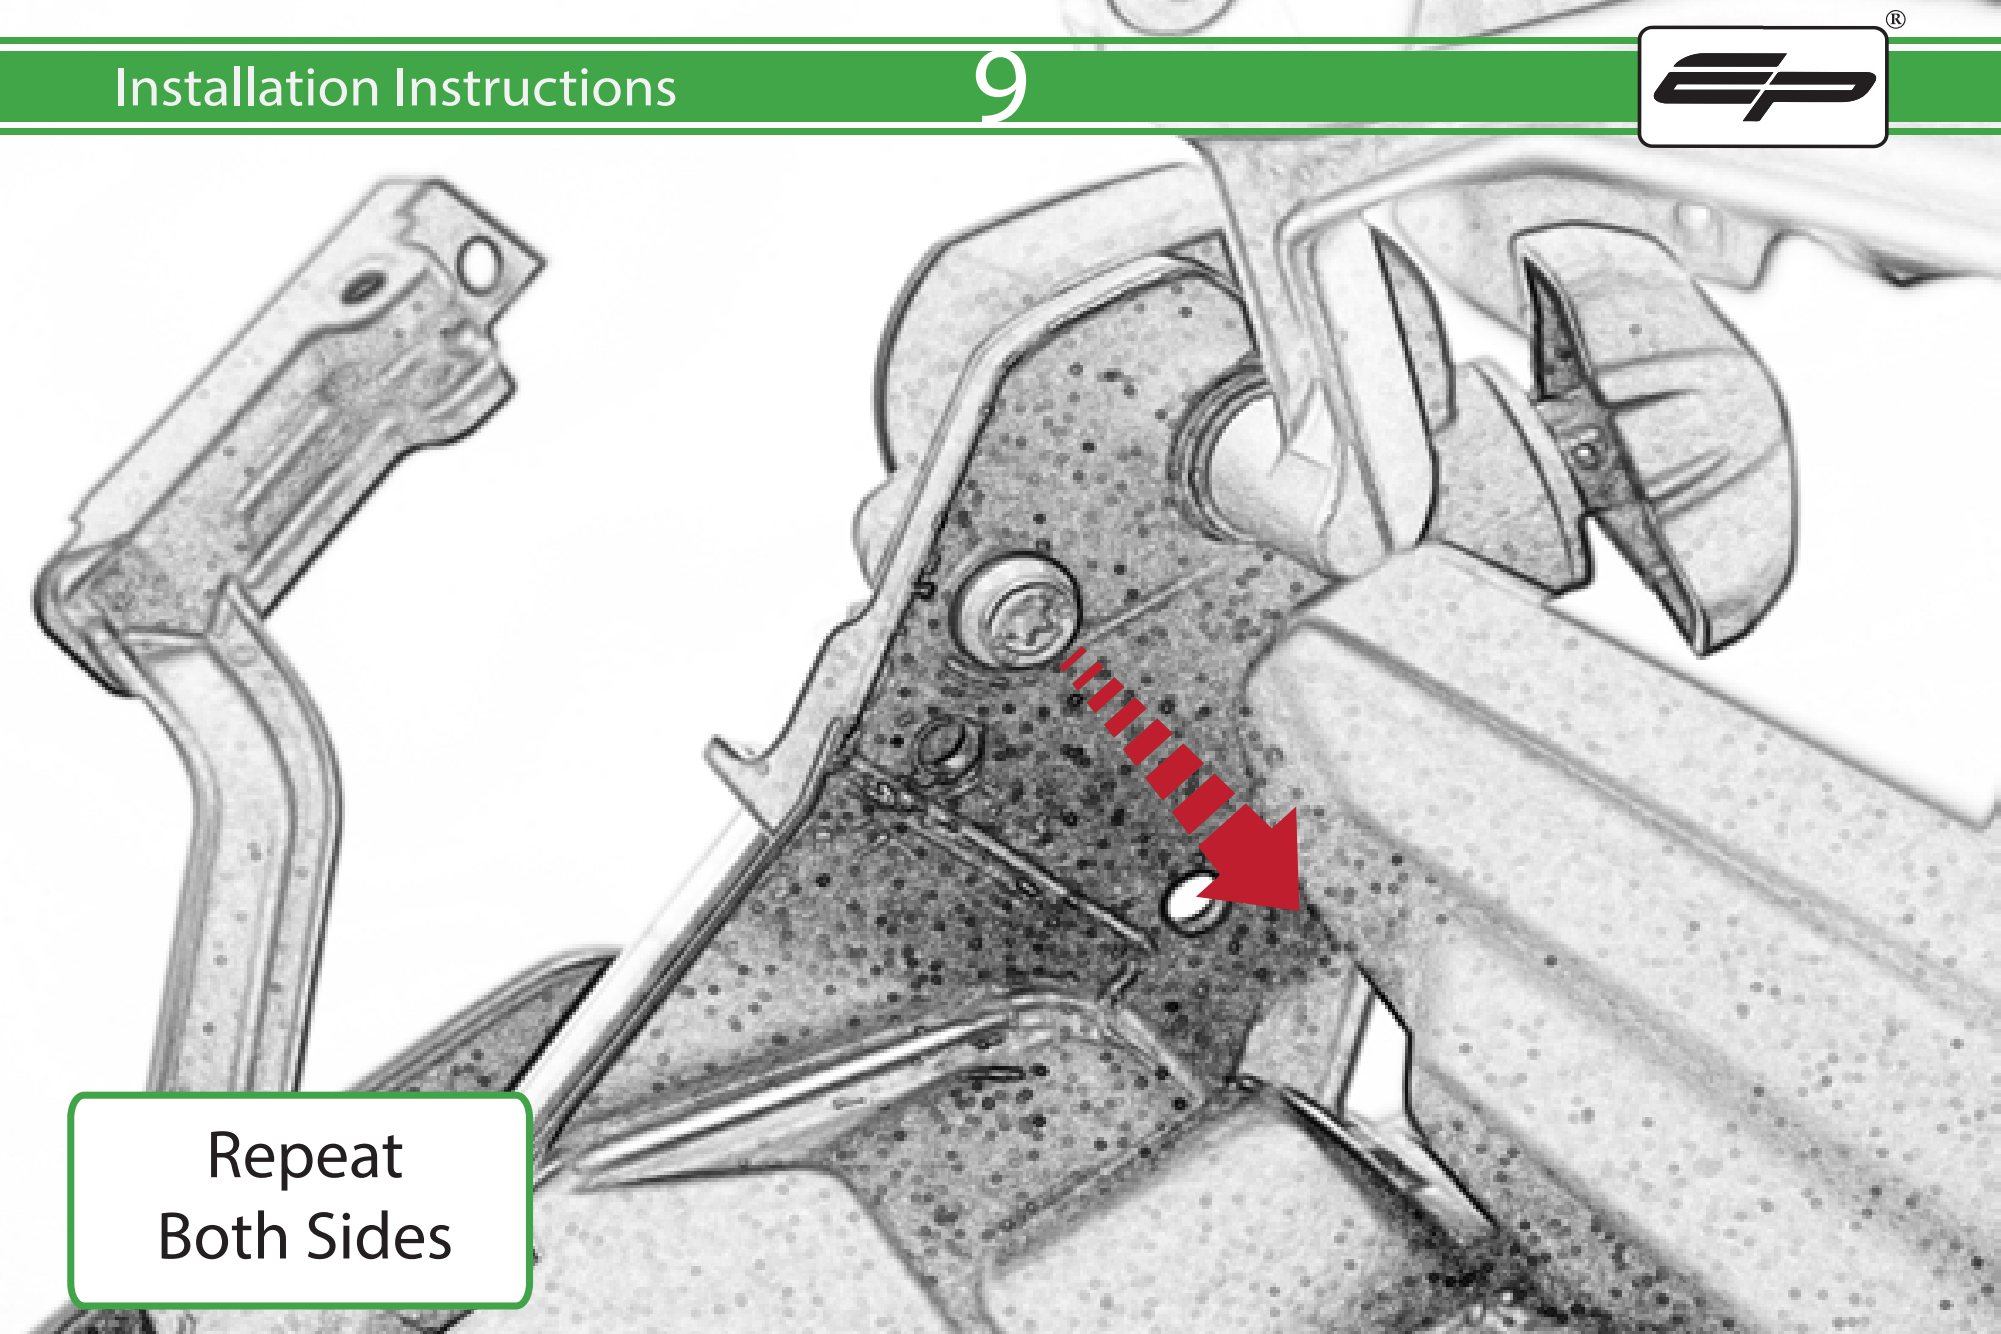
Repeat
Both Sides

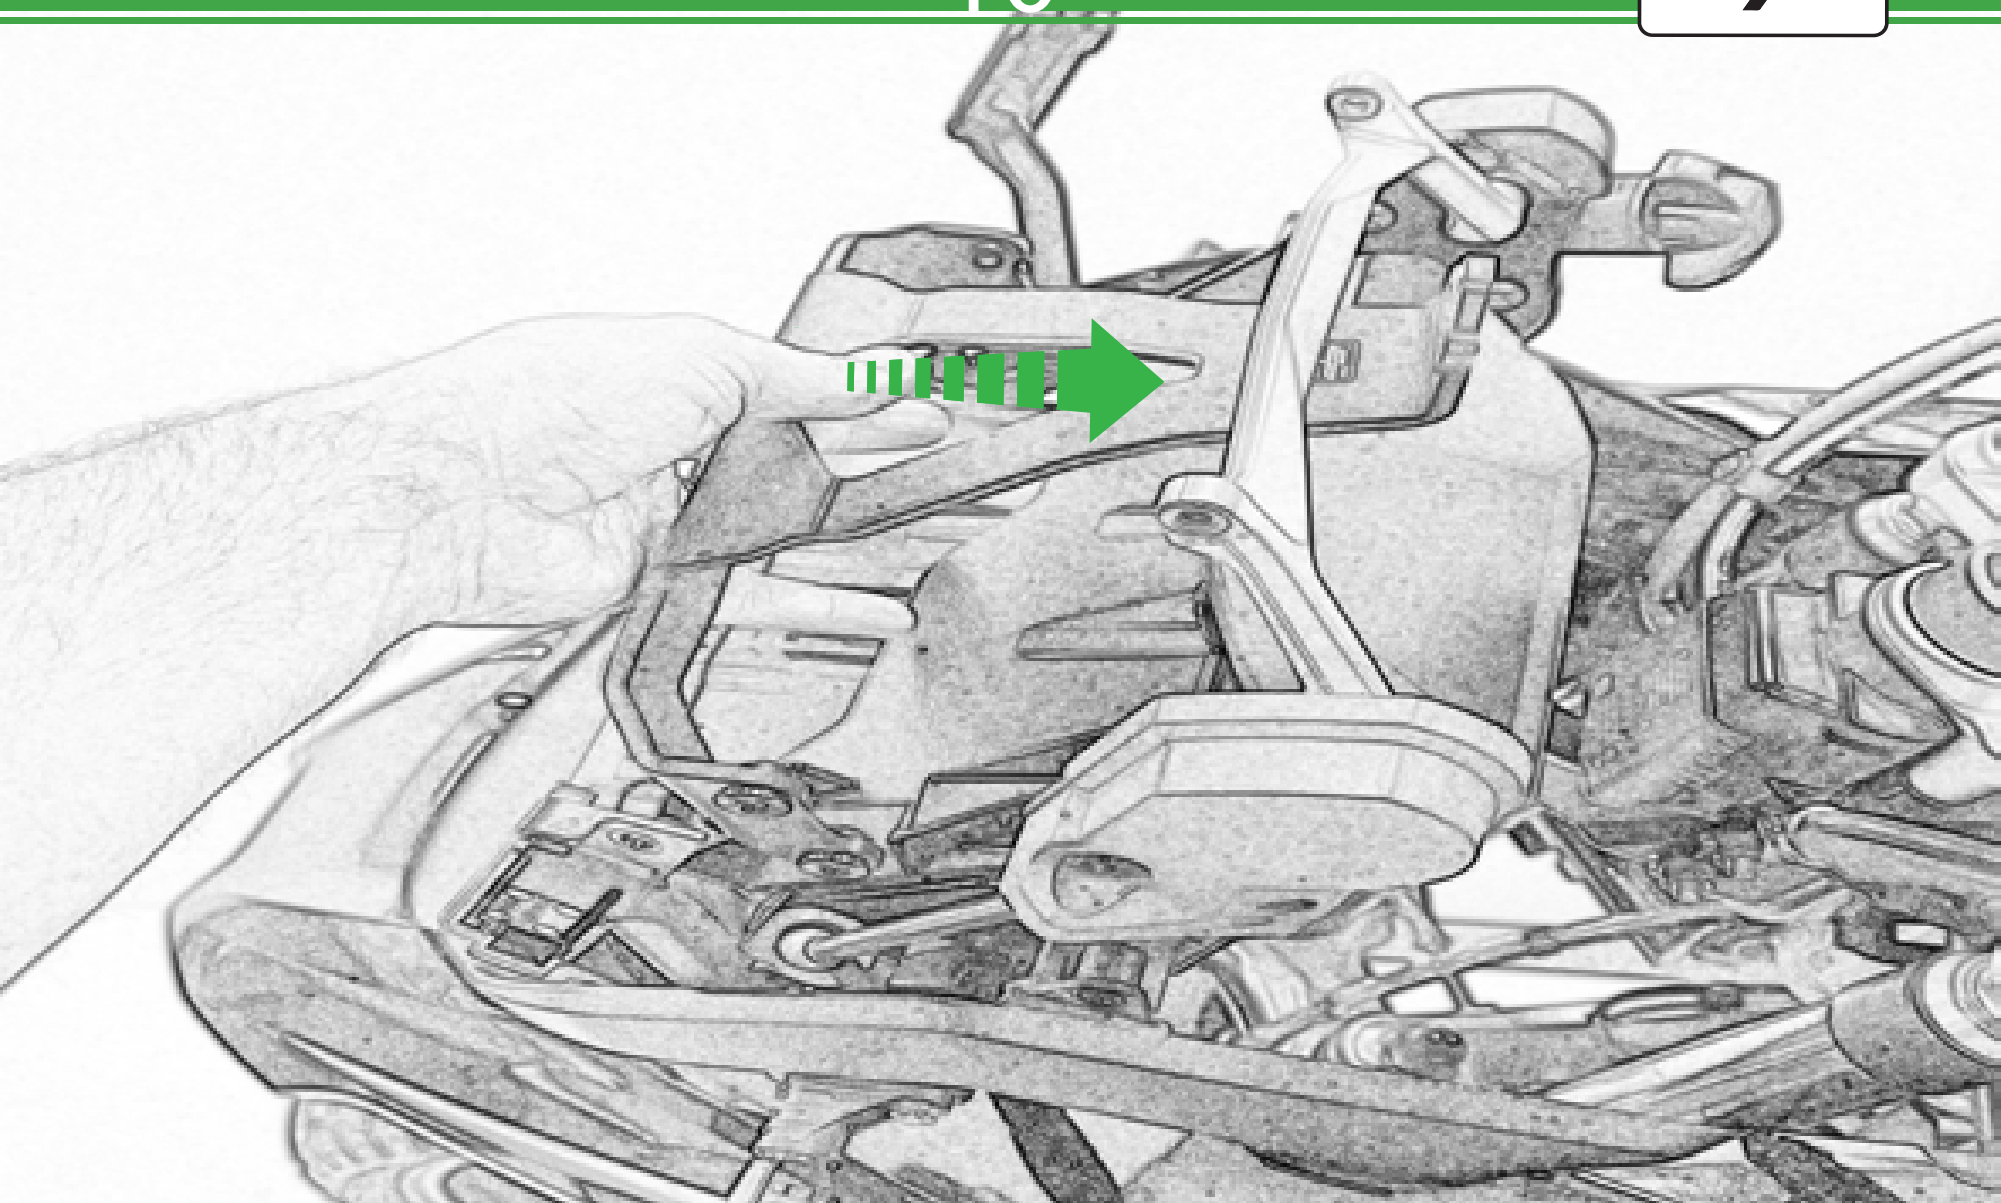

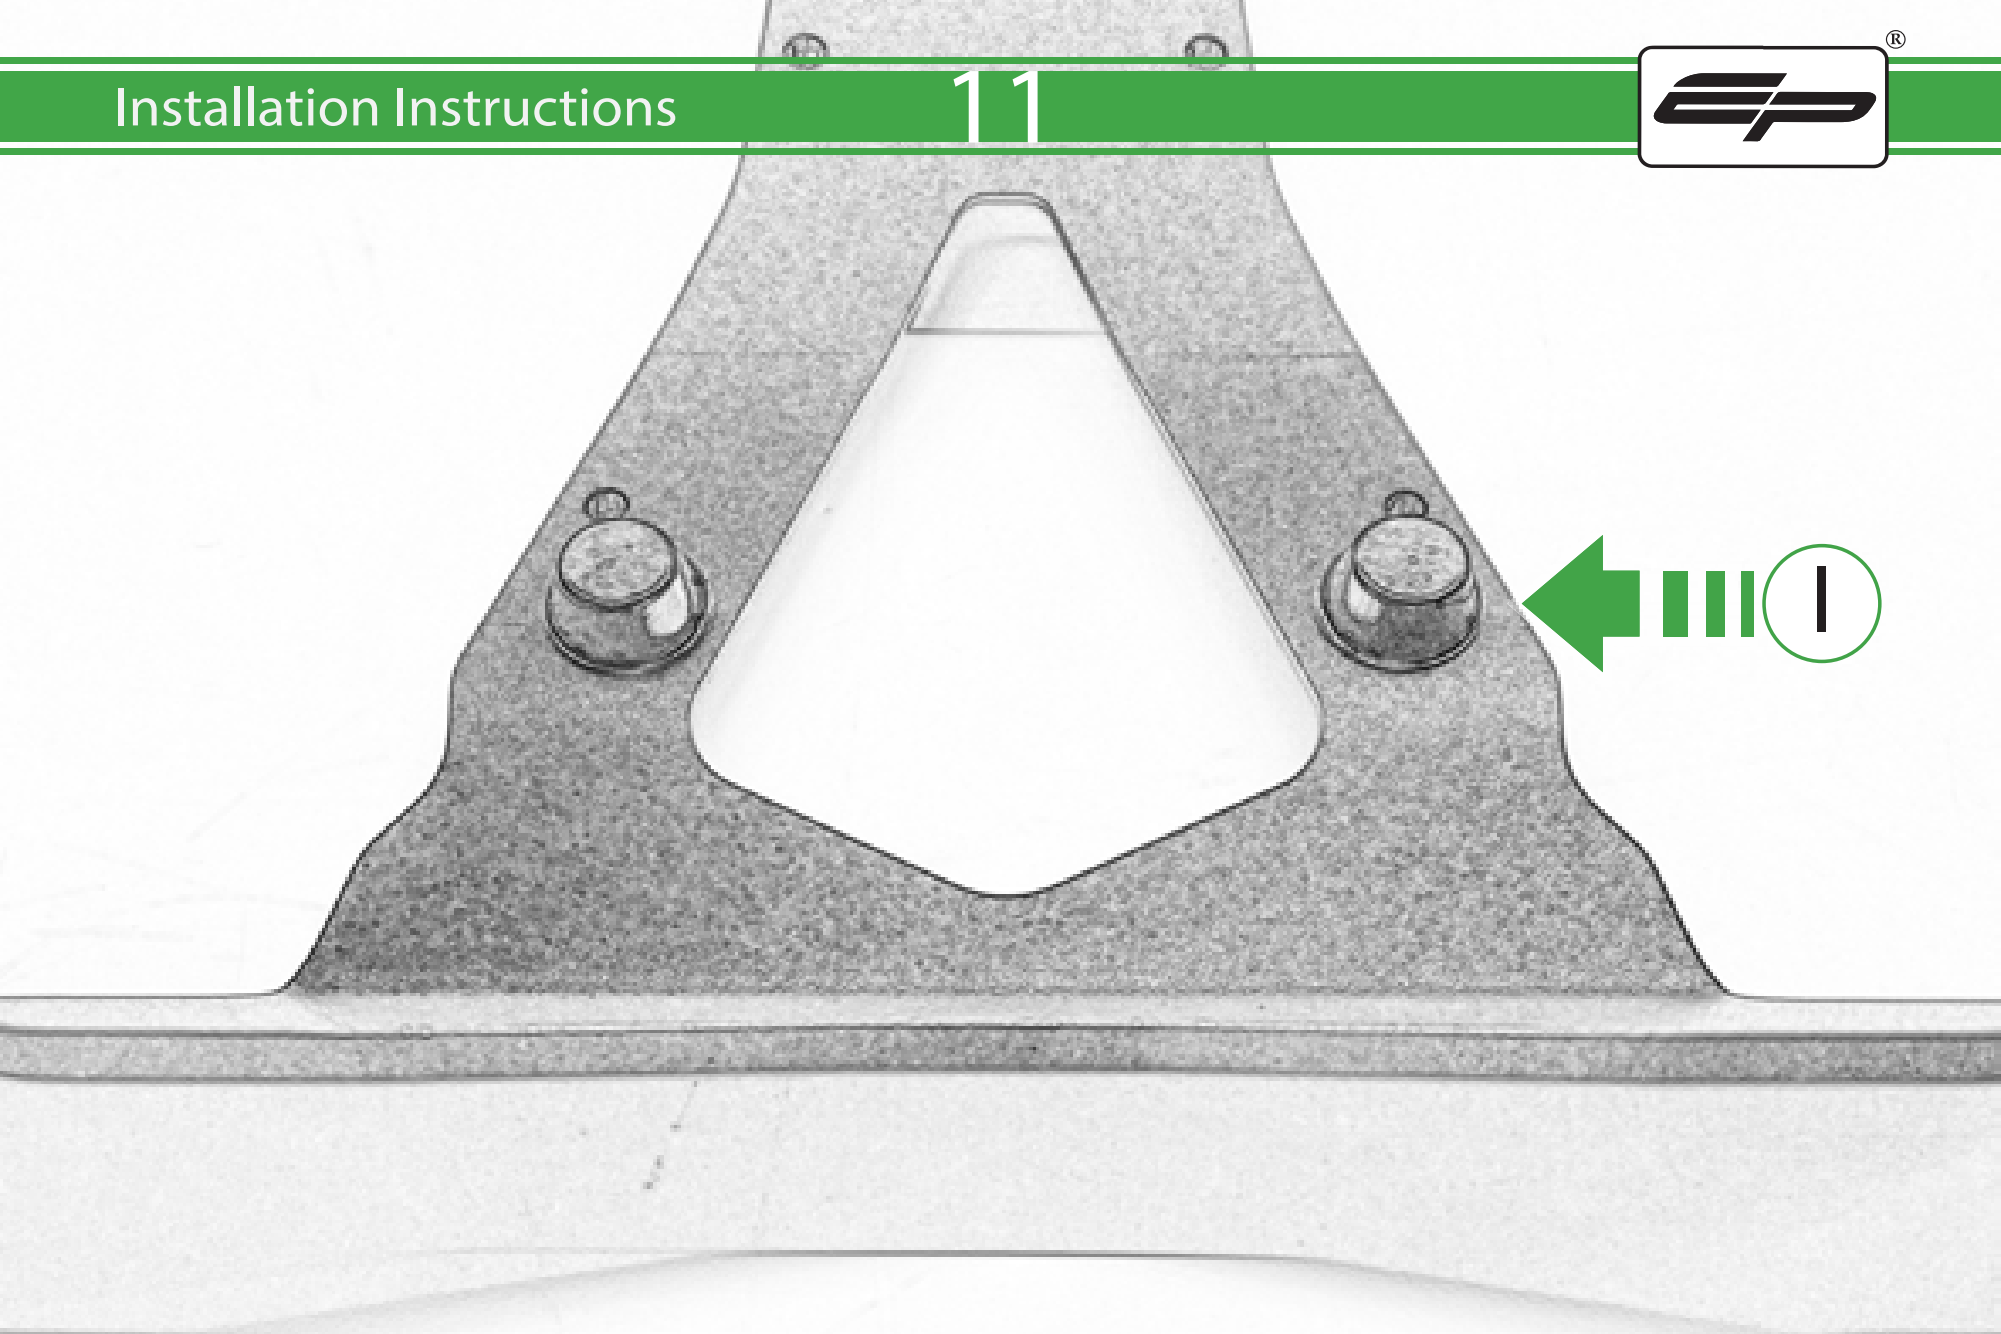
I

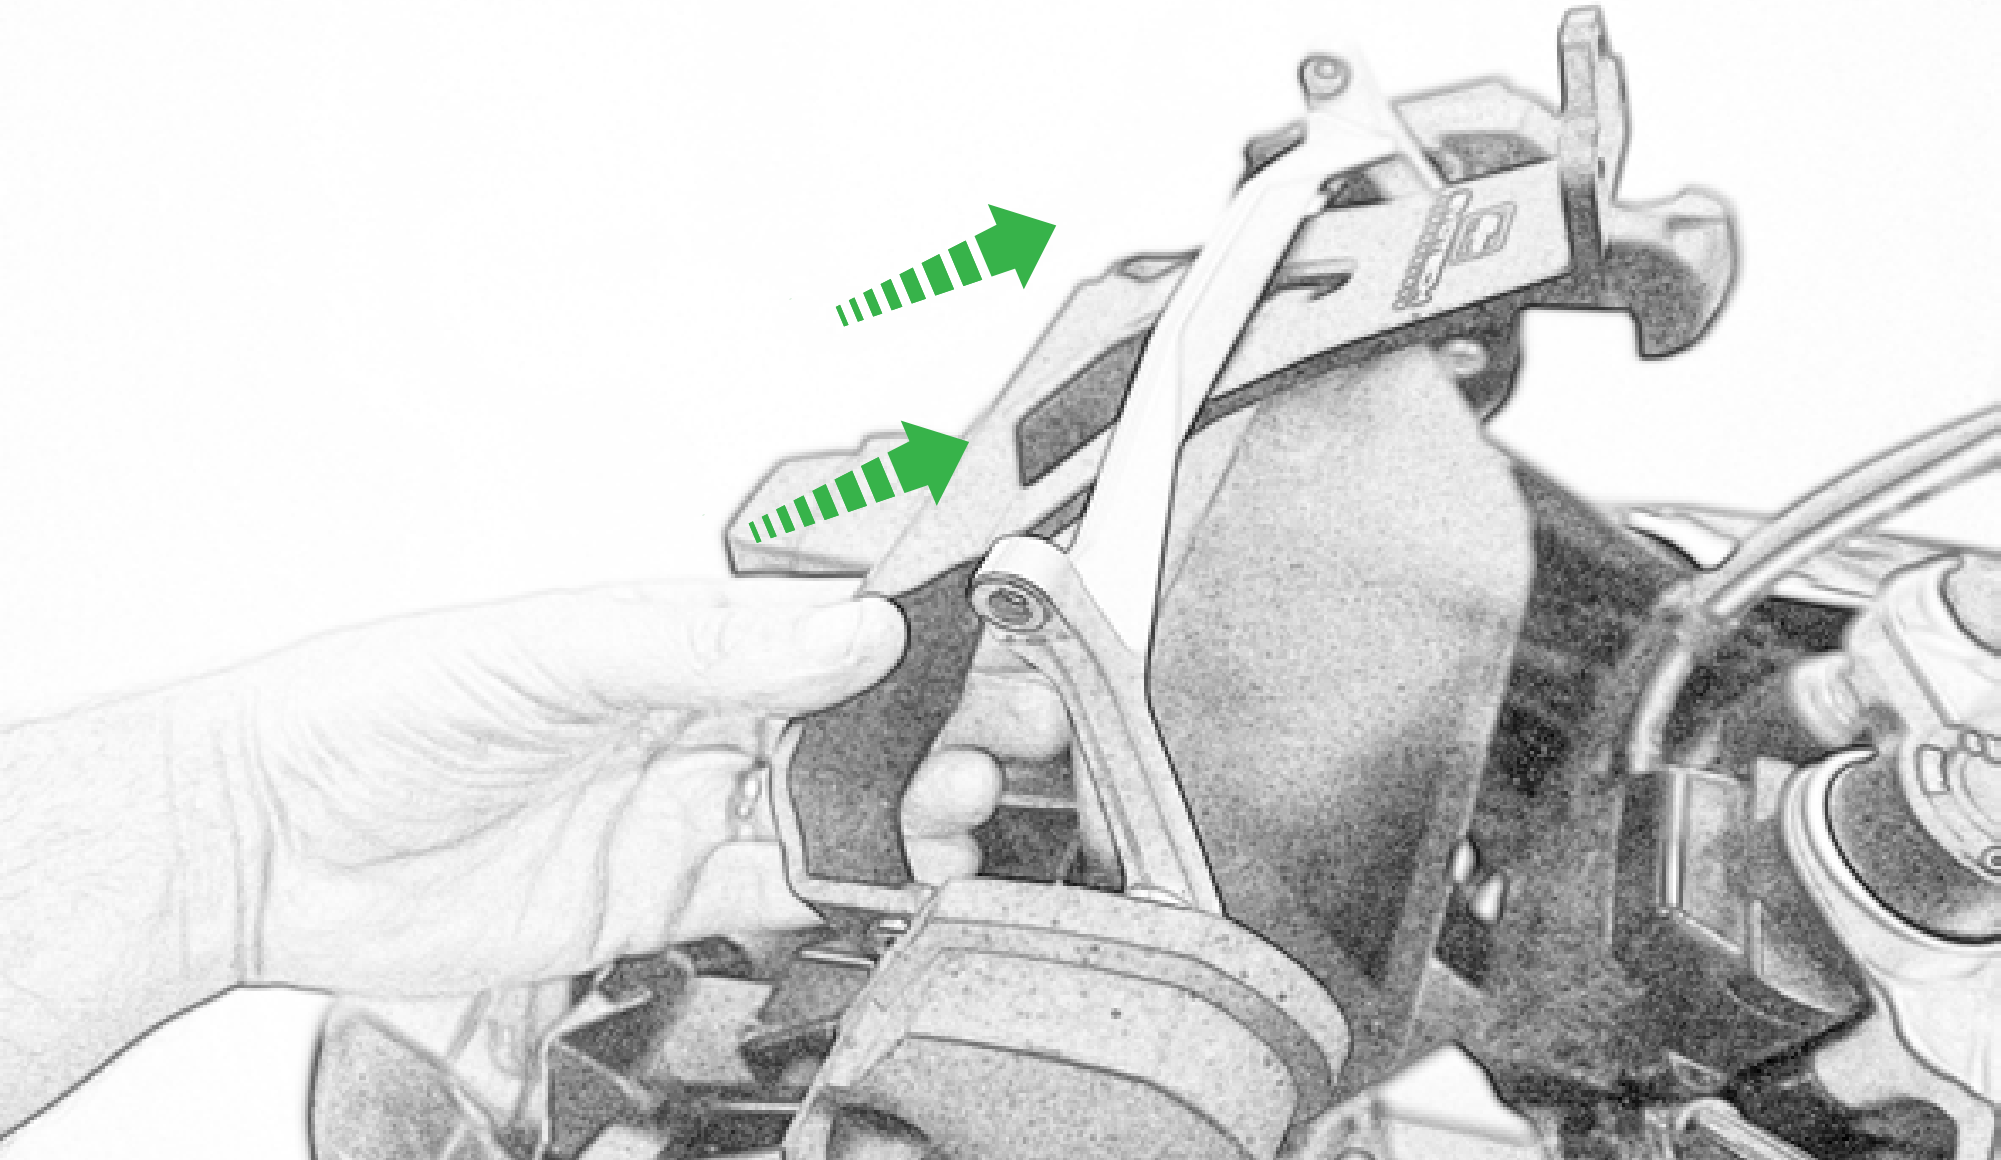

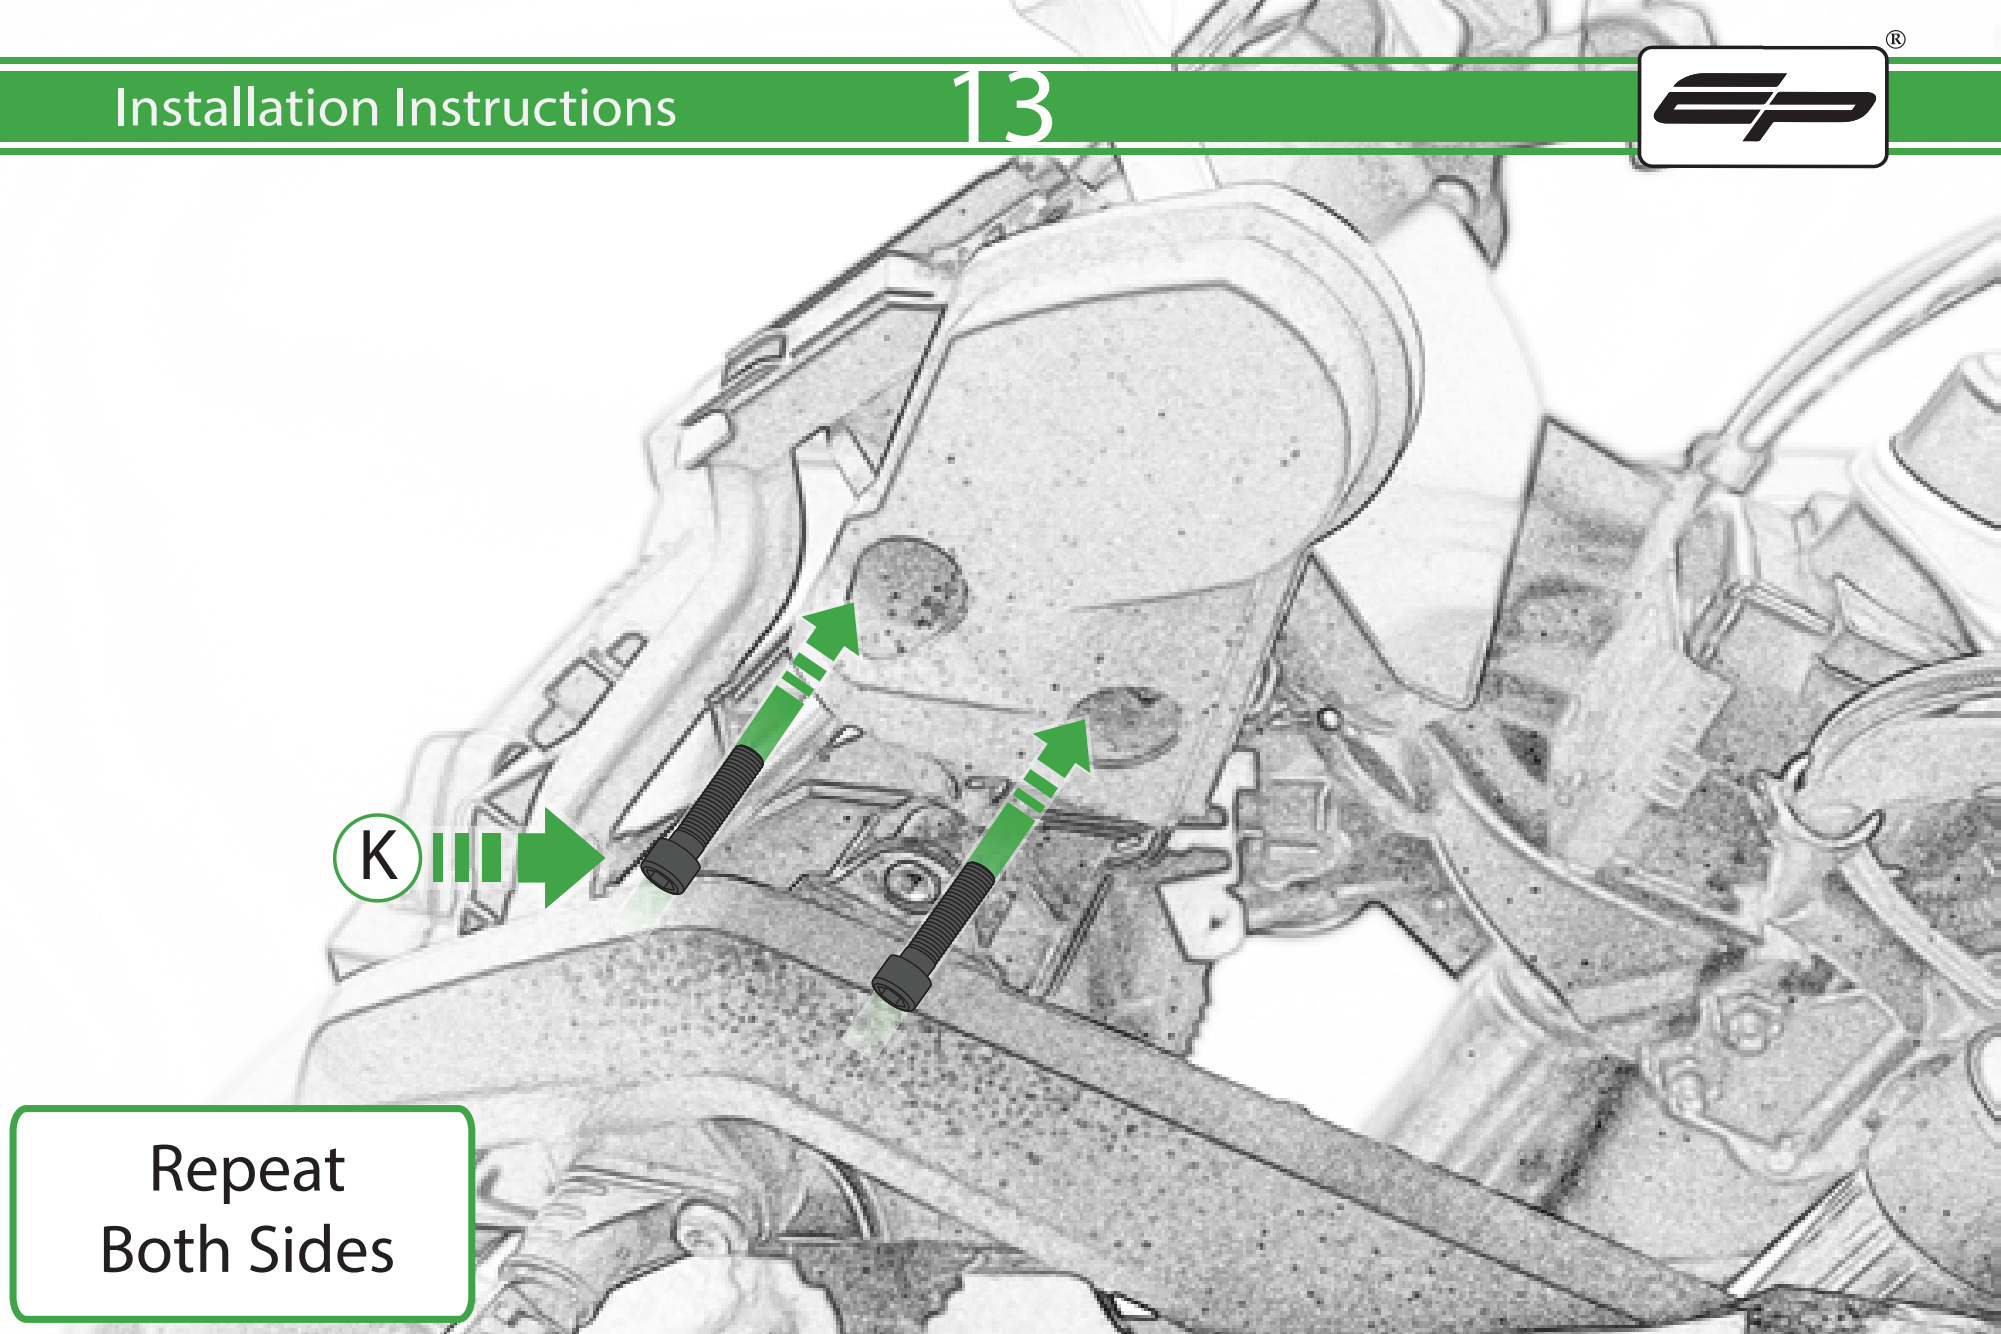

Repeat
Both Sides

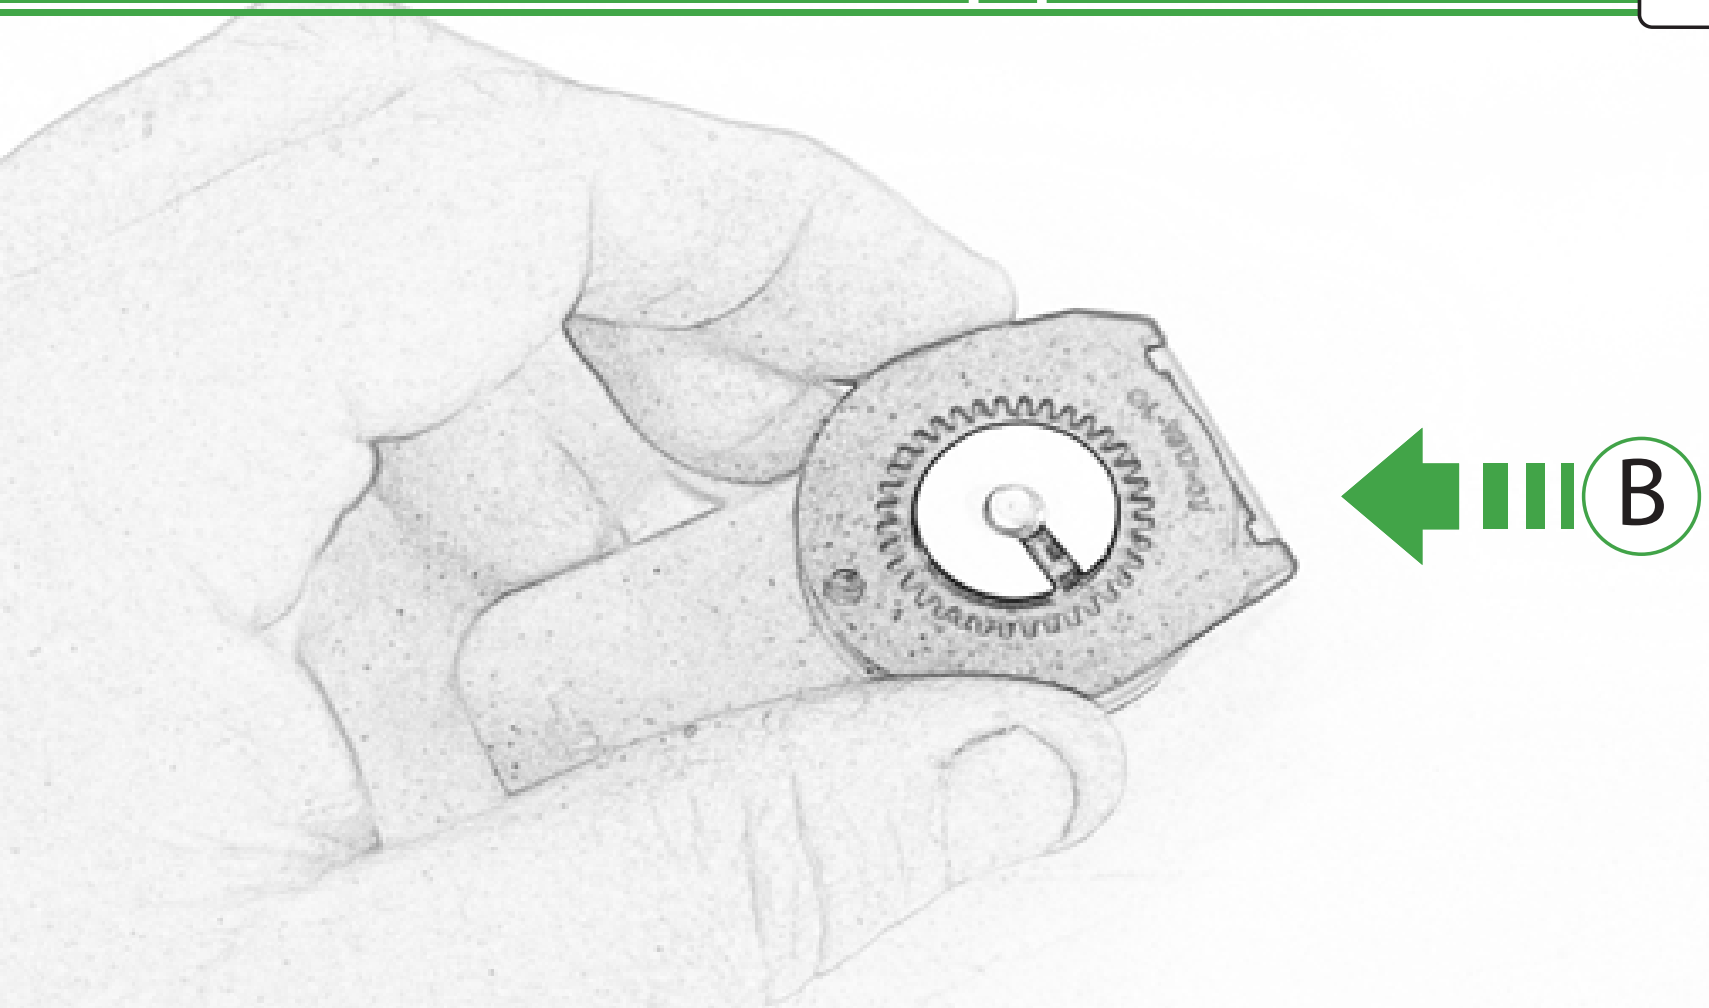
B

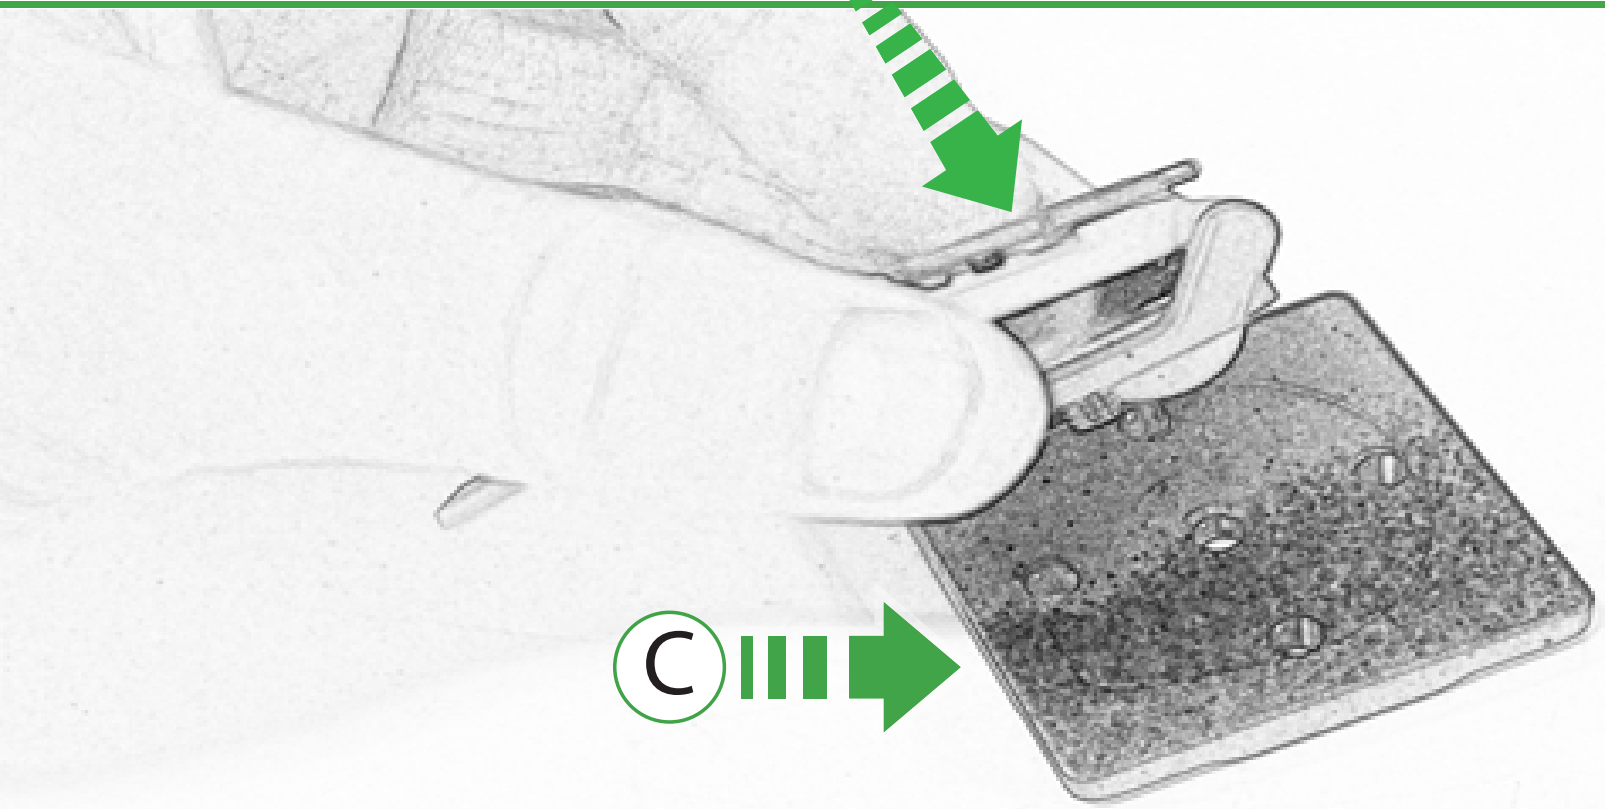
C

Caution

Locate Item In Recess

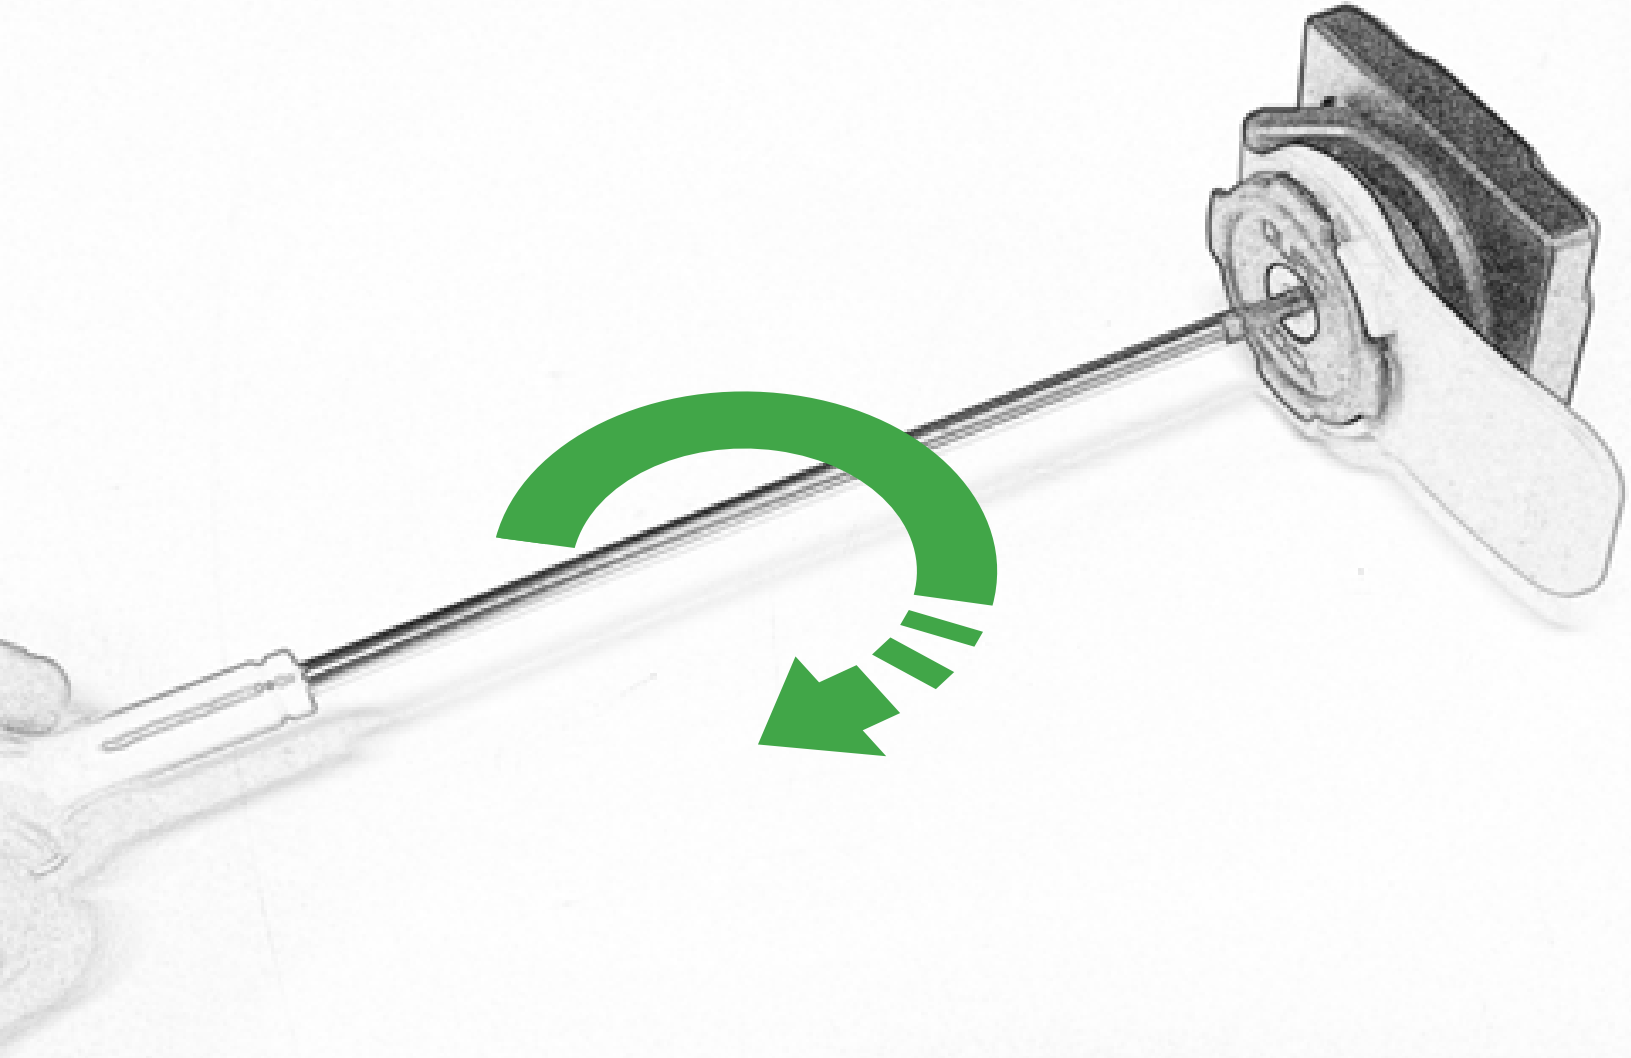

J

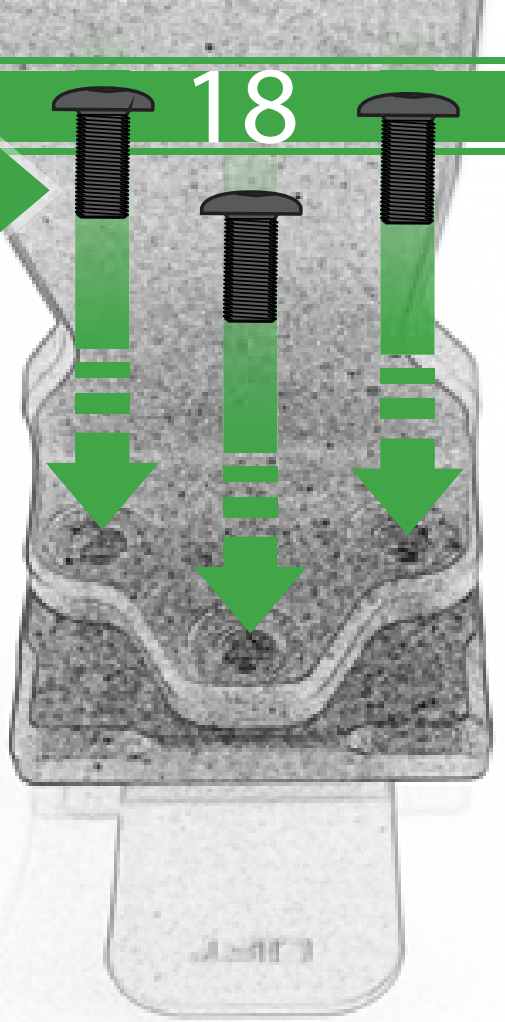

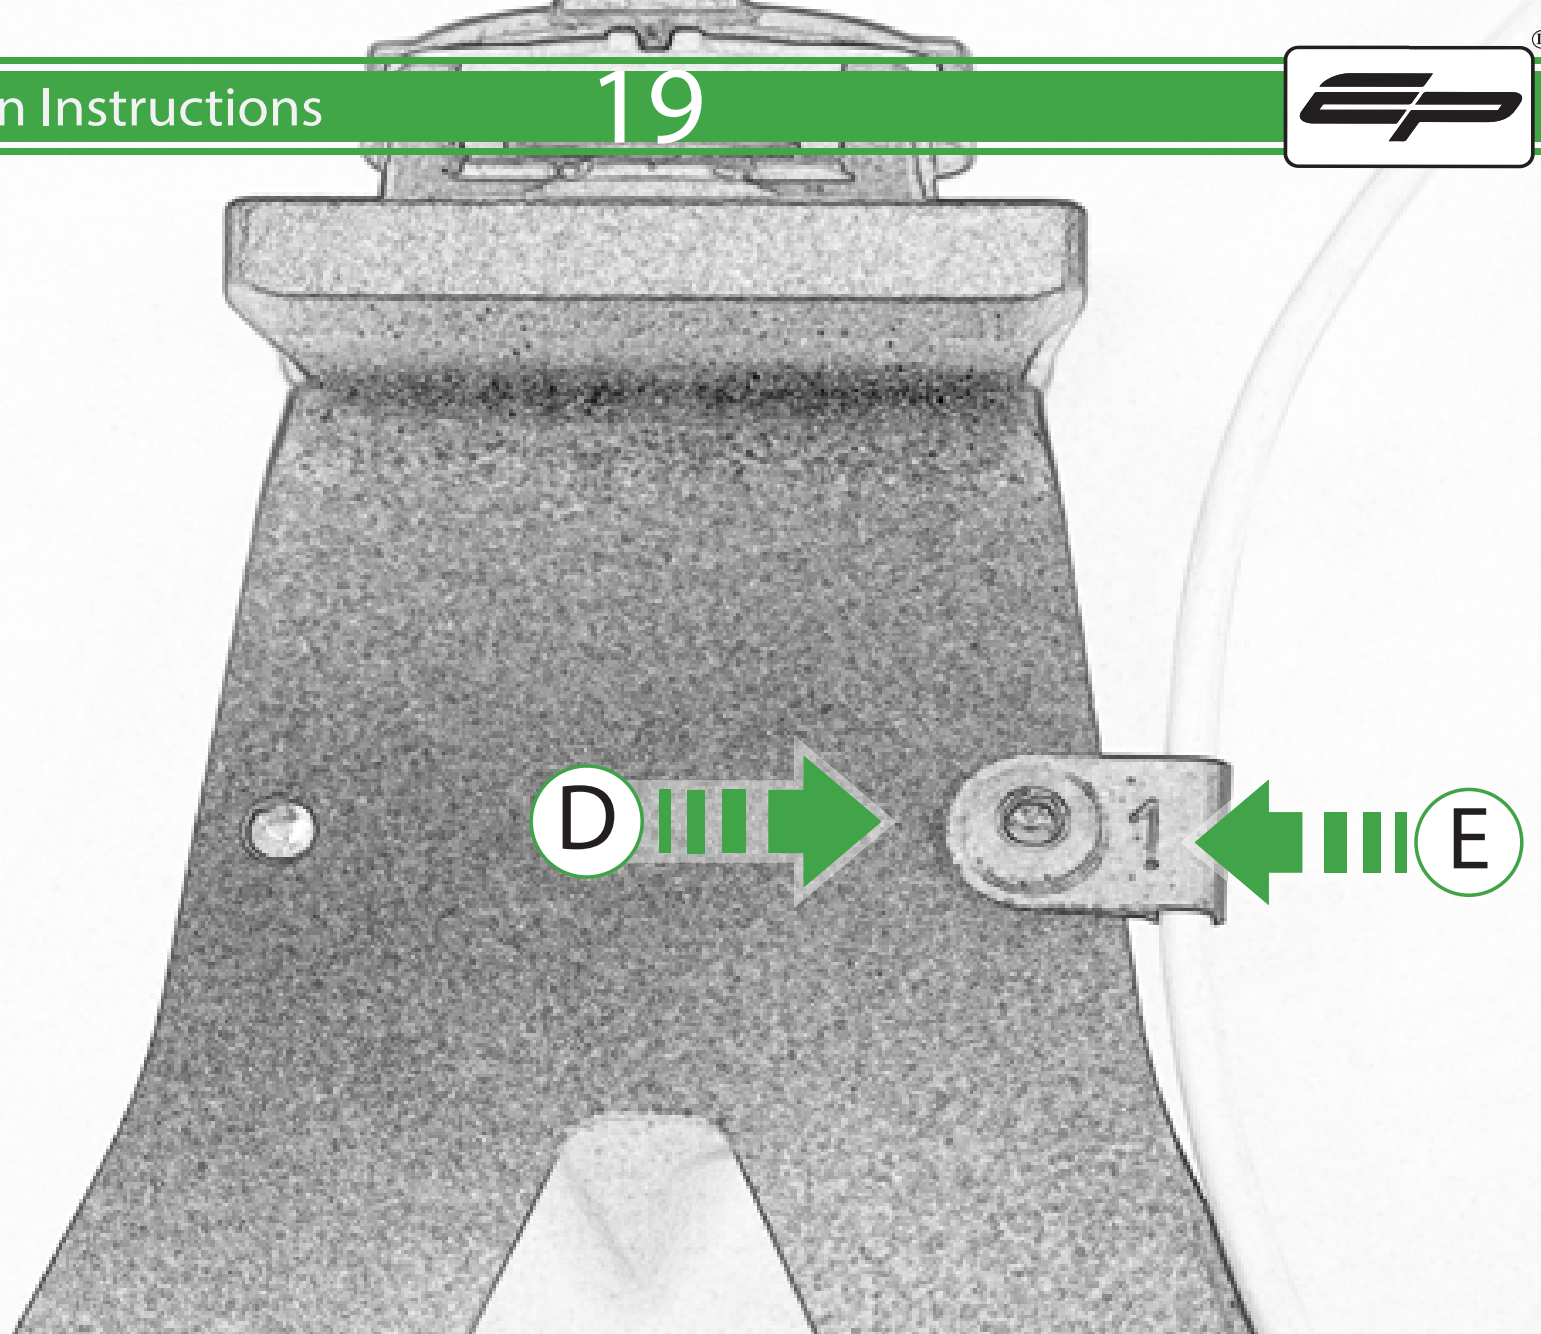
D
1
E

Reverse Stages

9 - 1

EVOTECH®
PERFORMANCE

EVOTECH®

PERFORMANCE

www.evotech-performance.com